

Working with Segmentation and Security for Your Nexus Dashboard VXLAN Fabric, Release 4.3.1

Table of Contents

New and changed information . . . 1
Understanding segmentation and security . . . 2
View and manage certificates used by Nexus Dashboard . . . 3
- Security configuration . . . 3
- Violation action . . . 4
- Security domains . . . 5
- JWT keys . . . 5
- Credentials store . . . 6
- Validating peer certificates . . . 7
  - Exporting a certificate chain from Cisco APIC . . . 7
  - Importing certificates into Nexus Dashboard . . . 8

Working with networks . . . 9
- Understanding networks and VXLAN-ACI fabric groups . . . 9
  - Networks and VXLAN-ACI fabric groups . . . 9
  - Child networks and VXLAN-ACI fabric groups . . . 10
  - Network mode types . . . 10
- Guidelines and limitations: Networks . . . 10
  - Guidelines and limitations: Networks and VXLAN-ACI fabric groups . . . 11
  - Guidelines and limitations: Networks and multi-tenancy . . . 11
- View network information . . . 11
- Create a network . . . 16
  - General Parameters . . . 18
  - Advanced . . . 19
- Network overview . . . 21
  - Standard fabric/fabric group . . . 21
  - VXLAN-ACI fabric group . . . 24
- Enable Xconnect for Layer 2-only network . . . 26
  - Deploy Layer 2-only network . . . 27
- Edit a network . . . 29
  - Configure a secondary gateway IP address . . . 30
  - Guidelines and limitations for adding secondary gateway IP addresses . . . 30
- Network attachments . . . 31
  - Edit network attachment . . . 34
  - Find an unused VLAN . . . 35
  - Guidelines and limitations for finding an unused VLAN . . . 35
  - Modify an interface . . . 35
- Create private VLANs . . . 36
  - Guidelines and limitations for private VLANs over VXLAN . . . 36
  - Enable PVLAN for a fabric . . . 36
  - Configure an interface as a PVLAN port . . . 37
  - Create a network for primary and secondary VLANs . . . 38

Attaching a primary network . . . 40
Attaching a secondary network . . . 41
Explicit and implicit detach . . . 42
Working with VRFs . . . 43
Guidelines and limitations: VRFs . . . 43
Guidelines and limitations: VRFs and VXLAN-ACI fabric groups . . . 43
Guidelines and limitations: VRFs and multi-tenancy . . . 44
View VRF information . . . 44
Create a VRF . . . 47
General Parameters . . . 49
Advanced . . . 49
TRM . . . 51
Route Target . . . 52
VRF overview . . . 52
Standard fabric/fabric group . . . 53
VXLAN-ACI fabric group . . . 54
VRF attachments . . . 55
Working with security groups . . . 59
Understanding security for VXLAN fabrics . . . 59
Understanding security groups . . . 59
Security groups and VXLAN-ACI fabric groups . . . 60
Create a VM selector . . . 61
Delete a stale VM IP selector . . . 62
Configure security groups for a VXLAN fabric group for a single cluster or for a multi-cluster fabric group . . . 62
Workflow for configuring security groups for a VXLAN fabric group or for a multi-cluster fabric group . . . 62
Security group modes in a VXLAN fabric group or in a multi-cluster fabric group . . . 63
Guidelines and limitations for security groups . . . 64
General guidelines and limitations: Security groups . . . 64
Guidelines and limitations: Security groups and VXLAN-ACI fabric groups . . . 66
Guidelines and limitations: Security groups and multi-tenancy . . . 66
Navigate to security groups . . . 66
Configure security groups . . . 66
Enable the security groups feature . . . 67
Navigate to the Segmentation and security page . . . 68
Import or export security configurations . . . 68
Create a security group . . . 69
Deploy security groups . . . 72
Security group tag to endpoints mapping . . . 72
View endpoint security group (ESG) to endpoints mapping . . . 73
View security group information . . . 73
View security group details . . . 77

Working with security contracts . . . 78
Understanding security contracts and VXLAN-ACI fabric groups . . . 78
Security contracts and VXLAN-ACI fabric groups . . . 78
Guidelines and limitations: Security contracts and VXLAN-ACI fabric groups . . . 78
View security contract information . . . 78
Configure security contracts . . . 80
Create a security contract . . . 80
Associate a security contract within a VRF . . . 81
Disassociate a security contract from a VRF . . . 82
Working with security associations . . . 83
Security associations and VXLAN-ACI fabric groups . . . 83
Guidelines and limitations: Security associations . . . 83
Guidelines and limitations: Security associations and VXLAN-ACI fabric groups . . . 83
Guidelines and limitations: Security associations and multi-tenancy . . . 83
Monitor security associations . . . 83
View security association information . . . 84
Working with protocol definitions . . . 88
Understanding protocol definitions and VXLAN-ACI fabric groups . . . 88
Protocol definitions and VXLAN-ACI fabric groups . . . 88
Guidelines and limitations: Protocol definitions and VXLAN-ACI fabric groups . . . 88
View protocol definitions information . . . 88
Configure protocol definitions . . . 90
Create a security protocol . . . 90
Working with L4-L7 services . . . 93
Terminology used in this article . . . 93
Layer 4 to Layer 7 services . . . 93
Service clusters . . . 94
VXLAN fabric group support . . . 94
RBAC support . . . 95
Traffic redirect support on WAN interfaces of border switches . . . 95
ePBR support . . . 96
Static route . . . 96
Remote peering . . . 96
Guidelines and limitations for Layer 4 to Layer 7 services . . . 96
Types of service devices . . . 98
Configure fabric settings for Layer 4 to Layer 7 services . . . 98
Configure Layer 4 to Layer 7 services . . . 99
Navigate to service insertions . . . 100
View service insertion information . . . 100
Add a service insertion . . . 101
Navigate to service functions . . . 109
View service function information . . . 109
Add a service function . . . 110

Navigate to service clusters . . . 118
View service cluster information . . . 118
Add a service cluster . . . 119
Navigate to service chains . . . 121
View service chain information . . . 122
Add a service chain . . . 122
View audit history . . . 124
Templates . . . 125
ACL templates . . . 125
Probe templates . . . 125
Service function route templates . . . 126
Service chain templates . . . 129
Service node link templates . . . 129
Service insertion template . . . 130
Working with tenants under **Segmentation and security** . . . 132
View tenants information . . . 132
Deploying tenants . . . 133
Types of deployment . . . 133
Deployment dependencies . . . 133
Deploy tenants . . . 133
Import tenant policies . . . 134
1. Select fabric . . . 134
2. Select VRFs . . . 134
3. Select networks/BDs . . . 135
4. Map EPGs to security groups . . . 135
5. Map ACI contracts to ND . . . 135
6. Review security associations . . . 136
7. Summary . . . 136
Copyright . . . 138

New and changed information

The following table provides an overview of the significant changes up to this current release. The table does not provide an exhaustive list of all changes or of the new features up to this release.

Release Version	Feature	Description
Nexus Dashboard 4.3.1	Enhanced border node functions and routing isolation for multi-tier VXLAN fabrics	Beginning with Nexus Dashboard 4.3.1, you can view and use per-VRF per-VTEP unique loopback IP auto-provisioning in additional VXLAN workflows, including VRF attachments for supported VXLAN eBGP fabrics and AI VXLAN eBGP fabrics. For more information, refer to VRF attachments.
Nexus Dashboard 4.3.1	Cisco Nexus 9000 Series name change	Cisco Nexus 9000 Series is now the Cisco N9000 Series.

Understanding segmentation and security

To view, edit, or create segmentation and security configurations for a VXLAN fabric:

1. Navigate to the main **Fabrics** page.

   Manage > Fabrics

2. Locate the VXLAN fabric where you want to work with segmentation and security.
3. Single-click the appropriate VXLAN fabric.

   The **Summary** page for that VXLAN fabric appears with the **Overview** tab selected by default.

4. Click **Segmentation and security**.
5. Determine the area in segmentation and security where you want to work.
   - View and manage certificates used by Nexus Dashboard
   - Working with VRFs
   - Working with networks
   - Working with security groups
   - Working with security contracts
   - Working with security associations
   - Working with protocol definitions
   - Working with L4-L7 services
   - [Working with tenants under Segmentation and security]

View and manage certificates used by Nexus Dashboard

You can view and manage certificates used by Nexus Dashboard through the **Security** page.

To access the **Security** page, navigate to **Admin > Users and Security > Security**. Use these tabs to configure security:

- Security configuration
- Violation action
- Security domains
- JWT keys
- Credentials store

Security configuration

The **Security configuration** page allows you to configure authentication session timeouts and security certificates used by your Nexus Dashboard cluster.

Before you begin

- You must have the keys and certificates you plan to use with Nexus Dashboard already generated.

  Typically, this includes the following files:

  - Private key (nd.key)
  - Certificate Authority's (CA) public certificate (ca.crt)
  - CA-signed certificate (nd.crt)

  Generating these files for self-signed certificates is described in the section "Generating a private key and self-signed certificate" in the Managing Certificates in your Nexus Dashboard.

- We recommend creating a configuration backup of your Nexus Dashboard cluster before making changes to the security configurations.

  For more information about backups, see "Backup and Restore" in Backing Up and Restoring Your Nexus Dashboard.

Follow these steps to edit security configuration.

1. Edit security configuration.
   a. From the main navigation menu, choose **Admin > Users and Security**.
   b. Click the **Security** tab.
   c. In the main pane, click the **Security configuration** tab.
   d. In the main pane, click the **Edit** icon.
2. In the **Edit security configuration** screen that opens, update one or more fields as required:

   Note that uploading the keys and certificate files is not supported and you will need to paste the

information in the following fields.

a. Update the **Session timeout**.

   This field defines the duration of the API tokens with the default duration set to 20 minutes.

b. In the **Domain name** field, provide your domain.

c. Check the box in the **Minimum TSL version: TLSV1.3** field if you want to set the minimum SSL version to TLSV1.3.

   The minimum SSL version is set to TLSV1.2 by default. Checking this box to set the minimum version to TLSV1.3 will reject all clients using a TLSV1.2 connection request.

d. To disable Qualtrics integration from the browser at a system wide level, check the box in the **Enforce strict content security policy** field.

e. Click the **SSL Ciphers** field and choose any additional cipher suites you want to enable from the drop-down list or click the **x** icon on an existing cipher suite to remove it.

   Cipher suites define algorithms (such as key exchange, bulk encryption, and message authentication code) used to secure a network connection. This field allows you to customize which cipher suites your Nexus Dashboard cluster will use for network communication and disable any undesired suites, such as the less secure TLS1.2 and TLS1.3.

f. In the **Key** field, provide your private key.

g. In the **RSA Certificate** field, provide the CA-signed or self-signed certificate.

h. In the **Root Certificate** field, provide the CA's public certificate.

i. (Optional) If your CA provided an Intermediate Certificate, provide it in the **Intermediate Certificate** field.

j. Click **Save** to save the changes.

   After you save your changes, the GUI will reload using the new settings.

Violation action

The **Violation action** page shows the number of unsuccessful attempted login actions.

Follow these steps to edit the information provided in the **Violation action** page.

1. From the main navigation menu, choose **Admin > Users and Security**.
2. Click the **Security** tab.
3. In the main pane, click the **Violation action** tab.

   Information on unsuccessful attempted login actions is displayed.

4. Click **Edit**.

   The **Login attempt action** page appears.

5. Edit the **Login attempt action** settings, if necessary.

a. In the **Maximum login attempts** field, set the maximum number of login attempts until the maximum action is triggered.

   The default entry is 0.

b. In the **Maximum password length** field, set the maximum password length.

   The default entry is 8.

c. In the **Maximum login attempted action** field, choose the action that will take place when the number of maximum login attempts has been surpassed.

   - In the **Block for** field, set the amount of time, in seconds, minutes, or hours, that a login block will take place when the number of maximum login attempts has been surpassed.
   - In the **Block admin for** field, set the amount of time, in seconds, minutes, or hours, that an admin login block will take place when the number of maximum login attempts has been surpassed.

6. Click **Save**.

Security domains

A restricted security domain allows an administrator to prevent a group of users from viewing or modifying any objects created by a group of users in a different security domain, even when users in both groups have the same assigned privileges.

For example, an administrator in restricted security domain (domain1) will not be able to see fabrics, services, cluster or user configurations in another security domain (domain2).

Note that a user will always have read-only visibility to system-created configurations for which the user has proper privileges. A user in a restricted security domain can be given a broad level of privileges within that domain without the concern that the user could inadvertently affect another group's physical environment.

Follow these steps to create a security domain.

1. Create a new security domain.
   a. From the main navigation menu, choose **Admin > Users and Security**.
   b. Click the **Security** tab.
   c. In the main pane, click the **Security domains** tab.
   d. In the main pane, click **Create security domain**.
2. In the **Create security domain** screen that opens, provide the domain details.
   a. Provide the **Name** for the domain.
   b. (Optional) Provide a description for the domain.
   c. Click **Save** to save the domain.

JWT keys

Follow these steps too create a JWT key.

1. From the main navigation menu, choose **Admin > Users and Security**.
2. Click the **Security** tab.
3. In the main pane, click the **JWT keys** tab.
4. Click **Create JWT key**.

   The **Create JWT key** page appears.
5. Enter a service name for the JWT key in the **Service name** field.
6. Enter a JWT API key in the **JWT API key** field.
7. Enter a JWT public key in the **JWT public key** field.
8. Enter the remote ID claim information in the **Remote ID claim** field.
9. Click **Create**.

Credentials store

You can add an external Credentials store that allows you to store and retrieve network credentials from an external vault, such as the CyberArk vault, instead of a local storage system.

Follow these steps to add a credentials store.

1. From the main navigation menu, choose **Admin > Users and Security**.
2. Click the **Security** tab.
3. In the main pane, click the **Credentials store** tab.
4. Click **Add credential store**.

   The **Edit credential store** page appears.
5. In the **Store type** field, choose a store type, such as CyberArk.
6. Enter the necessary information in the remaining fields, depending on the choice that you made in the **Store type** field.

   For example, if you chose CyberArk in the **Store type** field, make the necessary choices in the following fields:

   - In the **CyberArk CCP URL** field, enter the CyberArk Central Credential Provider (CCP) URL.

     For more information, see Central Credential Provider (CCP).
   - In the **Certificate name** field, choose the appropriate certificate from the dropdown list.

     The **Certificate name** field lists the certificates that you configured in **Admin > Certificate Management**.

     Ensure that the system certificate you configured is mapped to the CyberArk feature to use the certificate name here.

     For more information on system certificates, see Managing Certificates in your Nexus Dashboard.

7. Click **Resync/Save**.


Validating peer certificates

You can import a fabric controller's Certificate Authority (CA) root certificate chain into Nexus Dashboard. This allows you to verify that the certificates of hosts to which your Nexus Dashboard connects (such as fabric controllers) are valid and are signed by a trusted Certificate Authority (CA) when you add the fabrics.

Exporting a certificate chain from Cisco APIC

Follow these steps to export a certificate chain from Cisco APIC.

1. Log in to your Cisco APIC.
2. Check which key ring is being used for management access:

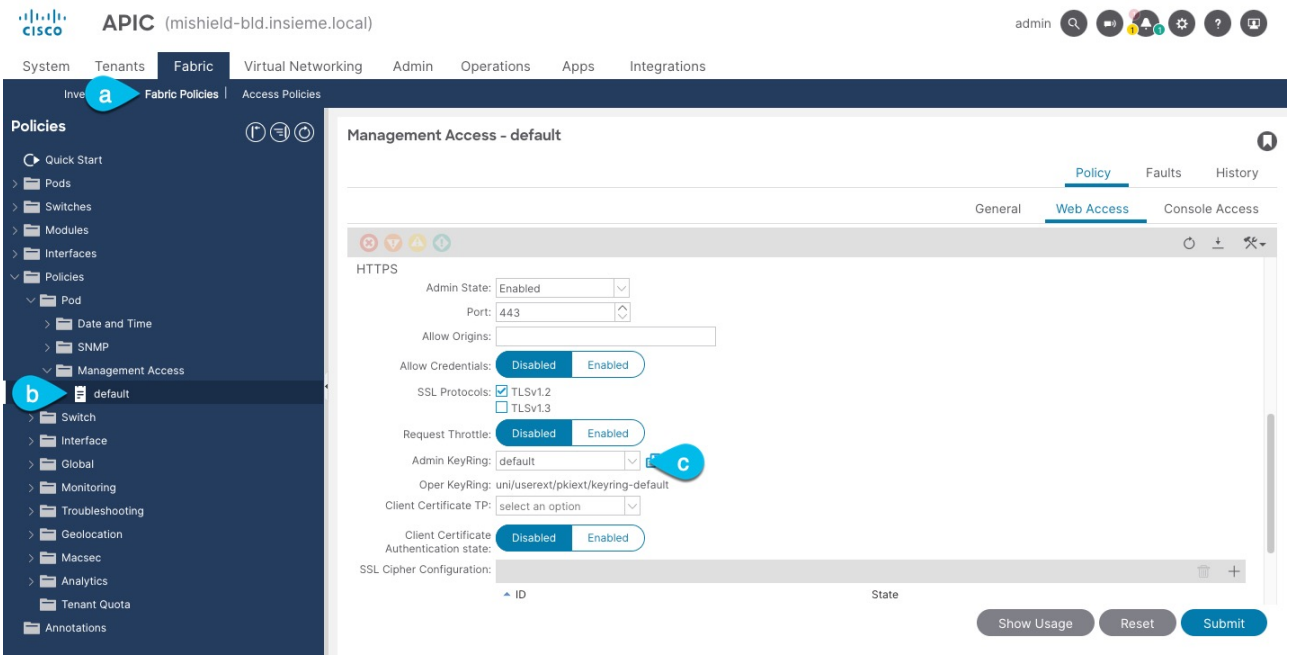

   a. In the top navigation bar, choose **Fabric > Fabric Policies**.


   b. In the left navigation menu, choose **Policies > Pod> Management Access**.

   c. In the main pane, note the name in the **Admin KeyRing** field.

      In the above example, the default key ring is being used. However, if you created a custom key ring with a custom certificate chain, the name of that key ring would be listed in the **Admin KeyRing** field.

      Custom security configuration for Cisco APIC is described in detail in *Cisco APIC Security Configuration Guide* for your release.

3. Export the certificate used by the key ring:

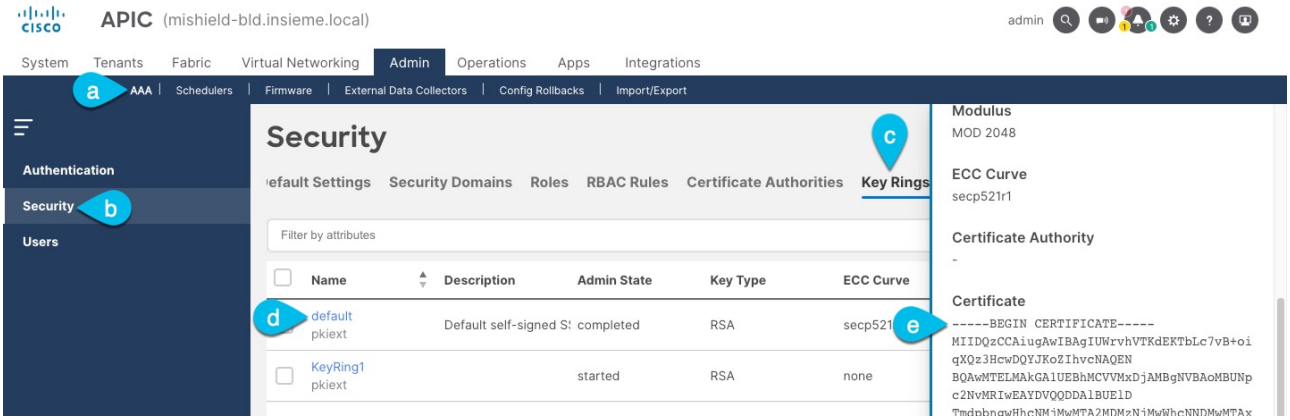

a. In the top navigation bar, choose **Admin > AAA**.

b. In the left navigation menu, choose **Security**.

c. In the main pane, choose the **Key Rings** tab.

d. Click the name of the key ring you found in the previous step and copy the **Certificate**.

   The above example shows the default key ring from the previous step. However, if you had a custom key ring configured, choose the CA certificate chain used to create the key ring.

   You must include the -----BEGIN CERTIFICATE----- and -----END CERTIFICATE----- in the text you copy, for example:

```
-----BEGIN CERTIFICATE-----
MIIDQzCCAiugAwIBAgIUWrvhVTKdEKTbLc7vB+oiqXQz3HcwDQYJKoZIhvcNAQEN
[...]
-----END CERTIFICATE-----
```

Importing certificates into Nexus Dashboard

Follow these steps to import certificates intoNexus Dashboard.

1. Log in to your Nexus Dashboard where you plan to onboard the fabrics.
2. Import the certificate into Nexus Dashboard.
   a. Log in to your Nexus Dashboard where you will onboard the fabrics.
   b. From the main navigation menu, choose **Admin > Certificate Management**.
   c. Click the **CA Certificates** tab.
   d. Click **Add CA certificate**, provide a unique name for the certificate, and paste the certificate chain you copied from your fabric's controller.
3. Proceed with adding the fabric as you typically would, but enable the **Verify Peer Certificate** option.

   Note that if you enable the **Verify Peer Certificate** option but don't import the valid certificate, fabric onboarding will fail.

   Adding fabrics is described in Creating Fabrics and Fabric Groups.

Working with networks

1. On the **Segmentation and security** tab, click the **Networks** subtab.
2. Review the information on the **Networks** page.

   The **Networks** page shows information on already-configured networks.

> Before creating networks, ensure that you have created a VRF for the fabric. However, if you have chosen Layer 2, you do not require a VRF. For more information about VRFs, see Working with VRFs.

- Networks are handled differently when used with VXLAN-ACI fabric groups; for example, the Layer 2 option is not applicable for networks defined in VXLAN-ACI fabric groups. See Understanding networks and VXLAN-ACI fabric groups for more information.
- To create overlay networks, create networks for the fabric and deploy them on the fabric switches. Before deploying the networks, set the overlay mode. For more information on how to choose the overlay mode, see the section "Overlay Mode" in Editing Data Center VXLAN Fabric Settings.
- For more information on creating interface groups and attaching networks, see the section "Interface groups" in Working with Connectivity in Your Nexus Dashboard LAN Fabrics.
- You can view the network details on the **Networks** tab and network attachment details on the **Network attachments** tab.

Understanding networks and VXLAN-ACI fabric groups

This section provides information on networks as they relate specifically with VXLAN-ACI fabric groups.

- Networks and VXLAN-ACI fabric groups
- Child networks and VXLAN-ACI fabric groups
- Network mode types
- Guidelines and limitations: Networks and VXLAN-ACI fabric groups

Networks and VXLAN-ACI fabric groups

- You can only create and delete networks at the fabric group level; however, you can edit networks at the fabric level.
- A network is **attached** if one of the following is true:
  - If the network is stretched
  - If the network has a static port attachment
  - If the network has a switch attachment
  - If the network has a VMM attachment (specific to an ACI fabric)
- A network attachment in ACI requires you to select a PhysDom or VMM domain.
- A network will not move to the detached state unless the following conditions are met:

    - The network is not stretched
    - The network has no VMM domains in the ACI fabric
    - There are no switches in the attached state
    - There are no static port attachments
    - For a normal network, none of its child networks are attached
- A network deployed by Nexus Dashboard will have flood mode enabled in the ACI fabric.
- Nexus Dashboard's anycast gateway MAC address is configured to use the APIC bridge domain (BD) MAC address (by default: 0022.bdf8.19ff).

  This MAC address is set at the individual level on APIC, but it's a global MAC address for the fabric group in Nexus Dashboard. The global value has to be consistent between the APIC and the Nexus Dashboard and the NX-OS switches in the fabric group.

Child networks and VXLAN-ACI fabric groups

Child networks are a special kind of network that are used to represent the application-centric model of ACI in a Nexus Dashboard VXLAN-ACI fabric group.

- A child network is a logical network that represents encapsulation VLAN.
- A child network can't be configured for a VXLAN type fabric group.
- Since it is not a flooding domain, enabling protocols (such as STP and so on) is not applicable.
- Normal networks can be stretched, but child networks cannot be stretched.
- Network attachments can be performed on child networks.

When creating or editing a child network:

- A child network requires selecting a tenant and a normal network name.
- The normal network for a child must belong in the same tenant as the child network, or belong in tenant "common" (local name for ACI).
- Once created, only the VLAN ID is modifiable from the fabric group level by clicking **Network > Actions > Edit**.

Network mode types

- If a network is created as "Layer 3," it indicates that it operates as a Layer 3 routed network.
- If a network is created as "Layer 2 with VRF," it indicates that it operates as a Layer 2 switched network without SVI.

  A network with "Layer 2 with VRF" will disable the unicast routing when deployed to an ACI fabric.

Guidelines and limitations: Networks

These are the guidelines and limitations for networks.

- Guidelines and limitations: Networks and VXLAN-ACI fabric groups

- Guidelines and limitations: Networks and multi-tenancy

Guidelines and limitations: Networks and VXLAN-ACI fabric groups

- Supports up to 16 subnets per network.
- Can't set per BD anycast gateway MAC address. Currently it's defaulted to the APIC's MAC (0022.bdf8.19ff).
- Maps every network to an endpoint group (EPG) in APIC. This might result in unused EPGs in APIC.
- Every network created in Nexus Dashboard is mapped to an EPG in APIC. In some cases, these EPGs may not be used in APIC, resulting in dummy EPGs.
- Any application profile created by Nexus Dashboard will not be deleted.
- USEG EPGs are not supported.
- Nexus Dashboard does not support enhanced LAG policy required for VMM. You must configure this policy directly in APIC.
- Subnets in greenfield environments will always be configured as public. In brownfield environments, only subnets that are public and not shared will be imported.
- Network attachments in ACI support only trunk port mode when configured from Nexus Dashboard. Port modes such as trunk-native and access are not supported.

Guidelines and limitations: Networks and multi-tenancy

- Network deployment requires both the network and the VRF to be in the attached state.
- If a network in a user tenant references a VRF in the common tenant, the VRF in the common tenant must be deployed first.
- If a child network in a user tenant references a normal network in the common tenant, the common tenant must be deployed first.

View network information

1. Review the information provided on the **Networks** page.

   The table provides information on individual networks in the fabric.

   Networks Table Fields and Description

Field	Description
Network Name	Specifies the name of the network.
VRF Name	Specifies the name of the VRF that's associated with the network.
IPv4 Gateway Address/Prefix	Specifies the IPv4 address with a prefix.
IPv6 Gateway Address/Prefix	Specifies the IPv6 address with a prefix.
Network Status	Specifies the status of the network deployment as **NA**, **Out of Sync**, **Pending**, **Deployed**, and so on.

Field	Description
VLAN ID	Specifies the VLAN ID for the network.
VLAN Name	Specifies the name of the VLAN.
Interface Group	Specifies the interface group.

2. Click the gear icon to the right of the table to change the columns in the table.
3. Click the toggle switch to enable or disable the column options.
4. Click **Filter by attributes** to filter information based on the chosen parameter.
5. Click the column header to sort the entries in alphabetical order for the chosen parameter.
6. Perform any of these actions on the **Networks** page.

   This table describes the action items that are available in the **Actions** drop-down list.

   Networks Actions and Description

Action Item	Description
Create	Allows you to create a network.
Edit	Allows you to view or edit the selected network parameters. 1. To edit the network information, check the check box next to the network name that you want to edit and choose **Edit**. 2. On the **Edit Network** page, edit the required values and click **Save** to apply the changes or click **Close** to discard the changes.

Action Item	Description
Multi-attach	Allows you to attach networks to multiple switches and interfaces at the same time. 1. To attach the selected switches and interfaces to the network, check the check box next to the network name that you want to attach and choose **Multi-attach**. 2. On the **Multi-attach of Networks** page, check the check boxes for the switches that you want to attach to the network and click **Next**. 3. In the **Select Interfaces** area, check the check boxes for the interfaces that you want to attach to the network and click **Next**. The **Summary** page displays with the **Proceed to Full Switch Deploy (Recommended)** option selected. 4. Click **Save**. The **Deploy Configuration** page appears with the selected switch. 5. Click **Deploy All**. The **Deploy Configuration** page appears with an updated status of **SUCCESS**, **Status Description**, and **Progress** indicator. 6. Click **Close**. The attached network displays as **DEPLOYED** in the **Network Status** column in the **Networks** tab.

Action Item	Description
Multi-detach	Allows you to detach multiple switches from the network at the same time. 1. To detach the selected switches from the network, select the check box next to the network name that you want to detach and choose **Multi-detach**. 2. On the **Multi-detach of Networks** page, check the check boxes for the switches that you want to detach from the network and click **Next**. The **Summary** page displays with the **Proceed to Full Switch Deploy (Recommended)** option selected. 3. Click **Save**. The **Deploy Configuration** page appears with the selected switch. 4. Click **Deploy All**. The **Deploy Configuration** page appears with an updated status of **SUCCESS**, **Status Description**, and **Progress** indicator. 5. Click **Close**. The detached network displays as **NA** (not attached) in the **Network Status** column in the **Networks** tab.
Deploy	Allows you to deploy the pending configuration for associating the switches or interfaces to the network. 1. To deploy a network, check the check box next to the network name that you want to deploy and choose **Deploy**. The **Deploy Configuration** page for the fabric appears. You can view the details such as the network name, fabric name, switch name, serial number, IP address, and role, network status, pending configuration, and progress of the configuration. 2. Click the **Lines** link in the **Pending Config** column to view the lines of the pending configuration. The **Pending Config** dialog box appears. 3. Click **Cancel** after you have viewed the pending configuration. 4. On the **Deploy Configuration** page, click the **Deploy** button. The status and progress of the deployment displays in the **Network Status** and the **Progress** columns. 5. After the deployment completes successfully, close the page.

Action Item	Description
Import	Allows you to import network information for the fabric. 1. To import network information, choose **Import**. The **Import Networks** dialog box appears. 2. Browse to the directory with the .csv file that contains the host IP address and corresponding unique network information. 3. Click **OK**. The host aliases are imported and displayed in the **Networks** tab.
Export	Allows you to export network information to a .csv file. The exported file contains information pertaining to each network, including the fabric it belongs to, the associated VRF, the network templates used to create the network, and all other configuration details that you saved during network creation. You can use the exported .csv file for reference or use it as a template for creating new networks. 1. To export network information, choose **Export**. The network information file is exported to your local directory. The file name is appended with the date and time at which the file was exported.  - The **Networks** tab displays network names based on the number of rows per page. You can view network names based on the options in the **Rows per page** drop-down list. When you use the **Export** option, Nexus Dashboard exports the network names as displayed per page. If you have a large number of network names and you want to export all of your network names, you need to navigate to each page and export each page individually. - Network CSV import and export operations do not include ACI-specific configurations, such as ACI fabric stretch associations or VLAN pool information. After you import networks, manually associate the required VLAN pool and stretch the networks to the intended ACI fabrics. 2. Before importing the file, update new records in the .csv file. 3. Ensure that the **networkTemplateConfig** field contains the JSON Object.

Action Item	Description
Delete	Allows you to delete the network. You can select multiple network entries and delete them at the same time. 1. To delete a network for the fabric, select the check box next to the network name that you want to delete and choose **Delete**. A **Warning** dialog box appears. 2. Click **Confirm** to delete the network.
Add to interface group	Allows you to add the network to an interface group. You can choose multiple network entries and add them to an interface group at the same time. 1. To associate the selected networks to the interface group that you want, check the check box for the network name you want and click **Add to interface group**. 2. On the **Add to interface group** page, click the network that you want to add and verify whether the selected network is present on the **Selected Networks** page and then click **Cancel**. 3. Either choose an **Interface Group** from the drop-down list or click **Create interface group**. 4. On the **Create interface group** page, provide the interface group name, choose the interface type, and then click **Create** to save the changes or click **Close** to close the page and discard the changes. 5. On the **Add to interface group** page, click **Save** to save the changes or click **Close** to close the page and discard the changes. The interface group displays in the **Interface Group** column on the **Networks** tab.

Create a network

Before creating networks, ensure that you have created a VRF for the fabric. However, if you have chosen Layer 2 on the **Create Network** page, then you do not require a VRF. For more information, see Working with VRFs.

1. On the **Networks** page, click **Actions > Create**.

   The **Create network** page appears.

2. On the **Create network** page, enter the required details in the mandatory fields. The available fields vary based on the fabric type.

   Fields marked with * are not used in VXLAN-ACI fabric groups.

Field	Description
Network name	Specifies the Layer 2 VNI and the name of the network. The network name should not contain any white spaces or special characters, except underscore (_) and hyphen (-). The corresponding Layer 3 VNI (or VRF VNI) is generated along with VRF creation.
Tenant	Displayed if a tenant is associated with the current fabric. For more information, see Configuring Tenants and Tenant Domains. Click the dropdown list to choose a tenant, if applicable. Networks created in the tenant common within a VXLAN-ACI fabric group can be referenced by other tenants.
Network mode	Choose one of the following network modes. • **Layer 2 only**—Choose this mode when the default gateway resides outside the fabric (for example, an external firewall or router). Nexus Dashboard does not create an SVI for the network within the fabric. It maps the Layer 2 VNI for the network to the appropriate VLAN, and that VLAN does not associate with a VRF. • **Layer 2 with VRF**—Choose this mode if you want to map the Layer 2 VNI of the network to a VRF without creating an SVI inside the fabric. Similar to Layer 2 Only, the default gateway remains outside the fabric. However, this mode also enables security groups and associated contracts, providing enhanced security and segmentation within the VXLAN BGP EVPN fabric. The **Layer 2 with VRF** option appears only if the **Security Groups MAC Segmentation** option is enabled in the fabric settings. • **Layer 3**—Choose this mode for a Layer 3 network. Nexus Dashboard provisions a VLAN and a corresponding distributed anycast gateway (SVI) on every VTEP attached to this network. The SVI associates with a VRF, which in turn has an associated Layer 3 VNI. Nexus Dashboard supports VRF provisioning with the Layer 3 VNI without VLAN feature, allowing you to segment with a VRF without using a dedicated SVI or VLAN resource on supported NX-OS platforms. This is especially useful when you need to use all 4K VLANs for host-facing (customer) networks.
VRF name	Allows you to select the Virtual Routing and Forwarding (VRF) from the drop-down list. If you want to create a new VRF, click **Create VRF**. The VRF name should not contain any white spaces or special characters except underscore (_), hyphen (-), and colon (:).

Field	Description
Network ID	Specifies the Layer 2 VNI and the name of the network. The network name should not contain any white spaces or special characters, except underscore (_) and hyphen (-). The corresponding Layer 3 VNI (or VRF VNI) is generated along with VRF creation.
VLAN ID	Specifies the corresponding tenant VLAN ID for the network. If you want to propose a new VLAN for the network, click **Propose VLAN**.
Network template *	A default universal template is auto-populated. This is only applicable for leaf switches.
Network extension template *	A default universal extension template is auto-populated. This allows you to extend this network to another fabric. The methods are VRF Lite, Multi Site, and so on. The template is applicable for border leaf switches and BGWs.
Generate Multicast IP *	Click to generate a new multicast group address and override the default value.

3. Enter the necessary field values or edit pre-filled fields, as required.

   The tabs and their fields in the screen are explained in these sections.

   - General Parameters
   - Advanced

4. Click **Create**.

   A message appears indicating that the network is created.

   The new network appears on the **Networks** page that comes up.

   The Status is **Not applicable** since the network is created but not yet deployed on the switches. Now that the network is created, you can create more networks if necessary and deploy the networks on the devices in the fabric.

General Parameters

The fields on the **General Parameters** tab are:

Field	Description
IPv4 Gateway/NetMask	Specifies the IPv4 address with subnet. Specify the anycast gateway IP address for transporting the L3 traffic from a server belonging to MyNetwork_30000 and a server from another virtual network. The anycast gateway IP address is the same for MyNetwork_30000 on all switches of the fabric that have the presence of the network.  If the network is a non-Layer 2 network, then it is mandatory to provide the gateway IP address.  The primary gateway IP address should match IP address provided in the IPv4 secondary gateway list field.
IPv6 Primary Gateway/Prefix List	Specifies the IPv6 primary address with subnet.
IPv6 Secondary Gateway/Prefix List	Specifies the IPv6 secondary address with subnet.
VLAN Name	Enter the VLAN name.
Interface Description	Specifies the description for the interface. This interface is a switch virtual interface (SVI).
MTU for L3 interface	Enter the MTU for Layer 3 interfaces in the range of 68 - 9216.
IPv4 Secondary Gateway List (Max 16)	Configure up to 16 secondary gateway IP addresses when creating or editing a network. Click **Actions > Add** to add the secondary gateway IP addresses. For more information, see Configure a secondary gateway IP address.
Secondary IPv4 Gateway/Netmask	Check this check box to delete all the IP addresses listed in the table. Click **Actions > Delete** to delete all the secondary gateway IP addresses.
Downstream VNI	Configure downstream VNI. For more information, see the section "Configuring downstream VNI" in Creating Fabrics and Fabric Groups.

Advanced

The fields on the **Advanced** tab are:

Field	Description
ARP Suppression	Choose the check box to enable the ARP Suppression function.
Ingress Replication *	The check box is selected if the replication mode is ingress replication.  Ingress replication is a read-only option on the **Advanced** tab. Changing the fabric setting updates the field.

Field	Description
Enable Xconnect *	Enables Xconnect to establish Layer 2 tunnels for reliable connectivity in VXLAN and eBGP fabrics. VXLAN Xconnect supports only Layer 2 networks. You cannot enable Xconnect on a Layer 3 network. You can attach Layer 2 Xconnect networks only to ports configured with a dot1q tunnel policy. Xconnect networks cannot be attached to access or trunk ports.
Multicast Group Address *	The multicast IP address for the network is autopopulated. Multicast group address is a per fabric instance variable. The number of underlay multicast groups supported is 128. If all networks are deployed on all switches, you need not use a different multicast group per L2 VNI or a network. Therefore, multicast group for all networks in a fabric remains the same. Perform these steps to include the DHCP relay server information: a. On the **DHCP Relay Server Information** field, click **Actions** > **Add**. The **Add Item** page appears. b. Enter the **Server IP V4 Address** and **Server VRF** details and click **Save**. c. Repeat the above steps to add the required number of DHCP relay server information.
DHCPv4 Server 3 *	Enter the DHCP relay IP address of the next DHCP server.
DHCPv4 Server3 VRF *	Enter the DHCP server VRF ID.
Loopback ID for DHCP Relay interface (Min:0, Max:1023) *	Specifies the loopback ID for DHCP relay interface.
Routing Tag	The routing tag is autopopulated. This tag is associated with each gateway IP address prefix.
IPv4 TRM enable *	Check the check box to enable TRM with IPv4. For more information, see the "Overview of Tenant Routed Multicast" section in Editing Data Center VXLAN EVPN Fabric Settings.
IPv6 TRM enable *	Check the check box to enable TRM with IPv6. For more information, see the "Overview of Tenant Routed Multicast" section in Editing Data Center VXLAN EVPN Fabric Settings.
L2 VNI Route-Target Both Enable	Check the check box to enable automatic importing and exporting of route targets for all L2 virtual networks.
Enable Netflow *	Enables netflow monitoring on the network. This is supported only if netflow is already enabled on fabric.

Field	Description
Interface Vlan Netflow Monitor *	Specifies the netflow monitor specified for Layer 3 record for the VLAN interface. This is applicable only if **Is Layer 2 Record** is not enabled in the **Netflow Record** for the fabric.
Vlan Netflow Monitor *	Specifies the monitor name defined in the fabric setting for Layer 3 **Netflow Record**.
Enable L3 Gateway on Border and vPC Border Gateway *	Check the check box to create a switch virtual interface (SVI) on border switches and vPC border gateways.  The **Enable L3 Gateway on Border and vPC Border Gateway** option is applicable only for border switches and vPC border gateways. When applied to other switches, enabling or disabling this option has no effect and will not update the generated configuration.

Network overview

After you have created a network using the procedures in Create a network, click the newly-created network. The **Overview** page for that network is displayed.

The information displayed and the actions that you can take differ, depending on whether this is a network in a standard fabric/fabric group or in a VXLAN-ACI fabric group.

- Standard fabric/fabric group
- VXLAN-ACI fabric group

Standard fabric/fabric group

This table describes the fields on **Overview**.

Network Overview Table Fields and Description

Field	Description
Network info	
Network name	Specifies the name of the network.
Layer	Specifies whether this network is a **Layer 2 only**, **Layer 2 with VRF**, or **Layer 3** network.
VRF name	Specifies the VRF that is associated with this network, if applicable.
IPv4 gateway	Specifies the IPv4 gateway that is associated with this network, if applicable.
IPv6 gateway	Specifies the IPv6 gateway that is associated with this network, if applicable.
Status	Specifies the status of network (for example, Pending, Not applicable, Deployed, Out-of-sync, and so on).
Fabric	Specifies the name of the associated fabric.

VLAN ID	Specifies the VLAN ID.
Network Status	Specifies the status of the network.
Attached Roles Association	Specifies the switch roles.

Click the table header to sort the entries in alphabetical order of that parameter.

The following table describes the action items, in the **Actions** drop-down list, that appear on the **VRF Attachments** horizontal tab of the **VRFs** tab on the **Fabric Overview** page.

Network Overview Actions and Description

Action Item	Description
Edit	Allows you to view or edit the selected network parameters. 1. To edit the network information, check the check box next to the network name that you want to edit and choose **Edit**. 2. On the **Edit Network** page, edit the required values and click **Save** to apply the changes or click **Close** to discard the changes.
Multi-attach	Allows you to attach networks to multiple switches and interfaces at the same time. 1. To attach certain switches and interfaces to the network, click **Actions > Multi-attach**. 2. On the **Multi-attach of Networks** page, check the check boxes for the switches that you want to attach to the network and click **Next**. 3. In the **Select Interfaces** area, check the check boxes for the interfaces that you want to attach to the network and click **Next**. The **Summary** page displays with the **Proceed to Full Switch Deploy (Recommended)** option selected. 4. Click **Save**. The **Deploy Configuration** page appears with the selected switch. 5. Click **Deploy All**. The **Deploy Configuration** page appears with an updated status of **SUCCESS**, **Status Description**, and **Progress** indicator. 6. Click **Close**. The attached network displays as **DEPLOYED** in the **Network Status** column in the **Networks** tab.

Action Item	Description
Multi-detach	Allows you to detach multiple switches from the network at the same time. 1. To detach certain switches from the network, click **Actions > Multi-detach**. 2. On the **Multi-detach of Networks** page, check the check boxes for the switches that you want to detach from the network and click **Next**. The **Summary** page displays with the **Proceed to Full Switch Deploy (Recommended)** option selected. 3. Click **Save**. The **Deploy Configuration** page appears with the selected switch. 4. Click **Deploy All**. The **Deploy Configuration** page appears with an updated status of **SUCCESS**, **Status Description**, and **Progress** indicator. 5. Click **Close**. The detached network displays as **Not applicable** in the **Network Status** column in the **Networks** tab.
Deploy	Allows you to deploy the pending configuration for associating the switches or interfaces to the network. 1. To deploy a network, click **Actions > Deploy**. The **Deploy Configuration** page for the fabric appears. You can view the details such as the network name, fabric name, switch name, serial number, IP address, and role, network status, pending configuration, and progress of the configuration. 2. Click the **Lines** link in the **Pending Config** column to view the lines of the pending configuration. The **Pending Config** dialog box appears. 3. Click **Cancel** after you have viewed the pending configuration. 4. On the **Deploy Configuration** page, click the **Deploy** button. The status and progress of the deployment displays in the **Network Status** and the **Progress** columns. 5. After the deployment completes successfully, close the page.

Action Item	Description
Add to interface group	Allows you to add the network to an interface group. You can choose multiple network entries and add them to an interface group at the same time. 1. To associate a network to the interface group that you want, click **Actions > Add to interface group**. 2. On the **Add to interface group** page, click the network that you want to add and verify whether the selected network is present on the **Selected Networks** page and then click **Cancel**. 3. Either choose an **Interface Group** from the drop-down list or click **Create interface group**. 4. On the **Create interface group** page, provide the interface group name, choose the interface type, and then click **Create** to save the changes or click **Close** to close the page and discard the changes. 5. On the **Add to interface group** page, click **Save** to save the changes or click **Close** to close the page and discard the changes. The interface group displays in the **Interface Group** column on the **Networks** tab.
Remove from interface group	Allows you to remove the network from an interface group. 1. To remove a network from an interface group, click **Actions > Remove from interface group**. 2. On the **Remove from interface group** page, click the network that you want to remove the network from. 3. Choose an **Interface Group** from the drop-down list. 4. Click **Remove**.

VXLAN-ACI fabric group

Overview

This table describes the fields on **Overview**.

Network Overview Table Fields and Description

Field	Description
Network info	
Network name	Specifies the name of the network.
Tenant	Specifies the tenant name, if a tenant is associated with the current fabric.
Layer	Specifies whether this network is a **Layer 2 with VRF** or **Layer 3** network
Network ID	Specifies the network ID.

VRF name	Specifies the VRF that is associated with this network, if applicable.
IPv4 gateway	Specifies the IPv4 gateway that is associated with this network, if applicable.
IPv6 gateway	Specifies the IPv6 gateway that is associated with this network, if applicable.
Status	Specifies the status of network (for example, Pending, Not applicable, Deployed, Out-of-sync, and so on).
Fabric group name	Specifies the name of the associated fabric group.
VLAN ID	Specifies the VLAN ID.
Network Type	Specifies the type of the network.
Network Status	Specifies the status of the network.
Member Fabrics	
Network name	Specifies the names of the networks in the member fabrics.
Fabric	Specifies the member fabrics.
Status	Specifies the status of the networks (for example, Pending, Not applicable, Deployed, Out-of-sync, and so on).
Local L2 VNI	Specifies the Layer 2 virtual network interface (VNI) of the network.
Stretch	Specifies if the network is stretched or not.

Click the table header to sort the entries in alphabetical order of that parameter.

The following table describes the action items, in the **Actions** drop-down list, that appear on the **VRF Attachments** horizontal tab of the **VRFs** tab on the **Fabric Overview** page.

Network Overview Actions and Description

Action Item	Description
Edit	Allows you to view or edit the selected network. To edit the network information, check the check box next to the network name that you want to edit, then choose **Actions > Edit**.
Stretch	Allows you to stretch a selected network. To stretch a network, check the check box next to the network that you want to stretch, then choose **Actions > Stretch**. A confirmation window appears, asking if you want to stretch this network to all border gateway switches. Click **Confirm**. You are returned to the **Network overview** page, and the network is shown with the entry **All Border Gateway List** in the **Stretch** column.

Action Item	Description
Unstretch	Allows you to unstretch a selected network. To unstretch a network, check the check box next to the network that you want to unstretch, then choose **Actions > Unstretch**.

Enable Xconnect for Layer 2-only network

You can create a Layer 2-only network when the network gateway resides outside the fabric.

VXLAN Xconnect supports only Layer 2 networks. You can attach Layer 2 Xconnect networks only to dot1q ports, not to access or trunk ports.


Follow these steps to enable Xconnect for Layer 2-only network.

1. Navigate to **Fabrics** page.

   Go to **Manage > Fabrics**.

2. Click the VXLAN fabric. The **Fabric Overview** page displays.
3. Click the **Segmentation and security** tab. The **Networks** tab displays.
4. From the **Actions** drop-down list, choose **Create**.

   The **Create Network** page displays.

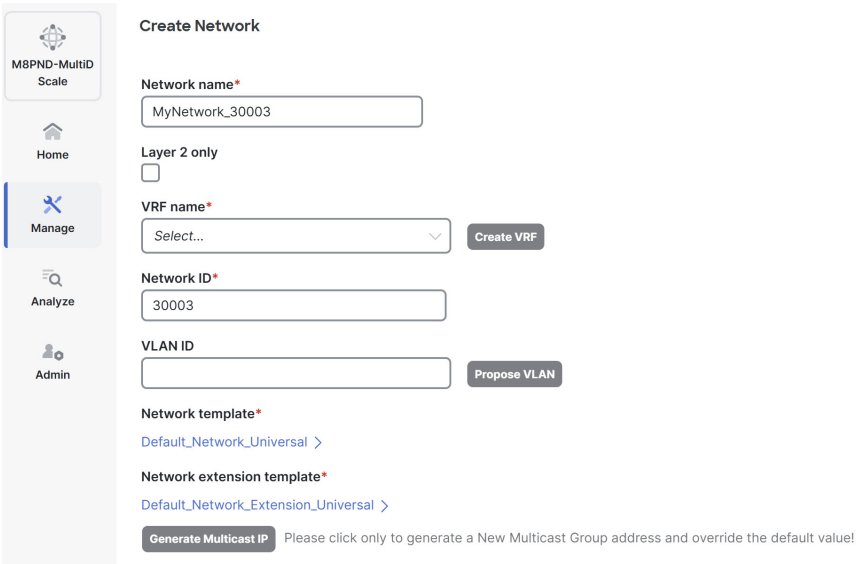


5. In the **Network name** field, provide a name for the Layer 2 network.
6. Check the **Layer 2 only** check box to specify that this network is Layer 2-only network.
7. In the **Network ID** field, provide the network ID.
8. In the **VLAN ID** field, provide the VLAN ID for the network, or click **Propose VLAN** to have Nexus Dashboard suggest an available VLAN ID based on fabric settings.
9. Leave the **Network template** field as the *Default_Network_Universal*, which is appropriate for Layer 2 networks.

10. Leave the **Network extension template** as the *Default_Network_Extension_Universal*, which is appropriate for Layer 2 networks.

> Under the **General** tab, the gateway IP address fields remain empty because the gateway for a Layer 2 network resides outside the fabric.

11. Click the **Advanced** tab.

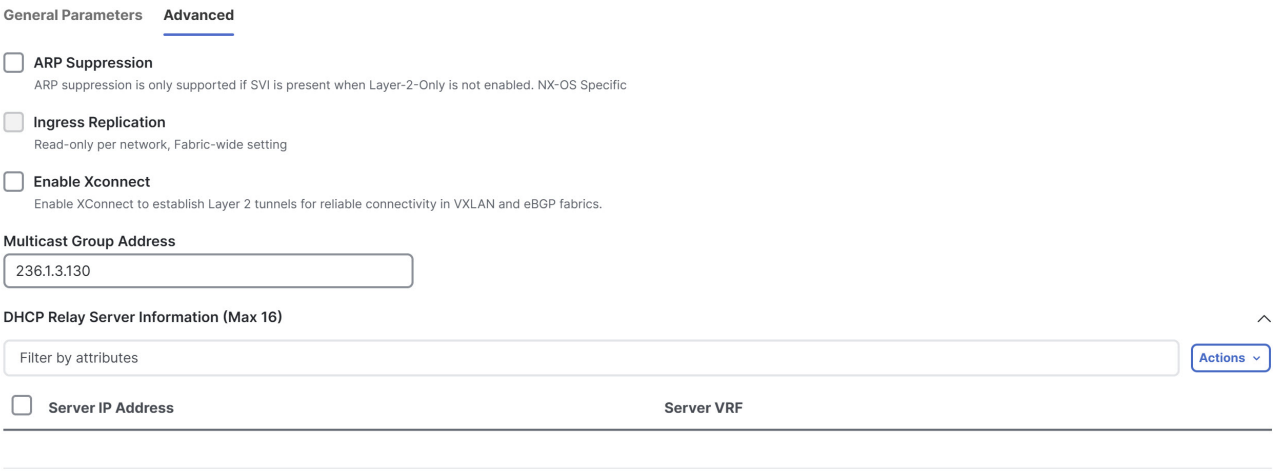

12. Check the **Enable Xconnect** check box.

    This enables Xconnect to establish Layer 2 tunnels for reliable connectivity in VXLAN and eBGP fabrics.

13. Configure any other necessary parameters such as **DHCP relay server information** or advanced settings, if applicable.
14. Click **Create** to save the new Layer 2 network.

    The **Networks** tab under **Segmentation and security** displays the newly created network.

15. From the **Actions** drop-down list, Choose **Deploy** to apply the network configuration.


    For more information on creating interfaces, see the section "Add interfaces" in Working with Connectivity in Your Nexus Dashboard LAN Fabrics.

Deploy Layer 2-only network

In Layer 2 networks with Xconnect enabled, you must configure dot1q policy on any interface attached to the network.


Follow these steps to deploy the network to specific interfaces.

1. In the **Networks** tab under **Segmentation and security** choose the newly created Layer 2 network, then click **Actions > Multi-attach**. The **Multi-attach of Networks** page displays.

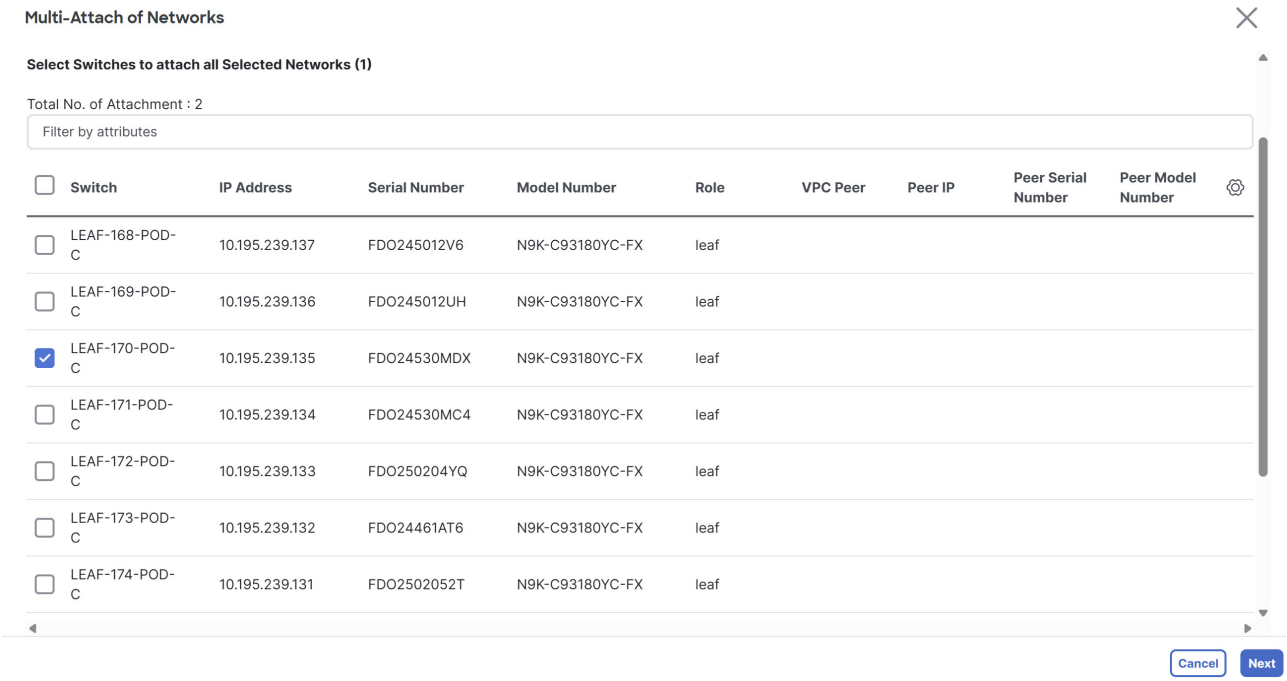

2. Choose the switch and click **Next**.

   The **Select Interfaces** page displays.

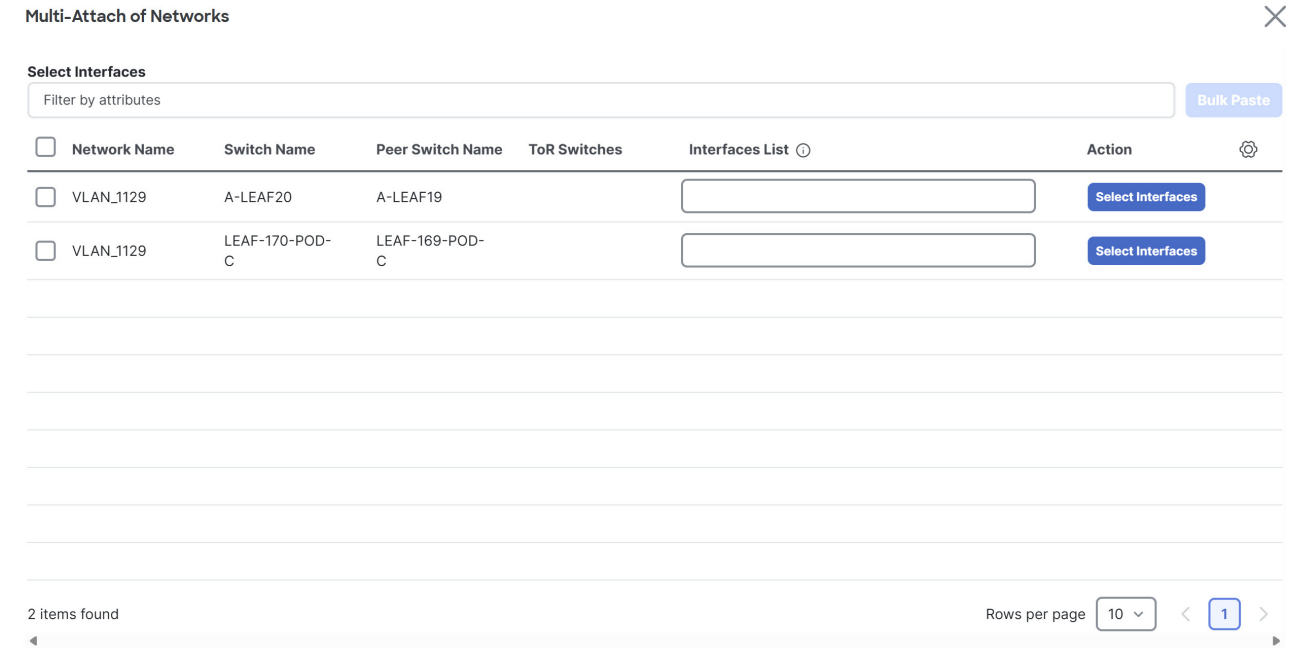


3. Click the **Select Interfaces** button.

   The **Select Interfaces of *switch name-fabric_name*** page displays. For L2-only network with Xconnect enabled, this page displays only the interfaces with dot1q_tunnel port type.



You can view the interfaces with dot1q_tunnel port type in the **Interface** table. From the **Fabric Overview** page, navigate to **Connectivity > Interface** to view the **Interface** table.

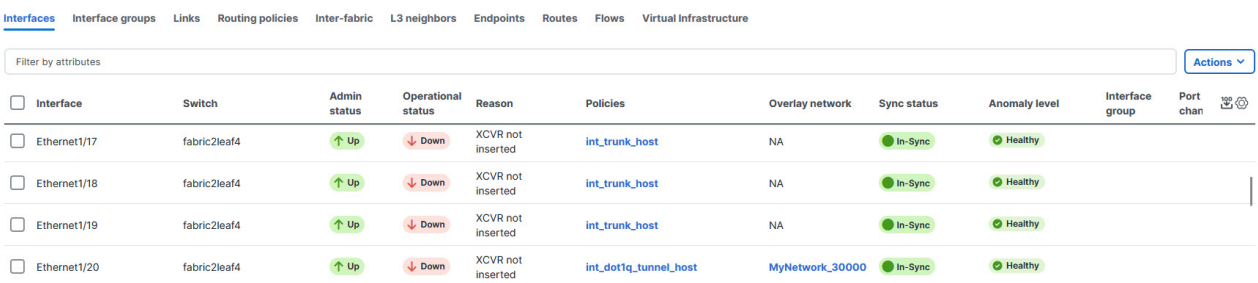

4. Choose the interface and click **Save**.

   The **Select Interfaces** page displays, with the **Interface List** field listed.

5. Click **Next**.

   The **Multi-attach Networks** page with a summary displays.

6. Choose **Proceed to individual network deploy** and click **Save**.

   The **Deploy Configuration** page displays.

7. Click **Deploy**.

Edit a network

Follow these steps to edit a network.

1. Navigate to **Manage Fabrics > Fabric Overview > Segmentation and security > Networks**.
2. Click on the network that you want to edit.

3. Click **Actions > Edit**.

   The **Edit Network** page displays.

   For the fields and descriptions on the **Edit Network** page, see Create a network.

Configure a secondary gateway IP address

With this feature, Nexus Dashboard added support for configuring up to 16 secondary IP addresses in a list rather than in individual fields when creating or editing a network. Prior to 4.3.1, Nexus Dashboard supported adding four secondary gateway IP addresses in individual fields when creating or editing a network.

This feature is available for these fabric types.

- Campus VXLAN EVPN
- Data Center VXLAN EVPN

Follow these steps to add secondary gateway IP addresses.

1. Navigate to **Segmentation and security > Networks**.
2. Click on a network for which you want to add a secondary gateway IP address.
3. Click **Actions > Edit**.

   The **Edit Network** page displays.

4. Ensure that you are on the **General Parameters** tab.
5. On the **Edit Network** page in the **IPv4 Secondary Gateway List (Max 16)** section, click **Actions > Add**.

   The **Add Item** dialog box appears.

6. Enter the **Secondary IPv4 Gateway/NetMask** field with a secondary gateway IP address and click **Save**.

   You can add a maximum of 16 secondary gateway IP addresses.

7. Repeat these steps until you have added the necessary secondary gateway IP addresses.
8. View the added secondary gateway IP addresses by navigating to **Manage > Fabrics > Configuration policies > Resources** under the **Allocated Resource** column.

Guidelines and limitations for adding secondary gateway IP addresses

- You must configure a primary gateway IP address before adding a secondary gateway IP address. You receive an error if you do not configure a primary gateway IP address.
- You can configure a maximum of 16 secondary gateway IP addresses. You receive an error if you exceed 16 secondary gateway IP addresses. If you do want to configure 17 or 18 secondary gateway IP addresses, Nexus Dashboard adds the additional secondary gateway IP addresses in the **Switch Freeform Config** field in a freeform configuration template. Nexus Dashboard does not manage freeform configuration templates. For more information, see Configuration Compliance.

- If you have a duplicate secondary IP address, Nexus Dashboard generates an error message.
- Nexus Dashboard pushes the secondary gateway IP addresses in the pending configuration.
- For existing customers, Nexus Dashboard provides REST APIs for importing legacy device information.

Network attachments

These options are applicable only for switch fabrics, VXLAN EVPN fabrics, and VXLAN fabric groups.

Use the **Network attachments** page to attach fabrics and interfaces to a network. You can also detach fabrics and interfaces from a network.

1. Choose **Manage > Fabrics** and click on a fabric.

   The **Fabric > Overview** page displays.

2. Navigate to **Segmentation and security > Networks**.
3. Click on a network to open the **Network > Overview** page.
4. Click **Network attachments**.

   This table describes the available fields for configuring a network attachment.

   Network Attachments table fields and descriptions

Field	Description
Network Name	Specifies the name of the network.
Network ID	Specifies the Layer 2 VNI of the network.
VLAN ID	Specifies the VLAN ID.
Switch	Specifies the name of the switch.
Ports	Specifies the ports for the interfaces.
Status	Specifies the status of the network attachments, for example, pending, Not applicable, and so on.
Attachment	Specifies whether the network attachment is attached or detached.
Switch Role	Specifies the switch role. For example, for the fabric created using the Campus VXLAN EVPN fabric template, the switch role is specified as either leaf, spine, or border.
Fabric Name	Specifies the name of the fabric to which the network is attached or detached.

   This table describes the action items, in the **Actions** drop-down list, that appear on the **Network Attachments > Network attachments** tab.

   Network Attachments actions and descriptions

Action Item	Description

History	Allows you to view the deployment and policy change history of the selected network. You can view the deployment history details of a network attachment such as hostname, network name, VRF name, commands, status, status description, user and completed time on the **Deployment History** tab. You can view the policy change history details such as policy ID, template, description, PTI operation, generated configuration, entity name and type, created date, serial number, user, and source of the policy on the **Policy Change History** tab. To view the history of a network attachment, select the check box next to the network name and choose the **History** action. The **History** page appears. Click the **Deployment History** or **Policy Change History** tabs as required. Click the **Detailed History** link in the **Commands** column of the **Deployment History** tab to view the command execution details (comprising configuration, status, and CLI response) for the host.
Edit	Allows you to view or edit the network attachment parameters such as interfaces that you want to attach to the selected network. To edit the network attachment information, check the check box next to the network name that you want to edit and choose the **Edit** action. On the **Edit Network Attachment** page, edit the required values, attach or detach the network attachment, click the **Edit** link to edit the CLI freeform config for the switch, and click **Save** to apply the changes or click **Cancel** to discard the changes. The edited network attachment is shown in the table on the **Network attachments** horizontal tab of the **Networks** tab on the **Fabric Overview** page.
Preview	Allows you to preview the configuration of the network attachments for the selected network.  This action is not allowed for attachments that are in deployed or are in Not applicable status. To preview the network, check the check box next to the network name and choose **Preview** from **Actions** drop-down list. The **Preview Configuration** page for the fabric appears. You can preview the network attachment details such as the network name, fabric name, switch name, serial number, IP address, and role, network status, pending configuration, and progress of the configuration. Click the lines link in the **Pending Config** column to view the lines for which the configuration is pending. Click **Close**.

Deploy	Allows you to deploy the pending configuration of the network attachments, for example, interfaces, for the selected network. This action is not allowed for attachments that are in deployed or Not applicable status. To deploy a network, check the check box next to the network name and choose **Deploy** from **Actions** drop-down list. The **Deploy Configuration** page for the fabric appears. You can view the details such as the network name, fabric name, switch name, serial number, IP address, and role, network status, pending configuration, and progress of the configuration. Click the lines link in the **Pending Config** column to view the lines for which the configuration is pending. Click the **Deploy** button. The status and progress of the deployment is displayed in the **Network Status** and **Progress** columns. After the deployment is completed successfully, close the page.
Import	Allows you to import information about network attachments for the selected fabric. To import the network attachments information, choose **Import**. Browse the directory and select the .csv file that contains the network attachments information. Click **Open** and then click **OK**. The network information is imported and displayed in the **Network attachments** horizontal tab on the **Networks** tab in the **Fabric Overview** page.
Export	Allows you to export the information about network attachments to a .csv file. The exported file contains information pertaining to each network, including the fabric it belongs to, whether the LAN is attached, the associated VLAN, serial number, interfaces, and freeform configuration details that you saved for network attachments. To export network attachment information, choose the **Export** action. Choose a location on your local system directory to store the network information and click **Save**. The network information file is exported to your local directory. The file name is appended with the date and time at which the file was exported.
Quick attach	Allows you to immediately attach an attachment to the selected network. You can select multiple entries and attach them to a network at the same instance. Interfaces cannot be attached to a network using this action. To quickly attach any attachment to a network, choose **Quick attach** from **Actions** drop-down list. A message appears to inform that the attach action was successful.

Quick detach	Allows you to immediately detach the selected network from an attachment, for example, a fabric. You can choose multiple entries and detach them from an attachment at the same instance. To quickly detach any attachment to a network, choose **Quick detach** from the **Actions** drop-down list. A message appears to inform you that the detach action was successful. After quick detach, the switch status is not computed when there is no deploy. Post deploy, the configuration compliance calls at the entity level (interface or overlay).

Edit network attachment

Use the **Edit Network Attachment** page to perform these operations.

- Attach and detach interfaces to and from a network
- Choose an unused VLAN for mapping to an SVI

  For more information, see Find an unused VLAN.

- Modify an interface

  For more information, see Modify an interface.

- Edit a CLI freeform configuration

1. Navigate to the **Segmentation and security > Networks** page.
2. Click on a network to open the **Network > Overview** page.
3. Click **Network attachments**.
4. Click on a network and click **Actions > Edit**.

   The **Edit Network Attachment** page displays.

5. Click **Select VLAN** to view unused VLANs within a VLAN range. **Select VLAN** displays if you have an attached network.

   The **Select Unused VLAN** page displays and the **Network VLAN range** option displays by default.

   When you create a fabric, you can view the default VLAN range in the **Network VLAN Range** field by navigating to **Edit Fabric > Resources**.

6. Alternatively, click **All VLANs** to view a list of all the unused VLANs.
7. You can filter by **VLAN ID** in the **Filter by attributes** field to reduce the number of unused VLANs.
8. Choose a VLAN ID from the list.
9. Click **Select**.

   The **Edit Network Attachment** page displays with the chosen VLAN in the **VLAN** field.

10. If you want to modify an interface associated with this device, click **Modify interfaces**. For more information, see Modify an interface.
11. You can filter by attributes in the **Available interfaces for this device** field.

    This table displays the fields and descriptions associated with attaching or detaching a network attachment.

    Edit Network Attachment table fields and descriptions

Field	Description
Interface/Ports	Specifies the type of interface and the port associated with the device.
Switch	Specifies the type of switch associated with the device.
Status	Specifies the status of the interface. Available values are: • **true**—indicates that a network is attached • **false**—indicates that a network is not attached
Port Type	Specifies the type of port for the device.
Port Description	Specifies the port description.
Neighbor Info	Specifies the neighbor associated with the device.
Policy Name	Specifies the policy name associated with the device.

Find an unused VLAN

If you have a lot of network attachments, it can be difficult to find an available VLAN. With the 4.3.1 of Nexus Dashboard 4.3.1, you can find an unused VLAN within a range or by choosing a VLAN from a complete list of unused VLANS when editing a network attachment. For more information, see Edit network attachment.

You can find an unused VLAN for any fabric that uses a network attachment.

Guidelines and limitations for finding an unused VLAN

The only limitation is for reserved VLANs. If you change the default reserved range on a device, Nexus Dashboard does not exclude that VLAN. For example, the default VLAN range for Cisco Nexus switches is 3968 to 4095. There are no issues with using the default VLAN range. If you changed the VLAN range to 2, Nexus Dashboard reserves 2 to 130 as the VLAN range. Using this example, Nexus Dashboard would not exclude these VLANs in the **All VLANs** list.

Modify an interface

Use the **Modify interfaces** option if you need to make updates for an interface that is not configured correctly, or if you notice that an interface is not in the list of configured interfaces. Another common use case is that there is no port to attach the interface to. When you choose **Modify interfaces**, you navigate directly to the **Interfaces** tab.

1. Follow the steps described in Edit network attachment.

2. Click **Modify interfaces**.

   The **Interfaces** page displays.

3. You can perform any of actions for the interface from the **Actions** drop-down list.
4. After performing the necessary actions, clicking **Save**, and closing the **Interfaces** page, you are back on the **Edit Network Attachment** page.

Create private VLANs

A Private Virtual Local Area Network (PVLAN) is a VLAN that isolates a Layer 2 port from the other ports in the same broadcast domain or subnet. PVLAN restricts Layer 2 traffic within a broadcast domain by segmenting the broadcast domain into multiple subdomains. A subdomain contains a PVLAN pair which includes a primary VLAN and one or more secondary VLANs. A PVLAN domain can have multiple PVLAN pairs, one for each subdomain. All VLAN pairs in a PVLAN domain share the same primary VLAN. A PVLAN domain can have only one primary VLAN.

Secondary VLANs provide Layer 2 isolation between ports within the same PVLAN. Although PVLANs provide host isolation at Layer 2, hosts can communicate with each other at Layer 3.

Guidelines and limitations for private VLANs over VXLAN

- This feature is supported with Data Center VXLAN EVPN, Routed, and External and inter-fabric connectivity fabrics.
- This feature is supported over physical interface, port-channel interface, and virtual port channel (vPC) interfaces on the switches in a fabric.
- This feature is supported on Layer 2 ToR interfaces.
- This feature provides support for **cli** and **config-profile** overlay modes for VRF and network configurations.
- This feature is supported only on VTEPs, and not supported on spine and super spine switches.
- This feature is not supported with the VXLAN EVPN multi-site fabrics.
- This feature is not supported on brownfield deployments.
- This feature is not supported on interface groups on a PVLAN interface.
- This feature is not supported for security groups.

Enable PVLAN for a fabric

Follow these steps to enable PVLAN for a fabric.

1. Create a new fabric or edit an existing fabric.
   - To create a new fabric, see Creating Fabrics and Fabric Groups.
   - To edit an existing fabric, choose **Manage > Fabrics**, choose an existing fabric and click **Actions > Edit Fabric Settings**.
2. Go to the **Advanced** tab and check the **Enable Private VLAN (PVLAN)** check box.

   Ensure that you have checked the **Enable EVPN VXLAN Overlay** check box in the **EVPN** tab of the BGP fabric. You can enable the **Enable Private VLAN (PVLAN)** check box only if you have enabled

VXLAN EVPN mode in your fabric.

3. From the **PVLAN Secondary Network Template** list, select PVLAN template for the secondary network. The default is **Pvlan_Secondary_Network**.
4. Click **Save**.

   A warning message appears prompting you to perform a Recalculate and deploy.

5. Click **OK**.
6. Click the VXLAN fabric to open the **Fabric Overview** page.
7. Choose **Actions > Recalculate and deploy**.
8. Review the configurations after the **Config Preview** and click **Deploy All**.

   Performing a recalculate and deploy enables the ***feature private-vlan*** command on all the VTEPs and TORs.



You cannot disable PVLAN feature in a fabric, if there are any PVLAN networks or PVLAN interface policies configured.

Configure an interface as a PVLAN port

Before you begin

Ensure that you have enabled the PVLAN feature for the fabric.

Follow these steps to configure a PVLAN port.

1. In Nexus Dashboard, choose **Manage > Fabrics**.
2. Click the fabric name to open the fabric **Overview** page.
3. Click **Connectivity > Interfaces**.
4. On the **Interfaces** tab, do one of the following:
   - For an Ethernet interface, select the required interface and choose **Actions > Edit**.
   - For a port channel or virtual port channel (vPC) interface, choose **Actions > Create interface**.
5. Under the **Policy** field, click the policy link to select the required PVLAN interface policy.
6. In the **Select Attached Policy Template** dialog box, choose the required interface policy template and click **Select**.

   The following are the supported PVLAN interface policies:

   - **int_pvlan_host**—Specifies the interface template for creating a PVLAN port on an Ethernet interface.
   - **int_port_channel_pvlan_host**—Specifies the interface template for creating a PVLAN port-channel interface.
   - **int_vpc_pvlan_host**—Specifies the interface template for creating a vPC port for the PVLAN on a vPC pair.

     After attaching the PVLAN policy to an interface, the **PVLAN** tab appears.

7. Configure all the necessary fields in the **PVLAN** tab.

   The fields in the **PVLAN** tab are described in this table.

Field	Description
PVLAN Mode	Specifies the PVLAN port type. The following are the supported types: · **promiscuous** · **trunk promiscuous** · **host** · **trunk secondary**
PVLAN Allowed Vlans	Configures a list of allowed VLANs on a PVLAN trunk port.
Native Vlan	Configures a VLAN to transport the untagged packets on PVLAN trunk ports. If there is no native VLAN configured, all untagged packets are dropped.
PVLAN Mapping	Displays the mapping between the primary VLAN and the secondary VLANs. The fields in this area are enabled only if you select **promiscuous** or **trunk promiscuous** as the PVLAN mode. You can configure multiple VLAN pairs for the PVLAN. To add new primary-secondary VLAN pair, choose **Actions > Add**.
PVLAN Association	Configures the association between the primary VLAN and the associated secondary VLANs. The fields in this area are enabled only if you select **host** or **trunk secondary** as the PVLAN mode. You can configure multiple VLAN pairs for a PVLAN. To add a new primary-secondary VLAN pair, choose **Actions > Add**.

8. When you have entered all the necessary information in the configuration fields, click **Save**.

   An error message appears if you have not enabled PVLAN for the fabric. See Enable PVLAN for a fabric for the steps to enable PVLAN for the fabric.

For external fabrics, Nexus Dashboard provides support for PVLAN only at the interface level. Before configuring PVLAN interfaces, if **feature private-vlan** is not already enabled on the switch, ensure that you add a PVLAN policy for the switch using the **feature-pvlan** policy template. Perform a **Recalculate and deploy** and then follow the steps mentioned in this section to create PVLAN interfaces.

Create a network for primary and secondary VLANs

Follow these steps for creating a network for primary and secondary VLANs.

1. In Nexus Dashboard, choose **Manage > Fabrics**.

2. From the list of available fabrics, click the PVLAN-enabled fabric.

   The fabric **Overview** page appears.

3. Navigate to **Segmentation and security > Networks** and choose **Actions > Create**.

   The **Create Network** page appears.

4. Enter the required details in the following fields. Some of the fields are auto-populated with default values. You can make changes, as required.

   This table describes the fields on the **Create Network** page.

Field	Description
Network Type	Click the **Private (PVLAN)** radio button. This radio button is available only if you have enabled private VLAN feature for the selected fabric.
Private Network Type	Specifies the VLAN type. Select one of the following options: • **Primary**—Choose the option to configure your network as the primary VLAN. You can configure only one primary VLAN in a PVLAN. • **Community**—Choose the option to configure a secondary VLAN to enable the hosts to communicate with each other as well as forward traffic to ports in the Primary VLAN. • **Isolated**—Choose the option to configure an isolated secondary VLAN that enables the hosts to only forward traffic to the ports in the primary VLAN.
Network Name	Specifies the name of the network. The network name should not contain any white spaces or special characters except underscore (_) and hyphen (-).
Layer 2 Only	Enables you to create a Layer 2 only network. This field is applicable only for primary VLANs.
Primary Network Name	Choose the name of the primary network from the list of configured primary networks. This field is applicable only when you are configuring a secondary VLAN.

Field	Description
VRF Name	Allows you to select the VRF that you have created for the fabric. When no VRF is created, this field appears as blank. If you want to create a new VRF, click **Create VRF**. The VRF name should not contain any white spaces or special characters except underscore (_), hyphen (-), and colon (:). This field is applicable only for primary VLANs.
Network ID	Specifies the layer 2 Virtual Network Identifier (VNI) of the network.
VLAN ID	Specifies the corresponding tenant VLAN ID for the network. If you want to propose a new VLAN for the network, click **Propose VLAN**.
Network Template	Auto-populates the universal template for primary networks. For secondary networks, select the **Pvlan_Secondary_Network** template. This is only applicable for leaf switches.
Network Extension Template	Auto-populates the universal extension template for primary networks. For secondary networks, select the **Pvlan_Secondary_Network** template. This allows you to extend the network to another fabric. The VRF Lite extension is supported. The template is applicable for border leaf switches.

5. When you have entered all the necessary information in the configuration fields, click **Create**.

   The table in the **Networks** tab displays all the newly created PVLAN networks.

What's next: Once you have primary and secondary networks configured, you can attach the networks to the switches.

Attaching a primary network

After creating the primary and secondary networks, you can attach the networks to the switches and their PVLAN interfaces. You can attach a primary network either explicitly or implicitly.

- **Explicit Attach/Detach**—Defines the method of manually attaching/detaching a network.
- **Implicit Attach/Detach**—Defines the method in which a network is attached/detached automatically because one of the members in a PVLAN primary-secondary pair undergoes an explicit attachment/detachment.

This section is optional for VTEPs that only have PVLAN host or trunk secondary ports. If you want to perform an implicit attach for your primary network, you can skip the section and proceed to

Attaching a secondary network.

Follow these steps to attach a primary network explicitly.

1. In Nexus Dashboard, choose **Manage > Fabrics**.
2. From the list of available fabrics, double-click the PVLAN-enabled fabric.

   The fabric **Overview** page appears.

3. Navigate to **Segmentation and security > Networks** and double-click the primary network to open the **Network Attachments** page.
4. On the **Network attachments** tab, select the required networks and choose **Actions > Edit**.

   The **Edit Network Attachment** page opens.

   The table under **Available Interfaces for this device** displays all the promiscuous ports and the promiscuous trunk ports available in the device. Note that for a primary PVLAN network, only the promiscuous ports and the promiscuous trunk ports are displayed.

   If you have ToR switches connected to the device, the pvlan interfaces on TOR switch will be displayed. If you select any TOR interface, the system adds PVLAN configuration to the TOR switch.

5. Use the toggle button to enable **Attach** and then click **Save**.
6. On the **Networks** tab, select the network and choose **Actions > Deploy**.

Attaching a secondary network

Follow these steps to explicitly attach a secondary network.

1. In Nexus Dashboard, choose **Manage > Fabrics**.
2. From the list of available fabrics, double-click the PVLAN-enabled fabric.

   The fabric **Overview** page appears.

3. Navigate to **Segmentation and security > Networks** and double-click the secondary network to open the **Network Attachments** page.
4. On the **Network attachments** tab, select the required networks and choose **Actions > Edit**.

   The **Edit Network Attachment** page opens.

   The table under **Available Interfaces for this device** displays all the ports of type host and trunk secondary. For a secondary PVLAN network, only the host ports and the trunk secondary ports are displayed. Both community and isolated PVLAN ports are labeled as PVLAN host ports. A PVLAN host port is either a community PVLAN port or an isolated PVLAN port depending on the type of secondary VLAN with which it is associated.

   If you have ToR switches connected to the device, the pvlan interfaces on TOR switch will be displayed. If you select any TOR interface, the system adds PVLAN configuration to the TOR switch.

   Note that you cannot attach an interface group to a secondary network.

5. Use the toggle button to enable **Attach**, and then click **Save**.

   If you have not already performed an **Attach** for your primary network, the system automatically attaches the primary network along with the secondary network. You can view the network status for both the primary and the secondary networks in the **Networks** tab of the **Fabric Overview** page.

   When a secondary network is attached to a switch, it implicitly attaches to the other switches where its primary network is in explicit attach state, if the secondary network is not already attached.

6. On the **Networks** tab, choose the network and then choose **Actions > Deploy**.

Explicit and implicit detach

The steps to detach a network are similar to the steps for attaching a network. The following points describe how to the implicit and explicit detach features work.

- When you detach a primary network in explicit state, the following occurs:
  - If there is no secondary network in explicit state on the switch, the primary network is detached along with all the associated secondary networks
  - If there is any secondary network in explicit state, the primary network does not detach but changes to implicit state
- When you detach a secondary network explicitly, the primary network detaches automatically (implicitly) if the following conditions are met:
  - If the primary network is in implicit attached state.
  - If the detached secondary is the only secondary network for this primary network on this switch.
  - If no other switch in the fabric has this secondary in explicit attach state, this secondary network also gets detached from the other switches.

Working with VRFs

Use the **VRFs** tab to create, edit, delete, attach, detach, import, export, and deploy configurations for VRFs. You can create networks only after creating a VRF except when creating Layer 2 only networks.

1. Click **Segmentation and security**.
2. Click **VRFs**.
3. Review the information on the **VRFs** page.

   The **Segmentation and security > VRFs** page shows information on already-configured VRFs.



The default overlay mode for a VRF or network is cli and is available only for Data Center VXLAN EVPN and routed fabrics. To create overlay VRFs, create VRFs for the fabric and deploy them on the fabric switches. Before attaching or deploying the VRFs, set the overlay mode. For more information on how to choose the overlay mode, see the section "Overlay Mode" in Editing Data Center VXLAN Fabric Settings or Editing Routed Fabric Settings.

Guidelines and limitations: VRFs

These are the guidelines and limitations for VRFs.

- Guidelines and limitations: VRFs and VXLAN-ACI fabric groups
- Guidelines and limitations: VRFs and multi-tenancy

Guidelines and limitations: VRFs and VXLAN-ACI fabric groups

- The administrator is responsible for preventing unintended VRF deletions when local fabric configurations (for example, an L3Out) exist on Nexus Dashboard-managed VRFs. Note that any unstretched VRF without active network attachments will be automatically marked for deletion during deployment.
- The **Enforced Permit** option is not supported for VRFs defined in VXLAN-ACI fabric groups. This setting, which is functionally equivalent to enabling a "Permit All" contract (vzAny) in ACI, is not supported in Nexus Dashboard release 4.2.1. When configuring or importing VRFs for a VXLAN-ACI fabric group, you must use other enforcement types, such as 'Enforced-deny' or 'Unenforced', to ensure consistent policy application across heterogeneous fabrics.
- You can only create and delete VRFs at the fabric group level; however, you can edit VRFs at the fabric level.
- A VRF created in the tenant common within the VXLAN-ACI fabric group can be referenced by other tenants.
- The VRF stretch option is now available for VXLAN-ACI fabric groups. Note that the VRF is also attached to all of the border gateways (BGWs) in the ACI fabric as part of the VRF stretch operation.
- When a VRF is attached to the BGW, or when the first network is attached to an ACI leaf switch, the VRF is deployed upon the deploy action.
- When the VRF is detached from the BGW, and the last network is detached and the deploy action

is performed, the VRF is undeployed from the ACI fabric.



If any configuration is performed directly on a VRF in an ACI fabric, it is the administrator's responsibility to ensure that the VRF is not undeployed from Nexus Dashboard.

Guidelines and limitations: VRFs and multi-tenancy

- VRF deployment requires the VRF to be in the attached state.
- If a network in a user tenant references a VRF in the common tenant, the VRF in the common tenant must be deployed first.

View VRF information

1. Review the information provided in the **VRFs** window.
    - The **Config-Sync Status** area above the table provides information on the status of all of the VRF deployments in the fabric.
    - The table provides information on individual VRFs in the fabric.

    VRFs Table Fields and Description

Field	Description
VRF Name	Specifies the name of the VRF.
VRF Status	Specifies whether the status of the VRF deployment as NA, Out of Sync, Pending, Deployed, and so on.

2. Click the gear icon to the right of the table to change the columns in the table.

    Click the toggle switch to enable or disable the column options, including these additional options:

    - Description
    - Default security tag
3. Click the table header to sort the entries in alphabetical order for the selected parameter.
4. Perform any of the following actions in the **VRFs** window.

    The following table describes the action items that are available in the **Actions** drop-down list.

    VRFs Actions and Description

Action Item	Description
Create	Allows you to create a VRF. See Create a VRF for more information.

Action Item	Description
Edit	Allows you to edit the selected VRF. 1. To edit a VRF, choose the check box next to the VRF that you want to edit and choose **Edit**. On the **Edit VRF** page, you can edit the parameters. 2. Click **Save** to retain the changes or click **Close** to discard the changes.
Multi-attach	Allows you to provision the VRF on multiple switches. 1. To attach a VRF, choose the check box next to the VRF that you want to attach the switches to and choose **Multi-attach**. On the **Multi-attach of VRFs** page, you can specify the switches where you want to deploy the VRF. 2. Click **Next** to proceed to the next step in the wizard or click **Cancel** to discard the changes. The **Summary** page displays with the **Proceed to Full Switch Deploy (Recommended)** button selected. 3. Click **Save**. The **Deploy Configuration** page appears. 4. Click **Deploy All**. The **Deploy Configuration** page appears with an updated status of **SUCCESS**, **Status Description**, and **Progress** indicator. 5. Click **Close**. The attached VRF displays as **DEPLOYED** in the **VRF Status** column.

Action Item	Description
Multi-detach	Allows you to remove the VRF configuration from the selected switches. 1. To detach a VRF, choose the check box next to the VRF that you want to detach and choose **Multi-detach**. On the **Multi-detach of VRFs** page, you can specify the switches where you want to remove the VRF configuration. 2. Choose the check box for the switch that you want to detach from the VRF. 3. Click **Next**. The **Summary** page displays with the **Proceed to Full Switch Deploy (Recommended)** button selected. 4. Click **Save**. The **Deploy Configuration** page appears with the selected switch. 5. Click **Deploy All**. Click **Close**.
Deploy	Allows you to deploy the configuration for the selected VRF. 1. To deploy a VRF configuration, choose the check box next to the VRF for which you want to deploy the configuration and choose **Deploy**. On the **Deploy Configuration** page, you can deploy the specified VRF configuration. 2. Click **Deploy** or click **Close** to discard the changes.
Import	Allows you to import VRF information from a .csv file for the fabric. 1. To import VRF information from a .csv file, choose **Import**. The **Import VRFs** dialog box appears. 2. Browse to the directory and select the .csv file that contains the VRF information. 3. Click **OK**. The VRF information is imported and displayed on the **VRFs** page.

Action Item	Description
Export	Allows you to export VRF information to a .csv file. The exported .csv file will then contain information pertaining to each VRF, including the configuration details that you saved during the creation of the VRF. To export VRF information, choose **Export**. The VRF .csv file is exported to your local directory. The file name is appended with the date and time at which the file was exported. - You can use the exported .csv file for reference or use it as a template for creating new VRFs. - VRF CSV import and export operations do not include ACI fabric stretch associations. After you import VRFs, manually stretch them to the intended ACI fabrics.
Delete	Allows you to delete a selected VRF. You can select multiple VRF entries and delete them at the same time. 1. To delete a VRF, choose the check box next to the VRF that you want to delete and choose **Delete**. A warning message appears asking whether you want to delete the VRF(s). 2. Click **Confirm** to delete or click **Cancel** to retain the VRF. A message appears that the selected VRFs are deleted successfully.

Create a VRF

1. On the **VRFs** page, click **Create VRF**.

   The **Create VRF** page appears.

2. On the **Create VRF** page, enter the required details in the mandatory fields. The available fields vary based on the fabric type.

   The table describes the fields available on the **Create VRF** page.

   Fields marked with * are not used in VXLAN-ACI fabric groups.

Field	Description
VRF Name	Specifies a VRF name automatically or allows you to enter a name. The VRF name should not contain any white spaces or special characters except underscore (_), hyphen (-), and colon (:).
Global VRF ID	Specifies the ID for the VRF or enter an ID for the VRF.

Field	Description
Tenant	Displayed if a tenant is associated with the current fabric. For more information, see Configuring Tenants and Tenant Domains. Click the dropdown list to choose a tenant, if applicable.
VLAN ID	Specifies the corresponding tenant VLAN ID for the network or enter an ID for the VLAN. If you want to propose a new VLAN for the network, click **Propose VLAN**.
Default security action	Related to the security groups feature. For more information on security groups, see Working with security groups. The following options are available for the **Default Security Action** field: · **Unenforced**: Default setting. There are no default security policies in place and therefore no security action is taken on the traffic that passes. · **Enforced Permit**: Based on a deny list model, where traffic will be permitted on this VRF by default. You can configure granular contracts to deny specific traffic.  The **Enforced Permit** option is not supported with VXLAN-ACI fabric groups. See Understanding security groups for more information. · **Enforced Deny**: Based on a permit list model, where traffic will be denied on this VRF by default. You can configure granular contracts to permit specific traffic.
Default security tag for VRF	Related to the security groups feature. For more information on security groups, see Working with security groups. The value in this field will be automatically populated from the Security Tag Pool. This tag is used by default for traffic on this VRF unless the IP address or VLAN of that traffic is specifically classified as a selector under a security group.

3. Configure additional custom fields, if necessary.

 The **Custom** field is not used in VXLAN-ACI fabric groups.

These fields are displayed if you click the box next to the **Custom** field.

Field	Description
VRF Template	A default universal template is auto-populated. This is applicable for leaf switches only.
VRF Extension Template	A default universal extension template is auto-populated. This allows you to extend this network to another fabric. The methods are VRF Lite, Multi Site, and so on. The template is applicable for border leaf switches and BGWs.

4. Enter the necessary field values or edit pre-filled fields, as required.

   The tabs and their fields on the page are explained in the following sections.

   - General Parameters
   - Advanced
   - TRM
   - Route Target

5. Click **Create** to create the VRF or click **Close** to discard the VRF.

   A message appears indicating that the VRF is created.

   The new VRF appears on the **VRFs** horizontal tab. The status is shown as **Not applicable** because the VRF is created but is not yet deployed. Double-click on the configured VRF to bring up the **VRF Attachments** information.

   If you did not associate a VLAN with a VRF when you created the VRF using these instructions, you will see Not applicable displayed in the **VRF Attachments** for the VRF, even if a VLAN was associated with the VRF through another process (for example, if you disabled the **Enable L3VNI w/o VLAN** setting).

   Now that the VRF is created, you can create and deploy networks on the devices in the fabric.

General Parameters

The **General Parameters** tab is displayed by default. The fields in this tab are described in this table.

Field	Description
VRF VLAN Name *	Enter the VLAN name for the VRF.
VRF Interface Description *	Enter a description for the VRF interface.
VRF Description	Enter a description for the VRF.

Advanced

This table describes the fields on the **Advanced** tab.

Field	Description
VRF Interface MTU *	Specifies the VRF interface MTU.
Loopback Routing Tag	If a VLAN is associated with multiple subnets, then this tag is associated with the IP prefix of each subnet. Note that this routing tag is associated with overlay network creation also.
Redistribute Direct Route Map	Specifies the redistribute direct route map name.
IPv6 Redistribute Direct Route Map	Specifies the IPv6 redistribute direct route map name.

Field	Description
Max BGP Paths	Specifies the maximum number of BGP paths. The valid value is between 1 and 64.
Max iBGP Paths	Specifies the maximum number of iBGP paths. The valid value is between 1 and 64.
Enable IPv6 link-local Option *	Select the check box to enable the IPv6 link-local option under the VRF SVI. If this check box is unchecked, IPv6 forwarding is enabled.
Enable L3VNI w/o VLAN *	Check the box to enable the L3VNI w/o VLAN configuration. The default value of this field comes from the fabric-level field **Enable L3VNI w/o VLAN**. The default setting for this field varies depending on the following factors: · For existing VRFs, the default setting is disabled (the **Enable L3VNI w/o VLAN** box is unchecked). · For newly-created VRFs, the default setting is inherited from the fabric settings. · This field is a per-VXLAN fabric variable. For VRFs that are created from a fabric group, the value of this field is inherited from the fabric setting in the child fabric. You can edit the VRF in the child fabric to change the value, if desired.
Advertise Host Routes *	Check this check box to control advertisement of /32 and /128 routes to edge routers.
Advertise Default Route *	Check this check box to control advertisement of default route internally. To allow inter-subnet communication between end hosts in different VXLAN fabrics, where the subnets are present in both fabrics, you must disable the **Advertise Default Route** feature (clear the **Advertise Default Route** check box) for the associated VRF. This will result in /32 routes for hosts in both fabrics. For example, Host1 (VNI 30000, VRF 50001) in Fabric1 can send traffic to Host2 (VNI 30001, VRF 50001) in Fabric2 only if the host route is present in both fabrics. When a subnet is present in one fabric only then the default route is sufficient for inter-subnet communication.
Config Static 0/0 Route *	Check this check box to control configuration of static default route.
BGP Neighbor Password *	Specifies the VRF-Lite BGP neighbor password.
BGP Password Key Encryption Type *	From the drop-down list, select the encryption type.
Enable Netflow *	Allows you to enable netflow monitoring on the VRF-Lite sub-interface. Note that this is supported only if netflow is enabled on the fabric.

Field	Description
Netflow Monitor *	Specifies the monitor for the VRF-Lite netflow configuration. To enable netflow on a VRF-Lite sub-interface, you must enable netflow at the VRF level and VRF extension level. Check the **Enable_IFC_Netflow** check box in the VRF attachment while you edit an extension to enable netflow monitoring. For more information, see the "Configuring Netflow support" section in Creating Fabrics and Fabric Groups.

TRM



The **TRM** tab is not used in VXLAN-ACI fabric groups.

Use the **TRM** tab for configuring Tenant Routed Multicast (TRM) for IPv4 or IPv6.

For more information on TRM, see the section "Overview of Tenant Routed Multicast" in Editing Data Center VXLAN EVPN Fabric Settings.

This table describes the fields on the **TRM** tab.

Field	Description
IPv4 TRM Enable	Check the check box to enable IPv4 TRM. If you enable IPv4 TRM, and provide the RP address, you must enter the underlay multicast address in the **Underlay Mcast Address** field.
NO RP	Check the check box to disable RP fields. You must enable IPv4 TRM to edit this check box. If you enable **No RP**, then the **Is RP External**, **RP Address**, **RP Loopback ID**, and **Overlay Mcast Groups** fields are disabled.
Is RP External	Check this check box if the RP is external to the fabric. If this check box is not checked, RP is distributed in every VTEP.
RP Address	Specifies the IP address of the RP.
RP Loopback ID	Specifies the loopback ID of the RP, if **Is RP External** is not enabled.
Underlay Multicast Address	Specifies the multicast address associated with the VRF. The multicast address is used for transporting multicast traffic in the fabric underlay.  The multicast address in the **Default MDT Address for TRM VRFs** field on the fabric settings page is auto-populated in this field. You can override this field if a different multicast group address should be used for this VRF.
Overlay Mcast Groups	Specifies the multicast group subnet for the specified RP. The value is the group range in the ip pim rp-address command. If the field is empty, 224.0.0.0/24 is used as the default.

Field	Description
TRMv6 Enable	Check this check box to enable IPv6 TRM.
TRMv6 No RP	Check this check box to disable RP fields in TRMv6 as only PIM-SSM is used.
Is TRMv6 RP External	Check this check box if the RP is external to the fabric in TRMv6.
TRMv6 RP Address	Enter the IPv6 address of the TRMv6 RP multicast traffic.
Overlay IPv6 Mcast Groups	Specifies the IPv6 multicast group subnet for the specified TRMv6 RP. The value is the group range in the ipv6 pim rp-address command. If the field is empty, ff00::/8 is used as the default.
Enable MVPN inter-as	Check this check box to use the inter-AS keyword for the Multicast VPN (MVPN) address family routes to cross the BGP autonomous system (AS) boundary. This option is applicable if you enabled the TRM option.
Enable IPv4/IPv6 TRM BGW MSite	Check this check box to enable IPv4 or IPv6 TRM on BGW multisite.

Route Target

This table describes the fields on the **Route Target** tab.

Field	Description
Disable RT Auto-Generate *	Check this check box to disable RT auto-generate for IPv4, IPv6 VPN/EVPN/MVPN.
Import	Specifies one VPN route target or a comma-separated list of VPN route targets to import.
Export	Specifies one VPN route target or a comma-separated list of VPN route targets to export.
Import EVPN	Specifies one EVPN route target or a comma-separated list of EVPN route targets to import.
Export EVPN	Specifies one EVPN route target or a comma-separated list of EVPN route targets to export.
Import MVPN *	Specifies one MVPN route target or a comma-separated list of MVPN route targets to import.
Export MVPN *	Specifies on MVPN route target or a comma-separated list of MVPN route targets to export.  By default, **Import MVPN** and **Export MVPN** fields are disabled. Check the **IPv4 TRM Enable** or the **TRMv6 Enable** check box to enable these fields.

VRF overview

After you have created a VRF using the procedures in Create a VRF, click the newly-created VRF. The **Overview** page for that VRF is displayed.

The information displayed and the actions that you can take differ, depending on whether this is a VRF in a standard fabric/fabric group or in a VXLAN-ACI fabric group.

- Standard fabric/fabric group
- VXLAN-ACI fabric group

Standard fabric/fabric group

This table describes the fields on **Overview**.

VRF Overview Table Fields and Description

Field	Description
General	
VRF name	Specifies the name of the VRF.
Tenant	Specifies the tenant name, if a tenant is associated with the current fabric.
VLAN ID	Specifies the VLAN ID.
Status	Specifies the status of VRF attachments (for example, Pending, Not applicable, Deployed, Out-of-sync, and so on).
Fabric	Specifies the name of the associated fabric.
Description	Gives the description associated with the VRF.
VRF Status	Specifies the status of the VRF.
Attached Roles Association	Specifies the switch roles.

Click the table header to sort the entries in alphabetical order of that parameter.

The following table describes the action items, in the **Actions** drop-down list, that appear on the **VRF Attachments** horizontal tab of the **VRFs** tab on the **Fabric Overview** page.

VRF Overview Actions and Description

Action Item	Description
Edit	Allows you to view or edit the VRF parameters. To edit the VRF information, check the check box next to the VRF name that you want to edit. Select **Edit**.
Deploy	Allows you to deploy the pending configuration of the VRF. To deploy a VRF, check the check box next to the VRF name and choose **Deploy** from **Actions** drop-down list. The **Deploy Configuration** page for the fabric appears. You can view the details such as the VRF name, fabric name, switch name, serial number, IP address, and role, VRF status, pending configuration, and progress of the configuration. Click the lines link in the **Pending Config** column to view the lines for which the configuration is pending. Click the **Deploy** button. The status and progress of the deployment is displayed in the **VRF Status** and **Progress** columns. After the deployment is completed successfully, close the page.

VXLAN-ACI fabric group

Overview

This table describes the fields on **Overview**.

VRF Overview Table Fields and Description

Field	Description
General	
VRF name	Specifies the name of the VRF.
Tenant	Specifies the tenant name, if a tenant is associated with the current fabric.
Global VRF ID	Specifies the global ID of the VRF.
VLAN ID	Specifies the VLAN ID.
Status	Specifies the status of VRF attachments (for example, Pending, Not applicable, Deployed, Out-of-sync, and so on).
Fabric group name	Specifies the name of the associated fabric group.
Description	Gives the description associated with the VRF.
Attached Roles Association	Specifies the switch roles.
Member Fabrics	
VRF name	Specifies the names of the VRFs in the member fabrics.
Fabric	Specifies the member fabrics.
Status	Specifies the status of the VRF (for example, Pending, Not applicable, Deployed, Out-of-sync, and so on).
Local VRF id	Specifies the local VRF IDs.
Stretch	Specifies if the VRF is stretched or not.

Click the table header to sort the entries in alphabetical order of that parameter.

The following table describes the action items, in the **Actions** drop-down list, that appear on the **VRF Attachments** horizontal tab of the **VRFs** tab on the **Fabric Overview** page.

VRF Overview Actions and Description

Action Item	Description
Edit	Allows you to view or edit the selected VRF. To edit the VRF information, check the check box next to the VRF name that you want to edit, then choose **Actions > Edit**.

Action Item	Description
Stretch	Allows you to stretch a selected VRF. To stretch a VRF, check the check box next to the VRF that you want to stretch, then choose **Actions > Stretch**. A confirmation window appears, asking if you want to stretch this VRF to all border gateway switches. Click **Confirm**. You are returned to the **VRF overview** page, and the VRF is shown with the entry **All Border Gateway List** in the **Stretch** column.
Unstretch	Allows you to unstretch a selected VRF. To unstretch a VRF, check the check box next to the VRF that you want to unstretch, then choose **Actions > Unstretch**.

VRF attachments

Use this page to attach or detach attachments to or from a VRF, respectively. You can also import or export the attachments for a VRF.

You can access the **VRF attachments** page by clicking on a configured VRF in the **Segmentation and security > VRFs** page, then clicking on **VRF attachments** in the **Overview** page.

This table describes the fields on **VRF Attachments**.

VRF Attachments Table Fields and Description

Field	Description
VRF Name	Specifies the name of the VRF.
VLAN ID	Specifies the VLAN ID.
Switch	Specifies the name of the switch.
Configuration status	Specifies the configuration status of VRF attachments (for example, pending, Not applicable, deployed, out-of-sync, and so on).
Attachment	Specifies whether the VRF attachment is attached or detached.
Switch Role	Specifies the switch role. For example, for the fabric created using the Campus VXLAN EVPN fabric template, the switch role is specified as either leaf, spine, or border.
Fabric Name	Specifies the name of the fabric to which the VRF is attached or detached.
Loopback ID	Specifies the loopback ID.
Loopback IPV4 Address	Specifies the loopback IPv4 address.
Loopback IPV6 Address	Specifies the loopback IPv6 address.  The IPv6 address is not supported for underlay.

Click the table header to sort the entries in alphabetical order of that parameter.

The following table describes the action items, in the **Actions** drop-down list, that appear on the **VRF Attachments** horizontal tab of the **VRFs** tab on the **Fabric Overview** page.

VRF Attachments Actions and Description

Action Item	Description
History	Allows you to view the deployment and policy change history of the selected VRF. You can view the deployment history details of a VRF attachment such as hostname, VRF name, commands, status, status description, user, and completed time on the **Deployment History** tab. You can view the policy change history details such as policy ID, template, description, PTI operation, generated configuration, entity name and type, created date, serial number, user, and source of the policy on the **Policy Change History** tab. To view the history of a VRF attachment, check the check box next to the VRF name and select **History**. The **History** page appears. Click the **Deployment History** or **Policy Change History** tabs as required. You can also click the **Detailed History** link in the **Commands** column of the **Deployment History** tab to view the command execution details (comprising configuration, status, and CLI response) for the host.
Edit	Allows you to view or edit the VRF attachment parameters such as interfaces that you want to attach to the selected VRF. To edit the VRF attachment information, check the check box next to the VRF name that you want to edit. Select **Edit**. In the **Extension** page, edit the required values, attach or detach the VRF attachment. Click the **Edit** link to edit the CLI freeform config for the switch, and click **Save** to apply the changes or click **Cancel** to discard the changes. The edited VRF attachment is shown in the table on the **VRF Attachments** horizontal tab of the **VRFs** tab in the **Fabric Overview** page.
Preview	Allows you to preview the configuration of the VRF attachments for the selected VRF.  This action is not allowed for attachments that are in deployed or Not applicable status. To preview the VRF, check the check box next to the VRF name and choose **Preview** from **Actions** drop-down list. The **Preview Configuration** page for the fabric appears. You can preview the VRF attachment details such as the VRF name, fabric name, switch name, serial number, IP address, and role, VRF status, pending configuration, and progress of the configuration. Click the lines link in the **Pending Config** column to view the lines for which the configuration is pending. Click **Close**.

Action Item	Description
Deploy	Allows you to deploy the pending configuration of the VRF attachments, for example, interfaces, for the selected VRF.  This action is not allowed for attachments that are in deployed or Not applicable status. To deploy a VRF, check the check box next to the VRF name and choose **Deploy** from **Actions** drop-down list. The **Deploy Configuration** page for the fabric appears. You can view the details such as the VRF name, fabric name, switch name, serial number, IP address, and role, VRF status, pending configuration, and progress of the configuration. Click the lines link in the **Pending Config** column to view the lines for which the configuration is pending. Click the **Deploy** button. The status and progress of the deployment is displayed in the **VRF Status** and **Progress** columns. After the deployment is completed successfully, close the page.
Import	Allows you to import information about VRF attachments for the selected fabric. To import the VRF attachments information, choose **Import**. Browse the directory and select the .csv file that contains the VRF attachments information. Click **Open** and then click **OK**. The VRF information is imported and displayed in the **VRF Attachments** horizontal tab on the **VRFs** tab on the **Fabric Overview** page.
Export	Allows you to export the information about VRF attachments to a .csv file. The exported file contains information pertaining to each VRF, including the fabric it belongs to, whether the LAN is attached, the associated VLAN, serial number, interfaces, and freeform configuration details that you saved for VRF attachments. To export VRF attachments information, choose the **Export** action. Select a location on your local system directory to store the VRF information and click **Save**. The VRF information file is exported to your local directory. The file name is appended with the date and time at which the file was exported.

Action Item	Description
Quick attach	Allows you to immediately attach an attachment to the selected VRF. You can select multiple entries and attach them to a VRF at the same instance. To quickly attach any attachment to a VRF, choose **Quick attach** from **Actions** drop-down list. A message appears to inform that the attach action was successful. If the **Per VRF Per VTEP Loopback IPv4 Auto-Provisioning** or **Per VRF Per VTEP Loopback IPv6 Auto-Provisioning** feature is enabled after a VRF is already attached, use **Quick attach** to generate the new loopback for that VRF attachment.  If VRF extensions are already configured, for example, by using VRF Lite on a border switch, generating the new loopback by using **Quick attach** can require you to reattach the VRF extension and redeploy the relevant configuration.
Quick detach	Allows you to detach the selected VRF immediately from an attachment, for example, a fabric. You can select multiple entries and detach them from an attachment at the same instance. To detach any attachment to a VRF quickly, choose **Quick detach** from **Actions** drop-down list. A message appears to inform that the detach action was successful.

Working with security groups

These sections provide information on security groups.

- Understanding security for VXLAN fabrics
- Understanding security groups
- Security groups and VXLAN-ACI fabric groups
- Create a VM selector
- Delete a stale VM IP selector
- Configure security groups for a VXLAN fabric group for a single cluster or for a multi-cluster fabric group
- Workflow for configuring security groups for a VXLAN fabric group or for a multi-cluster fabric group
- Security group modes in a VXLAN fabric group or in a multi-cluster fabric group
- Guidelines and limitations for security groups
- Security groups and VXLAN-ACI fabric groups
- Navigate to security groups

Understanding security for VXLAN fabrics

In traditional data center environments, the application/workload security is often implemented at the perimeter or the north-south boundary where the users from outside of the data center fabric enter. This is often implemented using perimeter firewalls and other security inspection devices. However, this approach is not effective against the more recent, advanced nature of attacks, where the attack surface spans the entire data center including the east-west flows.

Using micro-segmentation with security groups and security group access control lists (SGACLs), can provide an effective solution for this problem. With micro-segmentation, organizations can provide application-specific policies that specify how the application workloads are allowed to communicate, regardless of where these applications reside within the network.

Understanding security groups

A security group is a security construct that has certain match criteria to define which endpoints or networks belong to that security group, and uses contracts to define when the traffic should be allowed or not. The match criteria are called the selectors, which you will use when configuring a security group. You can configure selectors under a security group enabled fabric with a variety of matching criteria to classify the endpoints that belong to the security group. Security groups provide a topology-independent security model. VXLAN fabrics use Group Policy Options (GPO) for security groups. In the Analysis Hub, you can track these groups by name and Id.

The following selector options are available when configuring a security group:

- **IP selectors**—An IP selector classifies endpoints to a security group based on IP address or IP subnet. You can configure a host IP address to match a specific endpoint or you can configure a subnet to match multiple IP addresses within the subnet.

- **Network selectors**—A network selector classifies endpoints to a security group based on a configured network. The network translates into a VLAN match statement in a switch, where a VLAN is configured on the switch based on the network attachment. Only Layer 3 networks are supported for network selectors.

  - We recommend to explicitly enable the **Enable L3 Gateway on Border and vPC Border Gateway** under **Networks > Actions > Edit > Advanced**. Enabling **Enable L3 Gateway on Border and vPC Border Gateway** creates SVI intent for the vPC Border Gateways. This ensures that the network selector related classification happens on the border gateways for the enabled security groups. For more information, see Working with networks > Create a network > Advanced.
  - On a security group enabled fabric, fabric group, or multi-cluster fabric group for an anycast border gateway, Nexus Dashboard will create the SVI for a network whenever it is attached to the VRF that is set to either enforced permit or enforced deny mode. When network gets detached from the VRF, the SVI is removed from the intent.
    - Toggling VRF security action mode from unenforced to either enforced permit or enforced deny will not create the SVI intent for the anycast border gateways if not already present.
    - Similarly, toggling VRF security action mode from either enforced permit or enforced deny to unenforced will not remove the SVI intent from the border gateways if already present.

- **Network port selectors**—A network port selector allows you to assign a switch interface and the network to a security group, which then translate to a VLAN and the interface match statement on the switch. In a VXLAN fabric group and multi-cluster fabric group, Nexus Dashboard maintains the network port selector at the parent fabric and applies it to member fabrics where you have enabled security groups and when the network is attached to the device and the interface is classified in the security-group. Attach the network to configure the security group classifier on the device.
- **VM selectors**—A VM selector associates a security group with a virtual machine's VNIC. Nexus Dashboard integration to VMM must be leveraged in this case to learn the VM to IP mappings and facilitate programming the IP selector in the security group.

Security groups and VXLAN-ACI fabric groups

- By default, the ESG created by Nexus Dashboard will be created under an application profile named ND_AP_ESG in APIC.
- There are two types of selectors:
  - **Network Selector**
    - ACI fabric:
      - Any network selector in ACI fabric translates to EPG (Endpoint Group) selector
      - Network can be normal network or child network type
    - NX-OS fabric:

- Normal network will translate to VLAN selector
- Child network will translate to interface, VLAN selector



Network selectors only deploy when a network attachment exists.

- **IP Selector**
  - Connected Endpoint: Connected endpoints based on IP or subnet
  - External Subnet: Prefix based classification

Create a VM selector

Virtual Machine Manager (VMM) integration is mandatory. VMM integration is available on vCenter.

Follow these steps to create a virtual machine (VM) selector.

1. Navigate to the **Connectivity > Virtual Infrastructure** page and choose the VM that you want to associate with a security group.
2. Click **Actions > Set group ID**.

   The **Set Security Group ID** page appears.
3. Choose an existing security group or click **Add Security Group**.

   For more information, see Create a security group.
4. Click **Submit**.

   This action configures an IP selector for the VRF on the switches.
5. Complete any other necessary configurations.
6. To remove an association with a security group on a VM, choose that VM and click **Actions > Remove group ID**.



As we have added the attach and detach feature for a security group, the change of behavior is that, when you try to remove the last selector from the attached security group, Nexus Dashboard generates an error asking you to detach the security group and deploy it before you can delete the last selector entry from the security group.

7. When you have completed all the necessary configurations related to security groups, including setting or removing group IDs on this page, you can generate the intent by navigating to **Segmentation and security > Security groups > Actions > Deploy** or by navigating to **Segmentation and security > VRFs > Actions > Deploy** and choosing the rows that are in **Pending** or in **Out-of-Sync** status.

   These actions are supported only in a standalone VXLAN fabric or in a parent VXLAN fabric group and not in the member fabrics.



If a VM selector is marked as **Inactive** on the **Security groups > Actions > Edit > Edit Security Group > VM IP Selectors** page, that indicates that the VM endpoint

associated with the security group no longer exists. In these cases, the VM endpoint is not visible in the **Virtual Infrastructure** page. This can happen if the VM gets deleted or if the vCenter becomes unmanaged. To address this situation, you must explicitly remove the VM inactive endpoints by clicking on the delete icon next to the endpoints created by the VM by clicking **Actions > Edit** on the **Security groups** page. For more information, see the section "Virtual Infrastructure" in Working with Connectivity in Your Nexus Dashboard LAN Fabrics.

Delete a stale VM IP selector

You can delete a stale VM IP selector by navigating to **Edit security group > VM IP Selector** where Nexus Dashboard displays all the VM IP selectors for that group. Stale VM IP selectors have **Inactive** set to **true**. You can click the trash icon to delete a VM IP selector. In some special scenarios, if for some reason a stale VM IP selector does not display as **Inactive** and needs to be deleted, you can use a force delete option to delete the stale VM IP selector.

Follow these steps to delete a stale VM IP selector.

1. Navigate to **Admin > System Settings > General > Advanced Settings** and enable **Display advanced settings and options for TAC support** and click **Save**.
2. Navigate to the **Admin > System Settings > Fabric Management > Advanced Settings > LAN Fabric** page and enable the option **VM Selector Force Delete** and click **Save**.
3. Navigate to the **Edit security group > VM IP Selector** page and delete the stale VM selector that displays as **Inactive** by clicking the trash icon.



The **Inactive** status for a virtual machine (VM) selector shows that the VM endpoint no longer exists, such as a deleted VM or an unmanaged vCenter. If entries do not clear automatically, use **VM Selector Force Delete** to remove them.

Configure security groups for a VXLAN fabric group for a single cluster or for a multi-cluster fabric group

You can configure security groups when creating or editing a VXLAN fabric group for a single cluster or for a multi-cluster fabric group. A VXLAN fabric group is a collection of VXLAN fabrics that enables visualization of the fabrics, and interconnects fabrics in single-cluster or multicluster configurations. You can split each fabric in different availability zones in a region. You can manage and analyze these availability zones using Nexus Dashboard.

Workflow for configuring security groups for a VXLAN fabric group or for a multi-cluster fabric group

1. Create a VXLAN fabric group or a multi-cluster fabric group. For more information on creating a VXLAN fabric group or a multi-cluster fabric group, see the "Create fabric groups" and "Create multi-cluster fabric groups" sections in Creating Fabrics and Fabric Groups. For more information on connecting multiple clusters, see the section "Connecting Nexus Dashboard clusters" in Connecting Clusters.
2. Enable security groups by navigating to the **Fabric Management > Security** page when creating or editing a VXLAN fabric group or a multi-cluster fabric group.

3. Configure **strict** or **loose** mode on a VXLAN fabric group or a multi-cluster fabric group. For more information, see Security group modes in a VXLAN fabric group or in a multi-cluster fabric group.
4. (Optional) Check the **Security Groups Pre-provision** check box to generate security group intent for any unenforced VRFs.
5. Perform a **Recalculate and deploy** at the VXLAN fabric group or multicluster fabric group level to enable or disable security groups after you save the fabric settings.



Enabling security groups requires a device reload. Perform the recalculate and deploy immediately after saving the fabric settings. If you delay the deployment, the security group feature takes precedence and blocks other configurations.

Security group modes in a VXLAN fabric group or in a multi-cluster fabric group

These are the three security group modes in a VXLAN fabric group or in a multi-cluster fabric group.

- **off** mode—Security groups are disabled on a VXLAN fabric group or in a multi-cluster fabric group, so you cannot have a VXLAN member fabric with security groups enabled.
- **strict** mode—Security groups are enabled on a VXLAN fabric group or in a multi-cluster fabric group, which means that you can add only security groups enabled VXLAN member fabrics to a VXLAN fabric group. Security groups are enabled on the existing VXLAN member fabrics automatically.
- **loose** mode—Security groups are enabled on a VXLAN fabric group or in a multi-cluster fabric group, allowing you to add both security groups enabled and not-enabled VXLAN member fabrics to a VXLAN fabric group. The border gateways on the security groups enabled fabric, classify the routes published by the Border Gateway Protocol (BGP) from the security groups non-enabled fabric, with a special reserved security group tag 15. Nexus Dashboard implicitly creates a security group to match advertisements from remote, non-GPO-aware fabrics. Use this security group to define contracts that control traffic to and from these fabrics.

For more information, see Enable the security groups feature.

These are the possible **Security group status** values that display in the **General** section of the **Overview** page for a VXLAN fabric group or for a multi-cluster fabric group.

- **Enable pending loose**
- **Enable pending strict**
- **Enabled strict**
- **Enabled loose**
- **Disabled**
- **Disable pending**

Note: In Nexus Dashboard 4.2.1 and later, security group status behavior changed because VRF is a mandatory parameter. If you remove the last selector from a deployed security group, the system removes the selector configuration from the switches, but the status remains Deployed. This occurs because the VRF reference remains in the security group intent. To remove the security group intent from the switch, manually select Detach.

Guidelines and limitations for security groups

These are the guidelines and limitations when configuring security for VXLAN fabrics.

- General guidelines and limitations: Security groups
- Guidelines and limitations: Security groups and VXLAN-ACI fabric groups
- Guidelines and limitations: Security groups and multi-tenancy

General guidelines and limitations: Security groups

- Data center VXLAN EVPN fabrics do not support brownfield import when security groups are configured.
- In inter-VRF endpoint security group (ESG) scenarios, the system verifies route leaks using routeauditdb.
- The security groups feature is supported in the following areas:
  - Only on the following family of Cisco N9000 switches:
    - FX
    - FX2
    - FX3
    - GX
    - GX2
    - N9K-C9332D-H2R
    - N9K-C93640CWD-HXB
    - N9K-C9364C-H1
    - N9K-C93400LD-H1
    - C9408

    FX, FX2, and N9K-C9332D-H2R, N9K-C93640CWD-HXB, N9K-C9364C-H1 and N9K-C93400LD-H1 and C9408 switches are supported only with Cisco NX-OS version 10.5.2 or later. You must be running Cisco NX-OS version 10.4(4) or later or 10.5(2) or later for FX3, GX, or GX2 switch models. Cisco NX-OS version 10.5(1) is not supported. You must be running Cisco NX-OS version 10.5(2) or later for FX, FX2, N9K-C9332D-H2R, N9K-C93640CWD-HXB, N9K-C9364C-H1, N9K-C93400LD-H1, and C9408 switch models.

  - You must run Cisco NX-OS version 10.5(2) or later for an IPv6 underlay with security groups enabled for FX3, GX, GX2, FX, FX2, N9K-C9332D-H2R, N9K-C93640CWD-HXB, N9K-C9364C-H1, N9K-C93400LD-H1, and C9408 switch models.
  - You must run Cisco NX-OS version 10.6(1) or later for network port selectors.
  - Security groups are supported only in iBGP VXLAN fabrics.
  - This restriction applies to both a VXLAN fabric group and a VXLAN multi-cluster fabric group. These functions are supported only at the parent VXLAN fabric group or multi-cluster fabric

group and not in member fabrics.

- **Security groups → Actions → Create/Edit/Delete/Import**
- **Contracts → Actions → Create/Edit/Delete/Import**
- **Security Associations → Actions → Create/Edit/Delete/Import**
- **Protocol definitions → Actions → Create/Edit/Delete/Import**
- **Connectivity → Virtual Infrastructure → Virtual Machines VMs → Actions → Set group ID/Remove group ID**

  A VM selector is not supported for a multi-cluster fabric group.

- This function is supported only in the member fabric and not in the parent VXLAN fabric group or in a multi-cluster fabric group.

  Monitoring function

  For more information, see Monitor security associations.

- **loose** mode does not automatically set member fabrics to **SG-Enabled** mode if you transition a VXLAN fabric from **off** mode.
- You cannot have two VXLAN fabric groups with different modes in a multi-cluster fabric group. For example, one VXLAN fabric group cannot be in **loose** mode while another VXLAN fabric group is in **strict** mode. For more information, see Security group modes in a VXLAN fabric group or in a multi-cluster fabric group.
- Only in fabrics where the **Overlay Mode** is set to **cli**. To determine the **Overlay Mode** setting for your VXLAN fabric, see the "Overlay Mode" section in Editing Data Center VXLAN Fabric Settings.
- The security groups feature is not supported in these areas.
  - With PVLAN
  - With change control
  - In a VXLAN fabric with an eBGP underlay
- If the security groups feature is enabled on a VXLAN fabric, you cannot import switches into that fabric if those switches are configured with **Preserve-Config=Yes**
- This restriction applies to **strict** mode only. If you enable the security groups feature in a parent VXLAN fabric, only member fabrics with the security group feature enabled are allowed to join in this VXLAN fabric group or multi-cluster fabric group.
- This restriction applies for both **strict** and **loose** mode. In addition, all other security group functions, such as creating a security group or associating a contract, is not allowed at the member fabric level and must be configured at the parent fabric level instead.
- Security group actions are allowed for standalone VXLAN fabrics on the **Topology** page.
- You cannot perform any security group actions on the **Topology** page for a VXLAN fabric group or multi-cluster fabric group.
- You can use EPGs and External EPGs as security group selectors only if they share at least one common fabric where the security group is deployed. This requirement ensures proper policy enforcement. The GUI prevents the selection of invalid EPGs.

Guidelines and limitations: Security groups and VXLAN-ACI fabric groups

- Security group names must be unique across all application profiles within a tenant.

  This is because the Nexus Dashboard model uses the fabric, tenant, and security group name as the primary keys. It doesn't include the application profile name.

- VMM selectors and interface, network selectors are not supported for VXLAN-ACI security groups.
- You can't use "Any" security groups VXLAN-ACI fabric groups.
- Default security groups are created when a VRF is enforced and cannot be used for cross-fabric communication between ACI and NX-OS.
- The security group in a multi-tenant configuration will belong to only one VRF.

Guidelines and limitations: Security groups and multi-tenancy

- Security group deployment requires both the security group and the VRF to be in the attached state.
- The network selector of a security group requires the network attachment to be in the attached state.

Navigate to security groups

Follow these steps to navigate to the **Security groups** page.

1. On the **Segmentation and security** page, click **Security groups**.
2. Review the information on the **Security groups** page.

   The **Security groups** page shows information on already-configured security groups.

Configure security groups

Follow these procedures to configure security groups.

- Enable the security groups feature
- Navigate to the Segmentation and security page
- Import or export security configurations
- Create a security group
- Create a security group using IP selectors
- Create a security group using VM IP selectors
- Create a security group using network selectors
- Create a security group using network port selectors
- Deploy security groups
- Security group tag to endpoints mapping
- View endpoint security group (ESG) to endpoints mapping

Enable the security groups feature

Follow these steps to enable the security groups feature on a specific VXLAN fabric.

1. Navigate to that fabric's **Edit Fabric** page.
   - If you are in the main **Fabrics** page (**Manage > Fabrics**), click the button next to the configured VXLAN fabric where you want to set up security, then click **Actions > Edit fabric settings**.
   - If you are in the **Overview** page for a VXLAN fabric, click the topmost **Actions** drop-down list, then choose **Edit fabric settings**.

     The **Edit Fabric** for this fabric appears, with the **General** tab selected by default.
2. Click the **Fabric Management > Security** tab.
3. Check the **Enable Security Groups** check box to enable security groups for this VXLAN fabric.
   - If you are in a standalone VXLAN fabric, check the **Enable Security Groups** check box.
   - If you are in a VXLAN fabric group or in a multi-cluster fabric group, in the **Enable Security Groups** field, choose **strict** or **loose** mode to enable the security groups feature at the VXLAN fabric group or multi-cluster fabric group level.
     - On changing from **off** to **strict**, the existing VXLAN member fabrics get enabled automatically.
     - On changing from **off** to **loose**, the existing VXLAN member fabrics do not get enabled automatically.
   - **strict** mode allows you to add only security group-enabled VXLAN member fabrics. **loose** mode allows you to add both security group-enabled and non-enabled VXLAN member fabrics. For more information on security modes for VXLAN fabrics, see Security group modes in a VXLAN fabric group or in a multi-cluster fabric group.

     In **strict** mode, you cannot enable or disable the security groups feature in VXLAN member fabrics. In **loose** mode, you can enable or disable the security groups feature in a VXLAN member fabric. With both modes, when you enable security groups, a member fabric inherits other security group fabric settings from the parent.
4. Click **Save**.

   This banner message displays in the **VRFs**, **Networks**, and **Security** tabs:

   Security Groups feature is enabled but not yet operational. Please perform Recalculate and deploy to operationally enable it.

   All the actions in these tabs are disabled until you perform a **Recalculate and deploy**. For security groups in a VXLAN fabric group or a multi-cluster fabric group, perform the **Recalculate and deploy** action on all the member fabrics.
5. When you first perform a **Recalculate and deploy**, these events occur:
   - system routing template-security-groups will be deployed
   - feature security-group deployment will result in failure, where a dialog box appears, asking

you to reload the required leaf switches.

6. Navigate to **Manage > Inventory** and choose the switches for which you enabled security groups, then click **Actions > Reload**. The reload ensures that the system routing template gets applied. You can verify this by entering these commands on the switch:

   switch# show system routing mode

   Configured System Routing Mode: security-groups Support

   Applied System Routing Mode: Security-Groups Support

7. Once the switches have reloaded and the discovery status is OK, then you should be able to deploy any security group intent.

These are the possible **Security group status** values that display in the **General** section of the **Overview** page for a standalone VXLAN fabric with a pending or configured security group.

- **Enable pending**
- **Enabled**
- **Disable pending**
- **Disabled**

Navigate to the Segmentation and security page

1. On the main **Fabrics** page, single-click the configured VXLAN fabric where you have enabled the security groups feature, as described in Enable the security groups feature.

   The **Overview** page for this VXLAN fabric appears.

2. Click **Segmentation and security**.

   The **Segmentation and security** page displays **Networks** by default and lists all configured security groups.



If you see the message Security Groups feature is disabled on this page, follow the instructions in Enable the security groups feature to enable the security groups feature.

Import or export security configurations

Once you have completed security configurations using the procedures provided in this article, you can then export those security configurations to a .csv file, and then import the .csv file with those configurations at a later date, if necessary.

You can export and import .csv files with security configurations:

- **Security groups**
- **Security contracts**
- **Security associations**
- **Protocol definitions**

In any of these areas:

- To export a security configuration, choose the configured item (for example, in **Security groups**, choose the configured security group), then click **Actions > Export**.

  You can then access the exported .csv file with the specified security configuration on your system.

  - Exporting the default security group is not supported.
  - You can also download an empty .csv template by clicking **Actions > Export** without choosing any configured items on that page.
  - When you export a security configuration in the **Security groups** area, Nexus Dashboard exports one .csv file with all the relevant selectors.

- To import a security configuration, click the appropriate tab on the main **Security groups** page and click **Actions > Import**, then either drag and drop the .csv file with the security configurations that you want to import, or navigate to the appropriate area on your system and choose the .csv file with the security configurations that you want to import.

Guidelines and limitations for importing or exporting security configurations

- Importing a security configuration only creates a new configuration. Do not import a security configuration to update an existing configuration.
- When importing contracts, ensure that the respective security protocols that are defined in the .csv file already exist; otherwise, those entries will not be imported.
- When importing an association .csv file, ensure that the respective source groups, destination groups, contracts, and VRFs that are defined in the .csv file already exists; otherwise, those entries will not be imported.
- A security group .csv file for IP selectors and network selectors from releases prior to Nexus Dashboard 4.3.1, will not work in Nexus Dashboard 4.3.1.
- The security group .csv files for contracts, associations, and protocol definitions from Nexus Dashboard 4.1.1g are not supported in Nexus Dashboard 4.2.1.

Create a security group

Rather than creating a security group from scratch, you can import already-configured security group configurations, if necessary. For more information, see Import or export security configurations.

1. Navigate to the **Segmentation and security** page, if you're not there already.

   For more information, see Navigate to the Segmentation and security page.

2. Click the **Security groups** tab and then click **Actions > Create Security Group**.

   The **Create Security Group** page appears.

3. (Optional) In the **Security group name** field, change the name for this security group, if necessary.

The name for the security group in the **Security group name** field is automatically populated with the configured group name prefix (as shown in **Fabric Properties > Resources > Security Group Name Prefix**), concatenated with an automatically generated group ID (provided in the **Security group tag ID** field below). You can override this automatically generated security group name in this field, if necessary.

4. Review or change tenant information, if applicable.

   These fields are displayed if a tenant is associated with the current fabric. For more information, see Configuring Tenants and Tenant Domains.

   a. (Optional) In the **Tenant** field, accept the tenant that is automatically displayed with this security group, or click the dropdown list to choose a different tenant to associate with this security group.

   b. (Optional) In the **VRF** field, accept the VRF and the associated tenant that is automatically displayed with this security group, or click the dropdown list to choose a different VRF and associated tenant to associate with this security group.

5. (Optional) Enter a custom tag ID in the **Security group tag ID** field.

   Each security group has a unique tag ID, which is automatically populated from a pool; however, you can override the automatically-generated tag ID in this field, if necessary.

6. The **Attach** option is enabled by default when creating a security group. The **Config-sync** status for this association defaults to **Pending** if there are existing attachments to the VRFs or networks referenced in the selectors. You can deploy the security group by using **Actions > Deploy** on the **Security associations** page.
7. Determine what type of selector you want to use to create the security group.
   - To create a security group using IP selectors, go to Create a security group using IP selectors.
   - To create a security group using VM IP selectors, go to Create a security group using VM IP selectors.
   - To create a security group using network selectors, go to Create a security group using network selectors.
   - To create a security group using network port selectors, go to Create a security group using network port selectors.

Create a security group using IP selectors

Follow these steps to create a security group using IP selectors.

1. Click the **IP selectors** tab.
2. Determine how you want to add IP selectors for this security group.
   - If you want to add individual IP selectors for this security group, click **Add IP selectors**, then make the necessary configurations. The **Add IP selectors** option works for both a standalone VXLAN fabric as well as for a VXLAN fabric group or for a multi-cluster fabric group.
   - If you want to perform a bulk add of the IP selectors for this security group, click **Add IP selectors**, then enter the necessary information on the **Add IP selector** page. Enter a whitespace or comma-separated list of IPv4, IPv6, IPv4/netmask, or IPv6/prefix entries to associate with the IP selector.

Enter the required fields on the **Add IP selector** page.

Field	Description
Type	Choose the type of IP selector that you want to use for this security group. Options are: • **Connected Endpoints**—Choose this type of IP selector to add a policy tag to an endpoint IP address or IP subnet connected inside the fabric. The tag can then be used by a tag selector to associate the endpoint IP address or IP subnet to a security group. • **External Subnets**—Choose this type of IP selector to create an IP subnet selector for a security group for networks or hosts that are learned externally and/or that are statically configured.
VRF	Choose the VRF that you want to associate with this IP selector from the drop-down list or click **+ Create VRF** to create a new VRF for this IP selector.
IP/Mask	Enter an IPv4, IPv6, IPv4/netmask, or IPv6/prefix entry to associate with this IP selector. The IPv4/netmask or IPv6/prefix will be corrected automatically based on the provided netmask and prefix value. Including a mask value is not mandatory.

3. Accept these updates after you have made the necessary configurations for the IP selector.
   - If you performed a bulk add for the IP selector, click **Save** on the **Add IP selector** page.
   - If you added an individual IP selector, click the check box at the end of the row. Repeat these steps to add additional individual IP selectors, if necessary.
4. Click **Save**.

Create a security group using VM IP selectors

For more information, see Create a VM selector.

Create a security group using network selectors

1. Click the **Network selectors** tab.
2. In the **Network selectors** area, click **Add network selectors** to choose one or more network selectors for this security group.

   The **Add network selectors** option works for both a standalone VXLAN fabric as well as for a VXLAN fabric group or for a multi-cluster fabric group.
3. Choose **VRF** from the drop-down list or click **+ Create VRF** to create a new one.
4. (Optional) You can decide to use an existing network or click **Create Network** to create a network for the chosen VRF.
5. Choose one or more networks to be associated as network selectors from the table and then click **Add network selectors**.
6. Repeat steps 3 to 5 to add additional network selectors.

Create a security group using network port selectors

1. If the device is running Cisco NX-OS release 10.6.1 or later, click the **Network port selectors** tab.
2. In the **Network port selectors** area, click **Add network port selectors** and then choose the network. For the specified network, add the switch interfaces by choosing the switch and its interfaces from the respective drop-down list.

   The **Add network port selectors** option works for both a standalone VXLAN fabric as well as for a VXLAN fabric group or a multi-cluster fabric group.

   Although you can create a network port selector for a border gateway switch in a standalone fabric, you cannot attach networks or VRFs to these border gateway switches.

   Enter the required fields on the **Add network port selectors** page.

Field	Description
Network	Choose the network that you want to associate with this network port selector or click **+ Create Network** from the **Network** drop-down list to create a new network for this network port selector. If you are creating a new network for this network port selector, verify that you chose the correct VRF in the **Create Network** page.
Switch Name	Choose the switch that you want to associate with this network port selector or by clicking **+ Add Row** from the **Switch Name** field to associate a new switch to this network port selector. Choose a switch from the **Switch Name** drop-down list.
Interface	Choose one or more interfaces that you want to associate with the chosen switch from **Interface** drop-down multi-select list. Each switch and interface combination will be associated as a network port selector.

3. Click the check box at the end of the row to accept these updates after you have made the necessary configurations for the network port selector.

   Repeat these steps to add additional network port selectors, if necessary.

4. Click **Create**.

Deploy security groups

Once you have made all the necessary configurations for your security groups, you can deploy them through either the **Security groups** or the **Security associations** pages.

- **Security groups > Actions > Deploy**
- **Security associations > Actions > Deploy**

Security group tag to endpoints mapping

In Nexus Dashboard, you can now view the mapping between the security groups and endpoints with the help of a tag ID displayed as the **Endpoint Security Group (ESG)** column. Nexus Dashboard

enriches the endpoint data with the VXLAN Group Policy Option (GPO) security group tag (SGT) to display the mapping in the Nexus Dashboard UI.

An endpoint security group is a logical construct that partitions the network into micro-segments to enable better control of communication between the different segments of the network and enforces policies on the traffic streams between services and consumers that fall within these segments.

Once a security group is configured with a selector and an endpoint is detected, you can view the security group tag (SGT) in the Nexus Dashboard **Fabric > Connectivity > Endpoints** page, see View endpoint security group (ESG) to endpoints mapping for more information.

The **Security Groups** tab displays the endpoints mapped to the security groups based on the Virtual Machine Manager (VMM) integration. With VMM integration, you can specify Virtual Machine (VM) specific selectors in the fabric controller ESG configuration covering the VM endpoints. These VM selectors are then translated into IP selectors and pushed into the fabric. Since these selectors are actively configured endpoints, they are known to the fabric controller as being a part of the corresponding ESG and are displayed in the **Security groups** tab as endpoints pertaining to the ESG.

View endpoint security group (ESG) to endpoints mapping

The Endpoint Locator (EPL) learns the **Endpoints** to **ESG** mapping through the BGP control plane and enriches the endpoint data with the tags learned and processed from BGP. In Nexus Dashboard 4.3.1, the endpoints query the EPL and display the **Security Groups** tag information in the **ESG** column of the **Endpoints** table. The **ESG** column values are populated on the basis of Endpoint Locator configuration.



You must ensure the Endpoint Locator is configured and operational before the endpoints are detected on the fabric. This is a prerequisite to mapping the endpoints and viewing them in the **ESG** column. For information on Endpoint Locator configuration, see Configuring Endpoint Locator for interconnected VXLAN fabrics.

Follow these steps to view the endpoint security group (ESG) to endpoints mapping.

1. Navigate to **Manage > Fabrics**, then click on your VXLAN EVPN fabric.

   The **Overview** page for that fabric appears.

2. Click the **Connectivity** tab to view the subtabs.
3. Click the **Endpoints** subtab to view the table on this page.

   The **ESG** column displays the endpoint ID for the associated security group.



The **ESG** column is hidden by default. You must toggle the **ESG** column option from the table **Settings** and enable the **ESG** column display in the **Endpoints** table.

View security group information

1. Navigate to the **Manage > Fabrics > Fabric Overview > Segmentation and security > Security groups** page.

   The table on the **Security groups** page provides information on individual security groups in the

fabric.

Security groups table fields and descriptions

Field	Description
Name	Specifies the name of the security group. Click the name to access the IP selectors, associated contracts, and associated virtual machines.
Tenant	Displayed if a tenant is associated with the current fabric. For more information, see Configuring Tenants and Tenant Domains.
ID	Specifies the ID of the security group.
VRFs	Specifies the number of VRFs that are associated with the security group.
Selectors	Specifies the number of selectors that are associated with the security group.
Status	Specifies the status of the security group deployment as **Not applicable**, **Out of Sync**, **Pending**, **Deployed**, and so on.
Associated Contracts	Specifies the number of contracts that are associated with the security group.

2. Click the gear icon to the right of the table to change the columns in the table.

   Click the toggle switch to enable or disable the column options.

3. Click the table header to sort the entries in alphabetical order for the selected parameter.
4. Perform any of the following actions on the **Security groups** page.

   The table describes the action items that are available in the **Actions** drop-down list.

   Security groups actions and descriptions

Action Item	Description
Create Security Group	Allows you to create a security group. For more information, see Create a security group.
Edit	Allows you to view or edit the chosen security group parameters. 1. To edit the security group information, check the check box next to the security group name that you want to edit and choose **Edit**. 2. On the **Edit security group** page, edit the required values and click **Save** to apply the changes or click **Close** to discard the changes. Beginning with Nexus Dashboard 4.1.1, you can no longer edit the **Security group name** on the **Edit Security Group** page.

Action Item	Description
Attach	Allows you to attach one or more chosen security groups. An attach operation indicates that the security group is enabled, and that the security group is included in the intent for the switches that are attached to the VRFs and the associated networks referenced by its selectors. To attach a security group, check the check box next to the security group name that you want to attach and choose **Attach**. If an attached security group has an intent, then the **Status** goes to **Pending**, otherwise the status remains as **Not applicable**.  - Attaching a security group does not automatically attach the security associations to the security group. You need to manually attach the security associations by navigating to the **Security Associations** page and then clicking **Actions > Attach**. - For optimal performance, batch security group attachments into a single bulk request rather than performing separate operations.
Detach	Detaches the selected security group. This action disables the security group and removes it from the switch intent. If you remove all selectors from a security group, the status remains Deployed because the VRF reference remains. Select **Detach** to change the status to **Pending** and then to **Not applicable** after deployment.  - Detaching a security group is not allowed if there are attached security associations. You need to manually detach the security associations by navigating to the **Security Associations** page and clicking **Actions > Detach**. - For optimal performance, batch security group detachments into a single bulk request rather than performing separate operations.
Deploy	Allows you to deploy the configuration for the chosen security group. 1. To deploy a security group configuration, check the check box next to the security group that is in **Pending** or in **Out-of-Sync** status for which you want to deploy the configuration and choose **Deploy**. On the **Deploy Configuration** page, you can deploy the specified security group configuration. 2. Click **Deploy** or click **Close** to discard the changes.

Action Item	Description
Import	Allows you to import security group information exported to a .csv file for the fabric. For more information, see Import or export security configurations. 1. To import security group information exported to a .csv file, choose **Import**. The **Import security groups** dialog box appears. 2. Browse to the directory and select the .csv file that contains the security group information. 3. Click **OK**. The security group information is imported and displayed on the **Security groups** page.
Export	Allows you to export security group information to a .csv file. The exported .csv file contains information pertaining to each security group, including the configuration details that you saved during the creation of the security group. For more information, see Import or export security configurations To export security group information, choose **Export**. The security group .csv file is exported to your local directory. The file name is appended with the date and time at which the file was exported. You can use the exported .csv file for reference or use it as a template for creating new security groups.
Delete	Allows you to delete a selected security group. You can select multiple security group entries and delete them at the same time. 1. To delete a security group, check the check box next to the security group that you want to delete and choose **Delete**. A warning message appears asking whether you want to delete the security groups. NOTE: If a security group is attached and deployed then delete operation is not allowed until it is detached and then deployed again. If a security group is associated with security associations then delete operation is not allowed until those security associations are deleted from **Security associations > Actions > Delete** 2. Click **Confirm** to delete or click **Cancel** to retain the security group. A message appears that the selected security groups are deleted successfully.

Action Item	Description
Associate contract	Allows you to associate a security contract within a VRF. For more information, see Associate a security contract within a VRF.

View security group details

1. Navigate to the **Manage > Fabrics > Fabric Overview > Segmentation and security > Security groups** page.
2. Click on a security group.

   The **Security group details** page displays.

   The table on the **Security group details** page provides information on individual selectors in the fabric.

   Security group details table fields and descriptions

Field	Description
Name	Specifies the name of the security group.
ID	Specifies the ID of the security group.
Selector type	Specifies the type of selector.
VRF	Specifies the VRF name that is associated with the security group selector.
IP	Specifies the IP address for the security group selector.
Network	Specifies the network associated with the security group selector.
VLAN	Specifies the VLAN associated with the security group selector.
Switch interface	Specifies the switch name and interface associated with the security group network port selector.
Associated VM status	Specifies the VM name and the status of the VM associated with the security group selector.
Config-sync status	Specifies the configuration sync status of the selector.

3. Click the gear icon to the right of the table to change the columns in the table.

   Click the toggle switch to enable or disable the column options.

4. Click the table header to sort the entries in alphabetical order for the chosen parameter.
5. Click the **Security groups** drop-down list on the top to choose a security group or click **View all security groups** to view the details of the security groups.
6. Click the **Associated contracts** tab to view the Security associations that are associated with the chosen security group or view all groups if **View all** option is chosen.
7. Click the **Associated virtual machines** tab to view the Virtual machines that are associated with the chosen security group or view all groups if **View all** is chosen.

Working with security contracts

Security contracts are logical constructs in Nexus Dashboard that represent a set of security rules where each rule is comprised of Direction, Action, and Protocol. Contracts are associated with security groups within a VRF. These associated service contracts are applied to switches where the VRF is attached in the Nexus Dashboard.

1. On the **Segmentation and security** tab, click the **Security contracts** subtab.
2. Review the information on the **Security contracts** page.

   The **Security contracts** page shows information on already-configured security contracts.

Understanding security contracts and VXLAN-ACI fabric groups

This section provides information on security contracts as they relate specifically with VXLAN-ACI fabric groups.

- Security contracts and VXLAN-ACI fabric groups
- Guidelines and limitations: Security contracts and VXLAN-ACI fabric groups

Security contracts and VXLAN-ACI fabric groups

- A Nexus Dashboard security contract doesn't map to an ACI contract.
- A Nexus Dashboard security contract can be reused across multiple security associations.
- A Nexus Dashboard security contract consists of a collection of rules with rule actions, such as permit, deny, and so on, along with the specified rule directions.
- If you do not specify the subjectName in the acidata section when you are creating a security contract, the Nexus Dashboard contract name will be used as the subject name.

Guidelines and limitations: Security contracts and VXLAN-ACI fabric groups

- VXLAN-ACI does not support contract compression because each contract Nexus Dashboard deploys to ACI uses a unique security association name and is limited to one consumer and one provider.
- A Nexus Dashboard security contract that is defined in tenant common can't be used by other tenants.

View security contract information

1. Review the information provided on the **Security contracts** page.

   The table provides information on individual security contracts in the fabric.

   Contracts fields and descriptions

Field	Description
Name	Specifies the name of the security contract. Click the name to access the security rules and their associations.
Tenant	Displayed if a tenant is associated with the current fabric. For more information, see Configuring Tenants and Tenant Domains.
Rules	Shows the number of security rules that are associated with the service contract.
Contract Associations	Shows the number of contract associations that are associated with the service contract.
Description	Provides a description of the service contract, if one is available.

2. Click the gear icon to the right of the table to change the columns in the table.
3. Click the toggle switch to enable or disable the column options.
4. Click the table header to sort the entries in alphabetical order for the selected parameter.
5. Perform any of the following actions on the **Security contracts** page.

   The table describes the action items that are available in the **Actions** drop-down list.

   Contracts actions and descriptions

Action Item	Description
Edit	Allows you to view or edit the selected security contract parameters. 1. To edit the security contract information, check the check box next to the security contract name that you want to edit and choose **Edit**. 2. On the **Edit security contract** page, edit the required values and click **Save** to apply the changes or click **Close** to discard the changes.
Import	Allows you to import security contract information exported to a .csv file for the fabric. For more information, see Import or export security configurations. 1. To import security contract information exported to a .csv file, choose **Import**. The **Import security contracts** dialog box appears. 2. Browse to the directory and select the .csv file that contains the security contract information. 3. Click **OK**. The security contract information is imported and displayed on the **Security contracts** page.

Action Item	Description
Export	Allows you to export security contract information to a .csv file. The exported .csv file contains information pertaining to each security contract, including the configuration details that you saved during the creation of the security contract. For more information, see Import or export security configurations To export security contract information, choose **Export**. The security contract .csv file is exported to your local directory. The file name is appended with the date and time at which the file was exported. You can use the exported .csv file for reference or use it as a template for creating new security contracts.
Delete	Allows you to delete a selected security contract. You can select multiple security contract entries and delete them at the same time. 1. To delete a security contract, check the check box next to the security contract that you want to delete and choose **Delete**. A warning message appears asking whether you want to delete the security contracts. 2. Click **Confirm** to delete or click **Cancel** to retain the security contract. A message appears that the selected security contracts are deleted successfully.
Associate contract	Allows you to associate a service contract within a VRF. For more information, see Associate a security contract within a VRF.
Disassociate contract	Allows you to disassociate a service contract from a VRF. For more information, see Disassociate a security contract from a VRF.

Configure security contracts

Follow these procedures to configure security contracts.

- Create a security contract
- Associate a security contract within a VRF
- Disassociate a security contract from a VRF

Create a security contract

Rather than creating a security contract from scratch, you can import already-configured security contract configurations, if necessary. For more information, see Import or export security configurations.

1. On the **Segmentation and security** page, click **Security contracts**.

   A table with all of the existing security contracts displays.

2. Click **Create security contract**.

   The **Create security contract** page appears.

3. In the **Contract Name** field, enter a name for this security contract.
4. (Optional) In the **Description** field, enter a description for this security contract.
5. Below the **Rules** table, click **+ Add Rule**, then make the necessary configurations.

Field	Description
Direction	Choose the direction for this rule in the security contract. Options are: · **Bidirectional** - Applies the rule to traffic flowing in both directions. · **Unidirectional** - Applies the rule only to traffic flowing from the source to the destination.
Action	Choose the action for this rule in the security contract. Options are: · **Permit** · **Permit log** · **Deny** · **Deny log**
Protocol definitions	Choose a protocol definition for this rule in the security contract or click **+ Create Security Protocol** in the **Protocol definition** drop-down list to create a new security protocol definition for this contract. For more information, see Create a security protocol.
Match summary	Verify the information shown in the match summary for this rule in the security contract.

6. Click **Save**.

Associate a security contract within a VRF



Rather than creating a security association from scratch, you can import already-configured security association configurations, if necessary. For more information, see Import or export security configurations.

1. On the **Security contracts** page, click **Actions > Associate contract**.
2. On the **Associate contract** page, make the necessary configurations to associate a security contract with a **Source Group** and **Destination Group** within a VRF.

Field	Description
VRF	Choose the VRF that you want to associate with this security contract, or click **Create VRF** to create a new VRF for this security contract.

Source Group	Choose the source security group that you want to associate with this VRF in this security contract, or click **Create Security Group** to create a new source security group to associate with this VRF in this security contract. For more information, see Create a security group for more information.
Contract	Choose the security contract that you want to associate with this VRF, or click **Actions > Create security contract** to create a new security contract for this VRF. For more information, see Create a security contract.
Destination Group	Choose the destination security group that you want to associate with this VRF in this security contract, or click **Actions > Create security group** to create a new destination security group to associate with this VRF in this security contract. For more information, see Create a security group.

3. Click **Save**.

Disassociate a security contract from a VRF

Follow these procedures if you want to disassociate a security contract from a VRF for any reason:

1. On the **Security contracts** page, click **Actions > Disassociate contract**.

   The slide-in pane **Disassociate contract from:** page appears.

2. Locate the row with the VRF that you want to disassociate the security contract from, then click the trashcan icon in that row.

   This action deletes the security contract association from this VRF. It does not delete the security contract or any security group.



You can also disassociate a security contract by clicking the **Security associations** tab and selecting the association entries, then clicking **Actions > Delete**. From Nexus Dashboard 4.2.1 and later, you can associate multiple contracts with the same VRF, source group, and destination group.

Working with security associations

1. On the **Segmentation and security** tab, click the **Security associations** subtab.
2. Review the information on the **Security associations** page.

   The **Security associations** page shows information on already-configured security associations.

Security associations and VXLAN-ACI fabric groups

- A security association is defined by the combination of name, contract, source, and destination.
- The security association name will map to the ACI contract.
  - A security association name is used as the contract name in APIC.
  - A security association name is not used in NX-OS.

Guidelines and limitations: Security associations

These are the guidelines and limitations for security associations.

- Guidelines and limitations: Security associations and VXLAN-ACI fabric groups
- Guidelines and limitations: Security associations and multi-tenancy

Guidelines and limitations: Security associations and VXLAN-ACI fabric groups

- The source security group, destination security group, and security contract must reside within the same tenant.
- Source and destination security groups should belong to the same VRF.
- Inter-VRF and inter-tenant security association is not supported.
- For VXLAN-ACI fabrics, "Any" security groups are unavailable for use in source or destination fields.

Guidelines and limitations: Security associations and multi-tenancy

- Security association deployment requires the security group to be in the attached state.

Monitor security associations



The monitoring function is available only for VXLAN standalone fabrics or member fabrics within a VXLAN fabric group; the monitoring function is not supported at the VXLAN fabric group level.

The **Monitoring** page shows changes between the point when values were previously fetched and the current values. The **Last Updated** column shows the last point when these values were resynchronized. The data is denormalized with contract direction, action, and protocol associations.

1. Navigate to the **Segmentation and security** page, if you're not there already.

See Navigate to the Segmentation and security page.

2. Click the **Security Associations** tab.

   A table with all the security contract association statistics displays.

3. Click **Resync** to resynchronize the table data.

   A status bar appears with the text **Resyncing Table Data**, then the resynchronized data displays.

View security association information

Review the information provided on the **Security associations** page.

The table provides information on individual security associations in the fabric.

Security associations table fields and description

Field	Description
Name	Click the security association name in the column to access the security association information.
Tenant	Displayed if a tenant is associated with the current fabric. For more information, see Configuring Tenants and Tenant Domains.
Contract name	Click the contract name in the column to access the security contract information.
Source group	Specifies the source security group that's associated with the VRF in this security contract.
SGT	Specifies the source group tag (SGT) that is used with the source group that is associated with the VRF in the security contract.
Destination group	Specifies the destination group that's associated with the VRF in this security contract.
DGT	Specifies the destination group tag (DGT) that is used with the destination group that is associated with the VRF in this security contract.
VRF	Specifies the VRF that is associated with the security contract.
Status	Specifies whether the status of the security association deployment is **Not applicable**, **Out of Sync**, **Pending**, **Deployed**, and so on.

1. Click the gear icon to the right of the table to change the columns in the table.

   Click the toggle switch to enable or disable the column options.



If a tenant is associated with the current fabric, these options are also available.

- Contract tenants
- Source group tenants
- Destination group tenants
- VRF tenants

For more information, see Configuring Tenants and Tenant Domains.

2. Click the table header to sort the entries in alphabetical order for the selected parameter.
3. Perform any of these actions on the **Security associations** page.

   The table describes the action items that are available in the **Actions** drop-down list.

   Security associations actions and descriptions

Action Item	Description
Create Security Association	Allows you to create a security association. For more information, see Associate a security contract within a VRF.
Edit	Allows you to view or edit the selected security association parameters. 1. To edit the security association information, check the check box next to the security association name that you want to edit and choose **Edit**. 2. On the **Edit security association** page, edit the contract and click **Save** to apply the changes or click **Close** to discard the changes. Use a PUT request to update only the **Attach** field when editing a security association. You cannot change the contract associated with a VRF, source group, and destination group. To use a different contract, create a new security association using the create association action.
Attach	Allows you to attach one or more chosen security associations. **Attach** indicates that the security association is enabled, and that the security association is included in the intent for the switches that are attached to the VRF and the associated switches. To attach the security association information, check the check box next to the security association that you want to attach and choose **Attach**. If an attached security association has an intent, then the **Status** displays as **Pending**, otherwise it displays as **Not applicable**. When a security association is attached, the security association implicitly attaches the security groups that it references.

Action Item	Description
Detach	Allows you to detach one or more chosen security associations. **Detach** indicates that the security association is disabled, and that the security association is disabled, and the security association is included in the intent for the switches attached to the associated VRF. To detach the security association, check the check box next to the security association that you want to detach and choose **Detach**. If detached security association has a negated intent, then the **Status** displays as **Pending**, otherwise it displays as **Not applicable**. When a security association is detached, the security association does not implicitly detach the security groups that it references.
Deploy	Allows you to deploy the configuration for the selected security association. 1. To deploy a security association configuration, check the check box next to the security association that is in **Pending** or in **Out-of-Sync** status for which you want to deploy the configuration and choose **Deploy**. On the **Deploy Configuration** page, you can deploy the specified security association configuration. 2. Click **Deploy** or click **Close** to discard the changes.
Import	Allows you to import security association information exported to a .csv file for the fabric. For more information, see Import or export security configurations. 1. To import security association information exported to a .csv file, choose **Import**. The **Import security associations** dialog box appears. 2. Browse to the directory and select the .csv file that contains the security association information. 3. Click **OK**. The security association information is imported and displayed on the **Security associations** page.

Action Item	Description
Export	Allows you to export security association information to a .csv file. The exported .csv file contains information pertaining to each security association, including the configuration details that you saved during the creation of the security association. For more information, see Import or export security configurations To export security association information, choose **Export**. The security association .csv file is exported to your local directory. The file name is appended with the date and time at which the file was exported.  You can use the exported .csv file for reference or use it as a template for creating new security associations.
Delete	Allows you to delete a selected security association. You can select multiple security association entries and delete them at the same time. 1. To delete a security association, check the check box next to the security association that you want to delete and choose **Delete**. A warning message appears asking whether you want to delete the security associations.  If a security association is attached and deployed then delete operation is not allowed until it is detached and then deployed again. 2. Click **Confirm** to delete or click **Cancel** to retain the security association. A message appears that the selected security associations are deleted successfully.

Working with protocol definitions

1. On the **Segmentation and security** tab, click the **Protocol definitions** subtab.
2. Review the information on the **Protocol definitions** page.

   The **Protocol definitions** page shows information on already-configured protocol definitions.

Understanding protocol definitions and VXLAN-ACI fabric groups

This section provides information on protocol definitions as they relate specifically with VXLAN-ACI fabric groups.

- Protocol definitions and VXLAN-ACI fabric groups
- Guidelines and limitations: Protocol definitions and VXLAN-ACI fabric groups

Protocol definitions and VXLAN-ACI fabric groups

- Protocol definitions are created on a per-tenant basis.
- User-tenant contracts can reference protocol definitions created either within the same user tenant or in the common tenant.
- Protocol definitions that are created in the tenant common within the VXLAN-ACI fabric group can be referenced by other tenants.

Guidelines and limitations: Protocol definitions and VXLAN-ACI fabric groups

- Source port and destination port can be a number or a range of numbers. Nexus Dashboard does not support strings with " https" or " ssh" , which is supported in APIC.

View protocol definitions information

1. Review the information provided on the **Protocols definitions** page.

   The table provides information on protocol definitions and associated contracts in the fabric.

   Protocol definitions fields and descriptions

Field	Description
Name	Specifies the name of the security protocol. Click **Name** to access the contracts associated with this protocol.
Tenant	Displayed if a tenant is associated with the current fabric. For more information, see Configuring Tenants and Tenant Domains.
Description	Specifies the description for the protocol definition.
Match Summary	Specifies the protocol match criteria.
Associated Contracts	Specifies the associated contracts.

2. Click the gear icon to the right of the table to change the columns in the table.
3. Click the toggle switch to enable or disable the column options.
4. Click the table header to sort the entries in alphabetical order for the selected parameter.
5. Perform any of the listed actions on the **Protocol definitions** page.

   The table describes the action items that are available in the **Actions** drop-down list.

   Protocol definitions actions and descriptions

Action Item	Description
Create Security Protocol	Allows you to create a security protocol definition.
Edit	Allows you to view or edit the chosen security protocol definition parameters. 1. To edit the security protocol definition, check the check box next to the security protocol name that you want to edit and choose **Edit**. 2. On the **Edit security group** page, edit the required values and click **Save** to apply the changes or click **Close** to discard the changes.
Import	Allows you to import a security protocol definition exported to a .csv file for the fabric. For more information, see Import or export security configurations. 1. To import a security protocol definition exported to a .csv file, choose **Import**. The **Import security protocols** dialog box appears. 2. Browse to the directory and choose the .csv file that contains the security protocol definition. 3. Click **OK**. Nexus Dashboard imports and displays the security protocol definition on the **Security protocols** page.
Export	Allows you to export security protocol definition to a .csv file. The exported .csv file contains information pertaining to each security protocol definition, including the configuration details that you saved during the creation of the security group. For more information, see Import or export security configurations To export a security protocol definition, choose **Export**. Nexus Dashboard exports the security protocol definition as a .csv file to your local directory. The file name is appended with the date and time at which the file was exported.  You can use the exported .csv file for reference or use it as a template for creating new security groups.

Action Item	Description
Delete	Allows you to delete a chosen security protocol definition. You can choose multiple security protocol definition entries and delete them at the same time. 1. To delete a security protocol definition, check the check box next to the security protocol definition that you want to delete and choose **Delete**. A warning message appears asking whether you want to delete the security protocol definition. 2. Click **Confirm** to delete or click **Cancel** to retain the security protocol definition. A message appears that the chosen security protocol definitions are deleted successfully.

Configure protocol definitions

Follow these steps to configure protocol definitions.

Create a security protocol



Rather than creating a security protocol from scratch, you can import already-configured security protocol configurations, if necessary. See Import or export security configurations for more information.

1. Navigate to the **Segmentation and security** tab, if you're not there already.

   See Navigate to the Segmentation and security page.

2. With the **Protocol definitions** tab selected, click **Actions > Create Security Protocol**.

   The **Create Security Protocol** page appears.

3. In the **Name** field, enter a name for this security protocol.
4. (Optional) In the **Description** field, enter a description for this security protocol.
5. In the **Match All Traffic** field, check the box to enable this feature.
6. In the **Match Protocols** area, enter the necessary information to filter match protocols by attribute.
   a. Choose the first part of the string to use for the filter using any of these values:
      - **Type**
      - **IP Protocol/Options**
      - **Source Port Range**
      - **Destination Port Range**
      - **Fragments Only**

- **Stateful**
- **TCP Session Rules**
- **DSCP**

b. Choose the next part of the string using any of these values:
- == (include)
- != (doesn't include)
- contains
- !contains (doesn't contain)

c. Enter a value for the final part of the string to be used to filter match protocols by attribute.

7. Click **Actions > Create Protocol Entry**.

   The slide-in pane **Create Protocol Entry** page appears.

8. Make the necessary configurations to create the security protocol entry.

Field	Description
Type	Choose the type of protocol entry that you want to use with this security protocol. Options are: · **IP** · **IPv4** · **IPv6**
IP Protocol/Options	Select the IP protocol or option that you want to use with this security protocol.
Fragments	This option is available only if you selected **TCP** or **UDP** in the **IP Protocol/Options** field above. Check the **Fragments** check box to allow fragmented packets that do not contain Layer 4 (L4) headers. This allows traffic to pass from the source to the destination even when packets lack source and destination ports.
Stateful	This option is available only if you selected **TCP** in the **IP Protocol/Options** field above. Check the **Stateful** check box to match the TCP ACK bit for return traffic in bidirectional contracts. This configuration allows return traffic only for connections initiated from the source security group.
Source Port Range	This option is available only if you selected **TCP** or **UDP** in the **IP Protocol/Options** field above. Enter the source port range for this security protocol. You can enter a range in this field, such as 80-90, or a single value, such as 80.

Destination Port Range	This option is available only if you selected **TCP** or **UDP** in the **IP Protocol/Options** field. Enter the destination port range for this security protocol. You can enter a range in this field, such as 80-90, or a single value, such as 80.
TCP Flags	This option is available only if you selected **TCP** in the **IP Protocol/Options** field above. Choose the TCP flags for this security protocol. In the protocol header, TCP uses flags to manage connections and traffic flows. Options are: • **ack**—Acknowledgment. Used to acknowledge the reception of data or synchronization packets. • **est**—Established TCP connections. When this option is selected, other options cannot be selected. • **fin**—Finish. Gracefully terminate the TCP connection. • **rst**—Reset. Immediately terminate the connection and drop any in-transit data. • **syn**—Synchronization. Used to create a TCP connection.
DSCP	Enter the Differentiated Services Code Point (DSCP) for this security protocol. Valid range is 0-63.

9. Click **Add** in the **Create Protocol Entry** page.

   You are returned to the **Create Security Protocol** page, with the new security protocol entry added to the table of protocol entries.

10. Click **Create** in the **Create Security Protocol** page.

    You are returned to the **Protocol definitions** page, with the new security protocol added to the table of security protocols.

Working with L4-L7 services

Nexus Dashboard provides the ability to insert Layer 4-Layer 7 (L4-L7) service devices in a data center fabric and to selectively redirect traffic to these L4-L7 service devices. You can add a L4-L7 service cluster, create service function between the L4-L7 service cluster and the L4-L7 service leaf switch, and then selectively redirect traffic to these L4-L7 service clusters.

Terminology used in this article

We use these terms and definitions for Layer 4 to Layer 7 services.

Term	Definition
Service chain	Used to group and order all of the individual components listed below to insert Layer 4-Layer 7 (L4-L7) service devices in a data center fabric. For more information, see Add a service chain.
Service cluster	Used to onboard a service device, such as a firewall or load balancer. You specify the service node name, type, and interface attachment details when you add a service cluster. For more information, see Add a service cluster.
Service function	Used to specify the deployment type, network parameters, peering protocol, and service IP address. For more information, see Add a service function.
Service insertion	Used to choose the specific use case and define the traffic redirection rules. For more information, see Add a service insertion.

To navigate to the **L4-L7 services** page:

1. On the **Segmentation and security** tab, click the **L4-L7 services** subtab.
2. Review the information on the **L4-L7 services** page.

   The **L4-L7 services** page shows information on already-configured L4-L7 services.

Layer 4 to Layer 7 services

Nexus Dashboard provides a unified Layer 4 to Layer 7 services flow that includes the following use cases:

- **Redirect to Service Chain**—Configures selective traffic redirection, load-balancing and service chaining with health monitoring.
- **Service as Default Gateway**—Configures intra-VRF or intra-tenant redirection with the service as the default gateway.
- **Perimeter Service**—Configures inter-VRF or inter-tenant service redirection.
- **Legacy Service Redirection**—Configures selective traffic redirection with a legacy PBR workflow. Health monitoring is not configured with this use case. This use case is not supported with Layer 4 to Layer 7 services in VXLAN fabric group member fabrics.

- **Route Peering Service**—A new use case introduced in release 4.1.1. Configures a service for route peering between the service function and the fabric.

The switch configurations are generated with corresponding feature CLIs depending on the enabled and attached switches.

Service clusters

The service node resides in the same VXLAN EVPN fabric as the service switch, and you do not have to create the external fabric for the service cluster. Nexus Dashboard does not auto-detect or discover any service cluster. You also have to specify the service cluster name, type, and form factor. The name of the service cluster has to be unique within a fabric. The service cluster is attached to a leaf, border leaf, border spine, border super spine, or a vPC border gateway. Nexus Dashboard does not define a new switch role for a service switch.

Nexus Dashboard manages the switches that are attached to a service cluster. Nexus Dashboard also manages the interfaces of these attached switches. Ensure that the interfaces that the service cluster is attached to are in trunk mode and do not belong to any interface group. The Layer 4 to Layer 7 service does not change its mode. In case the attached switches form a vPC pair, the name of the attached switch is a combination of both switches.

VXLAN fabric group support

VXLAN fabric group support is available for Layer 4 to Layer 7 services. You can define and update the service cluster, service function, service insertion, and service chain within the VXLAN fabric group.

These are the use cases that are supported in Layer 4 to Layer 7 services with VXLAN fabric groups:

- Redirect to Service Chain
- Service as Default Gateway
- Perimeter Service
- Route Peering Service

For more information, see:

- Cisco VXLAN Multi-Site and Service Node Integration
- Layer 4 to Layer 7 Services Use Cases

For the Redirect to Service Chain use case, Nexus Dashboard will auto-attach the service VRFs on the service switches and compute switches that are associated with the service chain. In addition, Nexus Dashboard will attach service VRFs to the border gateways of member fabrics in the VXLAN fabric group.

When you move a member fabric into a VXLAN fabric group, Nexus Dashboard will validate the names of the service cluster, service function, service insertion, and service chain of the incoming fabric against the definitions in the VXLAN fabric group and will throw an error if there is a conflict. Once the member fabric is successfully moved into a VXLAN fabric group, the Layer 4 to Layer 7 services definitions in the incoming fabric will be promoted to the VXLAN fabric group scope.

Whenever you attach a service insertion, the service networks are automatically attached to the

attached switch. For VXLAN fabric groups, Nexus Dashboard also automatically attaches the service networks on the border gateways if the service nodes inside the service cluster span across multiple member fabrics.

RBAC support

In Nexus Dashboard Release 4.3.1, Role-Based Access Control (RBAC) for Layer 4 to Layer 7 service is supported only when multi-tenancy is enabled and the tenant domain is configured as all-tenants-domain.



RBAC support for the Layer 4 to Layer 7 service, including the role mapping shown below, applies only in multi-tenancy deployments when the tenant domain is all-tenants-domain.

Fabric Administrator, Approver, Designer, Observer, and Support Engineer are pre-defined roles in Nexus Dashboard. This table lists the various operations that each role performs.

Service Operation	Service Insertion	Service Function	Service Cluster	Service Chain
Create/Update/Delete	Fabric Administrator, Designer	Fabric Administrator, Designer	Fabric Administrator	Fabric Administrator, Designer
List	Fabric Administrator, Approver, Designer, Observer, Support Engineer	Fabric Administrator, Approver, Designer, Observer, Support Engineer	Fabric Administrator, Approver, Designer, Observer, Support Engineer	Fabric Administrator, Approver, Designer, Observer, Support Engineer
Attach/Detach	Fabric Administrator, Designer	Not applicable	Not applicable	Not applicable

Traffic redirect support on WAN interfaces of border switches

In the use cases of redirect to service chain and legacy service redirection, you can specify an arbitrary network that has not been defined in the top-down configuration as a source or destination network in the service insertion. This helps in streamlining policy enforcement for north-south traffic. The Nexus Dashboard UI lists out routed Layer 3 interfaces of all border switches, standalone or vPC, that have a VRF association. You can then choose the required interface that has to be associated with the defined policy. The border switches include border leaf, border spine, border super spine and border gateway. There can be multiple interface associations. For example, multiple Layer 3 interfaces, subinterfaces, and port-channels can be selected for one border switch. You can also select multiple border switches for interface association. For more information, see the Cisco N9000 Series NX-OS Unicast Routing Configuration Guide.

Depending on the policy direction, the border switch and interface association for 'any' or arbitrary network may not be needed. For example, for a forwarding policy, the border switch and interface input or route-map association is not needed for 'any' or arbitrary destination network. For a reversed

policy, the border switch and interface or route-map association is not needed for 'any' or arbitrary source network.

When the policy with any or arbitrary network is attached, the policy related CLIs are generated and associated with the selected Layer 3 routed interfaces of the border switches. The deployment of that policy pushes the CLIs to the selected border switches. The service insertion stats diagram includes the PBR or ePBR related policy stats data, depending on the use case.

ePBR support

Support is available for enhanced policy-based redirect (ePBR), which is used for Layer 4 to Layer 7 service load balancing, and for traffic steering and redirection.

ePBR leverages the policy-based redirect solution to steer traffic and to enable application-based routing. ePBR also allows you to enable service chaining within the same fabric or across fabrics. ePBR services flows are similar to the PBR services flows, as described in the preceding section, consisting of service cluster, service function, and service insertion functions.

The service insertion in an ePBR services flow supports service chaining in the same fabric or across different fabrics in VXLAN fabric groups. The service cluster in the service chaining can be any combination of different service cluster types, and can also have different failure actions defined. You can associate multiple source and destination networks with the service insertion, and you can define multiple ACLs, and multiple ACEs in one ACL, for an easier application of the service insertion.

Static route

The Layer 4 to Layer 7 service pushes static routes on all VTEPs, including service leaf switches, where the VRF being referenced in the static route is attached. This expedites service cluster failover with static routes.

You can also enable an optional **Export Gateway IP** flag to export the gateway IP (service cluster IP) address as the next-hop, which triggers the static routes to be deployed only on the service switches (the switches where the service clusters are attached).

Remote peering

When you go through the **Peering Configuration** part of the procedures provided in Add a service function, you will have the option to specify the eBGP dynamic peering with the remote leaf, border or border gateway switches rather than the default service switch. You will also be able to push remote peering-related configurations through updates to the eBGP template for Layer 4 to Layer 7 services.

The remote peering feature allows service nodes to peer with multiple remote leaf, border or border gateway switches through eBGP dynamic peering. As part of the configuration process for remote peering, you can choose either local, or remote, or local and remote peering, and whether you want to export the gateway through the eBGP template for remote peering.

Guidelines and limitations for Layer 4 to Layer 7 services

- Layer 4 to Layer 7 Service in Nexus Dashboard does not manage or provision service clusters, such as firewall, load balancer, and Virtual Network Function.
- The Layer 4 to Layer 7 Service feature is supported only on the VXLAN BGP EVPN fabrics with the

Data Center VXLAN EVPN template.

- The service insertions defined in this feature leverage policy-based routing (PBR) and enhanced policy-based routing (ePBR). See the following documents for more information:
  - Cisco N9000 Series NX-OS ePBR Configuration Guide for PBR related configurations and constraints
  - Cisco N9000 Series NX-OS ePBR Configuration Guide for ePBR related configurations and constraints
- Active/standby, scale-up, and scale-out clustered deployments are supported with the ePBR feature.
- This feature supports Cisco Cloud Scale platform switches as leaf, border leaf, border spine, border super spine, and border gateway switches.
- ePBR support is for VTEPs with NX-OS release 10.2(5) and above.
- Layer 4 to Layer 7 Service REST APIs are accessible via Nexus Dashboard packaged REST API documentation. For more information, see the *Nexus Dashboard REST API Reference Guide*.
- Load sharing is not supported. However, Nexus Dashboard Layer 4 to Layer 7 services supports load balancing. This limitation is specific to PBR over VXLAN EVPN, which does not support the following features:
  - VTEP ECMP
  - The load-share keyword in the set {ip | ipv6} next-hop ip-address command.
- IPv6 is supported for Layer 4 to Layer 7 Services. See the Cisco N9000 Series NX-OS VXLAN Configuration Guide for PBR on VXLAN with IPv6 in the Underlay constraints.
- This feature creates, updates, and deletes the service network, as required. Service networks cannot be created or deleted from the **Manage > Fabrics > Networks** page.
- Layer 4 to Layer 7 services does not support change control.
- If you have a standalone fabric that uses the Legacy Service Redirection service insertion use case and you move that standalone fabric into a fabric group, you will see a warning message indicating that those Legacy Service Redirection service insertions are not editable in the fabric group. This is because the Legacy Service Redirection service insertion use case is not supported in a fabric group.
- You must run Recalculate and deploy at the fabric level after you attach, detach, or edit an attached service insertion to generate the complete pending configurations.
- When the **NX-API** option is enabled on supported fabrics, such as the VXLAN, Enhanced Classic LAN, eBGP, and Campus fabrics, statistics collection can be performed via SSH. You cannot collect any statistics if the **NX-API** option is disabled.

  For more information on **NX-API** field, see the Advanced section in Fabric Management.

Guidelines and limitations: Layer 4 to Layer 7 services and multi-tenancy

- Layer 4 to Layer 7 services are supported on tenant-aware fabrics and fabric groups.
- For Layer 4 to Layer 7 services, the resources used in the service constructs, such as VRFs and networks, must belong to the default tenant. In addition, the user performing Layer 4 to Layer 7 service operations must belong to all-tenants-domain.

Types of service devices

The L4-L7 service in Nexus Dashboard supports any vendors service cluster attachments. Typical service cluster types that are deployed in a data center are firewalls, load balancers, and other Layer-4 to Layer-7 products.

Examples of supported firewall vendors are Cisco Systems, Palo Alto Networks, Fortinet, Check Point Software Technologies, and others.

Examples of supported load balancer vendors are F5 Networks, Citrix Systems, A10 Networks, and others.

Note that these example lists are meant to serve as examples and are not intended to be exhaustive lists. The L4-L7 service attachment is generic and applies to a service cluster from any vendor.

Configure fabric settings for Layer 4 to Layer 7 services

You must configure certain fabric settings to enable Layer 4 to Layer 7 service functionality.

To configure these settings:

1. Navigate to the area in the VXLAN EVPN fabric where you can enable Layer 4 to Layer 7 Service functionality.
   - If you are creating a new VXLAN EVPN fabric:
     a. Navigate to **Manage > Fabrics**, then click **Actions > Create Fabric**.

        The **Create/Onboard Fabric** page displays.

     b. Click **Create new LAN fabric**, then click **Next**.
     c. Choose the **VXLAN** fabric type, then choose the **Data Center VXLAN EVPN** subtype, then click **Next**.
     d. In the **Configuration Mode** field, click **Advanced**, then enter the necessary information in the **3. Settings** page, then click **Next**.

        Because you clicked **Advanced** in the **Configuration Mode** field, you advance to **4. Advanced settings** in the configuration flow. Go to Step 2.

   - If you are editing an existing VXLAN EVPN fabric:
     a. Navigate to **Manage > Fabrics**, then click on the VXLAN fabric.

        The **Overview** page for that fabric displays.

     b. Click **Actions > Edit Fabric Settings**.
     c. Click **Fabric Management**.

        Go to Step 2.

2. Click the **Advanced** tab for this VXLAN EVPN fabric and make the following configurations:
   a. In the **Enable L4-L7 Services Re-direction** field, check the check box to enable routing of packets based on the specified policy.

3. Click the **Resources** tab and make the following configurations:
   a. Specify a VLAN range in the **Service Network VLAN Range** field.

      This is a per switch overlay service network VLAN range. The minimum allowed value is 2 and the maximum allowed value is 4094.

   b. Specify a value for the **Route Map Sequence Number Range** field.

      The minimum allowed value is 1 and the maximum allowed value is 65534.


   c. Enable the **Per VRF Per VTEP Unique Loopback Auto-Provisioning** options and specify the **Per VRF Per VTEP IPv4 Pool for Unique Loopbacks** and/or **Per VRF Per VTEP IPv6 Pool for Unique Loopbacks** range.

      For ePBR service chain in Nexus Dashboard Release 4.3.1, the **Per VRF Per VTEP Unique Loopback** settings are required.

4. Click **Save** to save the updated configuration.

Configure Layer 4 to Layer 7 services

To launch the Layer 4 to Layer 7 Services, or the Elastic Service, on Nexus Dashboard, navigate to **Manage > Fabrics > Fabric Overview > Segmentation and security > L4-L7 services**.

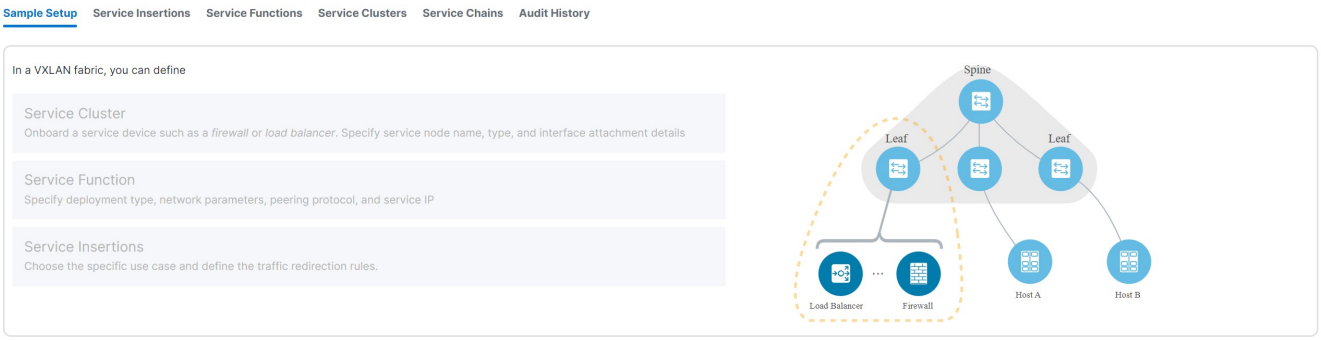

These tabs are shown on the **L4-L7 services** page.

- **Sample Setup**—Shows an example Layer 4 to Layer 7 services setup.
- **Insertions**—Shows the Layer 4 to Layer 7 service insertions that you have configured in Nexus Dashboard.
- **Functions**—Shows the Layer 4 to Layer 7 service functions that you have configured in Nexus Dashboard.
- **Clusters**—Shows the Layer 4 to Layer 7 service clusters that you have configured in Nexus Dashboard.
- **Chains**—Shows the Layer 4 to Layer 7 service chains that you have configured in Nexus Dashboard.

Navigate to service insertions

Use service insertions to choose specific use cases and define traffic redirection rules.

1. Navigate to **L4-L7 Services** for your VXLAN EVPN fabric.
   a. Click **Manage > Fabrics**.
   b. Click the VXLAN EVPN fabric where you want to configure service insertions.
   c. Click **Segmentation and security**.
   d. Click **L4-7 services**.
2. In the **L4-7 services** page, click **Insertions**.

   The **Insertions** page appears. You can perform either of these actions next:

   - View service insertion information
   - Add a service insertion

View service insertion information

1. Navigate to service insertions.
2. Review the information provided on the **Insertions** page.

   The **Insertions** page shows information on already-configured service insertions.

3. Perform any of the following actions on the **Insertions** page.
   - Click **Create insertion** to create a new insertion. See Add a service insertion for more information.
   - Use the **Actions** drop-down to work with existing insertions.

     This table describes the action items that are available in the **Actions** drop-down list.

     Insertions Actions and Description

Action Item	Description
Edit	Allows you to view or edit the selected service insertion parameters. 1. To edit the service insertion information, check the check box next to the service insertion name that you want to edit and choose **Edit**. 2. On the **Edit service insertion** page, edit the required values and click **Save** to apply the changes or click **Close** to discard the changes.
Attach	Allows you to attach the selected service insertion configuration.
Detach	Allows you to detach the selected service insertion configuration.

Action Item	Description
Preview	Allows you to preview the selected service insertion configuration before deploying it. To display the preview, choose the required service insertion and click **Preview**. A **Preview Service Policy** window is displayed. Select a specific switch, network, or VRF from the respective drop-down lists to display the generated pending configurations for specific switches, networks, and VRFs. Click **Close** to close the window.
Delete	Allows you to delete a selected service insertion. You can select multiple service insertion entries and delete them at the same time. 1. To delete a service insertion, check the check box next to the service insertion that you want to delete and choose **Delete**. A warning message appears asking whether you want to delete the service insertions. 2. Click **Confirm** to delete or click **Cancel** to retain the service insertion. A message appears that the selected service insertions are deleted successfully.

Add a service insertion

1. Navigate to service insertions.
2. Click **Create Insertion**.

   The **Add Service Insertion** page displays.

3. Enter a name for the service insertion in the **Service Insertion Name** field.

   The service insertion name can have an alphanumeric, underscore, or dash character.

4. In the **Use Case** field, choose from these types of service insertion use cases:
   - Redirect to Service Chain—Selective traffic redirection, load-balancing, and service chaining with health monitoring.
   - Service as Default Gateway—Intra-VRF or intra-tenant redirection with the service as the default gateway.
   - Perimeter Service—Inter-VRF or inter-tenant service redirection.
   - Legacy Service Redirection—Selective traffic redirection with legacy PBR workflow (no health monitoring).
   - Route Peering Service—A new use case introduced in release 4.1.1. Service for route peering

between the service function and the fabric.

Redirect to Service Chain

This service insertion use case configures selective traffic redirection, load-balancing, and service chaining with health monitoring.

1. Enter the necessary information to configure a service insertion with this use case:

Field	Description
Traffic Source VRF	Choose an existing traffic source VRF to associate with this service insertion use case, or click **+Create VRF** to create a new VRF. For more information, see Working with VRFs.
Traffic Destination VRF	Choose an existing traffic destination VRF to associate with this service insertion use case, or click **+Create VRF** to create a new VRF. For more information, see Working with VRFs.
Detach/Attach	Toggle the switch to detach or attach.
Direction	Choose the direction for this service insertion use case. Options are: • Bidirectional • Forward • Reverse
Enable Statistics	Check the check box to enable statistics for this service insertion use case.

2. In the **Traffic Flow Redirects** area, click **+ Add Traffic Flow Redirect** and enter the necessary information:

Field	Description
Match ACL Name	Choose an already-configured access control list (ACL) from the drop-down list, or click **+Create ACL** to create a new access control list. For more information, see ACL templates.
Match Action	Choose the appropriate ACL match action. Options are: • Redirect • Drop • Exclude You can have only one **Drop** and one **Exclude** in the service insertion for a service chain.
Service Chain Name	Choose an already-configured service chain from the drop-down list, or click **+Create Service Chain** to create a new service chain. For more information, see Add a service chain.

Details	Provides details of the traffic flow redirect that you configured. If additional details are configured but are not shown in the **Details** area, click the pencil icon (edit), then click **View Details** under the **Service Chain Name** entry.

3. When you have completed the configuration for this traffic flow redirect, click the check mark at the end of the row to accept the values that you entered.

   Repeat these steps to configure additional traffic flow redirects.

4. On the **Networks** tab, click **+ Add Row** and enter the necessary information.

Field	Description
Source Network	The source and destination network fields are auto-populated based on the ACL entries in the selected or newly created ACL. You can override the system auto-populated source and/or destination network. If you want to override the system auto-populated source and/or destination network, choose an already-configured source and/or destination network from the drop-down list, or click **+ Create Network** to create a new network. For more information, see Working with networks.  The source and destination network cannot be the same for the redirect to service chain use case.
Destination Network	Specify the destination network.
Source Switch(Interfaces)	Choose the source switch interfaces, if necessary.
Destination Switch(Interfaces)	Choose the destination switch interfaces, if necessary.

5. When you have completed the configuration for this network, click the check mark at the end of the row to accept the values that you entered.
6. Repeat these steps to configure additional networks.
7. Click **Save** after you have entered the necessary information to add a service insertion with this use case.

   You are returned to the **Fabric Overview** page, with **Services > Service Insertions** selected.

8. In the list of configured service insertions that is displayed, perform any of these actions:
   - Click the down arrow at the upper right corner of the area for a service insertion to see additional information on that service insertion.
   - Choose a service insertion and click **Actions > Edit** to edit that service insertion configuration.
   - Choose a service insertion and click **Actions > Attach** to attach that service insertion configuration.
   - Choose a service insertion and click **Actions > Detach** to detach that service insertion configuration.

- Choose a service insertion and click **Actions > Delete** to delete that service insertion.
- Click **View Details** in the **Statistics/Probe Details** area to view the statistics for that service insertion. For more information, see View service insertion stats details.

Service as Default Gateway

This service insertion use case configures intra-VRF or intra-tenant redirection with the service as the default gateway.

1. Enter the necessary information to configure a service insertion with this use case.

Field	Description
Outside VRF Name	Choose an existing outside VRF to associate with this service insertion use case, or click **+Create VRF** to create a new VRF. For more information, see Working with VRFs.
Detach/Attach	Toggle the switch to detach or attach.
Service Function	The service function pull-down list is pre-populated with service functions that have an **N Arms** connectivity mode and have a matched outside VRF. Choose an existing service function to associate with this service insertion use case, or click **+Create Service Function** to create a new service function. For more information, see Add a service function.

2. In the **Inside L2 Network** area, click **+ Add L2 Network**, then choose an existing Layer 2 network to associate with this service insertion use case, or click **+Create Network** to create a new Layer 2 network. For more information, see Working with networks.
3. When you have completed the configuration for the inside Layer 2 network, click the check mark at the end of the row to accept the values that you entered.

   Repeat these steps to configure additional inside Layer 2 networks, if necessary.
4. Click **Save** after you have entered the necessary information to add a service insertion with this use case.

   You are returned to the **L4-L7 Services** page, with **Insertions** selected.
5. In the list of configured service insertions that is displayed, perform any of these actions:
   - Click the down arrow at the upper right corner of the area for a service insertion to see additional information on that service insertion.
   - Choose a service insertion and click **Actions > Edit** to edit that service insertion configuration.
   - Choose a service insertion and click **Actions > Attach** to attach that service insertion configuration.
   - Choose a service insertion and click **Actions > Detach** to detach that service insertion configuration.
   - Choose a service insertion and click **Actions > Delete** to delete that service insertion.
   - Click **View Details** in the **Statistics/Probe Details** area to view the statistics for that service insertion. For more information, see View service insertion stats details.

Perimeter Service

This service insertion use case configures inter-VRF or inter-tenant service redirection.

1. Enter the necessary information to configure a service insertion with this use case.

Field	Description
Outside VRF Name	Choose an existing outside VRF to associate with this service insertion use case, or click **+Create VRF** to create a new VRF. For more information, see Working with VRFs.
Inside VRF Name	Choose an existing inside VRF to associate with this service insertion use case, or click **+Create VRF** to create a new VRF. For more information, see Working with VRFs.
Detach/Attach	Toggle the switch to detach or attach.
Service Function	The service function pull-list is pre-populated with service functions that have a matched outside and inside VRF. Choose an existing service function to associate with this service insertion use case, or click **+Create Service Function** to create a new service function. For more information, see Add a service function.

2. Click **Save** after you have entered the necessary information to add a service insertion with this use case.

   You are returned to the **L4-L7 Services** page, with **Insertions** selected.

3. In the list of configured service insertions that is displayed, perform any of these actions:
   - Click the down arrow at the upper right corner of the area for a service insertion to see additional information on that service insertion.
   - Choose a service insertion and click **Actions > Edit** to edit that service insertion configuration.
   - Choose a service insertion and click **Actions > Attach** to attach that service insertion configuration.
   - Choose a service insertion and click **Actions > Detach** to detach that service insertion configuration.
   - Choose a service insertion and click **Actions > Delete** to delete that service insertion.
   - Click **View Details** in the **Statistics/Probe Details** area to view the statistics for that service insertion. For more information, see View service insertion stats details.

Legacy Service Redirection

This service insertion use case configures selective traffic redirection with a legacy PBR workflow. Health monitoring is not configured with this use case.

1. Enter the necessary information to configure a service insertion with this use case:

Field	Description

VRF Name	Choose a VRF to associate with this service insertion use case, or click **+Create VRF** to create a new VRF. For more information, see Working with VRFs.
Detach/Attach	Toggle the switch to detach or attach.
Direction	Choose the direction for this service insertion use case. Options are: • Bidirectional • Forward • Reverse
Enable Statistics	Check the check box to enable statistics for this service insertion use case.
Matched ACL Name	Choose an already-configured access control list (ACL) from the drop-down list, or click **+Create ACL** to create a new access control list. For more information, see ACL templates.
Service Function	The **Service Function** drop-down list is pre-populated with service functions that have a matched VRF and do not have a probe defined. Choose an existing service function to associate with this service insertion use case, or click **+Create Service Function** to create a new service function. For more information, see Add a service function.
Single Service Redirect Template	Choose the **service_pbr service redirect** template. For more information, see Service insertion template.

2. Click the **General Parameters** tab and enter the necessary information.

Field	Description
Route Map Action	Choose an action from the drop-down list. The options are **permit** or **deny**. If you select **permit**, the matched traffic is redirected based on the next-hop option and the defined policy. If you select **deny**, the traffic is routed based on the routing table rules.
Next Hop Option	Specify an option for the next-hop. The options are **none**, **drop-on-fail**, and **drop**. If you select **none**, the matched traffic is redirected based on the defined PBR rules. If you select **drop-on-fail**, the matched traffic is dropped if the specified next hop is not reachable. If you select **drop**, the matched traffic is dropped.

3. Click the **Advanced** tab and enter the necessary information.



All the values in the **Advanced** tab are automatically generated unless otherwise specified.

Field	Description
ACL Name	Specify a name for the generated access control list (ACL). If not specified, this is auto-generated.
ACL Name for reversed traffic	Specify a name for the ACL that is generated for reversed traffic. If not specified, this is auto-generated.

Route map match number	Specify a route map match number. A valid value ranges from 1 to 65535. If not specified, a route map match sequence number will be retrieved from the predefined resource pool. This number is associated with the name of the ACL.
Route map match number for reversed traffic	Specify a route map match number for reversed traffic. A valid value ranges from 1 to 65535. If not specified, a route map match sequence number will be retrieved from the predefined resource pool. This number is associated with the name of the ACL that has been generated for reversed traffic.

4. In the **Networks** area, click **+ Add Row** and enter the necessary information:

Field	Description
Source Network	Choose an already-configured source network from the drop-down list, or click **+Create Network** to create a new network. For more information, see Working with networks.
Destination Network	Choose an already-configured destination network from the drop-down list, or click **+Create Network** to create a new network. For more information, see Working with networks.
Source Switch(Interfaces)	Choose the source switch interfaces, if necessary.
Destination Switch(Interfaces)	Choose the destination switch interfaces, if necessary.

5. When you have completed the configuration for this network, click the check mark at the end of the row to accept the values that you entered.

   Repeat these steps to configure additional networks.

6. Click **Save** after you have entered the necessary information to add a service insertion with this use case.

   You are returned to the **Fabric Overview** page, with **Services > Service Insertions** selected.

7. In the list of configured service insertions that is displayed, perform any of these actions:
   - Click the down arrow at the upper right corner of the area for a service insertion to see additional information on that service insertion.
   - Choose a service insertion and click **Actions > Edit** to edit that service insertion configuration.
   - Choose a service insertion and click **Actions > Attach** to attach that service insertion configuration.
   - Choose a service insertion and click **Actions > Detach** to detach that service insertion configuration.
   - Choose a service insertion and click **Actions > Delete** to delete that service insertion.
   - Click **View Details** in the **Statistics/Probe Details** area to view the statistics for that service insertion. For more information, see View service insertion stats details.

Route Peering Service

This service insertion use case configures a service for route peering between the service function and the fabric.

1. Enter the necessary information to configure a service insertion with this use case.

Field	Description
First Arm VRF	Choose an existing first arm VRF to associate with this service insertion use case, or click **+Create VRF** to create a new VRF. For more information, see Working with VRFs.
Second Arm VRF	If you want a two-arm deployment mode, choose an existing second arm VRF to associate with this service insertion use case, or click **+Create VRF** to create a new VRF. For more information, see Working with VRFs. Leave this field empty if you want a one-arm deployment mode.
Detach/Attach	Toggle the switch to detach or attach.
Service Function	The service function pull-list is pre-populated with service functions that have a matched outside and inside VRF. Choose an existing service function to associate with this service insertion use case, or click **+Create Service Function** to create a new service function. For more information, see Add a service function.

2. Click **Save** after you have entered the necessary information to add a service insertion with this use case.

   You are returned to the **L4-L7 Services** page, with **Insertions** selected.

3. In the list of configured service insertions that is displayed, perform any of these actions:
   - Click the down arrow at the upper right corner of the area for a service insertion to see additional information on that service insertion.
   - Choose a service insertion and click **Actions > Edit** to edit that service insertion configuration.
   - Choose a service insertion and click **Actions > Attach** to attach that service insertion configuration.
   - Choose a service insertion and click **Actions > Detach** to detach that service insertion configuration.
   - Choose a service insertion and click **Actions > Delete** to delete that service insertion.
   - Click **View Details** in the **Statistics/Probe Details** area to view the statistics for that service insertion. For more information, see View service insertion stats details.

View service insertion stats details

After you have completed the configurations for a service insertion, you can view the statistics by clicking **View Details** in the **Statistics/Probe Details** area for that service insertion.

1. Click in the **Select Date** area to change the date range for the statistics.
2. Click in the **Switch** area to change the switch that you will use for the statistics.

3. Click **Clear Stats** to clear the statistics.

Navigate to service functions

You use service functions to specify the deployment type, network parameters, peering protocol, and service IP address for your Layer 4 to Layer 7 services.

1. Navigate to **L4-L7 Services** for your VXLAN EVPN fabric.
   a. Click **Manage > Fabrics**.
   b. Click the VXLAN EVPN fabric where you want to configure service insertions.
   c. Click **Segmentation and security**.
   d. Click **L4-7 services**.
2. In the **L4-7 services** page, click **Functions**.

   The **Functions** page appears. You can perform either of these actions next:

   - View service function information
   - Add a service function

View service function information

1. Navigate to service functions.
2. Review the information provided on the **Functions** page.

   The **Functions** page shows information on already-configured service functions.

3. Perform any of the following actions on the **Functions** page.
   - Click **Create function** to create a new function. See Add a service function for more information.
   - Use the **Actions** drop-down to work with existing functions.

     This table describes the action items that are available in the **Actions** drop-down list.

     Functions Actions and Description

Action Item	Description
Edit	Allows you to view or edit the selected security function parameters. 1. To edit the security function information, check the check box next to the security function name that you want to edit and choose **Edit**. 2. On the **Edit security function** page, edit the required values and click **Save** to apply the changes or click **Close** to discard the changes.

Action Item	Description
Delete	Allows you to delete a selected security function. You can select multiple security function entries and delete them at the same time. 1. To delete a security function, check the check box next to the security function that you want to delete and choose **Delete**. A warning message appears asking whether you want to delete the service insertions. 2. Click **Confirm** to delete or click **Cancel** to retain the security function. A message appears that the selected service insertions are deleted successfully.

Add a service function

To add a service function:

1. Navigate to service functions.
2. Click **Create function**.

   The **Add Service Function** page displays.

3. Enter the necessary information to add a service function.

Field	Description
Type	Choose from these types of service clusters: - Firewall - Load Balancer - Virtual Networking Function - Other
Service Function Name	Enter a name for the service cluster. The name can have alphanumeric, underscore, or dash characters.
Connectivity Mode	Choose the connectivity mode: - One Arm - Two Arm - N Arms

Service VRF	Displayed in these situations: • **Type**—Firewall, Load Balancer, Virtual Networking Function, and Other • **Connectivity Mode**—One Arm Choose an existing VRF to associate with this service function, or click **+Create VRF** to create a new VRF. See Working with VRFs for more information.
First Arm VRF	Displays in these situations: • **Type**—Load Balancer, Virtual Networking Function • **Connectivity Mode**—Two Arm, N Arms Choose an existing VRF to associate with this service function, or click **+Create VRF** to create a new VRF. See Working with VRFs for more information.
Second Arm VRF	Displays in these situations: • **Type**—Load Balancer, Virtual Networking Function • **Connectivity Mode**—Two Arm Choose an existing VRF to associate with this service function, or click **+Create VRF** to create a new VRF. See Working with VRFs for more information.
Outside VRF	Displays in these situations: • **Type**—Firewall • **Connectivity Mode**—Two Arm, N Arms Choose an existing VRF to associate with this service function, or click **+Create VRF** to create a new VRF. See Working with VRFs for more information.
Inside VRF	Displays in these situations: • **Type**—Firewall • **Connectivity Mode**—Two Arm Choose an existing VRF to associate with this service function, or click **+Create VRF** to create a new VRF. See Working with VRFs for more information. • If you select the same VRF for both the **Outside VRF** and the **Inside VRF**, then an intra-tenant firewall is configured. • If you select different VRFs for the **Outside VRF** and the **Inside VRF**, then an inter-tenant firewall is configured.

4. Click **+ Add Service Cluster Logical Connectivity**.

   The **Add Service Cluster Logical Connectivity** page appears.

5. Enter the necessary information to add service cluster logical connectivity.

Field	Description
Service Cluster Name	Select an already-configured service cluster, or click **Add Service Cluster** to create a new one. See Add a service cluster for more information.
IPv4 and/or IPv6	Choose from these options: • IPv4 • IPv6 • IPv4 and IPv6

   These fields vary, depending on the connectivity mode that you chose:

6. If you chose **One Arm** in the **Connectivity Mode** field, these fields appear:

Field	Description
Service IPv4	Enter the IPv4 and/or IPv6 service addresses.
Service IPv6	Enter the IPv6 service address.
Service Network	Choose an existing service network to associate with this service function, or click **+Add Service Network** to create a new service network. See Working with networks for more information.
Probe	Probe does not apply to an inter-tenant firewall. Choose an existing probe to associate with this service function, or click **+Add Probe** to create a new probe. See Probe templates for more information.
Peering Option	Choose the appropriate peering option to associate with this service function. Note that some peering options might not be available, depending on the previous configurations that you made. • Static • eBGP • Connected—Choose this peering option if you already have your routing in place. Intra-tenant firewalls only have **Connected** as the peering option.

Peering Configuration	• If you are adding a service function in a fabric (not a Multi-Site Domain), then choose the appropriate peering configuration to associate with this service function, or click **+Add Peering Configuration** to create a new peering configuration. For more information, see Service function route templates.
	• If you are adding a service function in a Multi-Site Domain, then make the following configurations:
	  ○ In the **Switch Name** field, determine how you want to peer the service node to the MSD. Choose the appropriate switch from the drop-down list in the **Switch Name** field.
	  ▪ The service switch, which the service node is attached to, is indicated with an asterisk.
	  ▪ If you see a single-switch option in the **Switch Name** field (for example, **leaf1-v**), that means that this is a single, standalone switch.
	  ▪ If you see a dual-switch option in this field (for example, bgw1-v ~ bgw2-v), that means that this is a vPC pair.
	  ▪ If you chose **eBGP** in the **Peering Option** field above, then choose the remote switch used with remote peering. Only the leaf, border, or border gateway switches that are not local to the service cluster are provided as options for this field. See Remote peering for more information.
	  ○ In the **Peering Configuration** field, choose the appropriate peering configuration to associate with this service function, or click **+Add Peering Configuration** to create a new peering configuration. For more information, see Service function route templates.

7. If you chose **Two Arm** in the **Connectivity Mode** field, these fields appear:



Inside and **Outside** appear as qualifiers for the service networks if you chose Firewall as the service function type, whereas **First-Arm** and **Second-Arm** appear as qualifiers for the service networks if you chose Load Balancer or Virtual Networking Function as the service function type.

Field	Description
Outside/First-Arm Service IPv4	Enter the IPv4 and/or IPv6 outside service addresses.
Outside/First-Arm Service IPv6	Enter the IPv6 service address.
Outside/First-Arm Service Network	Choose an existing outside service network to associate with this service function, or click **+Add Service Network** to create a new outside service network.
Probe	Probe does not apply to an inter-tenant firewall. Choose an existing probe to associate with this service function, or click **+Add Probe** to create a new probe. For more information, see Probe templates.

Peering Option	Choose the appropriate peering option to associate with this service function. Note that some peering options might not be available, depending on the previous configurations that you made. - Static - eBGP - Connected—Choose this peering option if you already have your routing in place. Intra-tenant firewalls have only **Connected** as the peering option.

Peering Configuration	- If you are adding a service function in a fabric (not a Multi-Site Domain), then choose the appropriate peering configuration to associate with this service function, or click **+Add Peering Configuration** to create a new peering configuration. For more information, see Service function route templates.
	- If you are adding a service function in a Multi-Site Domain, then make the following configurations:
	  - In the **Switch Name** field, determine how you want to peer the service node to the fabric. Choose the appropriate switch from the drop-down list in the **Switch Name** field.
	    - The service switch, which the service node is attached to, is indicated with an asterisk.
	    - If you see a single-switch option in the **Switch Name** field (for example, **leaf1-v**), that means that this is a single, standalone switch.
	    - If you see a dual-switch option in this field (for example, bgw1-v ~ bgw2-v), that means that this is a vPC pair.
	    - If you chose **eBGP** in the **Peering Option** field above, then choose the remote switch used with remote peering. Only the leaf, border, or border gateway switches that are not local to the service cluster are provided as options for this field. See Remote peering for more information.
	  - In the **Peering Configuration** field, choose the appropriate peering configuration to associate with this service function, or click **+Add Peering Configuration** to create a new peering configuration. For more information, see Service function route templates.
	    In the case of a two-arm inter-tenant deployment, two **Peering Configuration** options are displayed. You can only specify and update the switch names in the first VRF (left) side.

Inside/Second-Arm Service IPv4	Enter the IPv4 and/or IPv6 inside service addresses.
Inside/Second-Arm Service IPv6	Enter the IPv6 inside service address.

Inside/Second-Arm Service Network	Choose an existing inside service network to associate with this service function, or click **+Add Service Network** to create a new inside service network. For more information, see Working with networks.
Probe	Probe does not apply to an inter-tenant firewall. Choose an existing probe to associate with this service function, or click **+Add Probe** to create a new probe. For more information, see Probe templates.
Peering Option	Choose the appropriate peering option to associate with this service function. Note that some peering options might not be available, depending on the previous configurations that you made. - Static - eBGP - Connected: Select this peering option if you already have your routing in place. Intra-tenant firewall will only have **Connected** as the peering option.

Peering Configuration	- If you are adding a service function in a fabric (not a Multi-Site Domain) then choose the appropriate peering configuration to associate with this service function, or click **+Add Peering Configuration** to create a new peering configuration. For more information, see Service function route templates.
	- If you are adding a service function in a Multi-Site Domain, then make the following configurations:
	  - In the **Switch Name** field, determine how you want to peer the service node to the fabric. Choose the appropriate switch from the drop-down list in the **Switch Name** field.
	    - The service switch, which the service node is attached to, is indicated with an asterisk.
	    - If you see a single-switch option in the **Switch Name** field (for example, **leaf1-v**), that means that this is a single, standalone switch.
	    - If you see a dual-switch option in this field (for example, bgw1-v ~ bgw2-v), that means that this is a vPC pair.
	    - If you chose **eBGP** in the **Peering Option** field above, then choose the remote switch used with remote peering. Only the leaf, border, or border gateway switches that are not local to the service cluster are provided as options for this field. See Remote peering for more information.
	  - In the **Peering Configuration** field, choose the appropriate peering configuration to associate with this service function, or click **+Add Peering Configuration** to create a new peering configuration. For more information, see Service function route templates.
	    In the case of a two-arm inter-tenant deployment, two **Peering Configuration** options are displayed. You can only specify and update the switch names in the first VRF (left) side.

8. If you chose **N Arms** in the **Connectivity Mode** field, these fields appear:

Field	Description
Outside Service IPv4	Enter the IPv4 and/or IPv6 service addresses.
Service IPv6	Enter the IPv6 service address.
Outside Service Network	Choose an existing outside service network to associate with this service function, or click **+Add Service Network** to create a new service network. For more information, see Working with networks.
Probe	Probe does not apply to an inter-tenant firewall. Choose an existing probe to associate with this service function, or click **+Add Probe** to create a new probe. For more information, see Probe templates.
Peering Option	Choose the appropriate peering option to associate with this service function. Note that some peering options might not be available, depending on the previous configurations that you made. • Static • eBGP • Connected: Select this peering option if you already have your routing in place. Intra-tenant firewall will only have **Connected** as the peering option.

Peering Configuration	• If you are adding a service function in a fabric (not a Multi-Site Domain) then choose the appropriate peering configuration to associate with this service function, or click **+Add Peering Configuration** to create a new peering configuration. For more information, see Service function route templates.
	• If you are adding a service function in a Multi-Site Domain, then make the following configurations:
	  ○ In the **Switch Name** field, determine how you want to peer the service node to the fabric. Choose the appropriate switch from the drop-down list in the **Switch Name** field.
	  ▪ The service switch, which the service node is attached to, is indicated with an asterisk.
	  ▪ If you see a single-switch option in the **Switch Name** field (for example, **leaf1-v**), that means that this is a single, standalone switch.
	  ▪ If you see a dual-switch option in this field (for example, bgw1-v ~ bgw2-v), that means that this is a vPC pair.
	  ▪ If you chose **eBGP** in the **Peering Option** field above, then choose the remote switch used with remote peering. Only the leaf, border, or border gateway switches that are not local to the service cluster are provided as options for this field. See Remote peering for more information.
	  ○ In the **Peering Configuration** field, choose the appropriate peering configuration to associate with this service function, or click **+Add Peering Configuration** to create a new peering configuration. For more information, see Service function route templates.
	
	In the case of a two-arm inter-tenant deployment, two **Peering Configuration** options are displayed. You can only specify and update the switch names in the first VRF (left) side.

9. Click **Save** after you have entered the necessary information in the **Add Service Cluster Logical Connectivity** page.

   You are returned to the **Add Service Function** page.

10. Repeat the previous steps to add additional service cluster logical connectivity entries, or click **Save** on the **Add Service Function** page to save the service function information.

    You are returned to the **Fabric Overview** page, with **Services > Service Functions** selected.

In the list of configured service functions that displays, perform any of these actions:

- Click the down arrow at the upper right corner of the area for a service function to see additional information on that function.
- Choose a service function and click **Actions > Edit** to edit that service function configuration. If the updated service function is involved in an enabled or attached service insertion, re-attach that service insertion after the service function update to ensure that the latest changes are reflected

in the pending configurations.

- Choose a service function and click **Actions > Delete** to delete that service function cluster.

Navigate to service clusters

Service clusters are used to onboard a service device, such as a firewall or load balancer. You specify the service node name, type, and interface attachment details when you add a service cluster.

1. Navigate to **L4-L7 Services** for your VXLAN EVPN fabric.
   a. Click **Manage > Fabrics**.
   b. Click the VXLAN EVPN fabric where you want to configure service insertions.
   c. Click **Segmentation and security**.
   d. Click **L4-7 services**.
2. In the **L4-7 services** page, click **Clusters**.

   The **Clusters** page appears. You can perform either of these actions next:

   - View service cluster information
   - Add a service cluster

View service cluster information

1. Navigate to service clusters.
2. Review the information provided on the **Clusters** page.

   The **Clusters** page shows information on already-configured service clusters.

3. Perform any of the following actions on the **Clusters** page.
   - Click **Create cluster** to create a new cluster. See Add a service cluster for more information.
   - Use the **Actions** drop-down to work with existing clusters.

     This table describes the action items that are available in the **Actions** drop-down list.

     Clusters Actions and Description

Action Item	Description
Edit	Allows you to view or edit the selected security cluster parameters. 1. To edit the security cluster information, check the check box next to the security cluster name that you want to edit and choose **Edit**. 2. On the **Edit security cluster** page, edit the required values and click **Save** to apply the changes or click **Close** to discard the changes.

Action Item	Description
Delete	Allows you to delete a selected security cluster. You can select multiple security cluster entries and delete them at the same time. 1. To delete a security cluster, check the check box next to the security cluster that you want to delete and choose **Delete**. A warning message appears asking whether you want to delete the service insertions. 2. Click **Confirm** to delete or click **Cancel** to retain the security cluster. A message appears that the selected service insertions are deleted successfully.

Add a service cluster

A service cluster is a logical entity that has a single MAC IP address assigned to it, regardless of the number of service nodes that you have as part of that service cluster.

For example, when you create a service cluster with these procedures, if you choose **Standalone** in the **Node Redundancy** field, where you are adding a single node to the service cluster, then that service cluster, with that single node, has one MAC IP address. Similarly, if you choose **Active/Standby Cluster** in the **Node Redundancy** field, where you are adding two nodes to the service cluster, then that service cluster also has one MAC IP address, even though two nodes are part of that service cluster.

To add a service cluster:

1. Navigate to service clusters.
2. Click **Create cluster**.

   The **Add Service Cluster** page displays.

3. Enter the necessary information to add a service cluster.

Field	Description
Type	Choose from these types of service clusters: · **Firewall** · **Load Balancer** · **Virtual Networking Function** · **Other**
Service Cluster Name	Enter a name for the service cluster. The name can have alphanumeric, underscore, or dash characters.

Node Redundancy	Choose the node redundancy: • **Standalone**—Applicable if you are adding a single service node in the next step. • **Active/Standby Cluster**—Applicable if you are adding two service nodes in the next step. • **Active/Active Cluster**—Applicable if you are adding more than two service nodes in the next step.
Form Factor	Select **Physical** or **Virtual**.

4. Click **+ Add Service Node**.

   The **Add Service Node** page appears.

5. Enter a name for the service node in the **Service Node Name** field.
6. Click **+ Add Service Node Physical Connectivity**.

   The **Add Service Node Physical Connectivity** page appears.

7. Enter the necessary information in the **Add Service Node Connectivity** page.

Field	Description
Service Node Name	Automatically populated with the service node name that you entered in the previous step.
Service Node Interface	Enter the service node interface. The service node interface is used for visualization.

Service Node Interface Usage	Choose the service node interface usage. The displayed options vary depending on the service cluster type that you chose earlier in this procedure:
	• Firewall:
	  ◦ Outside
	  ◦ Inside
	  ◦ Inside-Outside—You can use this link for both inside and outside.
	• Load Balancer, Virtual Networking Function, or Other:
	  ◦ First Arm
	  ◦ Second Arm
	  ◦ First-Second Arm—You can use this link for both first arm and second arm.

Attached Fabric/Switch	Choose a fabric, switch, or a switch pair from the list. Beginning with release 4.1.1, you can attach service nodes that are physically attached to different member fabrics in a Multi-Site Domain, but they can logically be grouped together in a single service cluster.

Switch Interface	Choose the interface from the list. • If you selected a vPC pair in the **Attached Switch** list, the vPC channel displays in the **Switch Interface** list. • Otherwise, the port-channel and interfaces with trunk mode are shown in the **Switch Interface** list.
Link Template	Choose the *service_link_trunk*, *service_link_port_channel_trunk*, or the *service_link_vpc* template from the drop-down list based on the specified attached switch interface type. For more information on template fields, see Service node link templates.

8. Click **Save** after you have entered the necessary information on the **Add Service Node Physical Connectivity** page.

   If you click **Save**, you are returned to the **Add Service Node** page.

9. Repeat the previous steps to add another service node interface, or click **Save** on the **Add Service Node** page to save the service node information.

   You are returned to the **Add Service Cluster** page.

10. Repeat the previous steps to add another service node, or click **Save** on the **Add Service Cluster** page to save the service cluster information.

    If you chose **Standalone** in the **Node Redundancy** field, the **+ Add Service Node** option is grayed out and not selectable.

    If you click **Save**, you are returned to the **Fabric Overview** page, with **Services > Service Clusters** selected.

In the list of configured service clusters that is displayed, perform any of these actions:

- Click the down arrow at the upper right corner of the area for a service cluster to see additional information on that cluster.
- Choose a service cluster and click **Actions > Edit** to edit that service cluster configuration.
- Choose a service cluster and click **Actions > Delete** to delete that service cluster.

Navigate to service chains

You use service chains to group and order all of the individual components to insert Layer 4-Layer 7 (L4-L7) service devices in a data center fabric.

1. Navigate to **L4-L7 Services** for your VXLAN EVPN fabric.
   a. Click **Manage > Fabrics**.
   b. Click the VXLAN EVPN fabric where you want to configure service insertions.
   c. Click **Segmentation and security**.
   d. Click **L4-7 services**.
2. In the **L4-7 services** page, click **Chains**.

The **Chains** page appears. You can perform either of these actions next:

- View service chain information
- Add a service chain

View service chain information

1. Navigate to service chains.
2. Review the information provided on the **Chains** page.

   The **Chains** page shows information on already-configured service chains.

3. Perform any of the following actions on the **Chains** page.
   - Click **Create chain** to create a new chain. See Add a service chain for more information.
   - Use the **Actions** drop-down to work with existing chains.

     This table describes the action items that are available in the **Actions** drop-down list.

     Chains Actions and Description

Action Item	Description
Edit	Allows you to view or edit the selected security chain parameters. 1. To edit the security chain information, check the check box next to the security chain name that you want to edit and choose **Edit**. 2. On the **Edit security chain** page, edit the required values and click **Save** to apply the changes or click **Close** to discard the changes.
Delete	Allows you to delete a selected security chain. You can select multiple security chain entries and delete them at the same time. 1. To delete a security chain, check the check box next to the security chain that you want to delete and choose **Delete**. A warning message appears asking whether you want to delete the service insertions. 2. Click **Confirm** to delete or click **Cancel** to retain the security chain. A message appears that the selected service insertions are deleted successfully.

Add a service chain

Add a service chain to configure how traffic is redirected.

To add a service chain:

1. Navigate to service chains.

2. Click **Create chain**.

   The **Add Service Chain** page displays.

3. Enter a name for the service chain in the **Service Chain Name** field.
4. Click **+ Add Service Chain Entries**.
5. Enter the necessary information for the service chain entries.

Field	Description
Sequence Number	Enter the sequence number. The lower the number in the sequence, the higher the priority. For example, if you have two service chain entries configured: • Firewall, with a sequence number of 10 • Load balancer, with a sequence number of 20 Then the firewall, with a sequence number of 10, will be higher priority and will be trigger first in the sequence, followed by the load balancer with a sequence number of 20.
Service Cluster Type	Choose from the following types of service clusters: • Firewall • Load Balancer • Virtual Networking Function • Other
VRF	Choose an existing VRF to associate with this service chain, or click **+ Create VRF** to create a new VRF. For more information, see Working with VRFs. If you are configuring ePBR in a member fabric in a Multi-Site Domain, we recommend that you use a different service VRF for each type of service node, and that the service VRF is different from the tenant VRF.
Service Function	Choose an existing service function to associate with this service chain, or click **+ Add Service Function** to add a new service function. For more information, see Add a service function.
Probe Fail Action	Choose the appropriate probe fail action. Options are: • Forward • Drop • Bypass • None

6. When you have completed the configuration for this service chain entry, click the check mark at

the end of the row to accept the values that you entered.

Repeat these steps to configure additional service chain entries.

7. Click the down arrow next to **Service Chain Template** to expand that area, then make the necessary configurations in the **Service Chain Template** area.

   For more information, see Service chain templates.

8. Click **Save** after you have entered the necessary information on the **Add Service Chain** page.

   You are returned to the **Fabric Overview** page, with **Services > Service Chains** selected.

In the list of configured service chains that is displayed, perform any of these actions:

- Choose a service chain and click **Actions > Edit** to edit that service chain configuration.
- Choose a service chain and click **Actions > Delete** to delete that service chain.

View audit history

To view the audit history of the switches and networks that are involved in the selected service insertion or service function, click the **Audit History** tab on the **Services** page. The **Audit Logs** table on the **Audit History** page displays information about all of the actions that have been performed, such as:

- Creation of service clusters, service function, service insertions, service chains, probes, routes, and ACLs
- Deletion of service clusters, service function, service insertions, service chains, probes, routes, and ACLs
- Update of service clusters, service function, service insertions, service chains, probes, routes, and ACLs
- Attachment and detachment of service insertions

Field	Description
User Name	Specifies the user name of service cluster.
User Role	Specifies the user role name by whom latest action performed.
Action Taken	Specifies the latest action performed.
Entity	Specifies the name of the entity, such as service cluster, service function, service chain, or service insertion name.
Status	Specifies the action status, such as success, invalidRequest, or processingError.
Time	Specifies the action time on that node.
More Info	Click **More Info** to view detailed information for a selected service cluster.

To delete older audit reports, click **Action > Purge Audit History**, then specify the maximum retained dates and confirm deletion. Note that only users with the admin role can delete audit log entries.

Templates

- ACL templates—Used when adding a service insertion, as part of the redirect to service chain and legacy service redirection use cases.
- Probe templates—Used in the **Add Service Cluster Logical Connectivity** page when adding a service function.
- Service function route templates—Used on the **Add Service Cluster Logical Connectivity** page when adding a service function.
- Service chain templates—Used when adding a service chain.
- Service node link templates—Used when adding a service cluster.
- Service insertion template—Used when adding a service insertion, as part of the legacy service redirection use case.

ACL templates

You can use the ACL template when adding a service chain for configuring L4-L7 services.

service_acl

The table describes the fields and descriptions for the IP ACL template.

Field	Description
Sequence Number	Enter the sequence number for the ACL. Valid range: 1 - 4294967295.
Protocol	Specify the protocol to be used for the ACL. Options are: • icmp • ip • tcp • udp
Source IP	Enter a source IP address for the ACL. This entry can be an IPv4 address, an IPv6 address, or any.
Destination IP	Enter a destination IP address for the ACL. This entry can be an IPv4 address, an IPv6 address, or any.
Source Port	Enter the source port number (for example, *any* or *443*). The value in this field is ignored if you selected **ip** or **icmp** in the **Protocol** field.
Destination Port	Enter the destination port number (for example, *any* or *443*). The value in this field is ignored if you selected **ip** or **icmp** in the **Protocol** field.

Probe templates

You can use the probe template when adding a service function.

service_endpoint

The table describes the fields and descriptions for the ePBR service endpoint template.

Field	Description
General Parameters	
Enable Probe	Check the check box to enable the probe of the (reversed) next hop address. The probe uses the fabric-wide loopback settings configured by the **Per VRF Per VTEP Loopback IPv4 Auto-Provisioning** and **Per VRF Per VTEP Loopback IPv6 Auto-Provisioning** fields. These features are supported for applicable VXLAN fabrics, including VXLAN eBGP fabrics and AI VXLAN eBGP fabrics. For more information, see Editing Data Center VXLAN EVPN Fabric Settings.
Protocol	Specify the protocol used for the probe. Options are: · **icmp** · **tcp** · **udp** · **http**
Port Number	Displayed for input only if the protocol is tcp or udp. Enter the port number for the probe. Valid ranges: 1 - 65535 (recommended range:1025-65534).
User Input for HTTP Probe	Displayed for input only if the protocol is http. Enter a user input text/filename for an HTTP probe (for example: http://192.168.50.254/index.html). Maximum size: 99.
Advanced	
Threshold	Enter the threshold value, in seconds. Valid range: 1 - 60.
Frequency	Enter the frequency value in seconds. Valid range: 1 - 604800.
Delay Down Change Notification	Enter the delay down change notification value, in seconds. Valid range: 1 - 180.
Delay Up Change Notification	Enter the delay up change notification value, in seconds. Valid range: 1 - 180.
Timeout	Enter the timeout value, in seconds. Valid range: 1 - 604800.

Service function route templates

These are the service function route templates.

- **service_static_route**
- **service_ebgp_route**

service_static_route

The table describes the fields and descriptions for the **service_static_route** template.

Field	Description
Static Routes	Enter the static routes in the **Static Routes** field. You can enter one static route per line.
Export Gateway IP	Click to export the gateway IP (the service node IP) address as the next-hop address.

service_ebgp_route

The table describes the fields and descriptions for the **service_ebgp_route** template.

Field	Description
General Parameters	
Service Node ASN	Specify the service node ASN, with these minimum and maximum values: • 1-4294967295 • 1-65535 [.0-65535]
Service Node IP Address	Specify the IPv4 address or address with netmask (for example, 1.2.3.4 or 1.2.3.1/24). An IPv4 or IPv6 address is mandatory.
Use Auto-Created Per VRF Per VTEP Loopback	Check the box to use the automatically created per-VRF per-VTEP loopback IP address. This option is applicable only when the **Per VRF Per VTEP Loopback IPv4 Auto-Provisioning** or **Per VRF Per VTEP Loopback IPv6 Auto-Provisioning** feature is enabled for the fabric. These features are supported for applicable VXLAN fabrics, including VXLAN eBGP fabrics and AI VXLAN eBGP fabrics.
Loopback IP	Specify the IPv4 address of the loopback on the switch. Loopback IPv4 or IPv6 address is mandatory.
vPC Peer's Loopback IP	Specify the IPv4 address of the peer switch's loopback. The switch with the smaller serial number will take this value.
Export Gateway IP	Click to export the gateway IP (the service node IP) address as the next-hop address.
Advanced	
Service Node IPv6 Address	Specify the IPv6 address of the neighbor.
Loopback IPv6	Specify the IPv6 address of the loopback on the switch.
vPC Peer's Loopback IPv6	Specify the IPv6 address of the peer switch's loopback.
Route-Map TAG	Specify the route-map tag that is associated with the interface IP.
IPv4 Inbound Route-Map	Specify the IPv4 inbound route map. No route map is used if this field is left blank.
IPv4 Outbound Route-Map	Specify the IPv4 outbound route map. If this field is left blank, the system uses EXTCON-RMAP-FILTER or EXTCON-RMAP-FILTER-ALLOW-HOST.
IPv6 Inbound Route-Map	Specify the IPv6 inbound route map. No route map is used if this field is left blank.

IPv6 Outbound Route-Map	Specify the IPv6 outbound route map. If this field is left blank, the system uses EXTCON-RMAP-FILTER-V6 or EXTCON-RMAP-FILTER-V6-ALLOW-HOST.
Interface Description	Enter a description for the interface.
Local ASN	Specify a local ASN to override the system ASN.
Advertise Host Routes	Choose this option to enable advertisement of /32 and /128 routes to the edge routers.
Enable eBGP Password	Choose this option to enable the eBGP password. Enabling this option automatically enables the following **Inherit eBGP Password from Fabric Settings** field.
Inherit eBGP Password from Fabric Settings	Choose this option to inherit the eBGP password from **Fabric Settings**. Enabling this option automatically disables the following **eBGP Password** and **eBGP Authentication Key Encryption Type** fields.
eBGP Password	Enabled if you did not enable the **Inherit eBGP Password from Fabric Settings** field. If enabled, enter the encrypted eBGP password hex string.
eBGP Authentication Key Encryption Type	Enabled if you did not enable the **Inherit eBGP Password from Fabric Settings** field. If enabled, enter the BGP key encryption type: • **3**: 3DES • **7**: Cisco
Enable Interface	Clear this option to disable the interface. By default, the interface is enabled.
vPC	
Peering via vPC Peer-Link	Check this box to configure per-VRF peering through the vPC peer-link. Normally, you might enable the **vPC advertise-pip** option at the fabric level. Use this **Peering via vPC Peer-Link** option if you don't want to have the vPC advertise-pip setting for all of the vPC pairs in the fabric. This option is also needed if you have a shared border deployment with Layer 4 to Layer 7 devices. The remaining fields in this tab become available only if you enable the **Peering via vPC Peer-Link** option.
Source IP Address/Netmask	Specify the source IP address and netmask. For example, 192.168.10.1/30.
Destination IP Address	Specify the destination IP address. For example, 192.168.10.2. The switch with the smaller serial number will take this value.
Source IPv6 Address/Prefix	Specify the source IPv6 address and netmask. For example, 2001:db9::1/120.

Destination IPv6 Address	Specify the destination IPv6 address. For example, 2001:db9::10. The switch with the smaller serial number will take this value.
VLAN for Peering Between vPC Peers	Enter a value for the VLAN peering between vPCs (minimum: 2, maximum: 4094). If no value is specified in this field, the VLAN ID is automatically assigned from the VLAN pool shown in the **vPC Peer Link VLAN Range** field on the **vPC** tab. For more information, see Editing Data Center VXLAN EVPN Fabric Settings.

Service chain templates

You can use the service chain template when adding a service chain.

service_epbr

The table describes the fields and descriptions for the **service_epbr** template.

Field	Description
Hashing Method	Choose the load balance method. Valid options are: • **src-ip**: Source IP address. • **dst-ip**: Destination IP address.
Hashing Bucket	Enter the buckets for traffic distribution, in powers of 2. Max: 256.

Service node link templates

These are the service node link templates:

- **service_link_trunk**
- **service_link_port_channel_trunk**
- **service_link_vpc**

service_link_trunk

The table describes the fields and descriptions for the **service_link_trunk** template.

Field	Description
General Parameters	
MTU	Specifies the MTU for the interface. By default, this is set to jumbo.
SPEED	Specifies the speed of the interface. By default, this is set to Auto. You can change it to different supported speeds as required.
Trunk Allowed VLANs	Specify **none**, **all**, or VLAN ranges. By default, **none** is specified.
Enable BPDU Guard	Specify an option from the drop-down list. The available options are true, false, or no. By default, no is specified.
Enable Port Type Fast	Check this option to enable spanning tree edge port behavior. By default, this is enabled.

Enable Interface	Clear the check box to disable the interface. By default, the interface is enabled.
Advanced	
Source Interface Description	Enter a description for the source interface.
Destination Interface Description	Enter a description for the destination interface.
Source Interface Freeform Config	Enter any addition CLI for the source interface.
Destination Interface Freeform Config	Enter any addition CLI for the destination interface.

service_link_port_channel_trunk

The table describes the fields and descriptions for the **service_link_port_channel_trunk** template.

Field	Description
Port Channel Mode	Select a port channel mode from the drop-down list. By default, active is specified.
Enable BPDU Guard	Specify an option from the drop-down list. The available options are true, false, or no.
MTU	Specifies the MTU for the interface. By default, this is set to jumbo.
Trunk Allowed VLANs	Specify **none**, **all**, or VLAN ranges. By default, **none** is specified.
Port Channel Description	Enter a description for the port channel.
Freeform Config	Specify the required freeform configuration CLIs.
Enable Port Type Fast	Check this option to enable spanning tree edge port behavior. By default, this is enabled.
Enable Port Channel	Check this option to enable the port channel. By default, this is enabled.

service_link_vpc

The **service_link_vpc** template has no specifiable parameters.

Service insertion template

You can use the **service_pbr** template when adding a service insertion.

service_pbr

The table describes the fields and descriptions for the **service_pbr** template.

Field	Description
General Parameters	

Protocol	Choose a protocol from the drop-down list. The options are icmp, ip, tcp, and udp.
Source Port	Specify a source port number. If ip or icmp was selected in the **Protocol** field above, then the value in this **Source Port** field is ignored.
Destination Port	Specify a destination port number. If ip or icmp was selected in the **Protocol** field above, then the value in this **Destination Port** field is ignored.
Advanced	
Route Map Action	Choose an action from the drop-down list. The options are **permit** or **deny**. If you choose **permit**, the matched traffic is redirected based on the next-hop option and the defined policy. If you choose **deny**, the traffic is routed based on the routing table rules.
Next Hop Option	Specify an option for the next-hop. The options are **none**, **drop-on-fail**, and **drop**.If you select **none**, the matched traffic is redirected based on the defined PBR rules. If you select **drop-on-fail**, the matched traffic is dropped if the specified next hop is not reachable. If you select **drop**, the matched traffic is dropped.
ACL Name	Specify a name for the generated access control list (ACL). If not specified, this is auto-generated.
ACL name for reversed traffic	Specify a name for the ACL that is generated for reversed traffic. If not specified, this is auto-generated.
Route map match number	Specify a route map match number. A valid value ranges from 1 to 65535. If not specified, a route map match sequence number will be retrieved from the predefined resource pool. This number is associated with the name of the ACL.
Route map match number for reversed traffic	Specify a route map match number for reversed traffic. A valid value ranges from 1 to 65535. If not specified, a route map match sequence number will be retrieved from the predefined resource pool. This number is associated with the name of the ACL that has been generated for reversed traffic.

You can also customize the L4-L7 templates based on specific requirements.

Working with tenants under Segmentation and security

1. Navigate to the main **Fabrics** page.

   Manage > Fabrics

2. Locate the VXLAN fabric where you want to work with tenants under **Segmentation and security**.
3. Single-click the appropriate VXLAN fabric.

   The **Summary** page for that VXLAN fabric appears with the **Overview** tab selected by default.

4. Click **Segmentation and security**.
5. On the **Segmentation and security** tab, click the **Tenants** subtab.
6. Review the information on the **Tenants** page.

View tenants information

This page shows tenant fabric associations.

- You can deploy individual tenants (including all pending logical objects for that tenant across all switches or fabrics) from this page.
- The default tenant is always present but not shown if there are no other tenant fabric associations.
- The default tenant might not be deployed from here as other VRF and network options exist for these deployments.

To view tenants information:

1. Review the information provided on the **Tenants** page.

   The table provides information on tenants in the fabric.

Field	Description
Name	Provides the name of the tenant.
ACI tenant name	For ACI fabrics. Displays the entry that is used to create the tenant on the ACI fabric.
Tenant prefix	For NX-OS fabrics. Displays the entry that is a unique identifier that is applied to the switch CLI configuration to distinguish tenant-specific policies for NX-OS VXLAN fabrics.
VLANs	For NX-OS fabrics. Displays the VLANs that can be used by the tenant.
Config status	Displays the configuration status for the tenant.

2. Click the table header to sort the entries in alphabetical order for the selected parameter.
3. Perform any of the listed actions on the **Tenants** page.

   The table describes the action items that are available in the **Actions** drop-down list.

Tenants actions and descriptions

Action Item	Description
Deploy	Allows you to deploy the tenant in the fabric. See Deploy tenants.
Import tenant policies	Allows you to import the tenant policies. See Import tenant policies.

Deploying tenants

- Types of deployment
- Deployment dependencies
- Deploy tenants

Types of deployment

Before deploying a tenant, it's useful to understand the different types of deployment that are available in Nexus Dashboard as related to multi-tenancy.

- **Recalculate and deploy**:
  - Primarily used for inter-fabric connectivity and for updating the infra-tenant.
  - Also deploys all user tenant's objects in pending state.
- **VRF deploy**
- **Network deploy**: Not supported on VXLAN-ACI fabric groups.
- **Tenant deploy**: Described in these procedures.
  - All objects within a specific tenant are deployed.
  - You can select and deploy multiple tenants at once.

Deployment dependencies

- VRF deployment requires the VRF to be in the attached state.
- Network deployment requires both the network and the VRF to be in the attached state.
- Security group deployment requires both the security group and the VRF to be in the attached state.
- Security association deployment requires the security group to be in the attached state.
- The network selector of a security group requires the network attachment to be in the attached state.
- If a network in a user tenant references a VRF in the common tenant, the VRF in the common tenant must be deployed first.
- If a child network in a user tenant references a normal network in the common tenant, the common tenant must be deployed first.

Deploy tenants

1. In the **Tenants** page, choose one or more tenants to deploy into the fabric.

2. Click **Actions > Deploy**.

   The **Deploy configuration** page appears.

3. Verify the information in the **Deploy configuration** page.

   - For NX-OS fabrics, the entry in the **Pending config** column displays the number of lines that have changed as part of the preview.
   - For ACI deployments, the entry in the **Pending config** column displays the total number of objects in APIC that have been added, modified, or deleted.

   Click the entry in the **Pending config** column to bring up the **Pending config** page.

   - The **Pending config** tab on this page displays the pending configurations on the fabric.
   - The **Side-by-side comparison** tab on this page displays the running configuration and expected configuration in a side-by-side representation.

4. Click **Deploy all**.

Import tenant policies

1. In the **Tenants** page, choose a tenant that contains the policies that you want to import.
2. Click **Actions > Import tenant policies**.

   The **Import tenant policies from import** page appears.

3. Navigate through the import steps.
   - 1. Select fabric
   - 2. Select VRFs
   - 3. Select networks/BDs
   - 4. Map EPGs to security groups
   - 5. Map ACI contracts to ND
   - 6. Review security associations
   - 7. Summary

1. Select fabric

1. In the **Select fabric** step, choose the appropriate ACI fabrics to be imported into your Nexus Dashboard fabric group.
2. Click **Next**.

   You advance to the 2. Select VRFs step.

2. Select VRFs

The VRFs that you choose in this step influences the verification information that is presented later in this workflow. If you find issues with that verification information, you might have to return to this page and modify the choices that you made here.

1. In the **Select VRFs** step, choose the appropriate VRFs from the ACI fabric that will be imported into your Nexus Dashboard fabric group.

   If a VRF belongs to the common tenant, you will see the text common underneath the VRF name.

2. Click **Next**.

   You advance to the 3. Select networks/BDs step.

3. Select networks/BDs

The networks and bridge domains that you choose in this step influences the verification information that is presented later in this workflow. If you find issues with that verification information, you might have to return to this page and modify the choices that you made here.

1. In the **Select networks/BDs** step, choose the appropriate networks and bridge domains from the ACI fabric that will be imported into your Nexus Dashboard fabric group.
   - If you want to import the network or bridge domains and all EPGs that are associated with that network or bridge domain, click the box next that network or bridge domain.

     All EPGs that are associated with the network or bridge domain are automatically imported when you choose the upper-level network or bridge domain.

   - If you want to import only specific EPGs, click the arrow next to a bridge domain or network to show any associated children EPGs, then choose the specific EPGs that you want to import.
2. Click **Next**.

   You advance to the 4. Map EPGs to security groups step.

4. Map EPGs to security groups

The **4. Map EPGs to security groups** step in the process is a verification step; you cannot make changes on this page. However, if you see any issues with the information that is presented on this page, click **Back** to return to the 3. Select networks/BDs or 2. Select VRFs step, then correct the issue and move forward to this verification stage in the process again.

1. In the **Map EPGs to security groups** step, verify that the EPGs have been mapped to the intended ESGs (security groups) correctly.
2. Click **Next**.

   You advance to the 5. Map ACI contracts to ND step.

5. Map ACI contracts to ND

The **Map ACI contracts to ND** step in the process is a verification step; you cannot make changes on this page. However, if you see any issues with the information that is presented on this page, click **Back** to return to the 3. Select networks/BDs or 2. Select VRFs step, then correct the issue and move forward to this verification stage in the process again.

1. In the **Map ACI contracts to ND** step, verify that the ACI contracts will be mapped to the Nexus Dashboard correctly.

The contracts listed in this step will be uplifted from ACI and will be used to create contracts in Nexus Dashboard.

- Each ACI contract consists of the following pieces of information:
  - Source and destination (also known as consumer and provider) information.
  - Filter information, including vzSubject information, which is a component of a contract that groups together one or more filters defining the types of traffic allowed or denied between EPGs.

For more information on ACI contracts, see Cisco ACI Contract Guide White Paper.

- When the ACI contracts are mapped to the Nexus Dashboard, the process essentially performs a one-to-one mapping of the vzSubject information from the ACI contract to a Nexus Dashboard contract. In addition, filters within the ACI contract become protocol definitions within the Nexus Dashboard contract.

  For more information on Nexus Dashboard contracts, see Working with security contracts.

2. Click **Next**.

   You advance to the 6. Review security associations step.

6. Review security associations

In the **Review security associations** step, verify that the source and destination pairs are associated with the uplifted contracts correctly.

- If any information on this page is incorrect, click **Back** to repeat any procedures that were not configured correctly.
- Click **Next** if all of the information on this page is correct.

  You advance to the 7. Summary step.

7. Summary

1. In the **Summary** step, verify that all of the information from the **Import tenant policies from import** steps are configured correctly.
   - If any information on this page is incorrect, click **Back** to repeat any procedures that were not configured correctly.
   - Click **Submit** if all of the information on this page is correct and you are ready to import the ACI tenant policies to your Nexus Dashboard.

     A progress screen appears.

2. When you see the message Successfully imported selected policies, click **Done**.

   You are returned to the **Tenants** tab under **Segmentation and security**.

   - Click **VRFs** to see the new Nexus Dashboard VRFs that were created from the 2. Select VRFs step.
   - Click **Networks** to see the new Nexus Dashboard networks that were created from the 3.

Select networks/BDs step.

- Click **Security groups** to see the new Nexus Dashboard security groups that were created from the 4. Map EPGs to security groups step.
- Click **Security contracts**, **Security associations**, and **Protocol definitions** to see the new Nexus Dashboard security components that were created from the 5. Map ACI contracts to ND step.

Copyright

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: https://www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2017-2026 Cisco Systems, Inc. All rights reserved.

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706

USA
https://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883