

System Configuration

- System Configuration Settings, on page 1
- System Alias and Banner, on page 1


System Configuration Settings

There is a number of global system settings that are available under **Admin** > **System Configuration**, which you can configure for your Multi-Site Orchestrator as described in the following sections.

System Alias and Banner

This section describes how to configure an alias for your Nexus Dashboard Orchestrator as well as enable a custom GUI-wide banner to be displayed at the top of your screen, as shown in the following figure.

Figure 1: System Banner Display

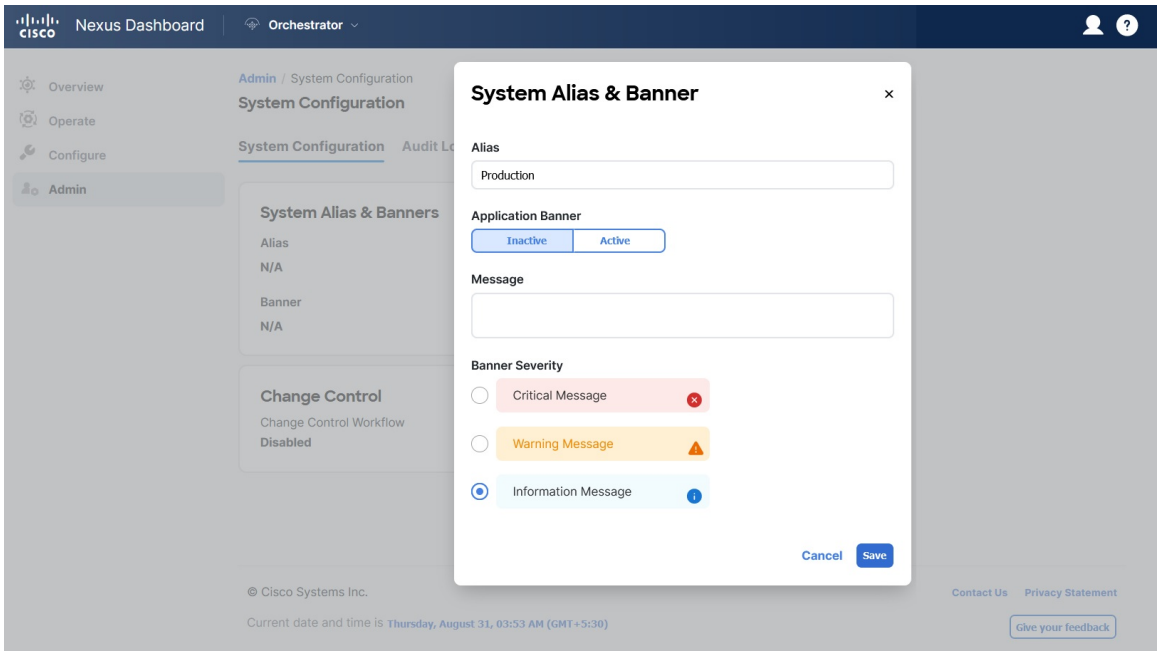

Procedure

Step 1 Log in to your Orchestrator.

Step 2 From the left navigation pane, select **Admin** > **System Configuration**.

Step 3 Click the **Edit** icon to the right of the **System Alias & Banners** area.

This opens the **System Alias & Banners** settings window.

Step 4 In the **Alias** field, specify the system alias.

Step 5 Choose whether you want to enable the GUI banner.

Step 6 If you enable the banner, you must provide the message that will be displayed on it.

Step 7 If you enable the banner, you must choose the severity, or color, for the banner.

Step 8 Click **Save** to save the changes.