

# Hardware Installation Guide for Cisco 8010 Series Large and Medium Density Fixed Routers

**First Published:** 2025-03-30

**Last Modified:** 2025-12-17

**Americas Headquarters**
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED “AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: https://www.cisco.com/c/en/us/about/legal/trademarks.html. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2025 Cisco Systems, Inc. All rights reserved.



# CONTENTS


CHAPTER 1 **Safety Warnings** 1

- Standard warning statements 1
- Safety guidelines for personal safety and equipment protection 3
- Safety Precautions for Module Installation and Removal 4
- Safety with electricity 5
- Cautions and regulatory compliance statements for NEBS 7
- Power supply considerations 9
  - Power Connection Guidelines 9
    - Guidelines for DC-Powered Systems 9
    - Guidelines for AC-Powered Systems 9
    - Prevent Power Loss 10
- Preventing ESD damage 10

CHAPTER 2 **Cisco 8010 Large and Medium Density Routers Overview** 11

- Hardware Features of Cisco 8000 Series Large and Medium Density Routers 12
- Network Interfaces 15
- Interface Naming 17
- Network Timing Interfaces 19
  - Usage guidelines 19
  - Restrictions 19
  - Cisco 8010 Timing Interfaces Card (8000-TIC) 19
  - Cisco 8010 Timing Interfaces Card with GNSS (8000-TIC-GNSS) 22
    - Timing Interfaces Card with GNSS Module RF Input Specifications 24
    - Primary Reference Time Clock 25
    - Usage Guidelines 26
- External Alarm Inputs 27

USB console 27
Restrictions 27
RS232 Console 27
Online Insertion and Removal 28
Supported Transceiver Modules 28

CHAPTER 3 **Prepare for Installation** 29
General Precautions 30
Compliance and Safety Information 30
Laser Safety 31
Energy Hazard 32
Preventing Electrostatic Discharge Damage 32
Cautions and regulatory compliance statements for NEBS 33
Power supply considerations 34
Power Connection Guidelines 34
Guidelines for DC-Powered Systems 35
Guidelines for AC-Powered Systems 35
Prevent Power Loss 35
Site Planning Checklist 36
Environmental Requirements 36
Temperature 37
Dust and Particles 38
Air Quality 38
Corrosion 39
Airflow Guidelines 40
Site Power Guidelines 42
Electrical Circuit Requirements 43
Site Cabling Guidelines 43
Asynchronous Terminal Connections 44
Interference Considerations 44
Electromagnetic Interference 44
Radio Frequency Interference 44
Lightning and AC Power Fault Interference 44
Tools and Equipment 45

Prepare Your Location 45
Prepare Yourself 47
Prepare Rack for Router Installation 47
Unpack the Cisco 8010 Large and Medium Density Routers 48

CHAPTER 4 **Install the Router** 55
Rack Mounting the Router 55
Rack Mounting Brackets 60
Mounting the Router on the Rack 62
Wall Mount 90
Ground the Router 93
Connect to an AC Power Source 97
Connect to a DC Power Source 101
Port Connection Guidelines 107
Console Port Connection 107
Connect a Data Terminal to the Console Port 109
Management Ethernet Port Connection 110
Connect to the Management Ethernet Port 111
Connecting Cables to Timing Interfaces Card 111
Inserting and Securing Timing Interfaces Card with GNSS Module 112
Install and Remove Transceiver Module 113
Safety Precautions for Module Installation and Removal 113
Install and Remove SFP Modules 114
Bale Clasp SFP Module 115
Connect Interface Ports 119
Connect a Fiber-Optic Port to the Network 119
Disconnect Optical Ports from the Network 119
Maintain Transceivers and Optical Cables 119
Installing the Air Filter (AF-CVR-C) 120
Install the air filter (AF-CVR-A, AF-CVR-B, AF-CVR-C) (front and side views) 122

CHAPTER 5 **Configure the Router** 133
Create the Initial Router Configuration 133
Verify Router Installation 134

CHAPTER 6 **Replace Chassis Components** 137

Replace Fan Modules 137

Replace Power Supply 139

Replace DC Power Supply Modules 140

Remove the DC Power Supply Module 140

Install the DC Power Supply Module 141

Replace AC Power Supply Modules 144

Remove the AC Power Supply Module 144

Install the AC Power Supply Module 145

CHAPTER 7 **Appendix** 149

LEDs 150

Router LEDs 150

GNSS LEDs 152

Fan Module LEDs 154

Fan Assembly LEDs 154

Power Supply LEDs 155

Power Status LEDs 156

SFP Port LEDs 157

Copper Port LEDs 157

Management Port LEDs 158

System Specifications 158

RJ45 Connectors 158

Transceiver and Cable Specifications 159

RJ45 ToD and 1PPS Port Pinouts 159


Console Port Pinouts 160

Alarm Port Pinouts 160

USB Port Console Pinouts 161

USB Port Memory Pinouts 162

Management Ethernet Port Pinouts 162

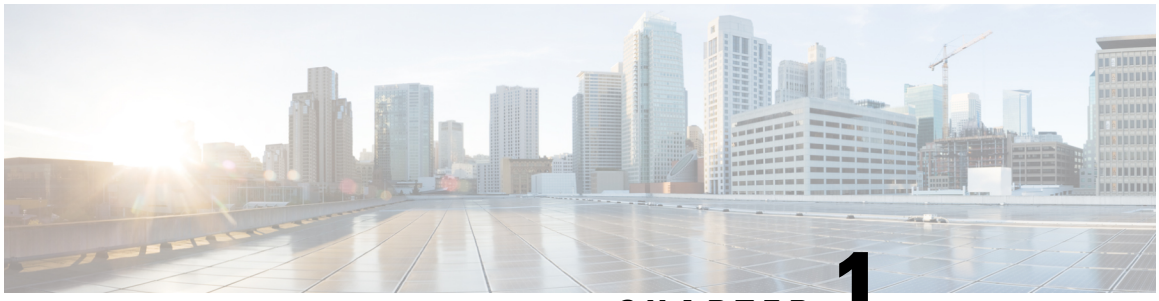

CHAPTER 1

# Safety Warnings

This handout lists the safety warnings necessary for handling this chassis. Before you install or service the chassis, review these safety warnings to avoid injuring yourself or damaging the equipment.

For a complete list of translated safety warnings, see the Regulatory Compliance and Safety Information — Cisco 8000 Series Routers.

The safety warnings are grouped under the following sections:


- Standard warning statements, on page 1
- Safety guidelines for personal safety and equipment protection, on page 3
- Safety Precautions for Module Installation and Removal, on page 4
- Safety with electricity, on page 5
- Cautions and regulatory compliance statements for NEBS, on page 7
- Power supply considerations, on page 9
- Preventing ESD damage, on page 10


## Standard warning statements



**Warning**

**Statement 1071—**Warning Definition

IMPORTANT SAFETY INSTRUCTIONS

Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Read the installation instructions before using, installing, or connecting the system to the power source. Use the statement number at the beginning of each warning statement to locate its translation in the translated safety warnings for this device.

SAVE THESE INSTRUCTIONS



**Note** **Statement 407—**Japanese Safety Instruction

You are strongly advised to read the safety instruction before using the product.

https://www.cisco.com/web/JP/techdoc/pldoc/pldoc.html

When installing the product, use the provided or designated connection cables/power cables/AC adapters.

〈製品使用における安全上の注意〉

**www.cisco.com/web/JP/techdoc/index.html**

接続ケーブル、電源コードセット、**AC**アダプタ、バッテリなどの部品は、必ず添付品または指定品をご使用ください。添付品・指定品以外をご使用になると故障や動作不良、火災の原因となります。また、電源コードセットは弊社が指定する製品以外の電気機器には使用できないためご注意ください。

**Warning** **Statement 1003—**DC Power Disconnection

To reduce risk of electric shock or personal injury, disconnect DC power before removing or replacing components or performing upgrades.

**Warning** **Statement 1006—**Chassis Warning for Rack-Mounting and Servicing

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

**Warning** **Statement 1017—**Restricted Area

This unit is intended for installation in restricted access areas. Only skilled, instructed, or qualified personnel can access a restricted access area.



**Warning** **Statement 1022—**Disconnect Device

To reduce the risk of electric shock and fire, a readily accessible disconnect device must be incorporated in the fixed wiring.



**Warning** **Statement 1024—**Ground Conductor

This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.



**Warning** **Statement 1049—**Rack Installation

To reduce the risk of bodily injury, mount the chassis on a rack that is permanently affixed to the building.



**Warning** **Statement 9001—**Product Disposal

Ultimate disposal of this product should be handled according to all national laws and regulations.

# Safety guidelines for personal safety and equipment protection

The following guidelines ensure your safety and protect the equipment. This list does not include all the potentially hazardous situations. Therefore, you must be alert.

- Before moving the system, always disconnect all power cords and interface cables.
- Never assume that power is disconnected from a circuit; always check.
- Before and after installation, keep the chassis area clean and dust free.
- Keep tools and assembly components away from walk areas where you or others can trip over them.
- Do not work alone if potentially hazardous conditions exist.
- Do not perform any action that creates a potential hazard to people or makes the equipment unsafe.
- Do not wear loose clothing that may get caught in the chassis.
- When working under conditions that may be hazardous to your eyes, wear safety glasses.

# Safety Precautions for Module Installation and Removal

Be sure to observe the following safety precautions when you work on the chassis.



**Warning** **Statement 1006—**Chassis Warning for Rack-Mounting and Servicing

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.



**Warning** **Statement 1008—**Class 1 Laser Product

This product is a Class 1 laser product.



**Note** **Statement 1089—**Instructed and Skilled Person Definitions

An instructed person is someone who has been instructed and trained by a skilled person and takes the necessary precautions when working with equipment.

A skilled person or qualified personnel is someone who has training or experience in the equipment technology and understands potential hazards when working with equipment.



**Warning** **Statement 1090—**Installation by a Skilled Person

Only a skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of a skilled person.

# Safety with electricity

**Warning** **Statement 1003—**DC Power Disconnection

To reduce risk of electric shock or personal injury, disconnect DC power before removing or replacing components or performing upgrades.

**Warning** **Statement 1022—**Disconnect Device

To reduce the risk of electric shock and fire, a readily accessible disconnect device must be incorporated in the fixed wiring.

**Warning** **Statement 1024—**Ground Conductor

This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.

**Warning** **Statement 1028—**More Than One Power Supply

This unit might have more than one power supply connection. To reduce risk of electric shock, remove all connections to de-energize the unit.



**Warning** **Statement 1046—**Installing or Replacing the Unit

To reduce risk of electric shock, when installing or replacing the unit, the ground connection must always be made first and disconnected last.

If your unit has modules, secure them with the provided screws.



**Warning** **Statement 2004—**Grounded Equipment

This equipment is intended to be grounded to comply with emission and immunity requirements. Ensure that the switch functional ground lug is connected to earth ground during normal use.



**Warning** **Statement 1073—**No User-Serviceable Parts

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



**Warning** **Statement 1074—**Comply with Local and National Electrical Codes

To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.

When working on equipment that is powered by electricity, follow these guidelines:

- Locate the room's emergency power-off switch. If an electrical accident occurs, you know where to quickly turn off the power.
- Before starting work on the system, turn off the DC main circuit breaker and disconnect the power terminal block cable.
- Disconnect all power when:
  - Working on or near power supplies
  - Installing or removing a device chassis or network processor module
  - Performing most hardware upgrades
- Never install equipment that appears damaged.
- Carefully examine your work area for possible hazards, such as moist floors, ungrounded power extension cables, and missing safety grounds.
- Never assume that power is disconnected from a circuit; always check.
- Never perform any action that creates a potential hazard to people or makes the equipment unsafe.
- If an electrical accident occurs and you are uninjured:
  - Use caution to avoid injuring yourself.
  - Turn off power to the device.
  - Seek medical attention, if necessary.

Use the following guidelines when working with any equipment that is disconnected from a power source, but connected to telephone wiring or network cabling:

- When installing or modifying telephone lines, use caution.
- Never install telephone jacks in wet locations unless the jack is designed to handle such locations.
- Never install telephone wiring during a lightning storm.

# Cautions and regulatory compliance statements for NEBS

The NEBS-GR-1089-CORE regulatory compliance statements and requirements are discussed in this section.

**Note** **Statement 7001—**ESD Mitigation

This equipment may be ESD sensitive. Always use an ESD ankle or wrist strap before handling equipment. Connect the equipment end of the ESD strap to an unfinished surface of the equipment chassis or to the ESD jack on the equipment if provided.

**Warning** **Statement 7003—**Shielded Cable Requirements for Intrabuilding Lightning Surge

The intrabuilding port(s) of the equipment or subassembly, which is the management Ethernet port, must use shielded intrabuilding cabling/wiring that is grounded at both ends.

**Warning** **Statement 7005—**Intrabuilding Lightning Surge and AC Power Fault

The intrabuilding port(s) of the equipment or subassembly, which is the management Ethernet port, must not be metallically connected to interfaces that connect to the OSP or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of Primary Protectors is not sufficient protection in order to connect these interfaces metallically to OSP wiring.



**Warning** **Statement 7011—**Surge Protection Device Requirements for GR-1089 Antenna Ports

Protect equipment antenna ports, that are classified as Type 6 according to GR-1089-CORE, with lightning surge protectors that are rated at a minimum of 600 V peak surge of 1.2/50 uS duration.

**Connecting a Cable to the GNSS Antenna Interface**

- GNSS modules have built-in ESD protections on all pins, including the RF-input pin. However, additional surge protection is required if an outdoor antenna is being connected. The Lightning Protector must be able to provide a low clamping voltage (less than 600V).
- A lightning protection must be mounted at the place where the antenna cable enters the building. The primary lightning protection must be capable of conducting all potentially dangerous electrical energy to PE (Protective Earth).
- Surge arrestors should support DC-pass and suitable for the GPS frequency range as per the constellation used with low attenuation.



**Warning** **Statement 7012—**Equipment Interfacing with AC Power Ports

Connect this equipment to AC mains that are provided with a surge protective device (SPD) at the service equipment that complies with NFPA 70, the National Electrical Code (NEC).



**Note** **Statement 7013—**Equipment Grounding Systems—Common Bonding Network (CBN)

This equipment is suitable for installations using the CBN.



**Note** **Statement 7016—**Battery Return Conductor

The battery return conductor of this equipment shall be treated as (DC-I).



**Note** **Statement 7018—**System Recover Time

The equipment is designed to boot up in less than 30 minutes provided the neighboring devices are fully operational.



**Note** **Statement 8015—**Installation Location Network Telecommunications Facilities

This equipment is suitable for installation in network telecommunications facilities.

**Note** **Statement 8016—**Installation Location Where the National Electric Code (NEC) Applies

This equipment is suitable for installation in locations where the NEC applies.

# Power supply considerations

Check the power at your site to ensure that you are receiving clean power (free of spikes and noise). If necessary, install a power conditioner.

# Power Connection Guidelines

This section provides guidelines for connecting the device power supplies to the site power source.

**Warning** **Statement 1024—**Ground Conductor

This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.

## Guidelines for DC-Powered Systems

Basic guidelines for DC-powered systems include the following:

- Each chassis power supply has its own dedicated input power source. The source must comply with the safety extra-low voltage (SELV) requirements in the UL 60950-1, UL 62368-1, CSA 60950-1, CSA 62368-1, EN 60950-1, EN 62368-1, IEC 60950-1, and IEC 62368-1 standards.
- Protect the circuit by a dedicated two-pole DC circuit breaker. Ensure that the circuit breaker is sized according to the power supply input rating and local or national code requirements.
- The circuit breaker is considered as the disconnect device and is easily accessible.
- The system ground is the power supply and chassis ground.
- Use the grounding lug to attach a wrist strap for ESD protection during servicing.
- Do not connect the DC return wire to the system frame or to the system-grounding equipment.
- Ensure that the DC return is grounded at the source side.
- Ensure that each power feed of the equipment is connected to different power sources.

## Guidelines for AC-Powered Systems

Basic guidelines for AC-powered systems include the following:

- Each chassis power supply has its own dedicated branch circuit.

- Ensure that the circuit breaker is sized according to the power supply input rating and local or national code requirements.
- The AC power receptacles that are used to plug in the chassis must be the grounding type. The grounding conductors that connect to the receptacles must connect to protective earth ground at the service equipment.

## Prevent Power Loss

Use the following guidelines to prevent power loss to the device:

- To prevent input power loss, ensure that the maximum load on each circuit supplying the power is within the current ratings of the wiring and breakers.
- In some systems, you can use an UPS to protect against power failures at your site. Avoid UPS types that use ferroresonant technology. These UPS types can become unstable with systems such as the device, which can have substantial current-draw fluctuations due to bursty data traffic patterns.


Determining power requirements is useful for planning the power distribution system to support the device.

# Preventing ESD damage

Electrostatic Discharge (ESD) can damage equipment and impair electrical circuitry. ESD may occur when electronic printed circuit cards are improperly handled and can cause complete or intermittent failures. When removing and replacing modules, always follow these ESD prevention procedures:

- Ensure that the device chassis is electrically connected to earth ground.
- Wear an ESD-preventive wrist strap, ensuring that it makes good skin contact. To channel unwanted ESD voltages safely to ground, connect the clip to an unpainted surface of the chassis frame. To guard against ESD damage and shocks, the wrist strap and cord must operate effectively.
- If no wrist strap is available, ground yourself by touching a metal part of the chassis.
- When installing a component, use any available ejector levers or captive installation screws to properly seat the bus connectors in the backplane or midplane. These devices prevent accidental removal, provide proper grounding for the system, and help to ensure that bus connectors are properly seated.
- When removing a component, use available ejector levers or captive installation screws, if any, to release the bus connectors from the backplane or midplane.
- Handle components by only their handles or edges; do not touch the printed circuit boards or connectors.
- Place a removed component board side up on an antistatic surface or in a static-shielding container. If you plan to return the component to the factory, immediately place it in a static-shielding container.
- Avoid contact between the printed circuit boards and clothing. The wrist strap only protects components from ESD voltages on the body; ESD voltages on clothing can still cause damage.
- Never attempt to remove the printed circuit board from the metal carrier.

For the safety of your equipment, periodically check the resistance value of the antistatic wrist strap. Maintain the value between 1 and 10 MOhm.

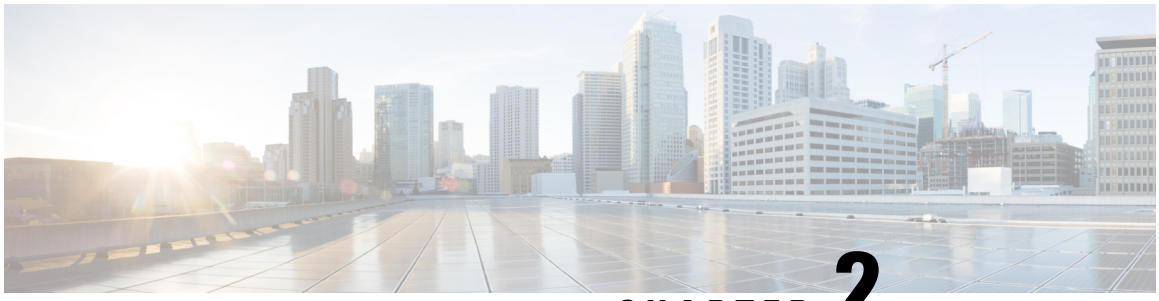

CHAPTER 2

# Cisco 8010 Large and Medium Density Routers Overview

The Cisco 8010 Series Large and Medium Density Fixed Routers, featuring the Cisco Silicon One A100 ASIC, deliver comprehensive Class C timing support and end-to-end encryption. Designed for seamless network expansion and scalability, these routers are built on the robust Cisco IOS XR operating system.

The Cisco 8010 Series Large and Medium Density Fixed Routers are temperature-hardened, fixed port, one rack unit form-factor routers. The primary use cases of the router are:

- CSG (Cell Site Gateway),
- L3 Pre-aggregation,
- L2 Pre-aggregation,
- L3 WAN, and
- OLT Aggregation

For more information about the router features and benefits, see the Cisco 8010 Large Density Routers Data Sheet.

## Router Variants

This table provides the variants for the Cisco 8010 Series Large and Medium Density Fixed Routers.

***Table 1: Router variants and applications***

| Variant name | Classification | Deployment Mode |
|---|---|---|
| Cisco 8011-4G24Y4H-I | Large Density | Central office, outdoor |
| Cisco 8011-32Y8L2H2FH | Large Density | Central office |
| Cisco 8011-12G12X4Y-A | Medium Density | Central office, outdoor |
| Cisco 8011-12G12X4Y-D | Medium Density | Central office, outdoor |


**Note** While installing in outdoor environment, we recommend you to have an IP65/IP66 sealed cabinet with heat exchanger complying with Telcordia GR487.


- Hardware Features of Cisco 8000 Series Large and Medium Density Routers, on page 12
- Network Interfaces, on page 15
- Interface Naming, on page 17
- Network Timing Interfaces, on page 19
- External Alarm Inputs, on page 27
- USB console, on page 27
- RS232 Console, on page 27
- Online Insertion and Removal, on page 28
- Supported Transceiver Modules, on page 28


# Hardware Features of Cisco 8000 Series Large and Medium Density Routers

### Cisco 8011-4G24Y4H-I Router


***Figure 1: Cisco 8011-4G24Y4H-I Router Port and LED details on Front View***

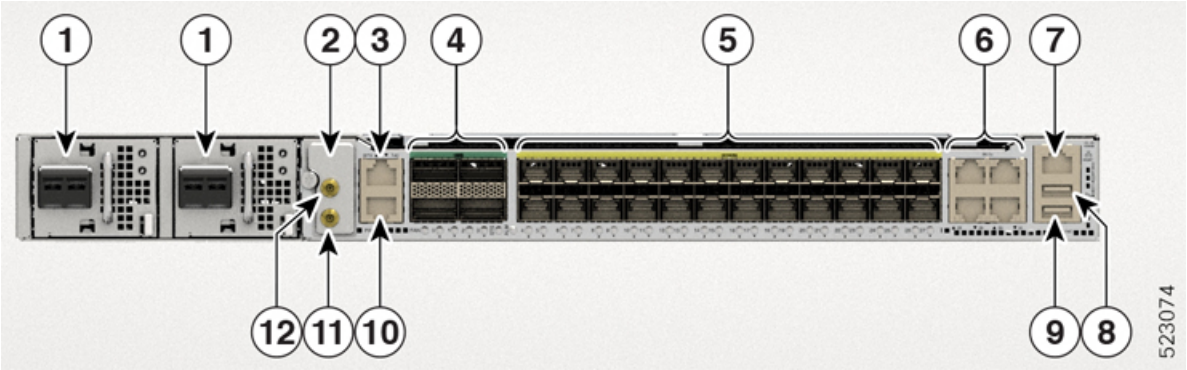


| | | | |
|---|---|---|---|
| 1 | DC or AC PSU Power Module (PM0 and PM1) | 2 | • 8000-TIC (shown):<br>  • Timing Interfaces Card: 10MHz, 1PPS ports<br>• 8000-TIC-GNSS (optional):<br>  • PRTC-B GNSS Receiver Card: 10MHz, 1PPS, Antenna ports |
| 3 | BITS port | 4 | 100G QSFP ports |

| | | | |
|---|---|---|---|
| 5 | 1/10/25G SFP ports | 6 | Copper ports |
| 7 | 1G Ethernet Management port | 8 | USB memory port |
| 9 | USB Console port | 10 | 1PPS/Time of Day (ToD) port |
| 11 | 1PPS port | 12 | 10MHz port |


*Figure 2: Cisco 8011-4G24Y4H-I Router Fan and Alarm Port details on Rear View*

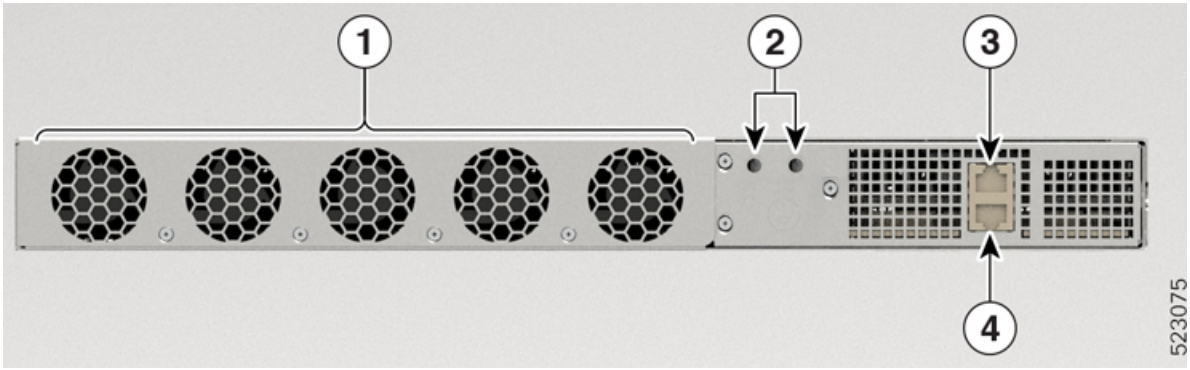


| | | | |
|---|---|---|---|
| 1 | Fixed Fan Modules | 2 | Grounding Lug Holes |
| 3 | Alarm port | 4 | RS232 Console port |

### Cisco 8011-32Y8L2H2FH Router


*Figure 3: Cisco 8011-32Y8L2H2FH Router Port and LED details on front view*

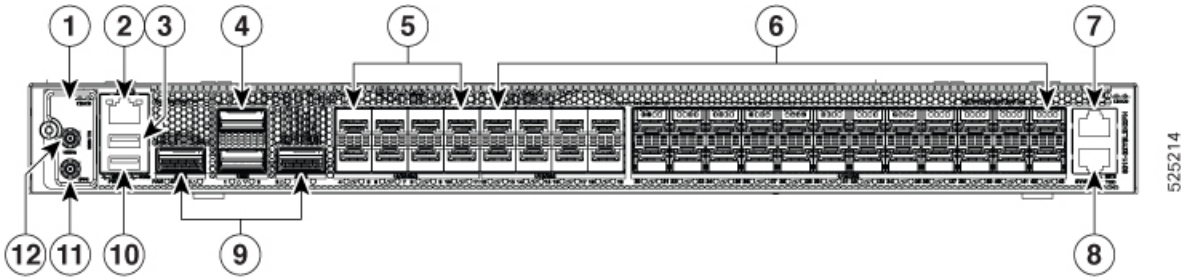


| | | | |
|---|---|---|---|
| 1 | • 8000-TIC (shown):<br>  • Timing Interfaces Card: 10MHz, 1PPS ports<br>• 8000-TIC-GNSS (optional):<br>  • PRTC-B GNSS Receiver Card: 10MHz, 1PPS, Antenna ports | 2 | 10/100/1000M Ethernet Management port |
| 3 | USB memory port | 4 | 100G QSFP ports |

| | | | |
|---|---|---|---|
| 5 | 10/25/50G SFP ports | 6 | 1/10/25G SFP ports |
| 7 | BITS port | 8 | 1PPS/Time of Day (ToD) port |
| 9 | 400G QSFP ports | 10 | USB console port |
| 11 | 1PPS port | 12 | 10MHz port |


*Figure 4: Cisco 8011-32Y8L2H2FH router fan and alarm port details on rear view*

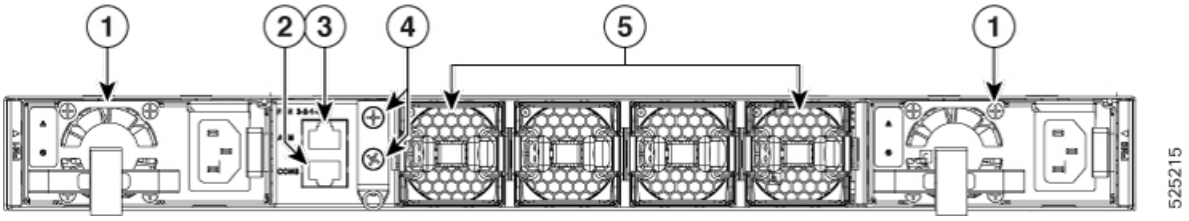


| | | | |
|---|---|---|---|
| 1 | DC or AC PSU power module (PM0 and PM1) | 2 | RS232 console port |
| 3 | Alarm port | 4 | Grounding lug holes |
| 5 | Fan modules (0 to 3) | | |

### Cisco 8011-12G12X4Y-A/D Router


*Figure 5: Cisco 8011-12G12X4Y-A Router Components on Front View*

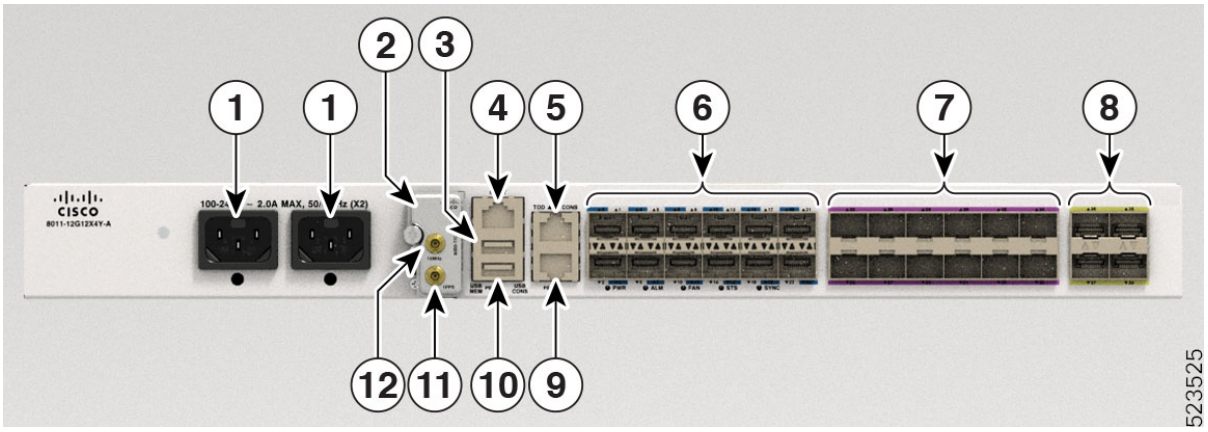


| | | | |
|---|---|---|---|
| 1 | AC PSU PS0/PS1 PM | 2 | 8000-TIC (by default) or 8000-TIC-GNSS (optional) |
| 3 | USB Memory port | 4 | Management port |
| 5 | 1PPS/Time of Day (ToD) port | 6 | 1G CSFP SFP ports |
| 7 | 1/10G SFP+ ports | 8 | 1/10/25G SFP28 ports |
| 9 | RS232 Console port | 10 | USB Console port |


| | | | |
|---|---|---|---|
| 11 | 1PPS | 12 | 10MHz |

*Figure 6: Cisco 8011-12G12X4Y-D Router Components on Front View*

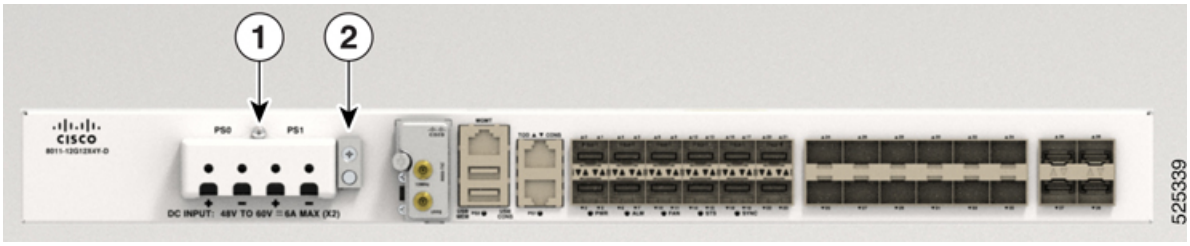


| | | | |
|---|---|---|---|
| 1 | DC PSU PS0/PS1 PM | 2 | Surge pin |

*Figure 7: Cisco 8011-12G12X4Y-A/D Router Components on Rear View*

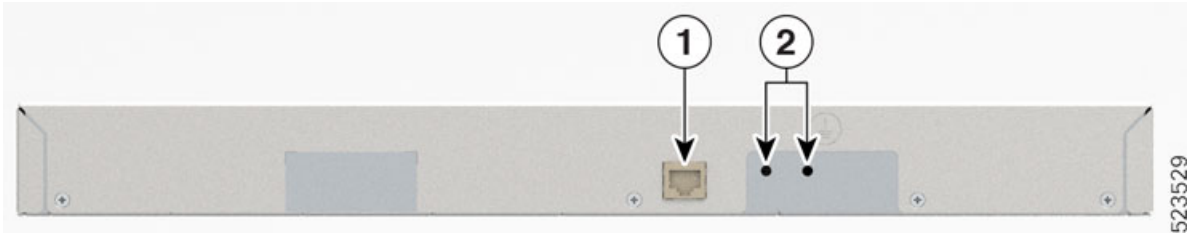


| | | | |
|---|---|---|---|
| 1 | Alarm port | 2 | Lug Holes |

For temperature and physical specifications, see the Cisco 8010 Series Routers Data Sheet.


# Network Interfaces

### Cisco 8011-4G24Y4H-I Router

The Cisco 8011-4G24Y4H-I router supports the following network interfaces:

- 4x1G Copper ports
- 24x1/10/25G SFP ports
- 4x100G QSFP ports

*Figure 8: Cisco 8011-4G24Y4H-I Router*

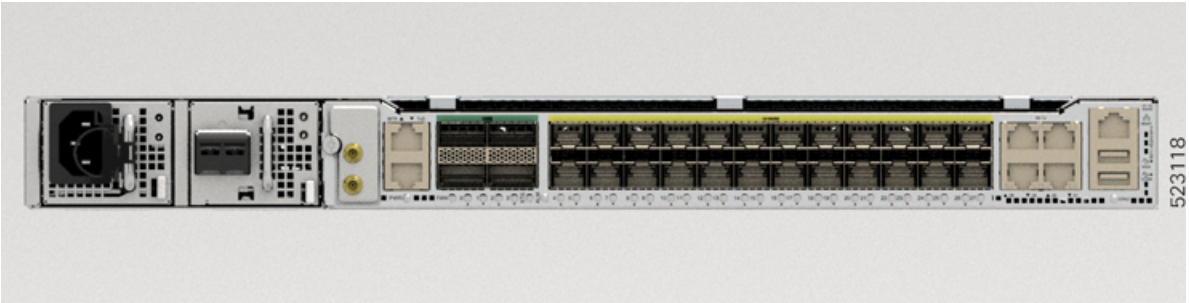



**Note** The ports are color coded in the chassis for ease of identification; for example, the 100G ports are in green, and the 1/10/25G ports are in yellow.

### Cisco 8011-32Y8L2H2FH Router

The Cisco 8011-32Y8L2H2FH router supports these network interfaces:

- 2x400G QSFP56-DD ports
- 2x100G QSFP28 ports
- 8x10/25/50G SFP ports
- 32x1/10/25G SFP ports

*Figure 9: Cisco 8011-32Y8L2H2FH Router*

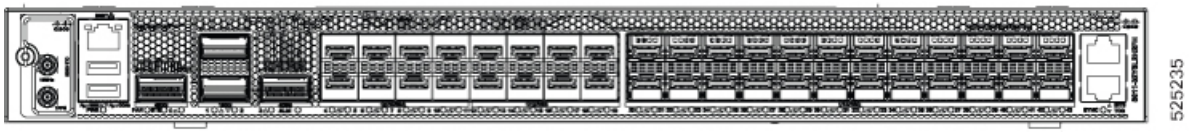



**Note** The ports are color coded in the chassis for ease of identification; for example, the 400G ports are in blue, the 100G ports are in green, the 10/25/50G ports are in orange, and the 1/10/25G ports are in yellow.

### Cisco 8011-12G12X4Y Router

The Cisco 8011-12G12X4Y-A router and Cisco 8011-12G12X4Y-D router support the following network interfaces:

- 12x1G CSFP ports
- 12x1G SFP ports
- 12 x1/10G SFP+ ports
- 4x1/10/25G SFP28 ports

*Figure 10: Cisco 8011-12G12X4Y Router*

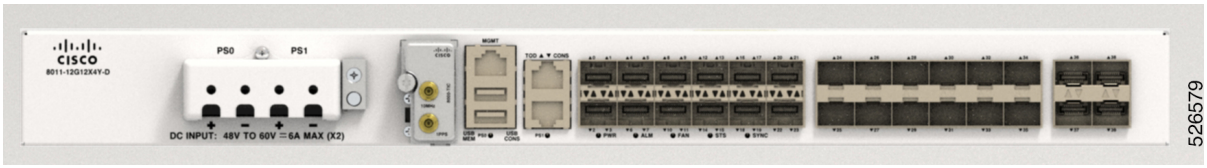


**Note** The ports are color coded in the chassis for ease of identification; for example, the 1G CSFP ports are in blue, the 1/10G SFP+ ports are in pink, and the 1/10/25G SFP28 ports are in yellow.

# Interface Naming

### Cisco 8011-4G24Y4H-I Router

This table shows the interface naming of the Cisco 8011-4G24Y4H-I router:

*Table 2: Port numbers*

| 100G QSFP ports | 1/10/25G SFP ports | 1G Copper ports (10/100/1000M) |
|---|---|---|
| 0 to 3 | 4 to 27 | 28 to 31 |

The *interface-path-id* is *rack/slot/module/port*. The slash between values is required as part of the notation.

- **HundredGigE**—0/0/0/0 to 0/0/0/3
- **TwentyFiveGigE**—0/0/0/4 to 0/0/0/27
- **TenGigE**—0/0/0/4 to 0/0/0/27
- **GigE**—0/0/0/4 to 0/0/0/27
- **GigE**—0/0/0/28 to 0/0/0/31

**Port Speed on 100G Ports:**

The 100G ports (0-3) support:

- 4x25G QSFP
- 40G QSFP
- 4x10G QSFP

### Cisco 8011-32Y8L2H2FH Router

This table shows the interface naming of the Cisco 8011-32Y8L2H2FH router.

*Table 3: Port numbers*

| 400G QSFP ports | 100G QSFP ports | 10/25/50G SFP ports | 1/10/25G SFP ports |
|---|---|---|---|
| 0, 3 | 1 to 2 | 4 to 11 | 12 to 43 |

The *interface-path-id* is *rack/slot/module*. The slash between values is required as part of the notation.

- **FourHundred GigE**—0/0/0/0 & 0/0/0/3
- **HundredGigE**—0/0/0/1 to 0/0/0/2
- **FiftyGigE**—0/0/0/4 to 0/0/0/11
- **TwentyFiveGigE**—0/0/0/4 to 0/0/0/43
- **TenGigE**—0/0/0/4 to 0/0/0/43
- **GigE**—0/0/0/12 to 0/0/0/43

This table shows the port speed options for the 400G, 100G, 10/25/50G, and 1/10/25G ports.

*Table 4: Port speed*

| Port speed for 400G ports | Port speed for 100G ports | Port speed for 10/25/50G ports | Port speed for 1/10/25G ports |
|---|---|---|---|
| 400G | 100G | 50G | 25G |
| 4x100G | 4x25G | 25G | 10G |
| 8x50G | 40G | 10G | 1G |
| 3x100G | 4x10G | — | — |
| 200G | — | — | — |
| 2x100G | — | — | — |
| 100G | — | — | — |
| 4x25G | — | — | — |
| 40G | — | — | — |
| 4x10G | — | — | — |

**Note** Not all 400G, 100G, and 50G ports can be enabled simultaneously at the maximum port speed.

### Cisco 8011-12G12X4Y Router

The following table shows the interface naming of the Cisco 8011-12G12X4Y-A and Cisco 8011-12G12X4Y-D routers:

*Table 5: Port Numbering*

| 1G CSFP ports | 1G SFP ports | 1/10G SFP+ ports | 1/10/25G SFP28 ports |
|---|---|---|---|
| 0/0 to 0/23 | 0/0, 0/3, 0/4, 0/7, 0/8, 0/11, 0/12, 0/15, 0/16, 0/19, 0/20, and 0/23 | 0/24 to 0/35 | 0/36 to 0/39 |

The *interface-path-id* is *rack/slot/module/port*. The slash between values is required as part of the notation.

- **TwentyFiveGigE**— 0/0/0/36 to 0/0/0/39
- **TenGigE**— 0/0/0/24 to 0/0/0/39
- **GigE**— 0/0/0/0 to 0/0/0/23

# Network Timing Interfaces

The router supports these timing interfaces card (TIC):

- Cisco 8010 timing interfaces card (8000-TIC)
- Cisco 8010 timing interfaces card with GNSS (8000-TIC-GNSS)

By default, the router comes with Cisco 8000-TIC. Cisco 8000-TIC-GNSS can also be selected when ordering the router.

## Usage guidelines

Some of the guidelines to use network timing interfaces:

- 1PPS input or output and ToD input or output—The interface is used for input or output of Time-of-Day (ToD) and 1PPS pulses. ToD format includes both NTP and IEEE 1588-2008 time formats.
- The same RS422 pins for 1PPS and ToD are shared between the input and output directions. The direction for each are independently configurable through software.
- BITS input or output—The BITS interfaces support clock recovery from either a T1 at 1.544MHz or an E1 at 2.048MHz, configurable by software.

## Restrictions

Online insertion and removal (OIR) of a TIC module is not supported when the router is operational.

## Cisco 8010 Timing Interfaces Card (8000-TIC)

Cisco 8010 Timing Interfaces Card (8000-TIC) is a pluggable module containing these timing ports:

- 1PPS port
- 10MHz port

8000-TIC is DIN 1.0/2.3 jack connector compliant to DIN 41626 specifications.

*Figure 11: Cisco 8011-4G24Y4H-I Router: Ports on Timing Interfaces Card (8000-TIC) Module*

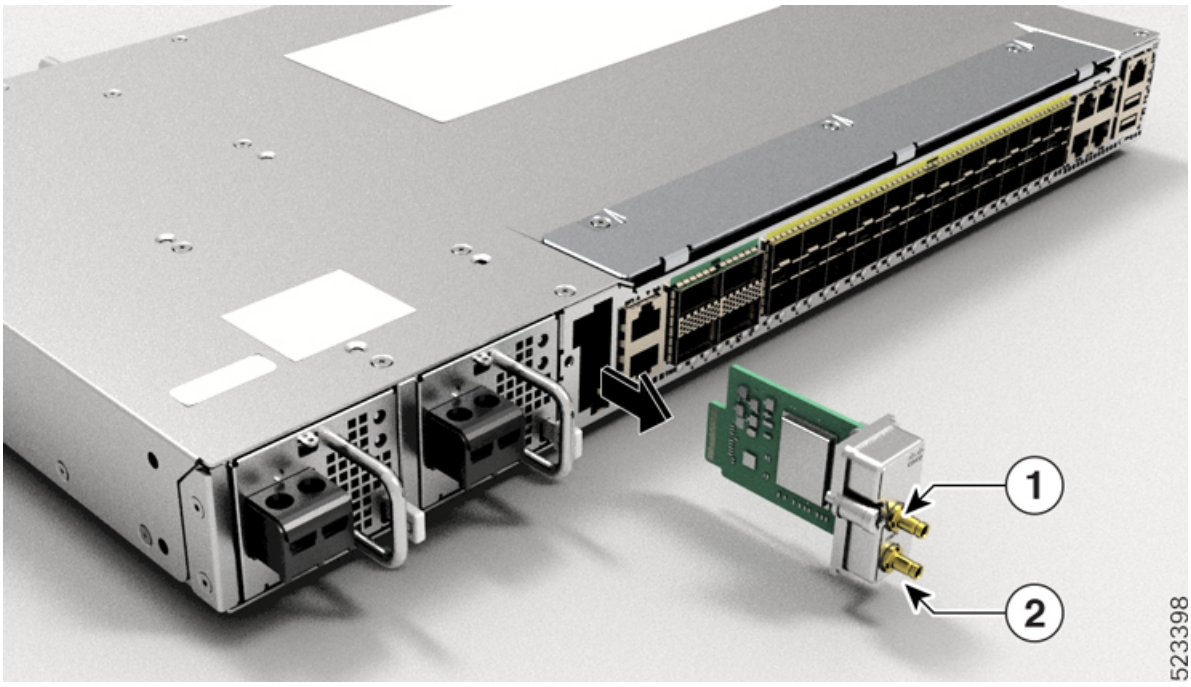



*Figure 12: Cisco 8011-32Y8L2H2FH: Ports on Cisco 8010 Timing Interfaces Card (8000-TIC) Module*


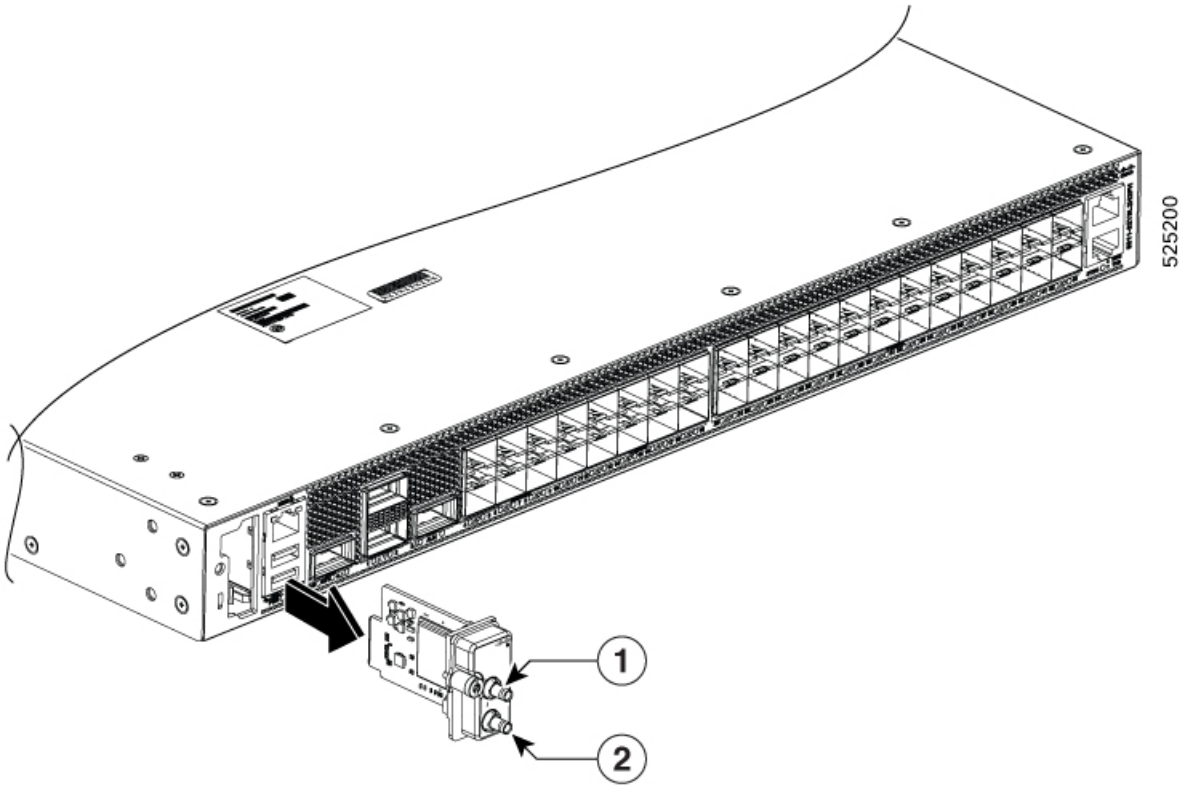


*Figure 13: Cisco 8011-12G12X4Y Router: Ports on Timing Interfaces Card (8000-TIC) Module*

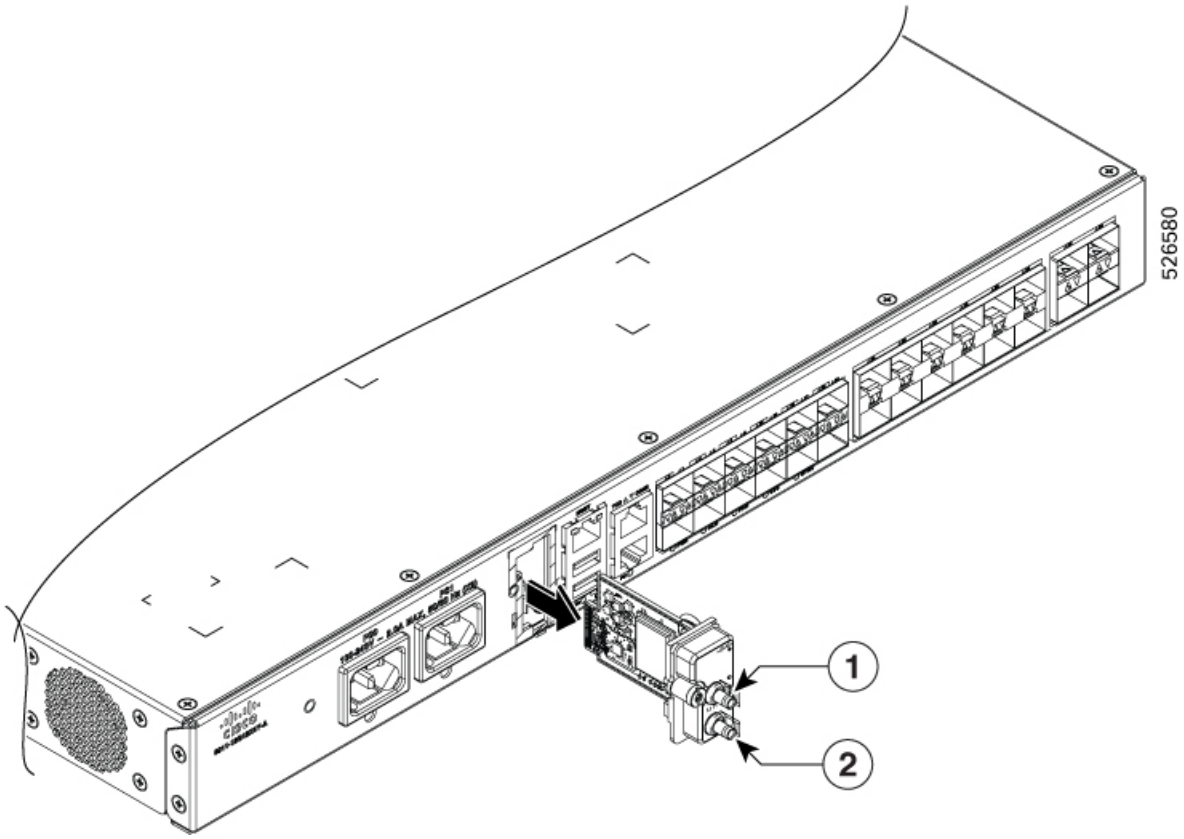


| | |
|---|---|
| 1 | 10MHz port |
| 2 | 1PPS port |

## Timing Interfaces Card Ports Specification

*Table 6: Timing Interfaces Card Ports*

| Category | 10MHz (Input) | 1PPS (Input and Output) |
|---|---|---|
| Waveform | Input—Sine wave<br>Output—Sine wave | Input—Rectangular pulse<br>Output—Rectangular pulse |
| Amplitude | Input—Greater than (>) 1.7 volt p-p(+8 to +10 dBm)<br>Output—Greater than (>) 2.4 volts TTL compatible | Input—Greater than (>) 1.2 volts TTL compatible<br>Output—Greater than (>) 2.4 volts TTL compatible |
| Impedance | 50 Ohms | 50 Ohms |
| Pulse Width | 50% duty cycle | 100 Nanoseconds when configured as Output |


| Category | 10MHz (Input) | 1PPS (Input and Output) |
|---|---|---|
| Rise Time | Output—5 Nanoseconds | <5 Nanoseconds |

# Cisco 8010 Timing Interfaces Card with GNSS (8000-TIC-GNSS)

8000-TIC-GNSS is a Cisco 8010 Timing Interfaces Card with a GNSS module. 8000-TIC-GNSS has:

- an in-built ESD protection on all pins
- these timing ports:
  - GNSS Antenna port
  - 10MHz port
  - 1PPS port

*Figure 14: Cisco 8011-4G24Y4H-I Router: Ports on Timing Interfaces Card with GNSS (8000-TIC-GNSS) Module*

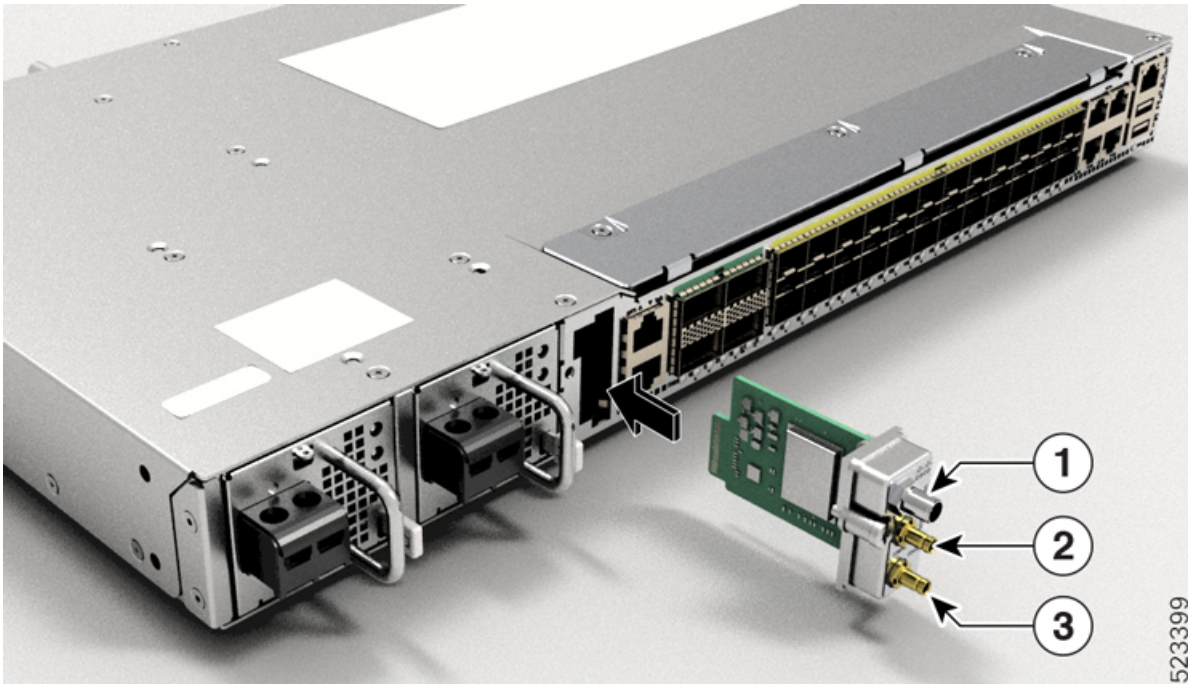


For the Cisco 8011-4G24Y4H-I Router, an extra surge protection is required if an outdoor antenna is to be connected.

*Figure 15: Cisco 8011-32Y8L2H2FH: Ports on Cisco 8010 Timing Interfaces Card with GNSS (8000-TIC-GNSS) Module*


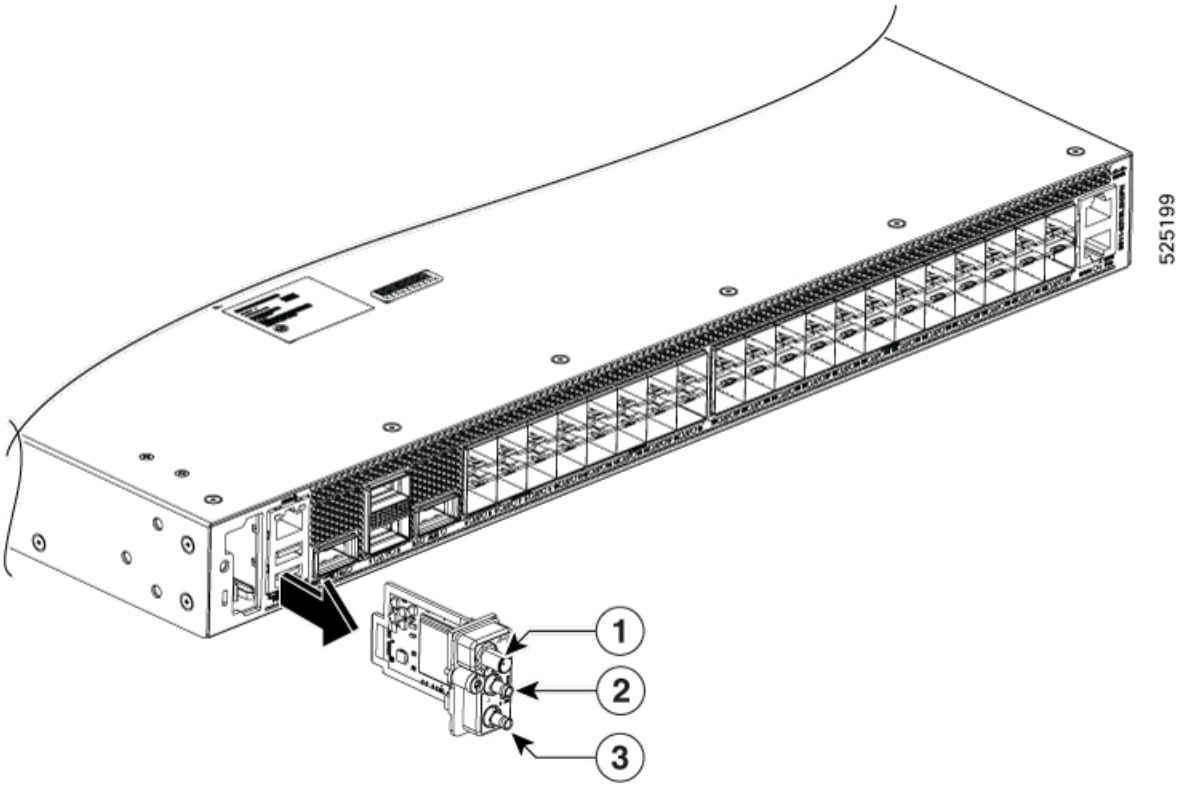


*Figure 16: Cisco 8011-12G12X4Y: Ports on Cisco 8010 Timing Interfaces Card with GNSS (8000-TIC-GNSS) Module*

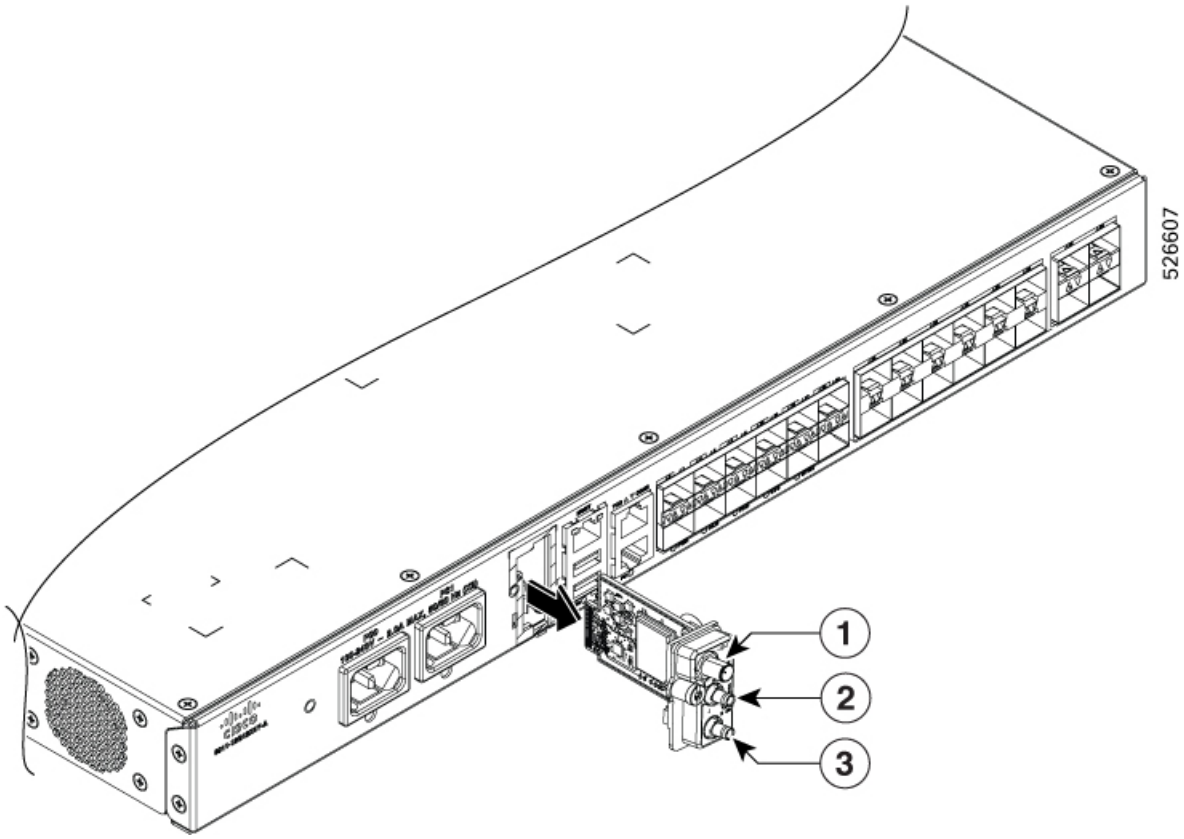


For the Cisco 8011-12G12X4Y Router, an extra surge protection is required if an outdoor antenna is to be connected.

| | |
|---|---|
| 1 | GNSS Antenna port |
| 2 | 10MHz port |
| 3 | 1PPS port |

For information on how to insert and secure the Cisco 8000 Timing Interfaces Card with GNSS module, see Inserting and Securing Timing Interfaces Card with GNSS Module.

## Timing Interfaces Card with GNSS Module RF Input Specifications

This table provides specifications of the GNSS RF input and connector.

*Table 7: Timing Interfaces Card with GNSS Module*

| | |
|---|---|
| Connector Type | SMA Jack |
| Impedance | 50 Ohms |

| | |
|---|---|
| Band | Multi band - L1/L2 |
| Accuracy | PRTC-B |

## Primary Reference Time Clock

As packet timing requirements emerged, the ITU-T developed the Primary Reference Time Clock (PRTC) standard for time and phase for transport over a packet network and this standard is known as G.8272.



**Note** The performance specified in the following table also applies to the output of the combined PRTC and T-GM function when integrated into a single piece of equipment. Therefore, for both the PRTC-A and PRTC-B, there's no additional (performance) allowance for the inclusion of the T-GM function.

***Table 8: PRTC-A versus PRTC-B***

| Category | PRTC-A | PRTC-B |
|---|---|---|
| **Standard** | G.8272 | G.8272 |
| **Time output accuracy (max)** | 100 ns | 40 ns |
| **Phase Error at Output** | | |
| **Wander in locked mode (MTIE)** | 100 ns | 40 ns |
| **Wander in locked mode (TDEV)** | 30 ns | 5 ns |
| **Holdover** | Optional | Optional |

There is no standard packet timing requirement and it is based on implementation. Some standalone PRTC devices have very-high quality quartz oscillators or even a Rubidium oscillator as an option to allow an option for extended holdover. Redundancy is provided through network design instead of relying on holdover performance from expensive oscillators.

According to the standards, there are only a few differences between the two classes of clock. Meeting those requirements may result in different implementations, which may influence the cost of the device.

To achieve improved performance, PRTC-B is typically implemented with a two-band GNSS receiver instead of a single-band receiver. The "traditional" band for GPS signals in the L1 band, while the newer devices receive signals in the L2 band.

***Table 9: Bands on PRTC-A versus PRTC-B***

| Category | PRTC-A | PRTC-B |
|---|---|---|
| **Bands (GPS)** | L1 (1575.42 MHz) | L1 + L2 (1227.60 MHz) |
| **Bands (Galileo)** | E1 (1575.42 MHz) | E1 (1227.60 MHz) |
| **Bands (BeiDou)** | 1561.098MHz | 1207.140MHz |

| Category | PRTC-A | PRTC-B |
|---|---|---|
| **Bands (GLONASS)** | 1575.42MHz | 1207.140MHz |
| **Ionospheric delay model** | Basic | Advanced |
| **Antenna** | Single band (L1/E1) | Dual band (L1/E1, L2) |
| **Constellation** | GPS, Galileo, other | GPS, Galileo, other |

## Usage Guidelines

These are some guidelines to follow when using the Cisco 8000-TIC-GNSS:

### Surge Protection

- The Cisco 8000-TIC-GNSS modules have built-in ESD protections on all pins, including the RF-input pin.
- An extra surge protection may be required if rooftop antennas are to be connected to meet the regulations and standards for lightning protection of countries where the end product is installed.
- The lightning protector must support a low clamping voltage (less than 600V).
- A lightning protection must be mounted at the place where the antenna cable enters the building. The primary lightning protection must be capable of conducting all potentially dangerous electrical energy to protective earth (PE).
- Surge arrestors should support DC-pass and suitable for the Timing Interfaces Card with GNSS frequency range (1227.60MHz and 1.575GHz) with low attenuation.
- Surge arrestors must support DC-pass and suitable for the GNSS frequency range as per the constellation used with low attenuation.
- For optimal performance, the Cisco 8000-TIC-GNSS requires a GNSS antenna with built-in Low-Noise Amplifier (LNA). The antenna LNA amplifies the received satellite signals for the following two purposes:
  - Compensation of losses on the cable.
  - Lifting the signal amplitude to the suitable range for the receiver frontend.

  The amplification required is 22dB gain + cable/connector loss + Splitter signal loss.

  The recommended range of LNA gain (- cable/connector loss) is 22–30dB with a minimum of 20dB and a maximum of 35dB, at the connector of the receiver module.

### Antenna Sky Visibility

- The Cisco 8000-TIC-GNSS provides 5V to the active antenna through the same RF input.
- The Cisco 8000-TIC-GNSS signals can only be received on a direct line of sight between antenna and satellite. The antenna must have a clear view of the sky. For proper timing, minimum of four satellites should be locked.

**Note** The antenna terminal should be earthed at the building entrance in accordance with the ANSI/NFPA 70, the National Electrical Code (NEC), in particular Section 820.93, Grounding of Outer Conductive Shield of a Coaxial Cable.

- Use a passive splitter if more than one Timing Interfaces Card with GNSS module is fed from a single antenna.

**Note** The splitter should have at least one RF port capable of DC-pass, and an antenna should be connected to that port, if the antenna needs to feed power from 8000-TIC-GNSS.

# External Alarm Inputs

The router supports four dry contact alarm inputs through an RJ45 jack at the back panel.

The alarm condition is normally open, which indicates that no current flows through the alarm circuit, and the alarm is generated when the current is flowing. Each alarm input can be provisioned as being critical, major, or minor.

# USB console

USB console is a single USB 2.0 Type-A receptacle on the front panel of the router that:

- provides console access to Uboot flash for Cisco software and diagnostics
- uses the Type-A connector
- operates as a USB peripheral only to connect to an external host computer, and
- uses a Type-A to Type-A connector instead of a standard USB cable.

## Restrictions

- The USB console port and RS232 console port are mutually exclusive to each other.

# RS232 Console

The RS232 console is a port in RJ45 form factor on the rear panel of the router. This console provides:

- transmission (Tx),
- reception (Rx), and

- ground (Gnd) information.


# Online Insertion and Removal

The router supports these online insertion and removal (OIR) operations:

- When an SFP is removed from a port, there is no effect on the traffic flowing on other ports.
- When an SFP is installed on a port:
  - there is no effect on the traffic flowing on other ports.
  - the system initializes that port for operation based on the current configuration.
  - if the inserted SFP is incompatible with the current configuration of that port, the port becomes operational only after the configuration is updated.
- When both the AC and DC power supplies are installed and active:
  - the load may be shared between both the PSUs or a single PSU takes the entire load.
  - when one power supply is not working or the input cable is removed, the other power supply takes the entire load without disruption.
- Both the PSUs are field replaceable units. When one PSU is removed or installed, there is no functional impact to the router.

# Supported Transceiver Modules

For more information on the supported transceiver modules, see Transceiver Module Group (TMG) Compatibility Matrix. In the **Begin your Search** search box, enter the keyword and click **Enter**.

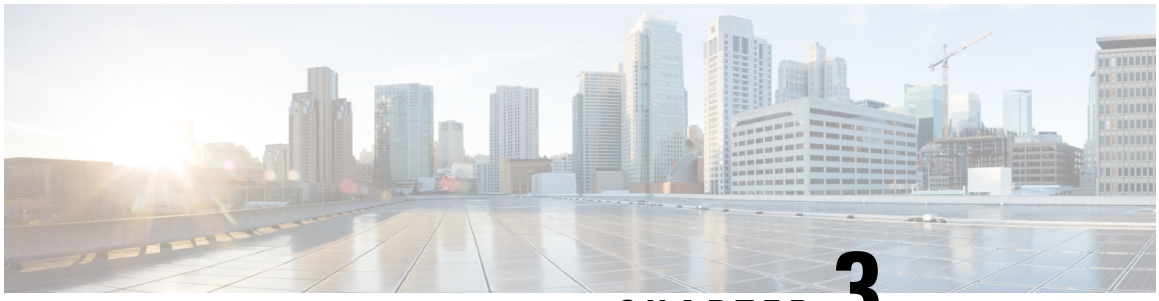

CHAPTER 3

# Prepare for Installation

Before you install the router, you must prepare your site for installation.

**Note** The images in this chapter are only for representational purposes, unless specified otherwise. The chassis' actual appearance and size may vary.

**Warning** **Statement 1071—**Warning Definition

IMPORTANT SAFETY INSTRUCTIONS

Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Read the installation instructions before using, installing, or connecting the system to the power source. Use the statement number at the beginning of each warning statement to locate its translation in the translated safety warnings for this device.

SAVE THESE INSTRUCTIONS




- General Precautions, on page 30
- Compliance and Safety Information, on page 30
- Laser Safety, on page 31
- Energy Hazard, on page 32
- Preventing Electrostatic Discharge Damage, on page 32
- Cautions and regulatory compliance statements for NEBS, on page 33
- Power supply considerations, on page 34
- Site Planning Checklist, on page 36
- Environmental Requirements, on page 36
- Temperature, on page 37
- Dust and Particles, on page 38
- Air Quality, on page 38
- Corrosion, on page 39

- Airflow Guidelines, on page 40
- Site Power Guidelines, on page 42
- Site Cabling Guidelines, on page 43
- Tools and Equipment, on page 45
- Prepare Your Location , on page 45
- Prepare Yourself , on page 47
- Prepare Rack for Router Installation, on page 47
- Unpack the Cisco 8010 Large and Medium Density Routers, on page 48


# General Precautions

Observe the following general precautions when using and working with your router:

- Keep your system components away from radiators and heat sources, and do not block cooling vents.
- Do not spill food or liquids on your system components, and never operate the product in a wet environment.
- Do not push any objects into the openings of your system components. Doing so can cause fire or electric shock by shorting out interior components.
- Position system cables and power supply cable carefully. Route system cables, the power supply cable, and plug so that they are not stepped on or tripped over. Be sure that nothing else rests on your system component cables or power cable.
- Do not modify power cables or plugs. Consult a licensed electrician or your power company for site modifications. Always follow your local and national wiring rules.
- If you turn off your system, wait at least 30 seconds before turning it on again to avoid damage to the system components.

# Compliance and Safety Information

The Cisco 8000 Series Routers are designed to meet the regulatory compliance and safety approval requirements. For detailed safety information, see *Regulatory Compliance and Safety Information—Cisco 8010 Series Routers*.

**Note** **Statement 1089—**Instructed and Skilled Person Definitions

An instructed person is someone who has been instructed and trained by a skilled person and takes the necessary precautions when working with equipment.

A skilled person or qualified personnel is someone who has training or experience in the equipment technology and understands potential hazards when working with equipment.



**Warning** **Statement 9001—**Product Disposal

Ultimate disposal of this product should be handled according to all national laws and regulations.



**Warning** **Statement 1074—**Comply with Local and National Electrical Codes

To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.



**Warning** **Statement 1090—**Installation by a Skilled Person

Only a skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of a skilled person.



**Warning** **Statement 1091—**Installation by an Instructed Person or Skilled Person

Only an instructed person or skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of an instructed person or skilled person.



**Warning** **Statement 1029—**Blank Faceplates and Cover Panels

Blank faceplates and cover panels serve three important functions: they reduce the risk of electric shock and fire, they contain electromagnetic interference (EMI) that might disrupt other equipment, and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place.

# Laser Safety



**Warning** **Statement 1051—**Laser Radiation

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.

**Warning** **Statement 1055—**Class 1/1M Laser

Invisible laser radiation is present. Do not expose to users of telescopic optics. This applies to Class 1/1M laser products.




**Warning** **Statement 1255—**Laser Compliance Statement

Pluggable optical modules comply with IEC 60825-1 Ed. 3 and 21 CFR 1040.10 and 1040.11 with or without exception for conformance with IEC 60825-1 Ed. 3 as described in Laser Notice No. 56, dated May 8, 2019.

# Energy Hazard

The switches can be configured for a DC power source. Do not touch terminals while they are live. Observe the following warning to prevent injury.

**Warning** **Statement 1086—**Replace Cover on Power Terminals

Hazardous voltage or energy may be present on power terminals. To reduce the risk of electric shock, make sure the power terminal cover is in place when the power terminal is not being serviced. Be sure uninsulated conductors are not accessible when the cover is in place.

# Preventing Electrostatic Discharge Damage

Many switch components can be damaged by static electricity. Not exercising the proper electrostatic discharge (ESD) precautions can result in intermittent or complete component failures. To minimize the potential for ESD damage, always use an ESD-preventive antistatic wrist strap (or ankle strap) and ensure that it makes adequate skin contact.

**Note** Check the resistance value of the ESD-preventive strap periodically. The measurement should be 1–10 megohms.

Before you perform any of the procedures in this guide, attach an ESD-preventive strap to your wrist and connect the leash to the chassis.

# Cautions and regulatory compliance statements for NEBS

The NEBS-GR-1089-CORE regulatory compliance statements and requirements are discussed in this section.

**Note** **Statement 7001—**ESD Mitigation

This equipment may be ESD sensitive. Always use an ESD ankle or wrist strap before handling equipment. Connect the equipment end of the ESD strap to an unfinished surface of the equipment chassis or to the ESD jack on the equipment if provided.

**Warning** **Statement 7003—**Shielded Cable Requirements for Intrabuilding Lightning Surge

The intrabuilding port(s) of the equipment or subassembly, which is the management Ethernet port, must use shielded intrabuilding cabling/wiring that is grounded at both ends.

**Warning** **Statement 7005—**Intrabuilding Lightning Surge and AC Power Fault

The intrabuilding port(s) of the equipment or subassembly, which is the management Ethernet port, must not be metallically connected to interfaces that connect to the OSP or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of Primary Protectors is not sufficient protection in order to connect these interfaces metallically to OSP wiring.

**Warning** **Statement 7011—**Surge Protection Device Requirements for GR-1089 Antenna Ports

Protect equipment antenna ports, that are classified as Type 6 according to GR-1089-CORE, with lightning surge protectors that are rated at a minimum of 600 V peak surge of 1.2/50 uS duration.

**Connecting a Cable to the GNSS Antenna Interface**

- GNSS modules have built-in ESD protections on all pins, including the RF-input pin. However, additional surge protection is required if an outdoor antenna is being connected. The Lightning Protector must be able to provide a low clamping voltage (less than 600V).
- A lightning protection must be mounted at the place where the antenna cable enters the building. The primary lightning protection must be capable of conducting all potentially dangerous electrical energy to PE (Protective Earth).
- Surge arrestors should support DC-pass and suitable for the GPS frequency range as per the constellation used with low attenuation.

**Warning** **Statement 7012—**Equipment Interfacing with AC Power Ports

Connect this equipment to AC mains that are provided with a surge protective device (SPD) at the service equipment that complies with NFPA 70, the National Electrical Code (NEC).

**Note** **Statement 7013—**Equipment Grounding Systems—Common Bonding Network (CBN)

This equipment is suitable for installations using the CBN.

**Note** **Statement 7016—**Battery Return Conductor

The battery return conductor of this equipment shall be treated as (DC-I).

**Note** **Statement 7018—**System Recover Time

The equipment is designed to boot up in less than 30 minutes provided the neighboring devices are fully operational.

**Note** **Statement 8015—**Installation Location Network Telecommunications Facilities

This equipment is suitable for installation in network telecommunications facilities.

**Note** **Statement 8016—**Installation Location Where the National Electric Code (NEC) Applies

This equipment is suitable for installation in locations where the NEC applies.

# Power supply considerations

Check the power at your site to ensure that you are receiving clean power (free of spikes and noise). If necessary, install a power conditioner.

## Power Connection Guidelines

This section provides guidelines for connecting the device power supplies to the site power source.



**Warning** **Statement 1024—**Ground Conductor

This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.

## Guidelines for DC-Powered Systems

Basic guidelines for DC-powered systems include the following:

- Each chassis power supply has its own dedicated input power source. The source must comply with the safety extra-low voltage (SELV) requirements in the UL 60950-1, UL 62368-1, CSA 60950-1, CSA 62368-1, EN 60950-1, EN 62368-1, IEC 60950-1, and IEC 62368-1 standards.
- Protect the circuit by a dedicated two-pole DC circuit breaker. Ensure that the circuit breaker is sized according to the power supply input rating and local or national code requirements.
- The circuit breaker is considered as the disconnect device and is easily accessible.
- The system ground is the power supply and chassis ground.
- Use the grounding lug to attach a wrist strap for ESD protection during servicing.
- Do not connect the DC return wire to the system frame or to the system-grounding equipment.
- Ensure that the DC return is grounded at the source side.
- Ensure that each power feed of the equipment is connected to different power sources.

## Guidelines for AC-Powered Systems

Basic guidelines for AC-powered systems include the following:

- Each chassis power supply has its own dedicated branch circuit.
- Ensure that the circuit breaker is sized according to the power supply input rating and local or national code requirements.
- The AC power receptacles that are used to plug in the chassis must be the grounding type. The grounding conductors that connect to the receptacles must connect to protective earth ground at the service equipment.

## Prevent Power Loss

Use the following guidelines to prevent power loss to the device:

- To prevent input power loss, ensure that the maximum load on each circuit supplying the power is within the current ratings of the wiring and breakers.
- In some systems, you can use an UPS to protect against power failures at your site. Avoid UPS types that use ferroresonant technology. These UPS types can become unstable with systems such as the device, which can have substantial current-draw fluctuations due to bursty data traffic patterns.

Determining power requirements is useful for planning the power distribution system to support the device.

# Site Planning Checklist

Use the following checklist to perform and account for all the site planning tasks described in this chapter:

- The site meets the environmental requirements.
- The site's air conditioning system can compensate for the heat dissipation of the router.
- The floor space that the router occupies can support the weight of the system.
- Electrical service to the site complies with the requirements.
- The electrical circuit servicing the router complies with the requirements.
- Consideration has been given to the console port wiring and limitations of the cabling involved, according to TIA/EIA-232F.
- The router Ethernet cabling distances are within the prescribed limitations.
- The equipment rack in which you plan to install the router complies with prescribed requirements.
- Factors that have been carefully considered when selecting the location of the rack:
  - safety,
  - ease of maintenance, and
  - proper airflow.

# Environmental Requirements

### Cisco 8011-32Y8L2H2FH Router

- Temperature must be maintained within –5°C to +55°C. The maximum and minimum operating temperatures are supported at 1800m.
- The operating climate, as defined by GR-63-CORE, is between:
  - –5°C to +55°C (+23°F to +131°F) at 1800m
  - 5% and 85% RH
  - Airborne particulate concentration level < 20 micro grams per meter cube
  - Altitude: 0 to 4000 meters

For more information on Environmental properties and Regulatory standards, see the Cisco 8010 Series Large Density Routers Data Sheet.

### Cisco 8011-12G12X4Y-A and Cisco 8011-12G12X4Y-D Routers

- For outside plant installation (cell site cabinet, hut, and so on), equipment must be protected against airborne contaminants, dust, moisture, insects, pests, corrosive gases, polluted air, or other reactive elements.
- Sealed equipment chamber with air-conditioning or a heat exchanger is recommended for OSP deployments.
- The equipment chamber must comply with the temperature and clearance requirements.

  Examples of such cabinets include IP65/IP66 cabinets with heat exchanger complying with Telcordia GR487.
- Temperature must be maintained within:
  - Cisco 8011-12G12X4Y-A: –20°C to +65°C (–4°F to +149°F) at MSL
  - Cisco 8011-12G12X4Y-D: –40°C to +65°C (–40°F to +149°F) at MSL

  The maximum and minimum operating temperatures are supported at Mean Sea Level (MSL).
- Cisco 8011-12G12X4Y-A: The equipment shall be placed inside an enclosure (that is protected from direct outside weather and environmental stresses by the enclosure), and where the operating climate is between:
  - –20°C to +65°C (–4°F to +149°F)
  - 5% and 85% RH
  - Airborne particulate concentration level < 20 micro grams per meter cube
  - Altitude: 0 to 4000 meters

  Cisco 8011-12G12X4Y-A is non-complaint to GR3108 Class 2.
- Cisco 8011-12G12X4Y-D: The equipment shall be placed inside an enclosure (that is protected from direct outside weather and environmental stresses by the enclosure), and where the operating climate, as defined by GR3108 Class 2, is between:
  - –40°C to +65°C (–40°F to +149°F )
  - 5% and 85% RH
  - Airborne particulate concentration level < 20 micro grams per meter cube
  - Altitude: 0 to 4000 meters

# Temperature

Temperature extremes may cause a system to operate at reduced efficiency and cause various problems, including premature aging and failure of chips, and failure of mechanical devices. Extreme temperature fluctuations may also cause chips to become loose in their sockets.

Observe these guidelines:

- Ensure that the chassis has adequate ventilation.

- Do not place the chassis within a closed-in wall unit or on top of cloth, which can act as thermal insulation.
- Do not place the chassis where it receives direct sunlight, particularly in the afternoon.
- Do not place the chassis next to a heat source of any kind, including heating vents.
- Adequate ventilation is important at high altitudes. Make sure that all the slots and openings on the system remain unobstructed, especially the fan vent on the chassis.
- Clean the installation site at regular intervals to avoid the buildup of dust and debris, which may cause a system to overheat.



**Note** Failure to observe these guidelines may damage the internal components of the chassis.

# Dust and Particles

Fans cool power supplies and system components by drawing in room-temperature air and exhausting heated air out through various openings in the chassis. However, fans also ingest dust and other particles, causing contaminant buildup in the system and increased internal chassis temperature. A clean operating environment can greatly reduce the negative effects of dust and other particles, which act as insulators and interfere with the mechanical components in the system.

PM2.5 and PM10 are some of the commonly available air quality parameters to indicate dust concentration levels. Periodically check dust concentration levels and provide required protection to improve air quality around the equipment.

# Air Quality

Dust is everywhere and often invisible to the naked eye. It consists of fine particles in the air that originate from various sources, such as soil dust lifted by weather, from volcanic eruptions, or pollution. Dust at an installation site may contain small amounts of textile, paper fibers, or minerals from outdoor soil. It may also contain natural contaminants, such as chlorine from the marine environment and industrial contaminants such as sulfur. Ionized dust and debris are dangerous and get attracted to electronic equipment.

The accumulation of dust and debris on electronic equipment has the following adverse effects:

- It increases the operating temperature of the equipment. According to the Arrhenius effect, an increase in the operating temperature leads to a decrease in reliability and life of the equipment.
- The moisture and corrosive elements that are present in the dust can corrode the electronic or mechanical components and cause premature board failure.

These adverse effects are further accelerated by the presence of fans in the data networking equipment that ingest dust and other particles into the equipment. Higher the volume of air that is generated by the fans for cooling, the higher the quantity of dust and particulates that get deposited and trapped inside the equipment.


# Corrosion

Corrosion is a chemical reaction that occurs between electronic components, gases, and humidity, which results in metal deterioration. Corrosion attacks edge connectors, pin connectors, IC plug-in sockets, wire wraps, and all other metal components. Depending on the type and concentration level of the corrosive gases, performance degradation of the components occurs either rapidly or over a period of time. It also leads to blocked currents, brittle connection points, and overheated electrical systems. Corrosion by-products from insulating layers on circuits and causes electronic failure, short circuits, pitting, and metal loss.

A type of corrosion known as creep corrosion, that primarily affects PCBA (Printed Circuit Board Assembly) occurs when the PCBA is subjected to a harsh, and sulfur-rich (hydrogen sulfide) end-use environment over a prolonged period of time. The corrosion begins on certain exposed metals, such as copper and silver, and then creeps along the remaining metal surface either causing electrical short circuits or creating holes. Creep corrosion also occurs on electronic components such as resistors and PCBs.

**Note** To prevent corrosion, remove or minimize the presence of dust and particulates at the installation site by following the guidelines mentioned in ANSI 71-04-2013 regulations.

***Figure 17: PCB with Corrosion on its Metal Contacts***

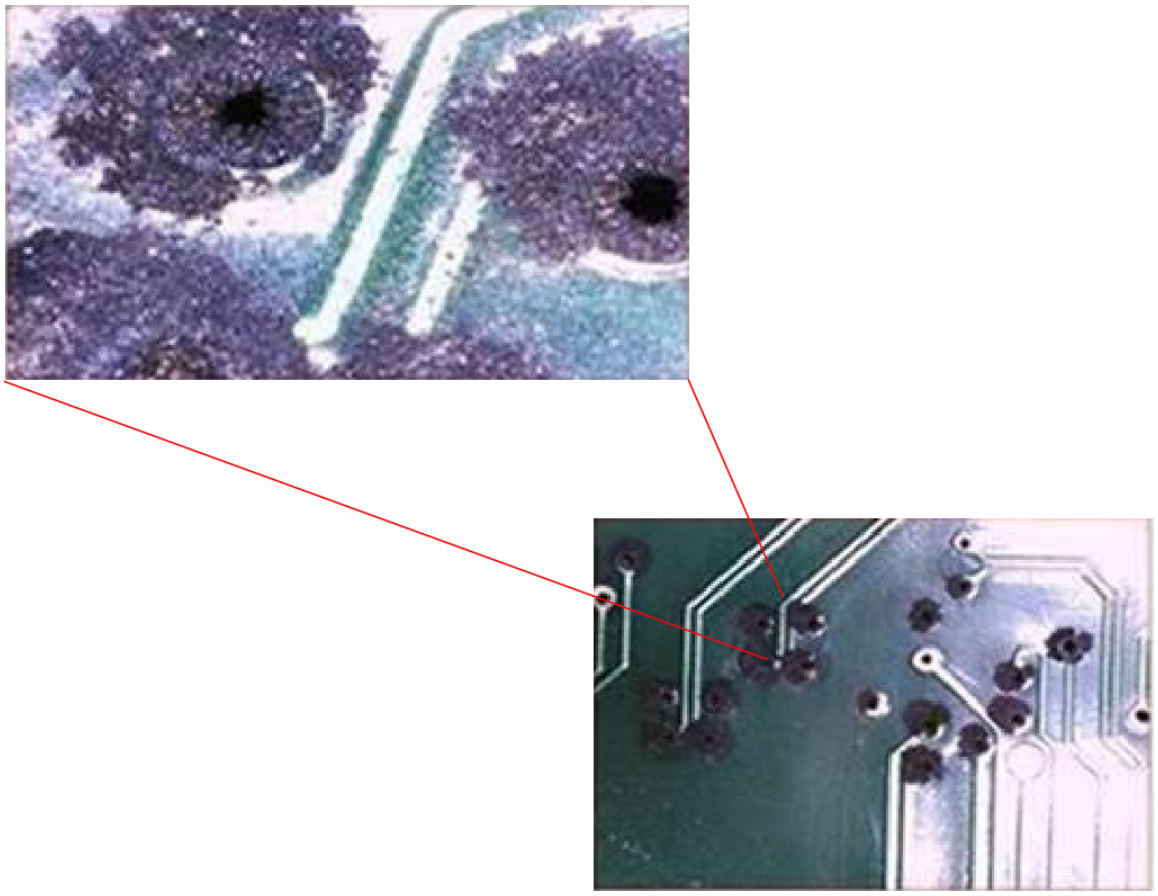

# Airflow Guidelines

Cool air is circulated through the router by fans that are located along the rear side of the router. The internal fans maintain acceptable operating temperatures for the internal components by drawing in cool air through the vents, and circulating the air through the router.

To ensure adequate airflow, we recommended that you always maintain this minimum clearance distance for the router:

- Front clearance:
  - Cisco 8011-4G24Y4H-I—5.5 inches (14 centimeters)
  - Cisco 8011-32Y8L2H2FH—5.5 inches (14 centimeters)
  - Cisco 8011-12G12X4Y—5 inches (12.7 centimeters)
- Rear clearance:
  - Cisco 8011-4G24Y4H-I—2 inches (5.08 centimeters)
  - Cisco 8011-32Y8L2H2FH—9.8 inches (25 centimeters)

**Note** This clearance is required to replace PSUs.

  - Cisco 8011-12G12X4Y—0.5 inches (1.27 centimeters)

*Figure 18: Cisco 8011-4G24Y4H-I Router Airflow is from Front to Back*

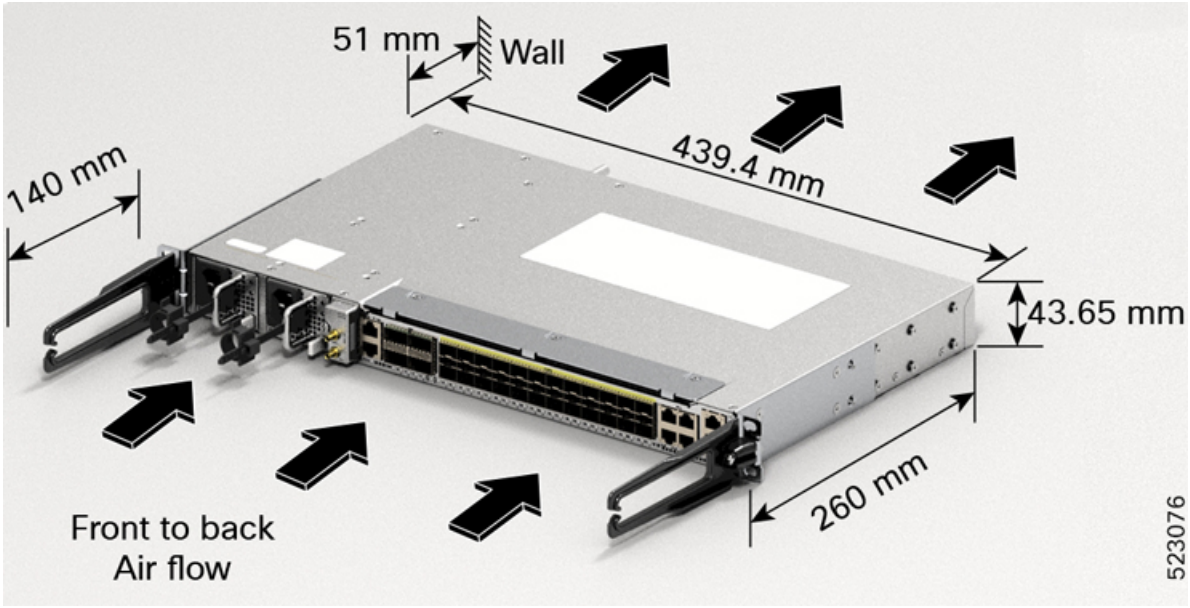


*Figure 19: Cisco 8011-32Y8L2H2FH Router Airflow is from Front to Back*


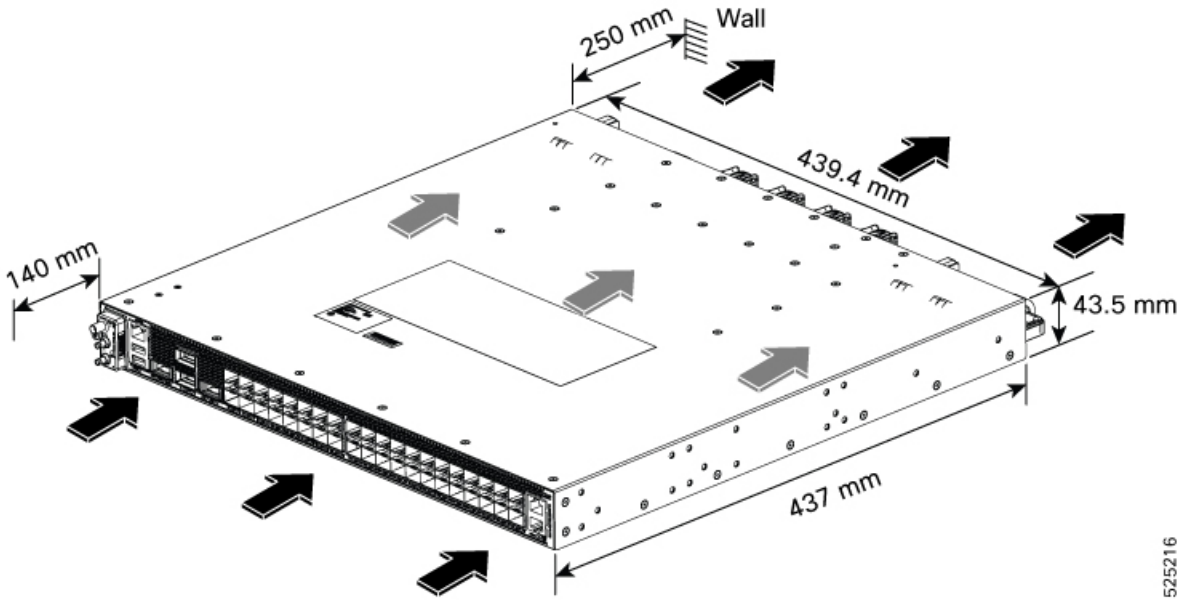



*Figure 20: Cisco 8011-12G12X4Y Router Airflow is from Right to Left*

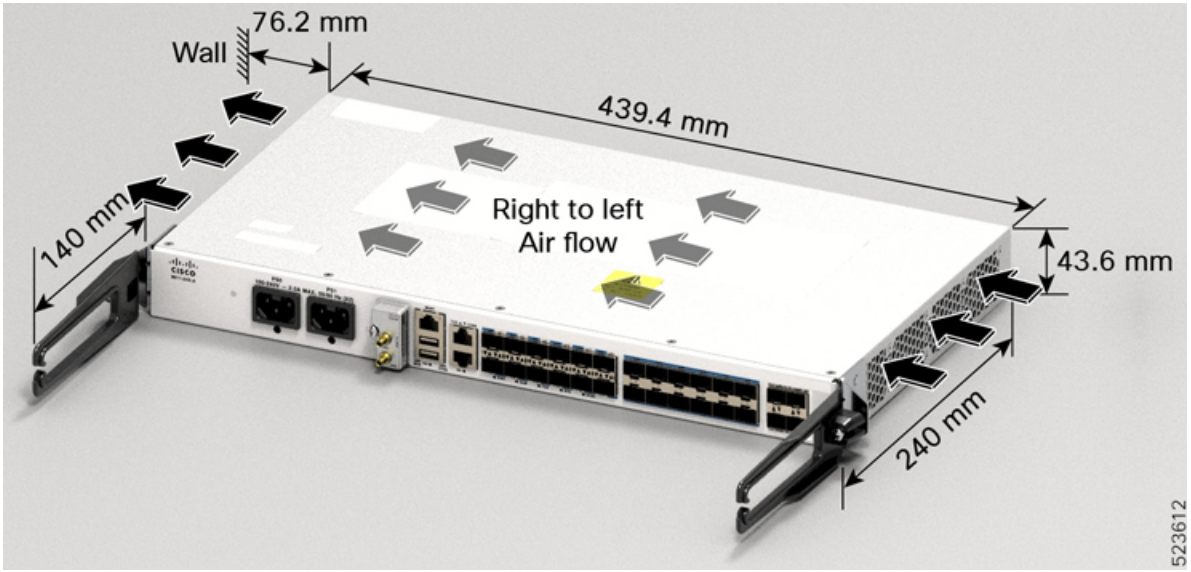


Note these points:

- When installing the router in a back-to-back position with another device, ensure that there's a minimum of 3.9 inches (10 centimeters) airflow clearance between the two devices.
- If airflow through the equipment rack and the routers that occupy it's blocked or restricted, or if the ambient air being drawn into the rack is too warm, an overtemperature condition may occur within the rack and the routers that occupy it.

- The site must be as dust-free as possible. Dust tends to clog the router fans, reducing the flow of cooling air through the equipment rack and the routers that occupy it, thereby increasing the risk of an overtemperature condition.
- Enclosed racks must have adequate ventilation. Ensure that the rack isn't congested because each router generates heat. An enclosed rack must have louvered sides and a fan to provide cooling air. The equipment generates heat near the bottom of the rack, which can be drawn upward into the intake ports of the equipment above.
- When mounting a router in an open rack, ensure that the rack frame doesn't block the exhaust fans.
- When rack-installed equipment fails, especially equipment in an enclosed rack, try operating the equipment by itself, if possible. Power off all the other equipment in the rack (and in adjacent racks) to give the router maximum cooling air and clean power.
- Avoid installing the router in a location in which the router air intake vents may draw in the exhaust air from adjacent equipment. Consider how the air flows through the router; the airflow direction is front to back, with ambient air drawn in from the vents located on the front panel of the router.

# Site Power Guidelines

The chassis has specific power and electrical wiring requirements. Adhering to these requirements ensures the reliable operation of the system. Follow these precautions and recommendations when planning your site power for the chassis:

- The redundant power option provides a second, identical power supply to ensure uninterrupted power supply.
- Connect each power supply to a separate input power source. Otherwise, it results in a total power failure to the system due to a fault in the external wiring or a tripped circuit breaker.
- To prevent loss of input power, ensure that the maximum load on each circuit is within the current ratings of the wiring and the breakers.
- Circuit breaker specifications—a maximum of 20A (North America) and 16A (Europe) for AC power feed.
- Check the power at your site before installation, and periodically after installation, to ensure that you are receiving clean power. If necessary, install a power conditioner.
- Provide proper grounding to avoid personal injury and damage to the equipment due to power surges or lightning striking power lines. The chassis ground must be attached to a central office or other interior ground system.



**Note** The chassis installation must comply with all the applicable codes, and is approved for use with only copper conductors. The ground bond-fastening hardware must be compatible and preclude loosening, deterioration, and electrochemical corrosion of hardware and joined material. Attachment of the chassis ground to a central office or other interior ground system must be made with a 6-AWG gauge wire copper ground conductor.

**Caution** The AC PSU requires external surge protection devices for installations where electrical surges higher than 2KV common mode and 2KV differential mode are expected. Failure to do so can result in permanent damage to the product.

The DC PSU requires external surge protection devices for installations where electrical surges higher than 2KV common mode and 1KV differential mode are expected. Failure to do so can result in permanent damage to the product.

## Electrical Circuit Requirements

Each router requires a dedicated electrical circuit. If you equip the router with dual-power feeds, provide a separate circuit for each power supply to avoid compromising the power redundancy feature.

The routers can be powered by a DC source. Ensure that equipment grounding is present and observe the power-strip ratings. Make sure that the total ampere rating of all the products plugged into the power strip does not exceed 80% of the rating.

# Site Cabling Guidelines

These are the guidelines for wiring and cabling at your site:

- When preparing your site for network connections to the router, consider:
  - the type of cable required for each component, and the cable limitations.

    Possible cable types are fiber, thick or thin coaxial, foil twisted-pair, or unshielded twisted-pair cabling.
  - the distance limitations for signaling, ElectroMagnetic Interference (EMI), and connector compatibility.
  - any additional interface equipment you need, such as transceivers, hubs, switches, modems, Channel Service Units (CSU), or Data Service Units (DSU).
- Before you install the router, keep all the additional external equipments and cables handy. For information about ordering these equipments and cables, contact a Cisco customer service representative.
- The extent of your network and the distances between the network interface connections depend, in part, on the following factors:
  - Signal type
  - Signal speed
  - Transmission medium
- The distance and rate limits referenced in the following sections are the IEEE-recommended maximum speeds and distances for signaling purposes. Use this information as a guideline when planning your network connections *prior to* installing the router.

- If wires exceed the recommended distances, or if wires pass between buildings, give special consideration to the effect of a lightning strike in your vicinity. The electromagnetic pulse caused by lightning or other high-energy phenomena can easily couple enough energy into unshielded conductors to destroy electronic devices. If you have had problems of this sort in the past, you may want to consult experts in electrical surge suppression and shielding.

# Asynchronous Terminal Connections

The router provides a console port to connect a terminal or computer for local console access. The router supports RS-232 asynchronous data with distance recommendations specified in the EIA-232 standard.

# Interference Considerations

When wires are run for any significant distance, there is a risk that stray signals will be induced on the wires as interference. If interference signals are strong, they may cause data errors or damage to the equipment.

The following sections describe the sources of interference and how to minimize their effects on the router system.

## Electromagnetic Interference

All the equipment powered by AC current can propagate electrical energy that can cause EMI and possibly affect the operation of other equipment. The typical sources of EMI are equipment power cords and power service cables from electric utility companies.

Strong EMI can destroy the signal drivers and receivers in the router and even create an electrical hazard by causing power surges through the power lines into installed equipment. These problems are rare, but could be catastrophic.

To resolve these problems, you need specialized knowledge and equipment that could consume substantial time and money. However, you can ensure that you have a properly grounded and shielded electrical environment, paying special attention to the need for electrical surge suppression.

## Radio Frequency Interference

When electromagnetic fields act over a long distance, Radio Frequency Interference (RFI) may be propagated. Building wiring can often act as an antenna, receiving the RFI signals and creating more EMI on the wiring.

If you use twisted-pair cable in your plant wiring with a good distribution of grounding conductors, the plant wiring is unlikely to emit radio interference. If you exceed the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal.

## Lightning and AC Power Fault Interference

If signal wires exceed the recommended cabling distances, or if signal wires pass between buildings, you should consider the effect that a lightning strike in your vicinity might have on the router.

The Electromagnetic Pulse (EMP) generated by lightning or other high-energy phenomena can couple enough energy into unshielded conductors to damage or destroy electronic equipment. If you have previously experienced such problems, you should consult with RFI and EMI experts to ensure that you have adequate electrical surge suppression and shielding of signal cables in your router operating environment.

# Tools and Equipment

You need the following tools and equipment to install and upgrade the router and its components:

- ESD-preventive cord and wrist strap
- Antistatic mat or antistatic foam
- Number 1 and Number 2 Phillips-head screwdrivers
- #12-24 pan-head screws to secure the router to the equipment rack
- Cables for connecting to the network ports (depending on the configuration)
- Ethernet hub, switch, or PC with a network interface card for connecting to the Ethernet ports
- Console terminal (an ASCII terminal or a PC running terminal emulation software) that is configured for 115200 baud, 8 data bits, no parity, no flow control, and 1stop bit
- Console cable for connecting to the console port
- Ratcheting torque screwdriver with a Phillips head that exerts up to 20-pound force per square inch (in-lb) or 0.02-kilograms force per square millimeter (kgf/mm2) of pressure
- Crimping tool as specified by the ground lug manufacturer
- Wire-stripping tools for stripping both 6-AWG and 14-AWG wires
- Tape measure and level

# Prepare Your Location

This section illustrates how the building that houses the chassis must be properly grounded to the earth ground.


*Figure 21: Building with Rack Room Connected to Earth Ground*

# Prepare Yourself

This section illustrates how to prepare yourself before removing the chassis from the sealed antistatic bag. The figures show how to wear the ESD strap around the wrist and how to connect the other end of the strap to the ground. ESD wrist straps are the primary means of controlling static charge on personnel.

Note: These images are for only representation purposes. The chassis' actual appearance and size would vary.

***Figure 22: Wearing the ESD Strap***

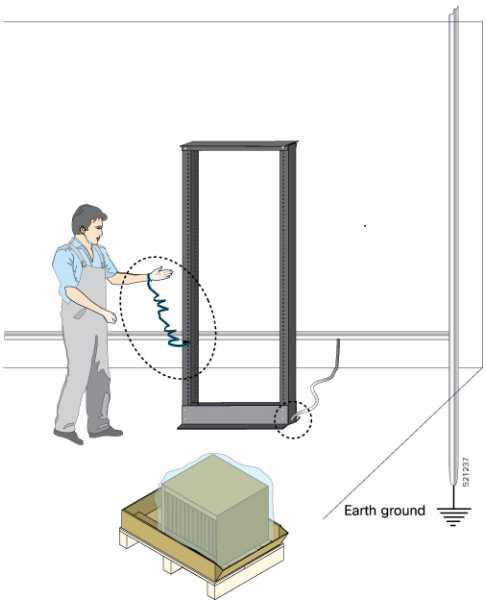


# Prepare Rack for Router Installation

Install the chassis into a two-post standard rack with standard horizontal mounting rails. Before you mount the chassis into the rack, we recommend that you do the following:

### Procedure

**Step 1** Place the rack where you plan to install the chassis. Ensure that the rack is grounded to earth.

**Step 2** Secure the rack to the floor.

To bolt the rack to the floor, a floor bolt kit (also called an anchor embedment kit) is required. For information on bolting the rack to the floor, consult a company that specializes in floor mounting kits (such as Hilti; see Hilti.com for details). Make sure that floor mounting bolts are accessible, especially if an annual retorquing of bolts is required.

# Unpack the Cisco 8010 Large and Medium Density Routers

Ensure that there is sufficient room around the chassis pallet for unpacking.


1. Remove the accessory tray and the packing material.
2. Carefully set the packing material aside.

**Tip** Be sure to save the packaging in case you need to return any of the components products.

**Note** These images are for only representation purposes. The chassis' actual appearance and size would vary.

## Cisco 8011-4G24Y4H-I Router

*Figure 23: Unpacking the Cisco 8011-4G24Y4H-I Router*

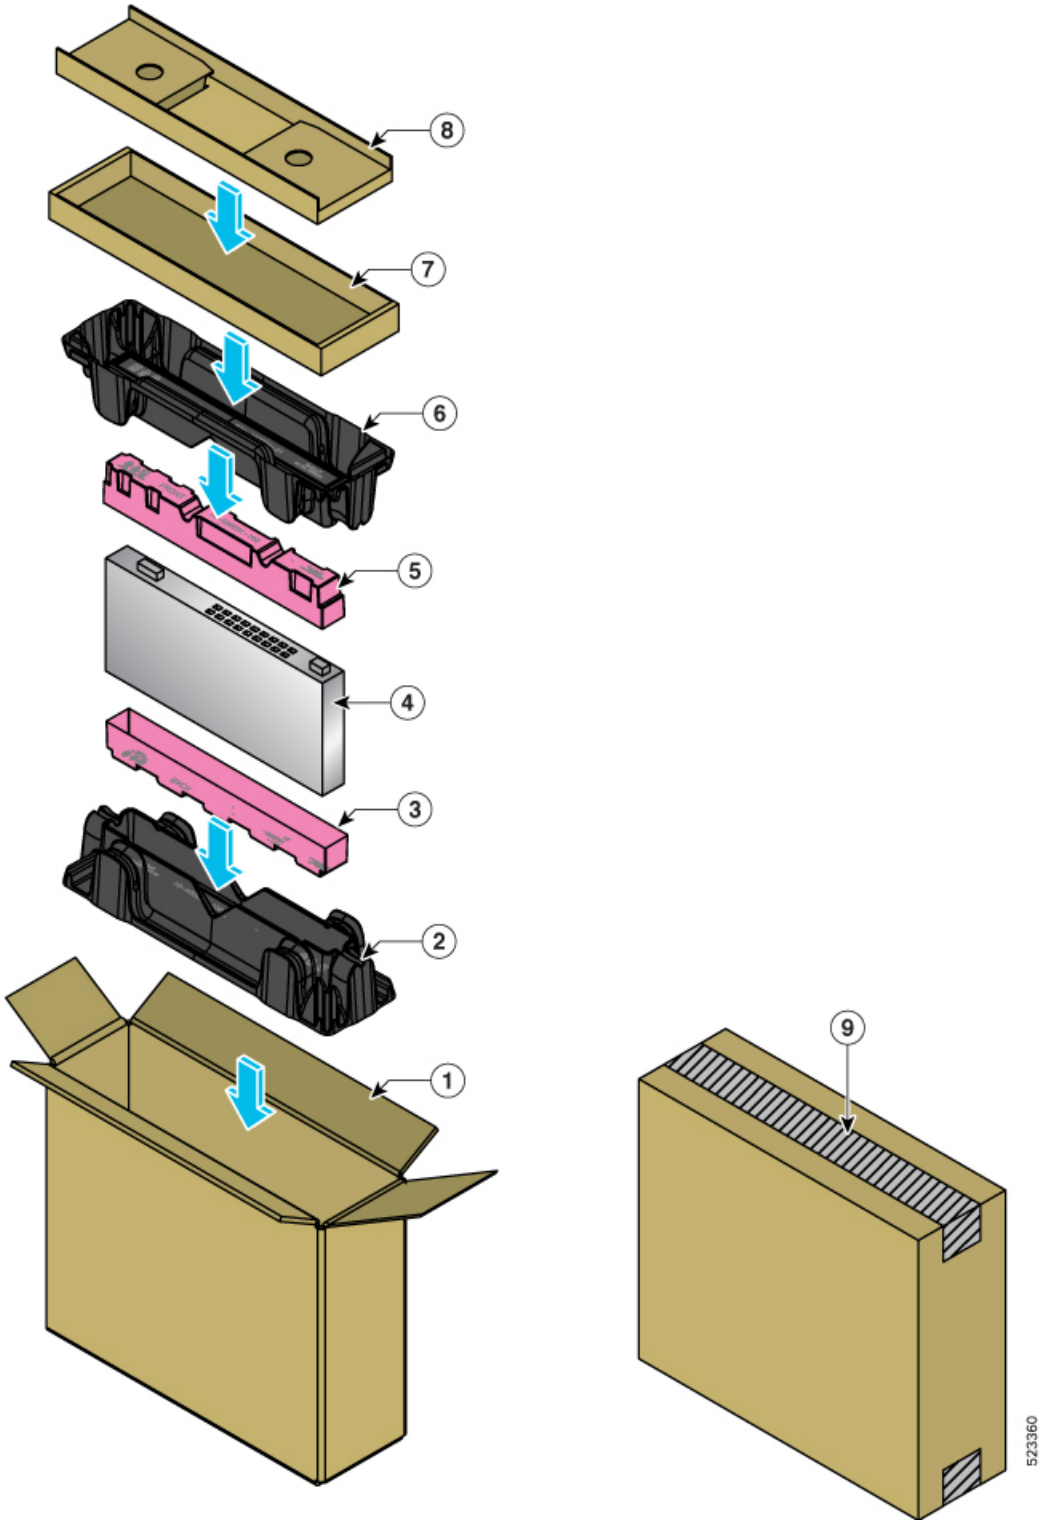


| | | | |
|---|---|---|---|
| 1 | Regular Slotted Container (shipping box) | 2, 6 | Foam end caps |
| 3, 5 | Corrugated caps | 4 | Front end of the product |
| 7 | Accessory tray | 8 | Corrugated insert |
| 9 | Carton sealing tape | | |

*Table 10: Accessories Kit for Cisco 8011-4G24Y4H-I Router*

| 19- inch Rack Mount Brackets | 23- inch Rack Mount Brackets | ETSI Rack Mount Brackets | Wall Mount Brackets | Desktop Brackets | Cable Management Brackets |
|---|---|---|---|---|---|
| RCKMT-19-V1 | RCKMT-23-V1 | RCKMT-ETSI-V1 | 53-101650-01 | NA | CBL-BRKT-V1 |

## Cisco 8011-32Y8L2H2FH Router

*Figure 24: Unpacking the Cisco 8011-32Y8L2H2FH Router*

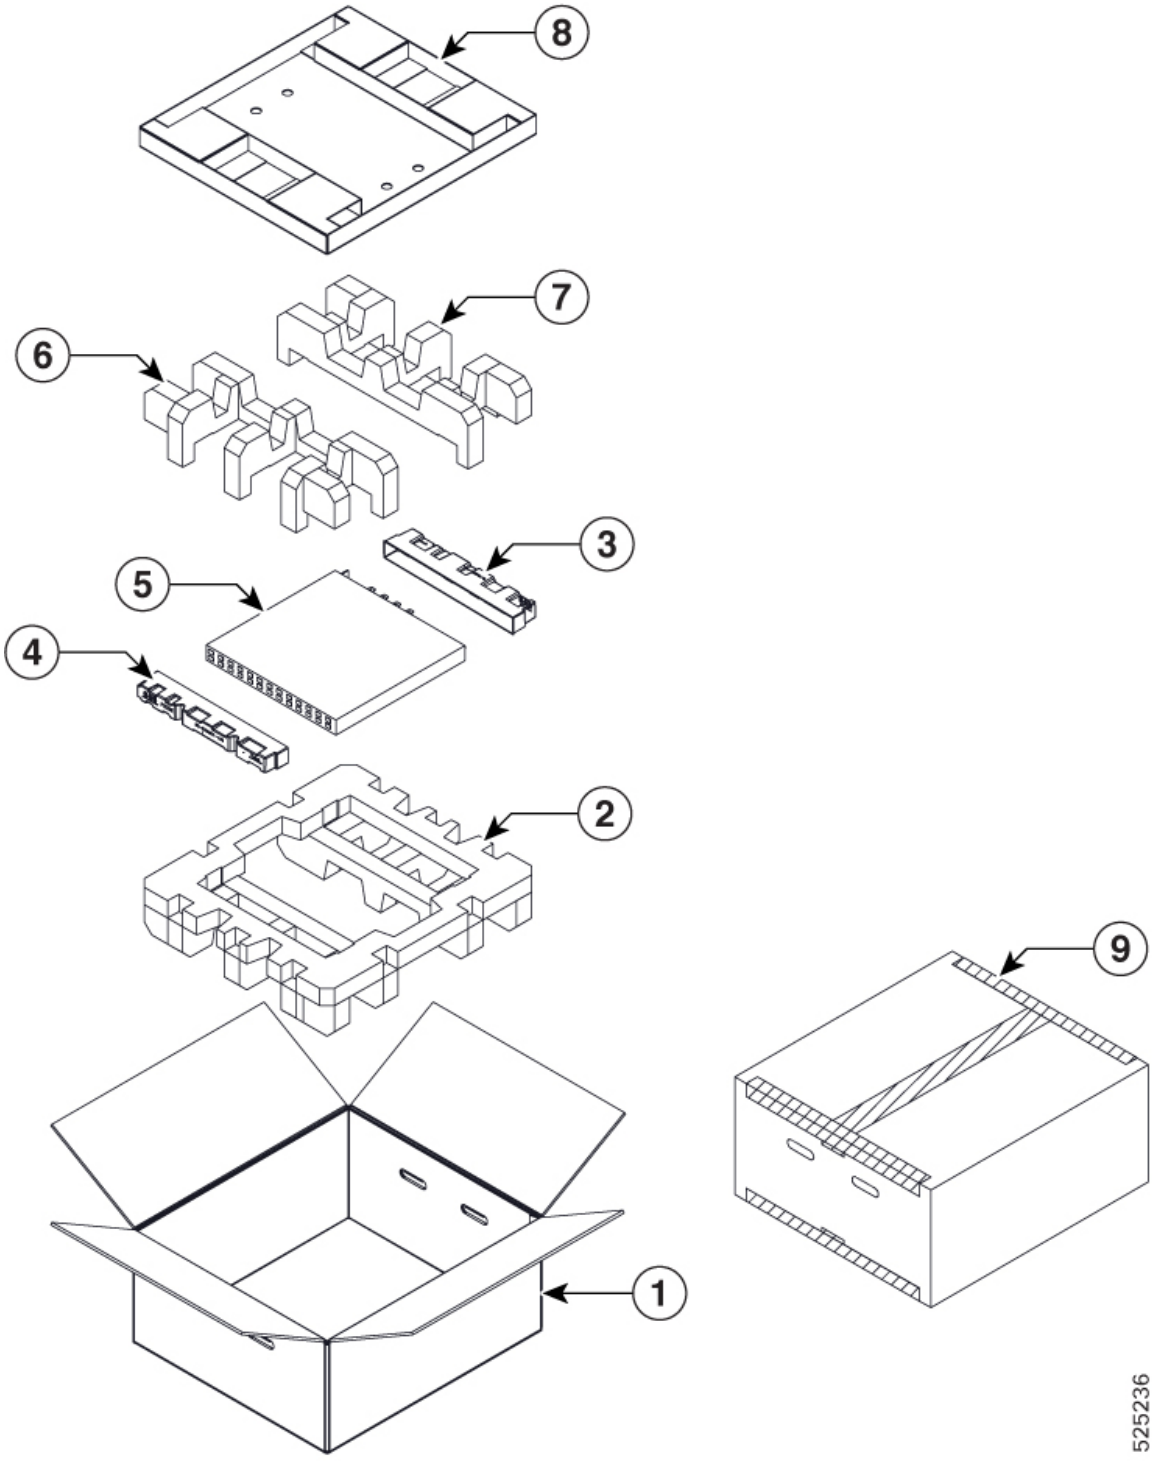


| | | | |
|---|---|---|---|
| 1 | Regular slotted container (shipping box) | 2 | Bottom foam cap |

| | | | |
|---|---|---|---|
| 3 | Rear thermofoam-end cap | 4 | Front thermofoam-end cap |
| 5 | Top view of the product | 6, 7 | Top foam caps |
| 8 | Accessory tray | 9 | Carton sealing tape |


*Table 11: Accessories Kit for Cisco 8011-32Y8L2H2FH Router*

| 19- inch Rack Mount Brackets | 23- inch Rack Mount Brackets | ETSI Rack Mount Brackets | Desktop Brackets | Cable Management Brackets |
|---|---|---|---|---|
| RCKMT-19-KIT1 (2-post variant) | RCKMT-23-KIT1 (2-post variant) | RCKMT-ETSI-KIT1 (2-post variant) | NA | CBL-BRKT-V2 |
| RCKMT-19-KIT2 (4-post variant) | RCKMT-23-KIT2 (4-post variant) | RCKMT-ETSI-KIT2 (4-post variant) | NA | NA |

**Caution** If the product is not in use, store the router in the initial packaged condition or in an ESD PE sealed bag with silica gel.

## Cisco 8011-12G12X4Y Router


*Figure 25: Unpacking the Cisco 8011-12G12X4Y Router*

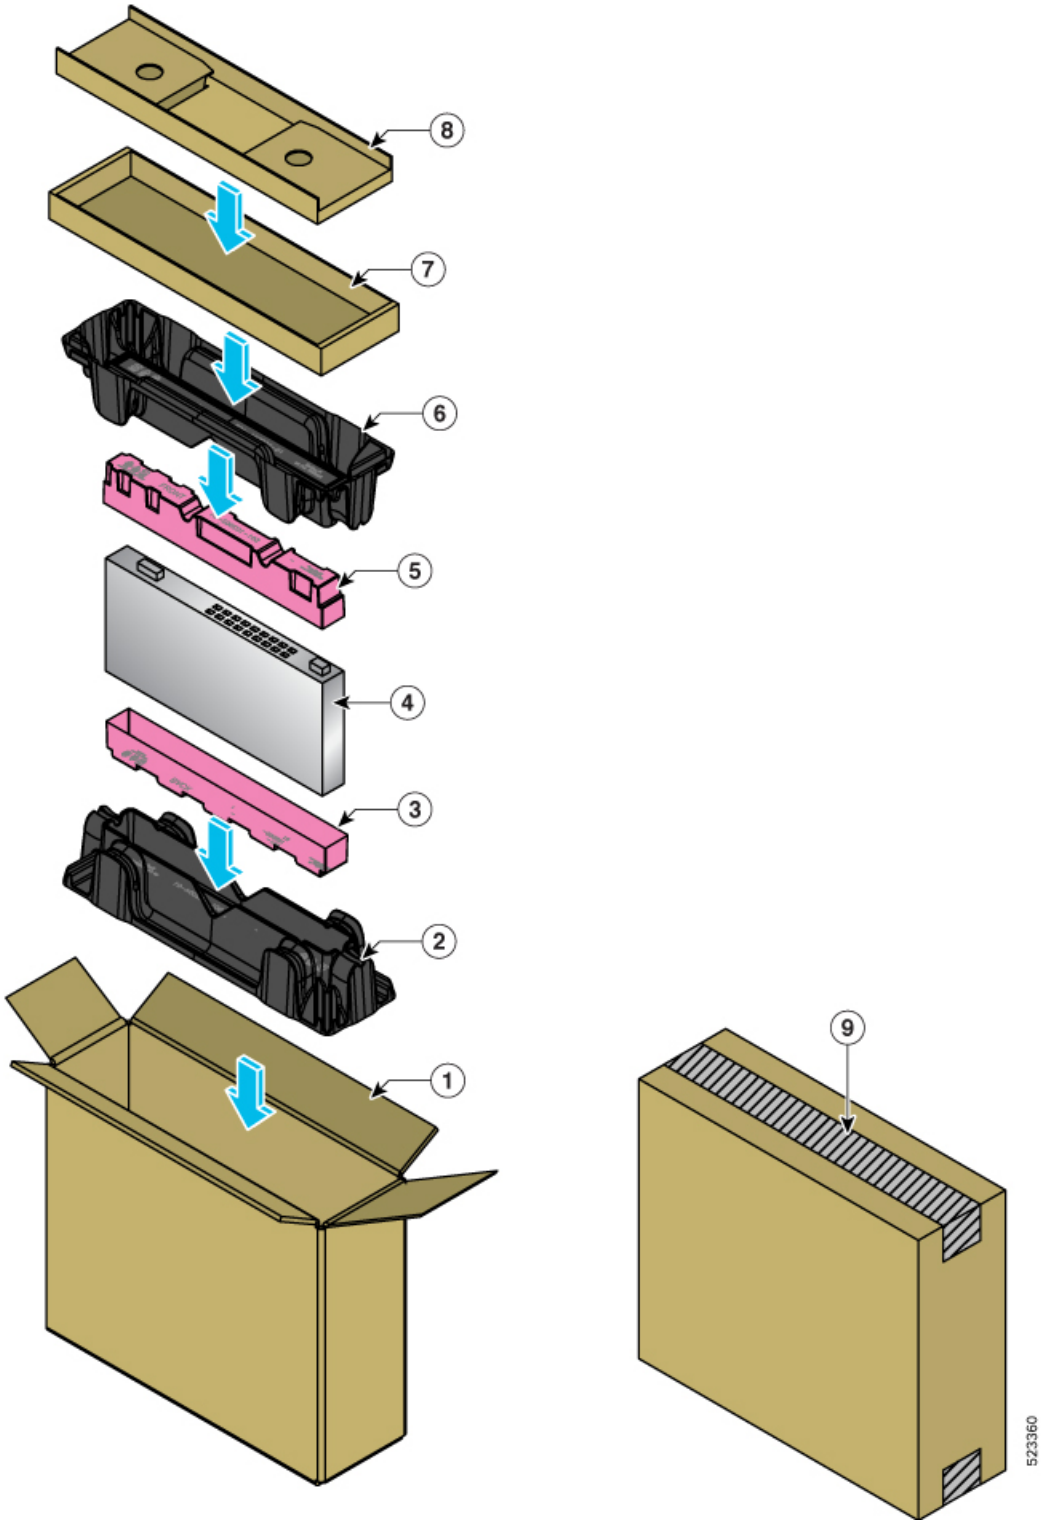

| | | | |
|---|---|---|---|
| 1 | Regular Slotted Container (shipping box) | 2, 6 | Foam end caps |
| 3, 5 | Corrugated caps | 4 | Front end of the product |
| 7 | Accessory tray | 8 | Corrugated insert |
| 9 | Carton sealing tape | | |

*Table 12: Accessories Kit for 8010 Router*

| 19- inch Rack Mount Brackets | 23- inch Rack Mount Brackets | ETSI Rack Mount Brackets | Wall Mount Brackets | Desktop Brackets | Cable Management Brackets |
|---|---|---|---|---|---|
| RCKMT-19-A<br>RCKMT-19-D | RCKMT-23-A<br>RCKMT-23-D | RCKMT-ETSI-A<br>RCKMT-ETSI-D | NA | NA | CBL-BRKT-V1 |

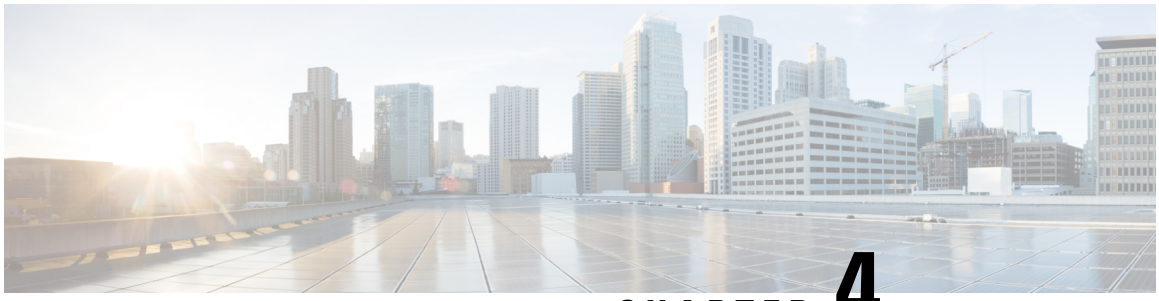

CHAPTER 4

# Install the Router

Before you begin this task, ensure that you have read and understood the safety warnings.

**Note** The installation instructions of the Cisco 8010 Large and Medium Density Routers are similar, and any differences between the router variants are specifically called out.

The illustrations are for reference purpose only, the actual router may vary based on your variant of Cisco 8010 Large and Medium Density Routers.

Installing the the Cisco router involves the following tasks:


- Rack Mounting the Router, on page 55
- Ground the Router, on page 93
- Connect to an AC Power Source, on page 97
- Connect to a DC Power Source, on page 101
- Port Connection Guidelines, on page 107
- Console Port Connection, on page 107
- Management Ethernet Port Connection, on page 110
- Connecting Cables to Timing Interfaces Card, on page 111
- Inserting and Securing Timing Interfaces Card with GNSS Module, on page 112
- Install and Remove Transceiver Module, on page 113
- Connect Interface Ports, on page 119
- Maintain Transceivers and Optical Cables, on page 119
- Installing the Air Filter (AF-CVR-C), on page 120


# Rack Mounting the Router

You can choose to either set up the router on a rack or wall mount it.

We recommend that you use the following racks while mounting the router.

*Figure 26: Rack specification EIA (19 inches and 23 inches)*

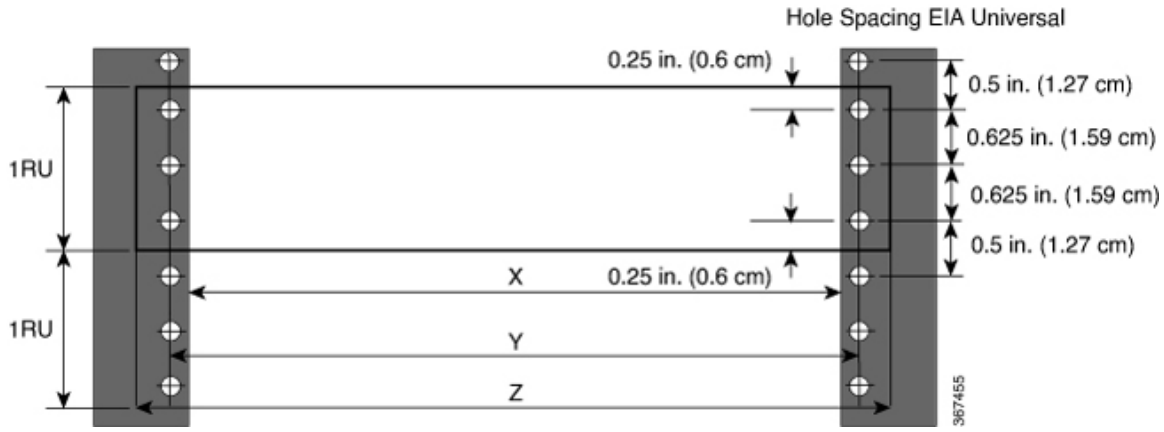
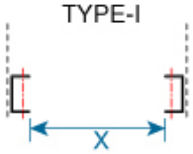
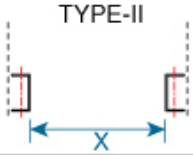
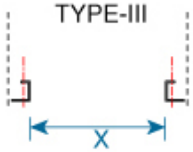
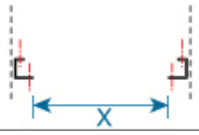



*Table 13: Rack specification EIA (19 inches and 23 inches)*

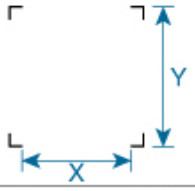
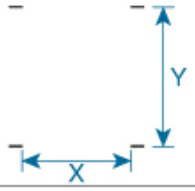
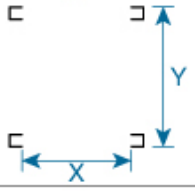
| Post Type | Rack Type | Rack Front Opening (X) | Rack Mounting Hole Centre-Centre (Y) | Mounting Flange Dimension (Z) |
|---|---|---|---|---|
| 4 Post | 19 inches (48.3 centimeters) | 17.75 inches (45 centimeters) | 18.31 inches (46.5 centimeters) | 19 inches (48.2 centimeters) |
| 2 Post | | | | |
| 4 Post | 23 inches (58.4 centimeters) | 21.75 inches (55.24 centimeters) | 22.31 inches (56.6 centimeters) | 23 inches (58.4 centimeters) |
| 2 Post | | | | |

*Figure 27: Cisco 8011-4G24Y4H-I, Cisco 8011-12G12X4Y-A, Cisco 8011-12G12X4Y-D: Two Post Rack Type*

| 2 – Post Type (Hole EIA Universal) | X – 19" Rack | Compatibility | X-23" Rack | Compatibility |
|---|---|---|---|---|
| TYPE-I   | 17.75" (450.8 mm) | Yes | 21.75" (552.45mm) | Yes |
| | 17.50" (444.5 mm) | No | 21.75" (552.45mm) | Yes |
| TYPE-II   | 17.75" (450.8 mm) | Yes | 21.75" (552.45mm) | Yes |
| | 17.50" (444.5 mm) | No | 21.75" (552.45mm) | Yes |
| TYPE-III   | 17.75" (450.8 mm) | Yes | 21.75" (552.45mm) | Yes |
| | 17.50" (444.5 mm) | No | 21.75" (552.45mm) | Yes |
| L-TYPE   | 17.75" (450.8 mm) | Yes | 21.75" (552.45mm) | Yes |
| | 17.50" (444.5 mm) | No | 21.75" (552.45mm) | Yes |
| Uneven-TYPE   | 17.75" (450.8 mm) | Yes | 21.75" (552.45mm) | Yes |
| | 17.50" (444.5 mm) | No | 21.75" (552.45mm) | Yes |

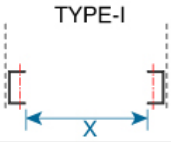
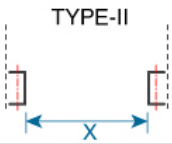
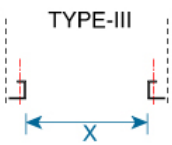
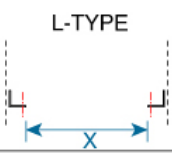
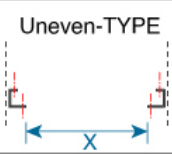
367457

*Figure 28: Cisco 8011-4G24Y4H-I, Cisco 8011-12G12X4Y-A, Cisco 8011-12G12X4Y-D: Four Post Rack Type*

| 4 – Post Type (Hole EIA Universal) | | Width Available (X) | Compatibility |
|---|---|---|---|
| All 23” Type rack | | 552.45mm (21.75”) | Yes |
| All ETSI rack (21” rack) | | 500.0mm (19.68”) | Yes |
| 19” Type rack<br>L-Type Post |  | 17.75” (450.8 mm) | Yes |
| | | 17.50” (444.5 mm) | No |
| 19” Type Racks<br>Flat-Post |  | 17.75” (450.8 mm) | Yes |
| | | 17.50” (444.5 mm) | No |
| 19” Type racks<br>C- Type Post |  | 17.75” (450.8 mm) | Yes |
| | | 17.50” (444.5 mm) | No |

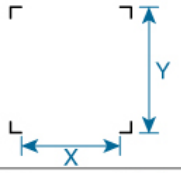
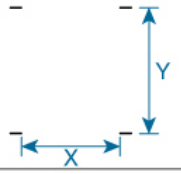
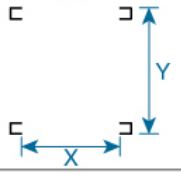
367456

*Figure 29: Cisco 8011-32Y8L2H2FH : Two Post Rack Type*

| 2 – Post Type (Hole EIA Universal) | X – 19" Rack | Compatibility | X-23" Rack | Compatibility |
|---|---|---|---|---|
|  | 17.75" (450.8 mm) | Yes | 21.75" (552.45mm) | Yes |
| | 17.50" (444.5 mm) | No | 21.75" (552.45mm) | Yes |
|  | 17.75" (450.8 mm) | Yes | 21.75" (552.45mm) | Yes |
| | 17.50" (444.5 mm) | No | 21.75" (552.45mm) | Yes |
|  | 17.75" (450.8 mm) | Yes | 21.75" (552.45mm) | Yes |
| | 17.50" (444.5 mm) | No | 21.75" (552.45mm) | Yes |
|  | 17.75" (450.8 mm) | No | 21.75" (552.45mm) | No |
| | 17.50" (444.5 mm) | No | 21.75" (552.45mm) | No |
|  | 17.75" (450.8 mm) | No | 21.75" (552.45mm) | No |
| | 17.50" (444.5 mm) | No | 21.75" (552.45mm) | No |

527047

*Figure 30: Cisco 8011-32Y8L2H2FH : Four Post Rack Type*

| 4 – Post Type (Hole EIA Universal) | | Width Available (X) | Compatibility |
|---|---|---|---|
| All 23” Type rack | | 552.45mm (21.75”) | Yes |
| All ETSI rack (21” rack) | | 500.0mm (19.68”) | Yes |
| 19” Type rack<br>L-Type Post |  | 17.75” (450.8 mm) | Yes |
| | | 17.50” (444.5 mm) | No |
| 19” Type Racks<br>Flat-Post |  | 17.75” (450.8 mm) | Yes |
| | | 17.50” (444.5 mm) | No |
| 19” Type racks<br>C- Type Post |  | 17.75” (450.8 mm) | No |
| | | 17.50” (444.5 mm) | No |

527046

# Rack Mounting Brackets

The router is shipped with rack mounting brackets that are to be secured on the sides of the router.

**Caution** If the rack is on wheels, ensure that the brakes are engaged or the rack is otherwise stabilized.

### Cisco 8011-4G24Y4H-I Router

*Table 14: Rack-Mount Kit Product Identification Number*

| Product Identification Number | Description |
|---|---|
| RCKMT-19-V1 | 19 inch rack mounting kit |
| RCKMT-23-V1 | 23 inch rack mounting kit |
| RCKMT-ETSI-V1 | ETSI rack mounting kit |
| 53-101699-01 | Grounding lug kit |

| Product Identification Number | Description |
|---|---|
| CBL-BRKT-V1 | Cable management |
| 53-101650-01 | Wall mount bracket |

### Cisco 8011-32Y8L2H2FH Router

*Table 15: Rack-mount kit product identification number*

| Product identification number | Description |
|---|---|
| RCKMT-19-KIT1 | 19-inch 2-post rack mounting kit |
| RCKMT-19-KIT2 | 19-inch 4-post rack mounting kit |
| RCKMT-23-KIT1 | 23-inch 2-post rack mounting kit |
| RCKMT-23-KIT2 | 23-inch 4-post rack mounting kit |
| RCKMT-ETSI-KIT1 | ETSI 2-post rack mounting kit |
| RCKMT-ETSI-KIT2 | ETSI 4-post rack mounting kit |
| CBL-BRKT-V2 | Cable management |

### Cisco 8011-12G12X4Y Router

*Table 16: Rack-Mount Kit Product Identification Number*

| Product Identification Number | Description |
|---|---|
| RCKMT-19-A<br>RCKMT-19-D | 19 inch rack mounting kit |
| RCKMT-23-A<br>RCKMT-23-D | 23 inch rack mounting kit |
| RCKMT-ETSI-A<br>RCKMT-ETSI-D | ETSI rack mounting kit |
| CBL-BRKT-V1 | Cable management |

*Table 17: Router Rack-Mount Kit*

| Quantity | Part Description |
|---|---|
| 2 | Rack-mount brackets |
| 8 (48-101850-01) | M3 x 0.5 x 6-mm Phillips flat-head screws |

| Quantity | Part Description |
|---|---|
| 2 (48-101620-01) | SCR, M, PAN, PH, SEX, 10-32 x 0.365"L, CSwZN, nickel alloy |
| 1 (32-0619-01) | LUG, FAST, UNIN, #6AWG, #10, 2 HOLES |
| 4 (48-101690-01) | SCR, M, PAN, PH, 12-24 x 0.49"L, CSwZN, nickel alloy |

**Caution**

- Ensure that you secure the lugs only with the Cisco-provided screw or a Phillips head screw with an integrated washer of 10-32 x 0.3125 inch. Secure the screws only while assembling the lugs.
- Using excessive length screw for mounting the grounding lug may cause short-circuit as it may come in contact with parts inside the router.


# Mounting the Router on the Rack

### Cisco 8011-4G24Y4H-I Router

To mount the router on the rack:


1. Attach the rack-mount brackets and the cable management to the router as follows:
   a. The router has port-side intake modules, position the router so that its ports are facing the cold aisle.
   b. Position the bracket ears facing front or middle rack-mount, on the side of the chassis so that the holes are aligned.
   c. Use four M4 screws to attach the brackets to the chassis. Tighten the M4 screws to 13.3 inch-pounds (1.5 Nm).

*Figure 31: Installing 19 inch Rack-Mount Brackets in the Front*

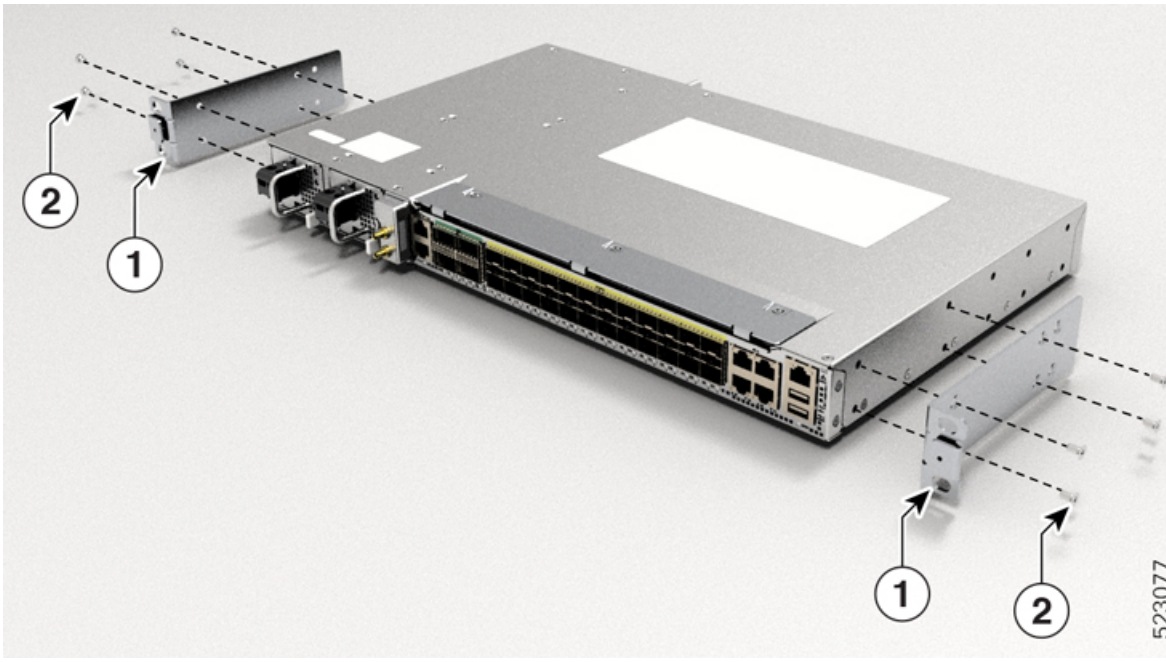


| | |
|---|---|
| 1 | Mount Bracket |
| 2 | Screw |


*Figure 32: Installing Cable Management and 19 inch Rack-Mount Brackets in the Front*

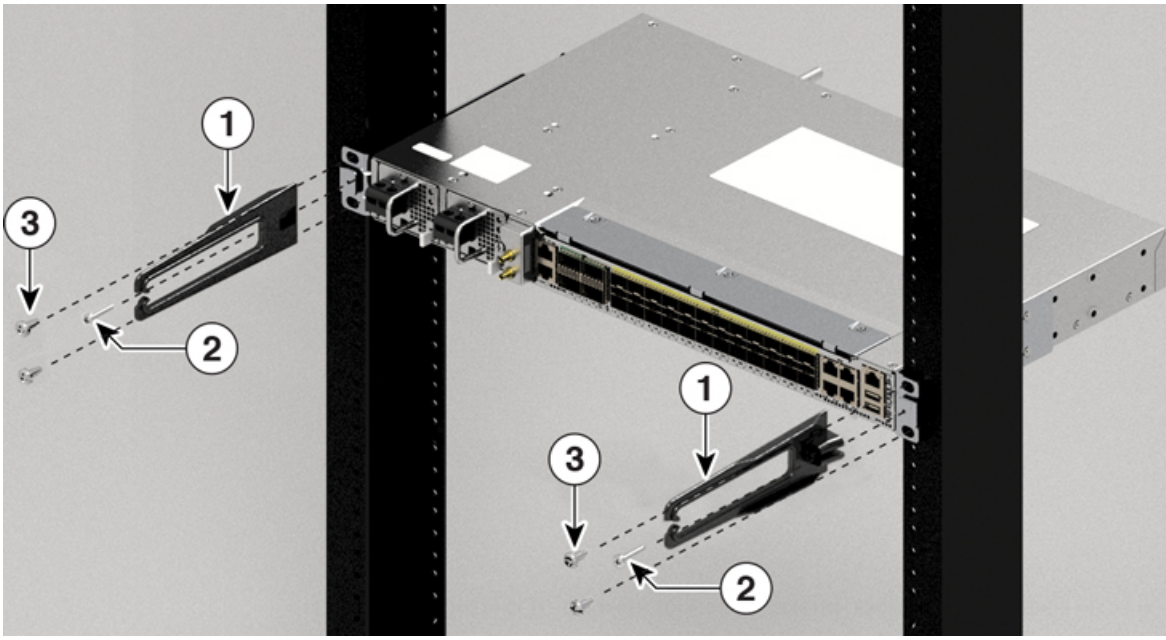


| | |
|---|---|
| 1 | Cable Management Bracket |


| | |
|---|---|
| 2 | Cable Management Screw |
| 3 | Screw |

*Figure 33: Installing 19 inch Rack-Mount Brackets in the Middle*

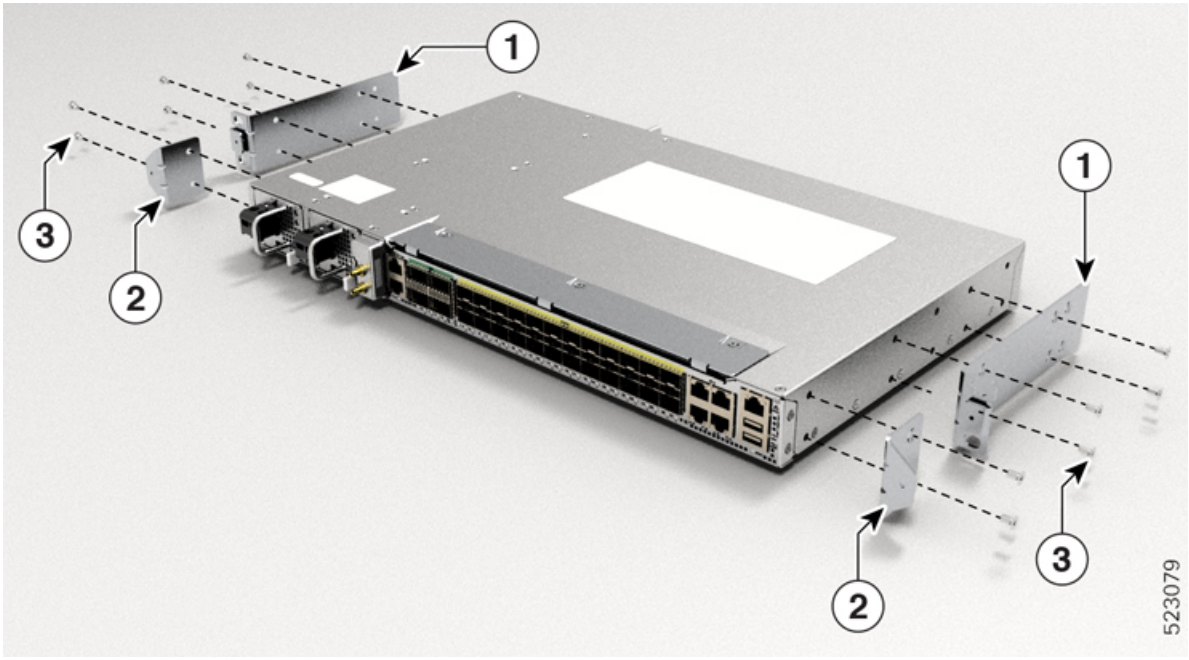



| | |
|---|---|
| 1 | Mount Bracket |
| 2 | Cable Management Bracket |
| 3 | Screw |

*Figure 34: Installing Cable Management and 19 inch Rack-Mount Brackets in the Middle*

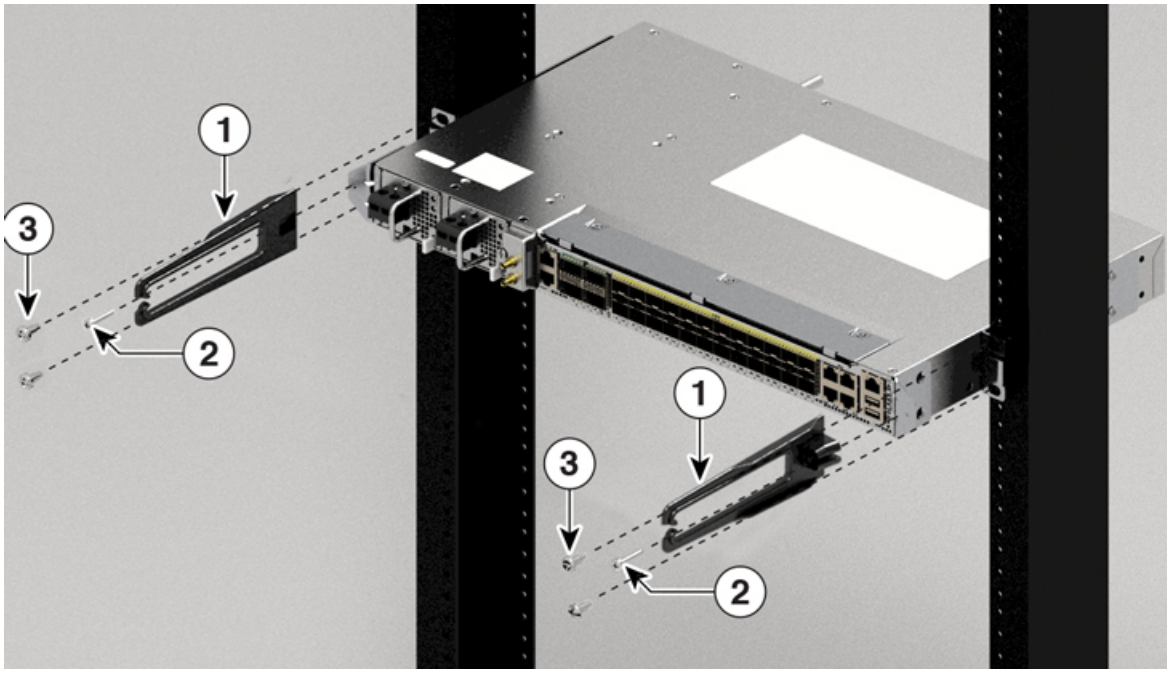



| | |
|---|---|
| 1 | Cable Management Bracket |
| 2 | Cable Management Screw |
| 3 | Screw |

*Figure 35: Installing 23 inch Rack-Mount Brackets in the Front*

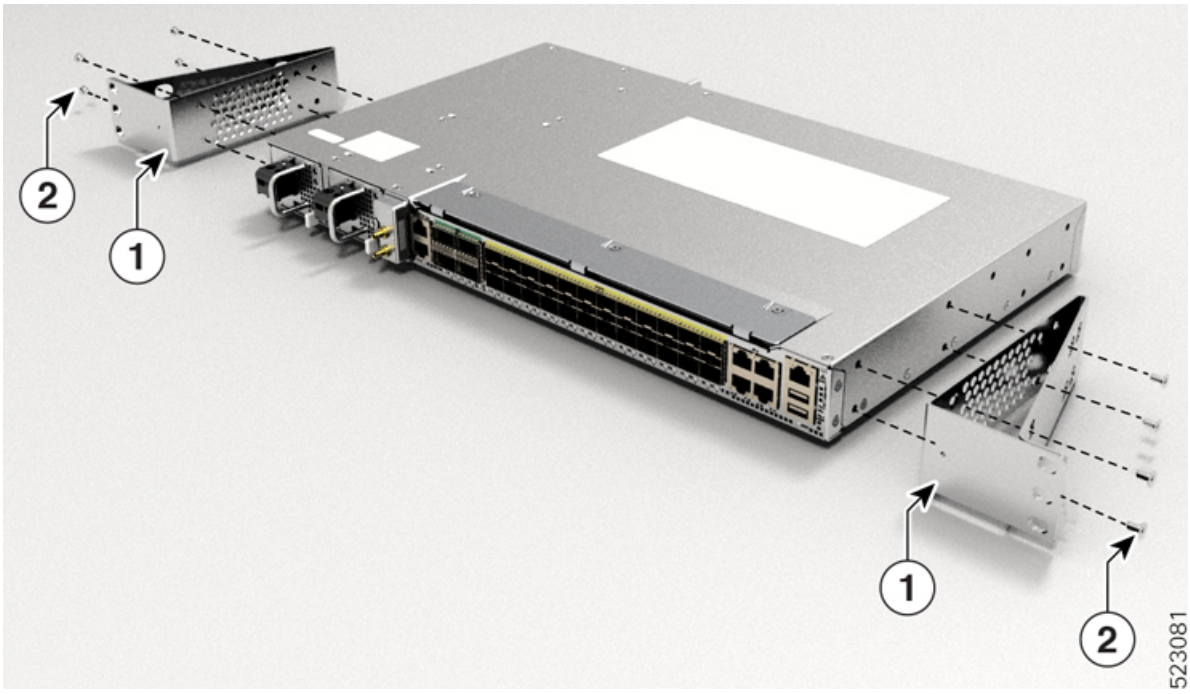


| | |
|---|---|
| 1 | Mount Bracket |
| 2 | Screw |


*Figure 36: Installing Cable Management and 23 inch Rack-Mount Brackets in the Front*

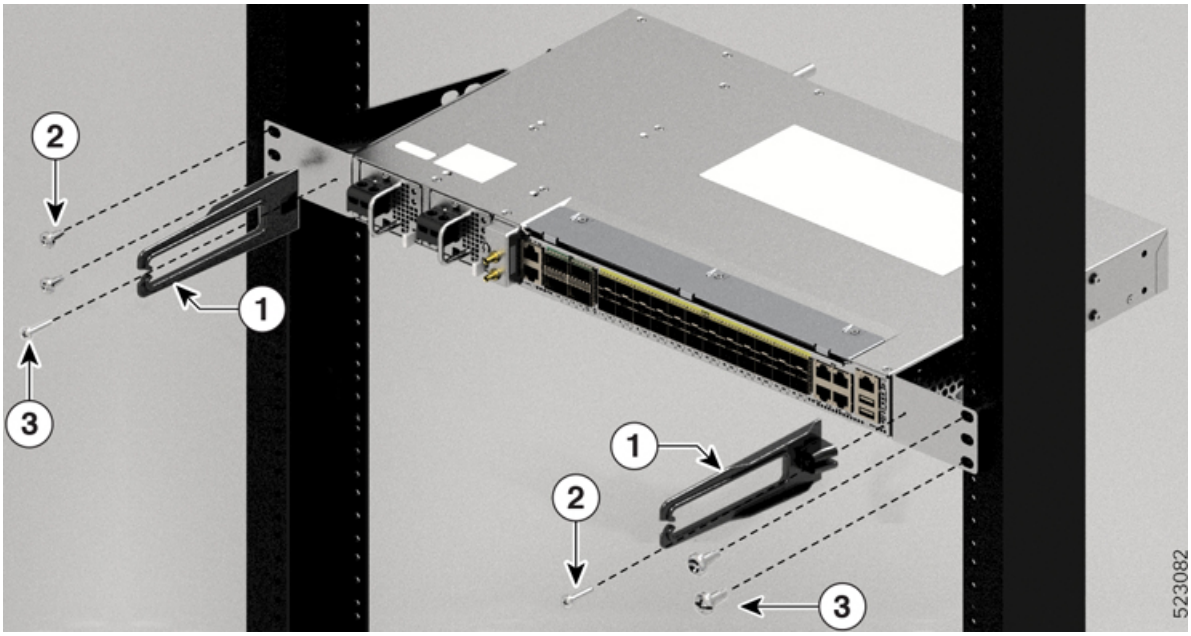


| | |
|---|---|
| 1 | Cable Management Bracket |


| | |
|---|---|
| 2 | Cable Management Screw |
| 3 | Screw |

*Figure 37: Installing 23 inch Rack-Mount Brackets in the Middle*

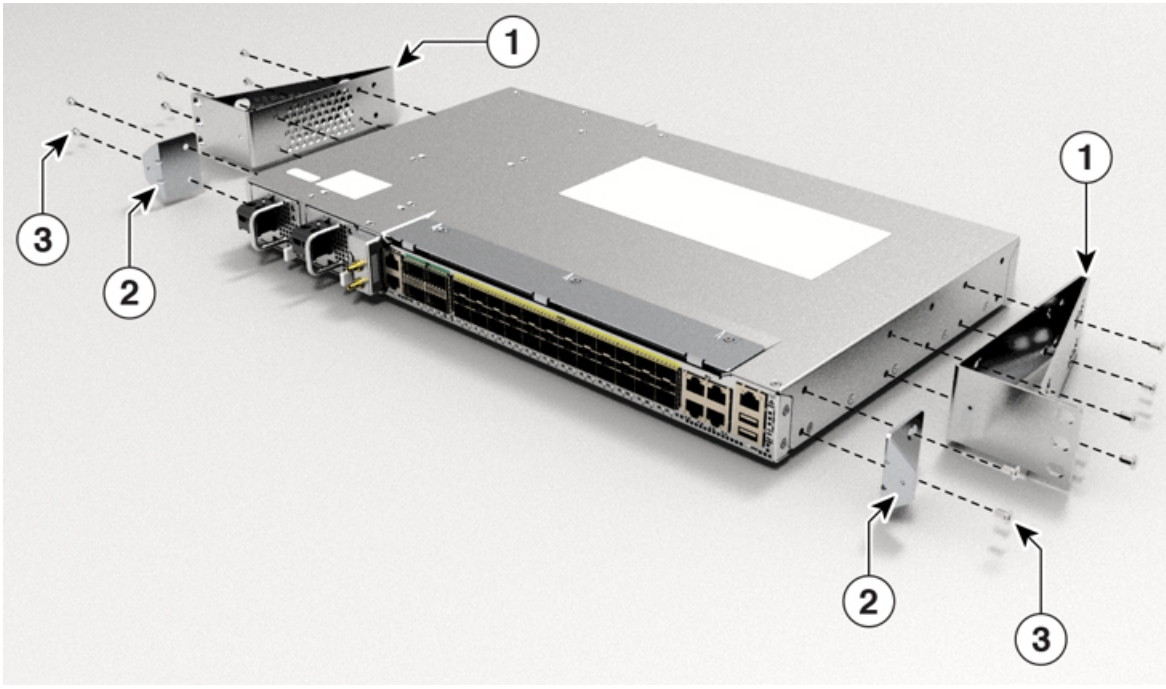



| | |
|---|---|
| 1, 2 | Mount Bracket |
| 3 | Screw |

*Figure 38: Installing Cable Management and 23 inch Rack-Mount Brackets in the Middle*

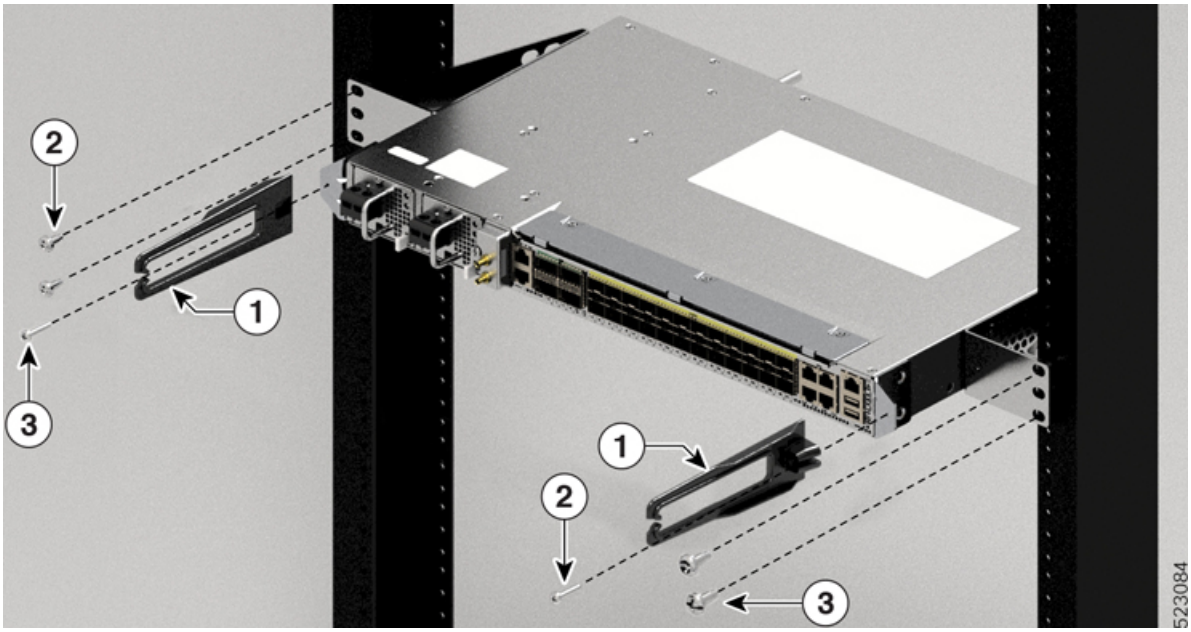



| | |
|---|---|
| 1 | Cable Management Bracket |
| 2 | Cable Management Screw |
| 3 | Screw |

*Figure 39: Installing ETSI Rack-Mount Brackets in the Front*

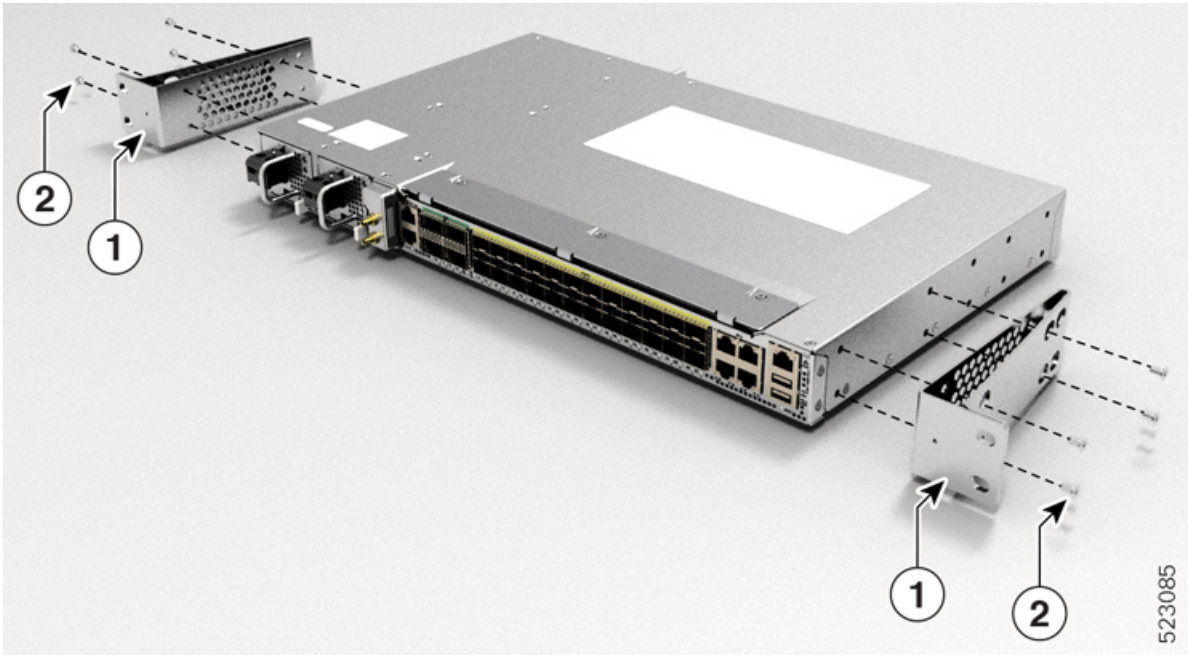


| | |
|---|---|
| 1 | Mount Bracket |
| 2 | Screw |

*Figure 40: Installing Cable Management and ETSI Rack-Mount Brackets in the Front*

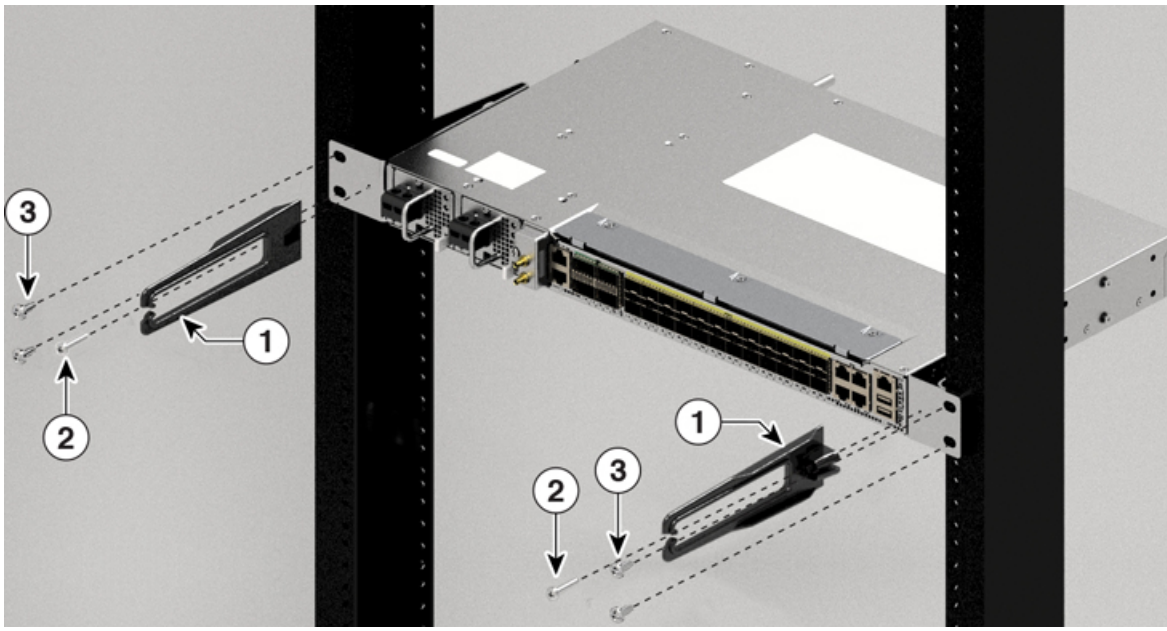



| | |
|---|---|
| 1 | Cable Management Bracket |
| 2 | Cable Management Screw |
| 3 | Screw |

*Figure 41: Installing ETSI Rack-Mount Brackets in the Middle*

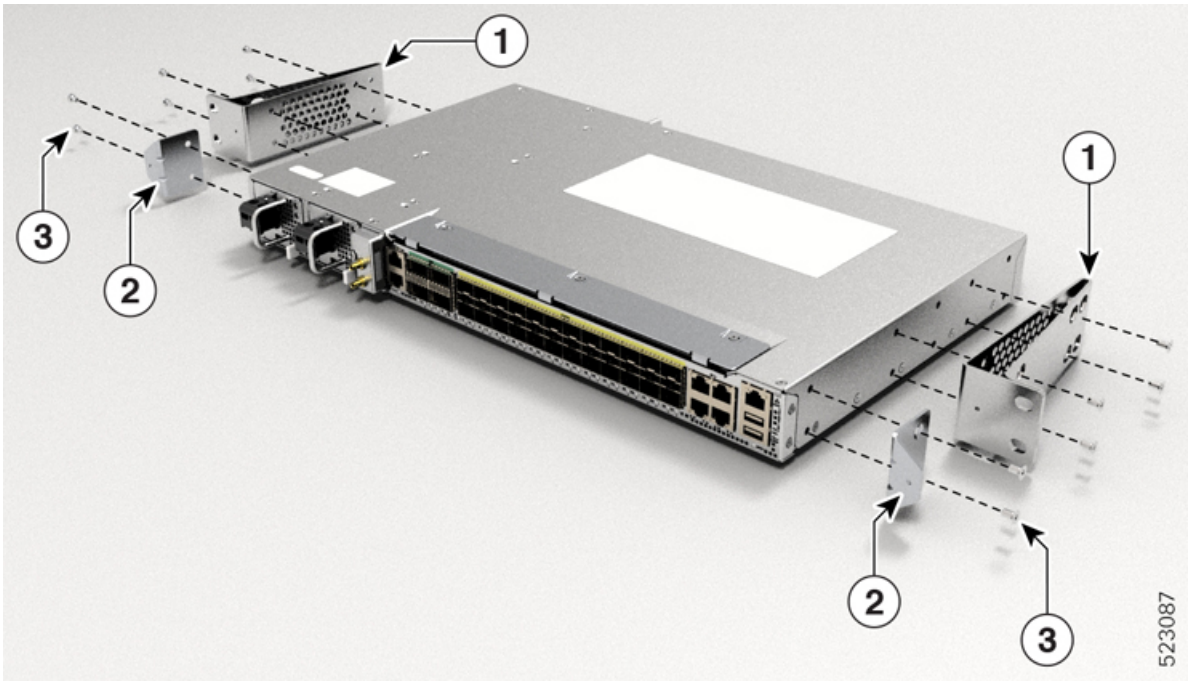


| | |
|---|---|
| 1,2 | Mount Bracket |
| 3 | Screw |

*Figure 42: Installing Cable Management and ETSI Rack-Mount Brackets in the Middle*

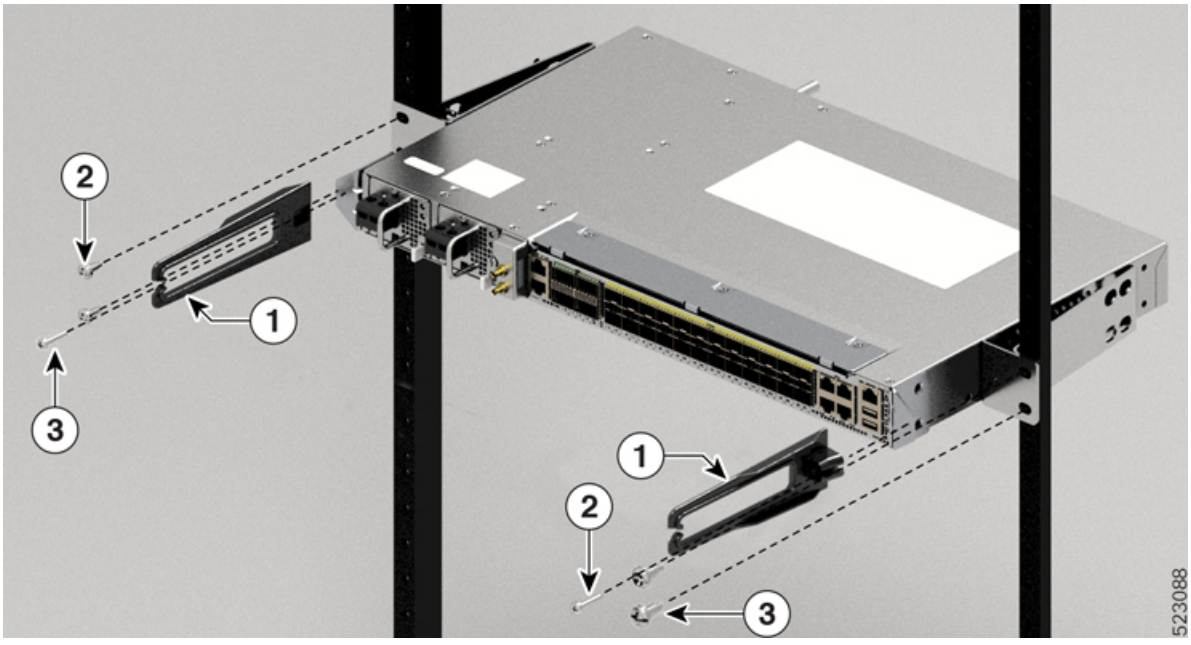


| | |
|---|---|
| 1 | Cable Management Bracket |

| | |
|---|---|
| 2 | Cable Management Screw |
| 3 | Screw |

**d.** Repeat Steps 1b and 1c with the other rack-mount bracket on the other side of the router.

**e.** Use four 12-24 screws and mount the router to the rack.

**2.** Install the router onto the 2-post rack as follows:

**a.** Lift and position the router into position between the two rack posts.

**b.** Move the router until the rack-mount brackets come in contact with the two rack posts.

**c.** Hold the chassis at level and have another while the second person inserts two screws 12-24 in each of the two rack-mount brackets (using a total of four screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails.

**d.** Tighten the 12-24 screws to 30 in-lb (3.39 N.m).

### Cisco 8011-32Y8L2H2FH – Two-post and four-post sliders

***Figure 43: Cisco 8011-32Y8L2H2FH - Two-post and four-post sliders***

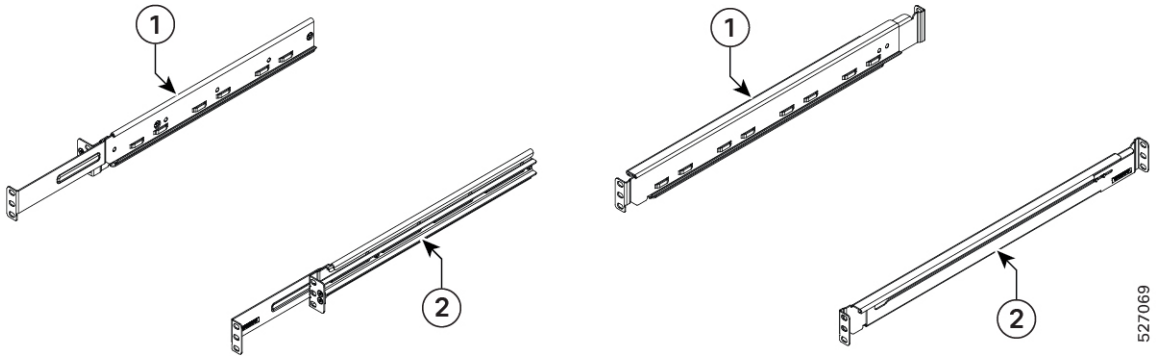



***Table 18: Cisco 8011-32Y8L2H2FH - Two-post slider***

| | |
|---|---|
| 1 | LH slider assembly (800-50378-01) |
| 2 | RH slider assembly (800-50377-01) |

***Table 19: Cisco 8011-32Y8L2H2FH - Four-post slider***

| | |
|---|---|
| 1 | LH slider assembly (800-50376-01) |
| 2 | RH slider assembly (800-50375-01) |

**Note** Check the part number marking sticker on the slider to identify whether it is a LH or RH slider assembly.

### Cisco 8011-32Y8L2H2FH – Four-post LH and RH sliders

*Figure 44: Cisco 8011-32Y8L2H2FH – Four-post LH and RH sliders*

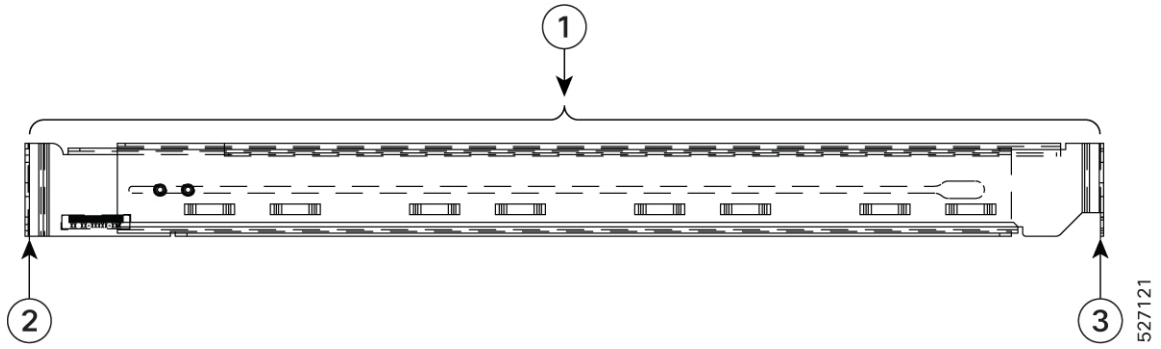



*Table 20: Cisco 8011-32Y8L2H2FH – Four-post LH and RH sliders*

| | |
|---|---|
| 1 | Mounting depth<br>• Minimum depth – 500mm<br>• Maximum depth – 840mm |
| 2 | Front rail mating surface |
| 3 | Rear rail mating surface |


**Note** The front and rear vertical rails of four-post racks must be within the range, 500mm to 840mm to install the Cisco 8011-32Y8L2H2FH router.

The Cisco 8011-32Y8L2H2FH router cannot be installed on a four-post rack if the distance between rails exceeds this maximum depth (840mm).

### Cisco 8011-32Y8L2H2FH Router on the 19-inch 2-post rack

1. Install the Left (L) and Right (R) slider assembly brackets on the 19-inch 2-post rack.


*Figure 45: Installing L & R slider assembly brackets on the 19-inch 2-post rack*

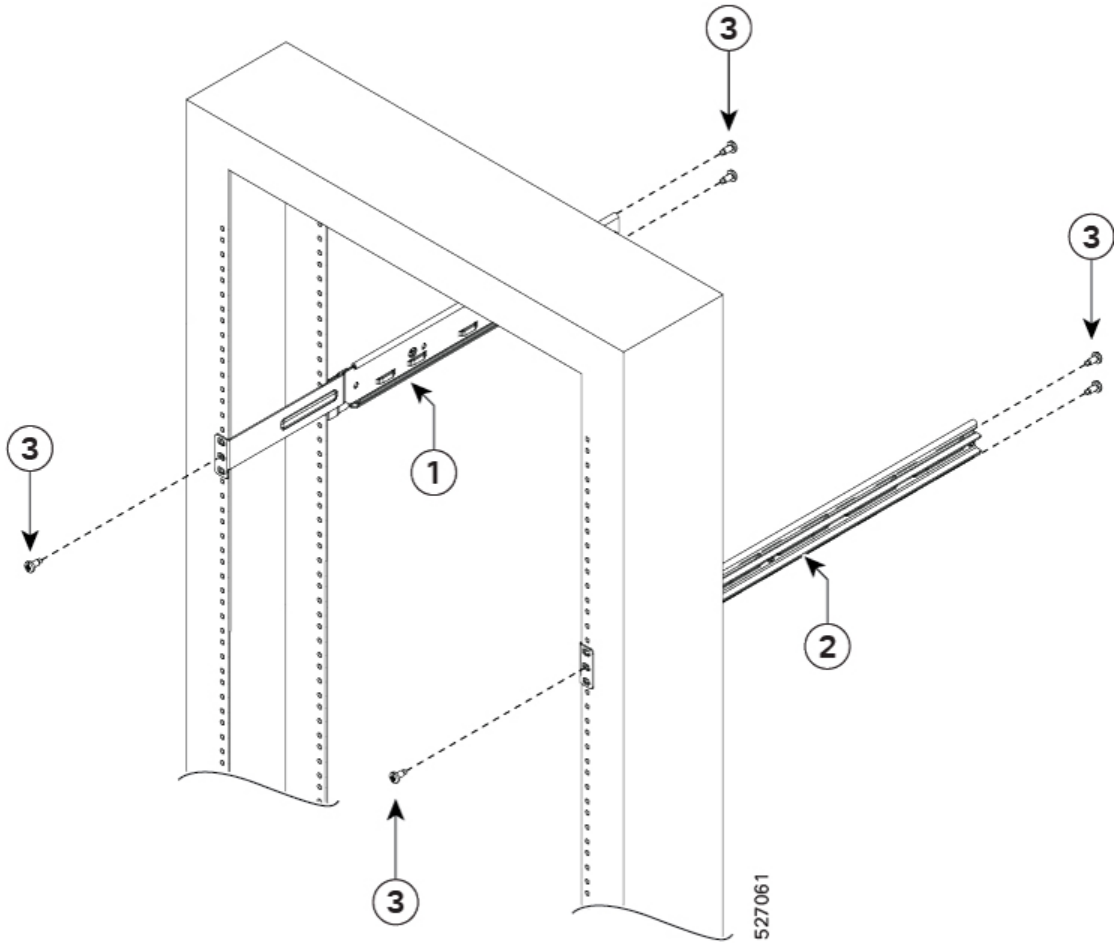


| | |
|---|---|
| 1 | LH slider assembly (800-50378-01) |
| 2 | RH slider assembly (800-50377-01) |
| 3 | Screws (48-101524-01) |

2. Attach the rack-mount brackets and the cable management to the router as follows:
   a. The router has port-side intake modules, position the router so that its ports are facing the cold aisle.
   b. Position the bracket ears facing front rack-mount, on the side of the chassis so that the holes are aligned.
   c. Use sixteen M4 screws to attach the brackets to the chassis. Tighten the M4 screws to 13.3 inch-pounds (1.5 Nm).


*Figure 46: Installing rack-mount brackets in the front*

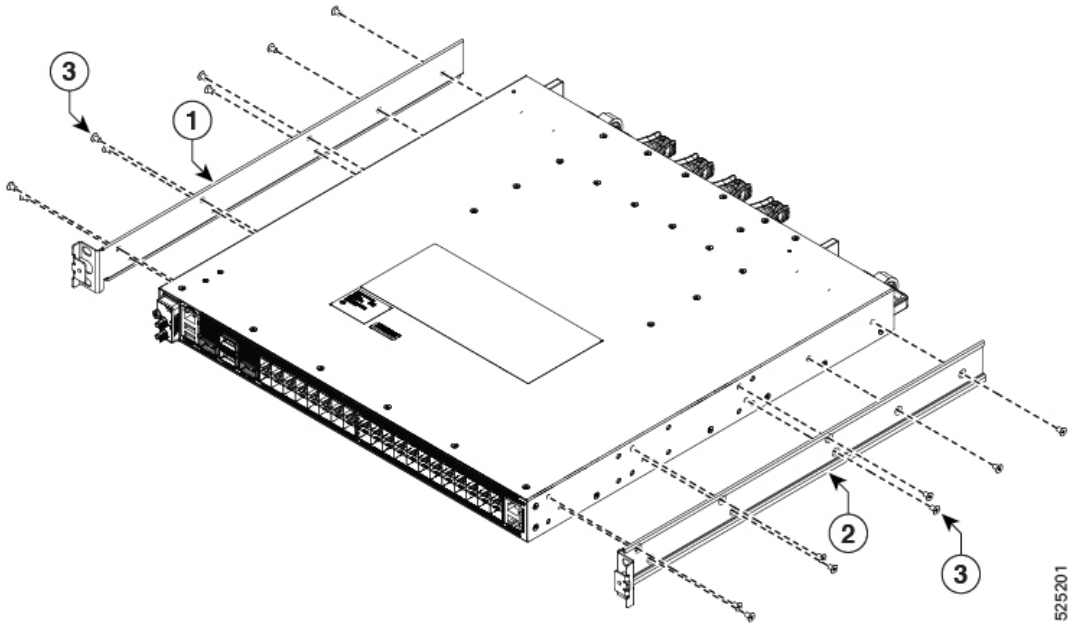


| | |
|---|---|
| 1 | LH rail bracket (700-131280-01) |
| 2 | RH rail bracket (700-131279-01) |
| 3 | Screws (48-101238-01) |


3. Place the router with slider bracket assembly on the 19-inch 2-post rack.

*Figure 47: Installing the router with slider bracket assembly on the 19-inch 2-post rack*

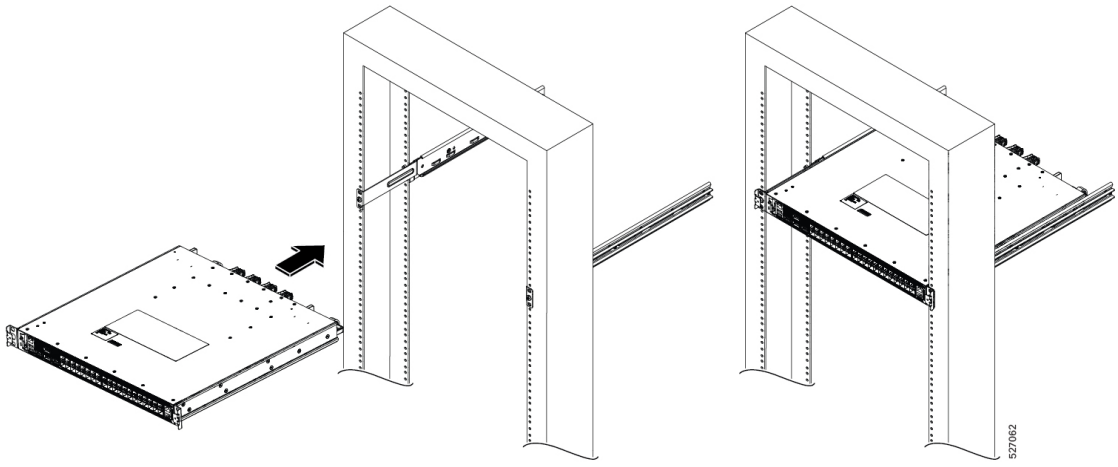


4. Install the cable mangement with 19-inch 2-post rack mount brackets in the front.

*Figure 48: Installing cable management with 19-inch 2- post rack-mount brackets in the front*

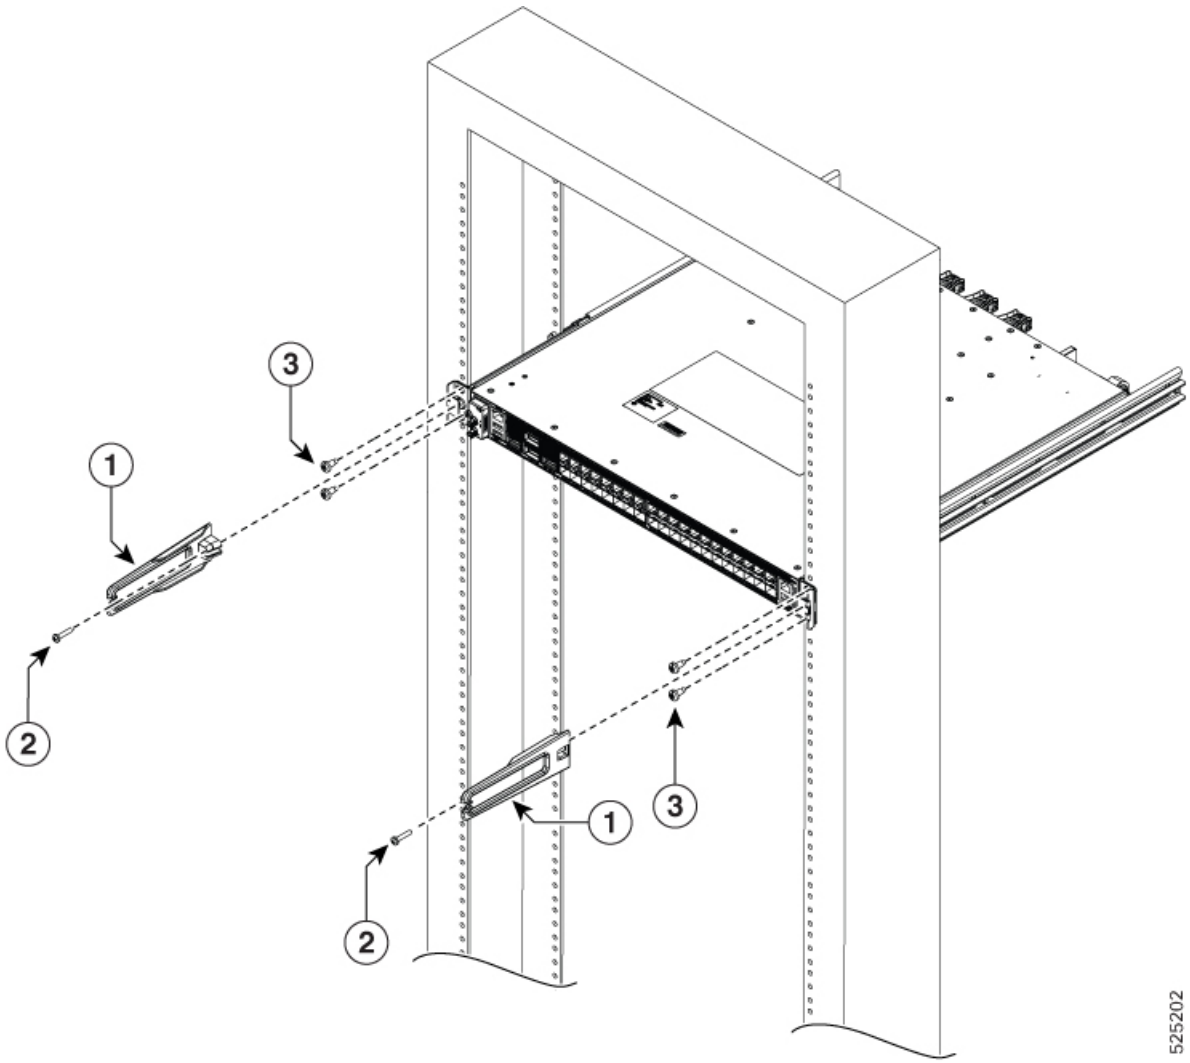



| | |
|---|---|
| 1 | Cable management (700-05613-01) |
| 2 | Screws (48-0654-01) |
| 3 | Screws (48-101524-01) |

5. Install the router onto the 2-post rack as follows:
   a. Lift and position the router into position between the two rack posts.
   b. Move the router until the rack-mount brackets come in contact with the two rack posts.
   c. Hold the chassis at level and have another while the second person inserts two screws 12-24 in each of the two rack-mount brackets (using a total of four screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails.
   d. Tighten the 12-24 screws to 30 in-lb (3.39 N.m).

### Cisco 8011-32Y8L2H2FH on the 19-inch 4-post rack

1. Install Left (L) and Right (R) slider assembly brackets on the 19-inch 4-post rack.

*Figure 49: Installing L & R slider assembly brackets on the 19-inch 4-post rack*

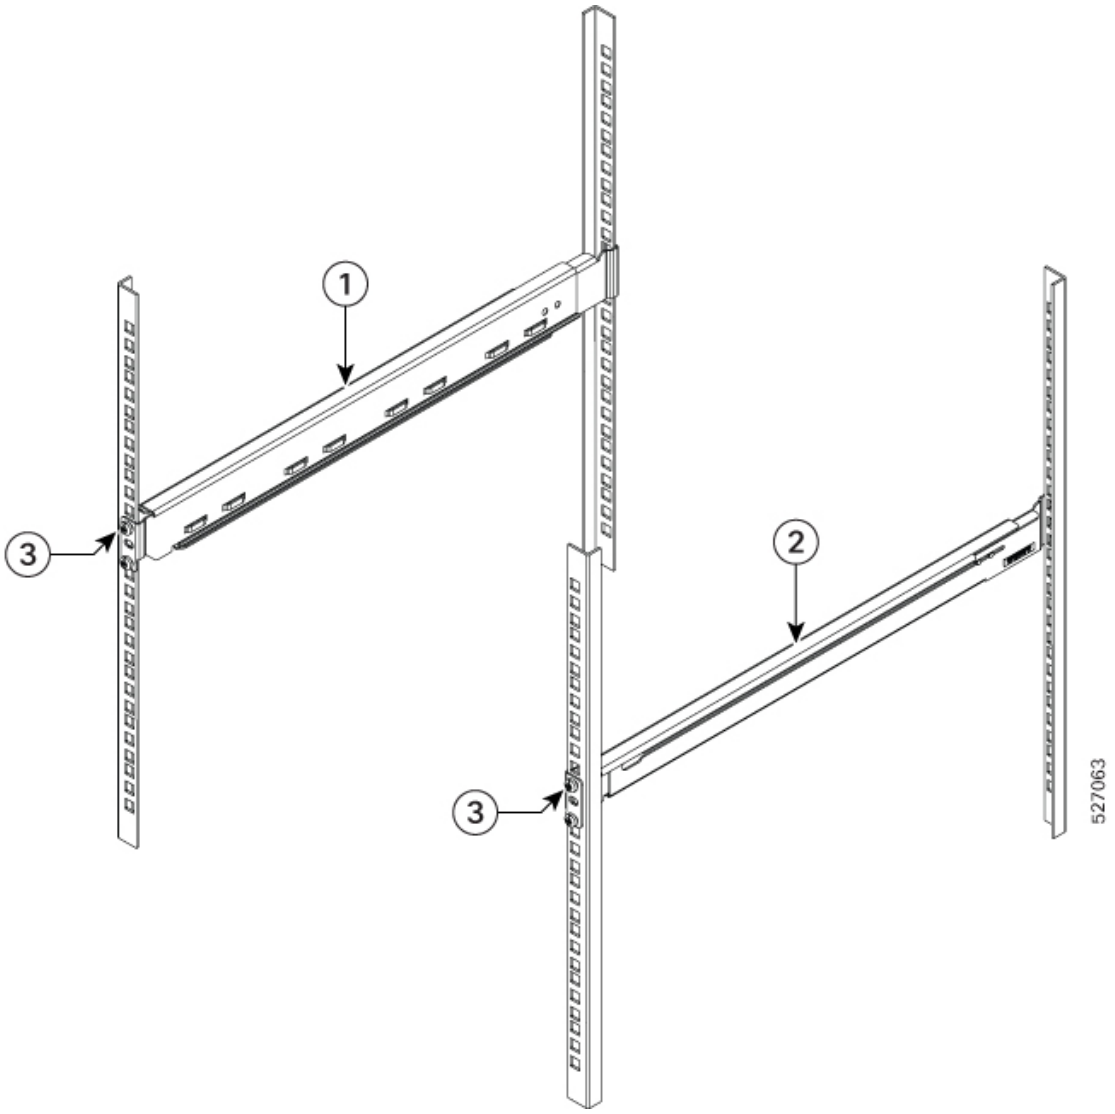



| | |
|---|---|
| 1 | LH four-post slider assembly (800-50376-01) |
| 2 | RH four-post slider assembly (800-50375-01) |
| 3 | Screws (48-101524-01) |

2. Attach the rack-mount brackets and the cable management to the router as follows:
   a. The router has port-side intake modules, position the router so that its ports are facing the cold aisle.
   b. Position the bracket ears facing front rack-mount, on the side of the chassis so that the holes are aligned.

**c.** Use sixteen M4 screws to attach the brackets to the chassis. Tighten the M4 screws to 13.3 inch-pounds (1.5 Nm).


***Figure 50: Installing rack-mount brackets in the front***

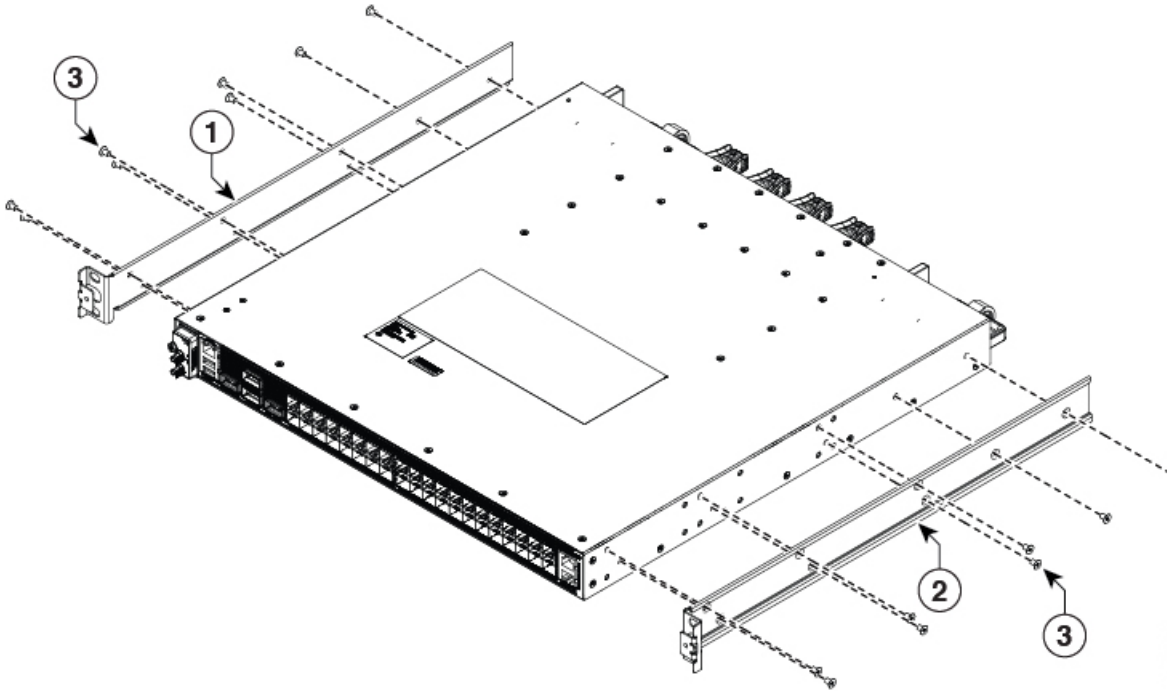


| | |
|---|---|
| 1 | LH rail bracket (700-131280-01) |
| 2 | RH rail bracket (700-131279-01) |
| 3 | Screws (48-101238-01) |


**3.** Place the router with slider bracket assembly on the 19-inch 4-post rack.

*Figure 51: Installing the router with slider bracket assembly on the 19-inch 4-post rack*

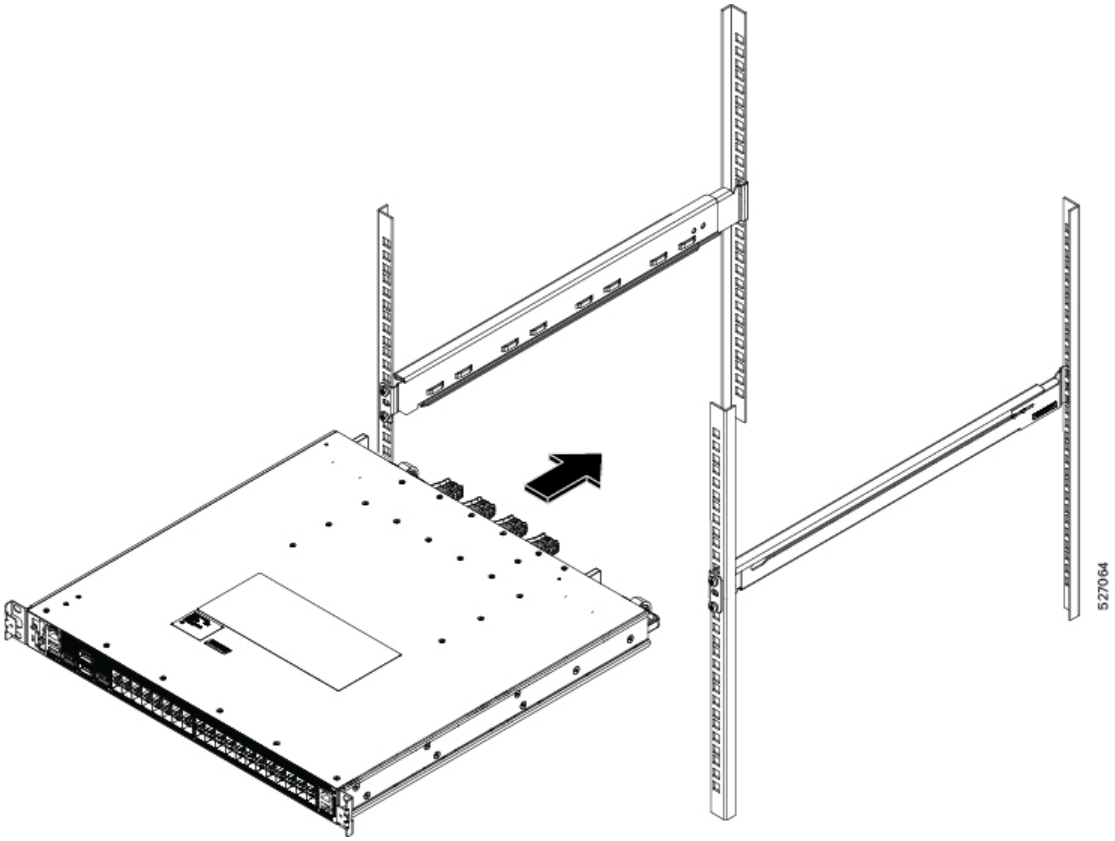


4. Install the cable management with 19-inch 4-post rack-mount brackets in the front.

*Figure 52: Installing cable management with 19-inch 4-post rack-mount brackets in the front*

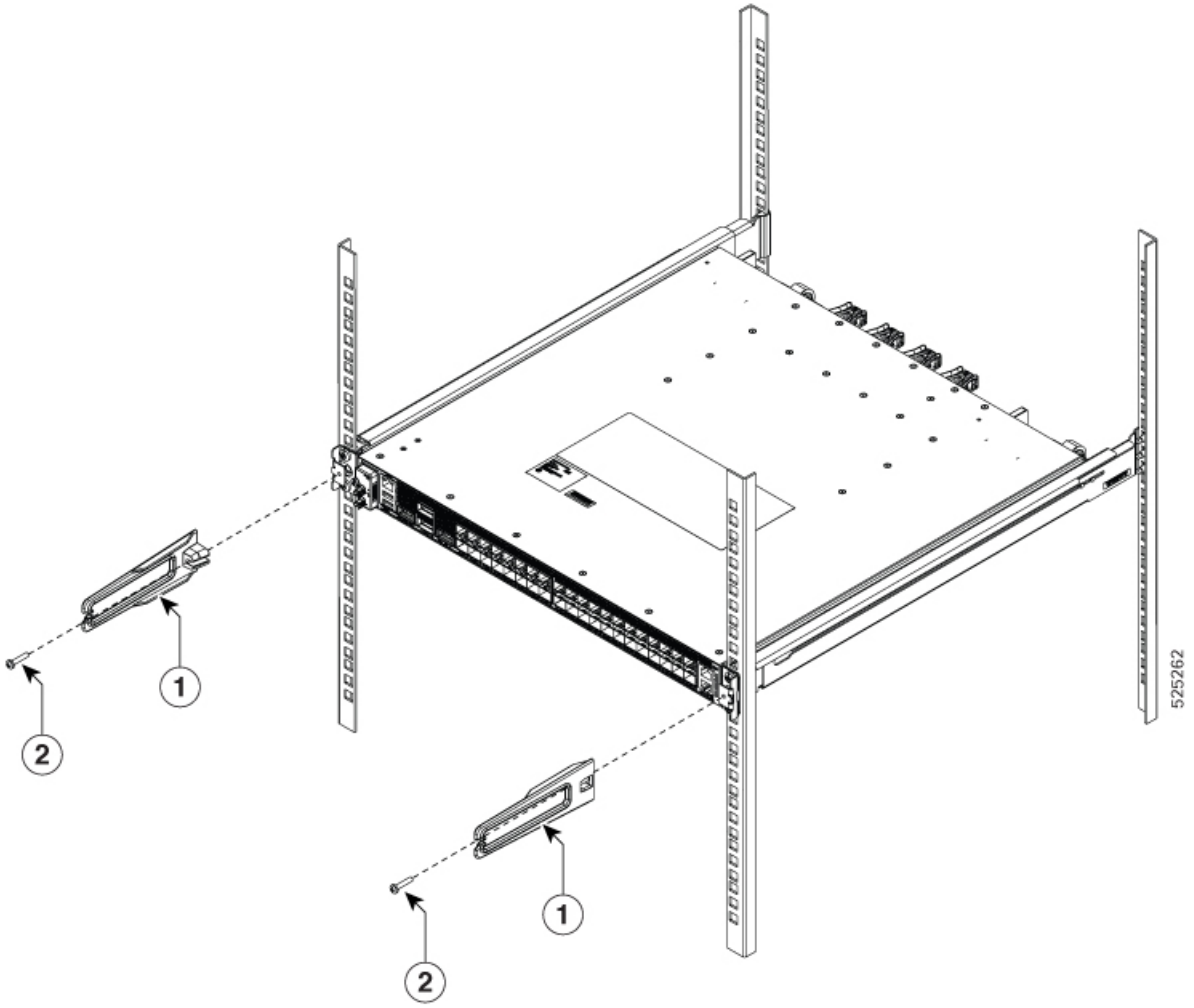



| | |
|---|---|
| 1 | Cable management (700-05613-01) |
| 2 | Screws (48-0654-01) |

5. Install the router onto the 4-post rack as follows:
   a. Lift and position the router into position between the four rack posts.
   b. Move the router until the rack-mount brackets come in contact with the four rack posts.
   c. Hold the chassis at level and have another while the second person inserts two screws 12-24 in each of the four rack-mount brackets (using a total of four screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails.
   d. Tighten the 12-24 screws to 30 in-lb (3.39 N.m).

### Cisco 8011-32Y8L2H2FH on the 21-inch 2-post rack

1. Install the Left (L) and Right (R) slide assembly brackets on the 21-inch 2-post rack.


*Figure 53: Installing L & R slider assembly brackets on the 21-inch 2-post rack*

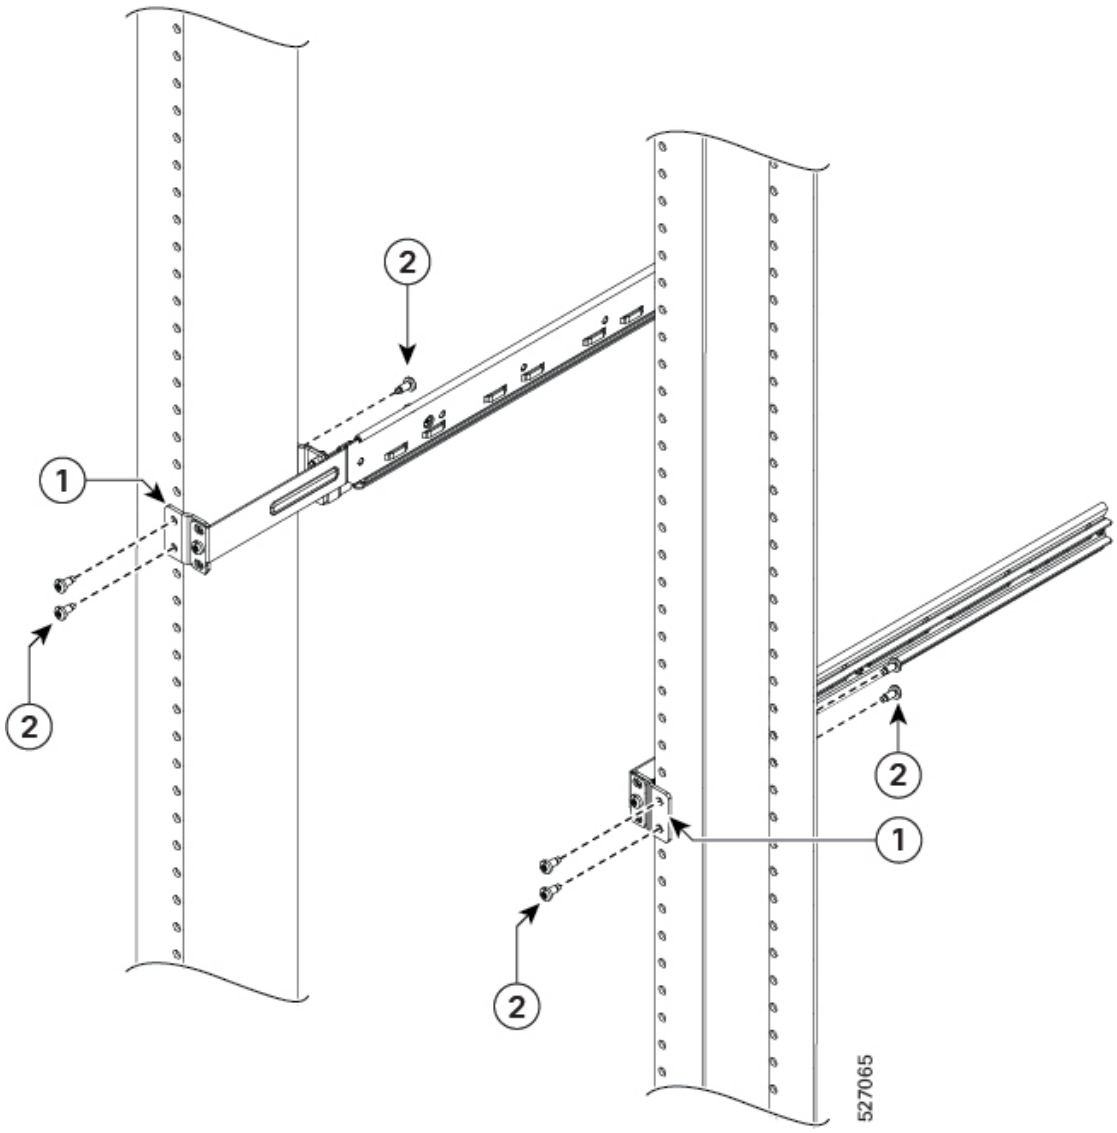


| | |
|---|---|
| 1 | 21-inch ETSI adapter (700-112689-01) |
| 2 | Screws (48-101524-01) |

2. Install the cable management with 21-inch 2-post rack mount brackets in the front.

*Figure 54: Installing cable management with 21-inch 2-post rack-mount brackets in the front*

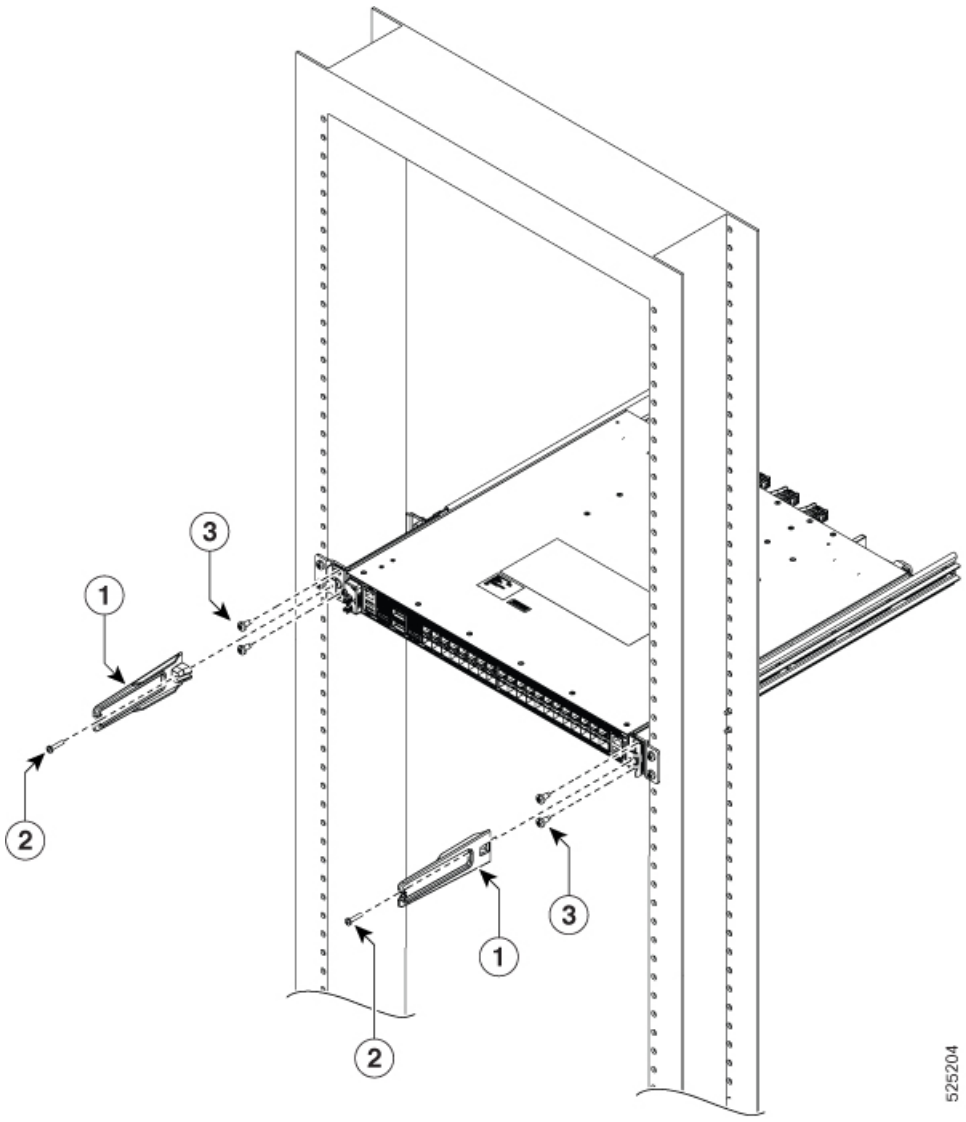


| | |
|---|---|
| 1 | Cable management (700-05613-01) |
| 2 | Screws (48-0654-01) |
| 3 | Screws (48-101524-01) |

3. Install the router onto the 2-post rack as follows:
   a. Lift and position the router into position between the two rack posts.
   b. Move the router until the rack-mount brackets come in contact with the two rack posts.
   c. Hold the chassis at level and have another while the second person inserts two screws 12-24 in each of the two rack-mount brackets (using a total of four screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails.


**d.** Tighten the 12-24 screws to 30 in-lb (3.39 N.m).

### Cisco 8011-32Y8L2H2FH on the 21-inch 4-post rack

1. Install the Left (L) and Right (R) slider assembly brackets on the 21-inch 4-post rack.

   Install the cable management with 21-inch 4-post rack mount brackets in the front.

   ***Figure 55: Installing L & R slider assembly brackets on the 21-inch 4-post rack***

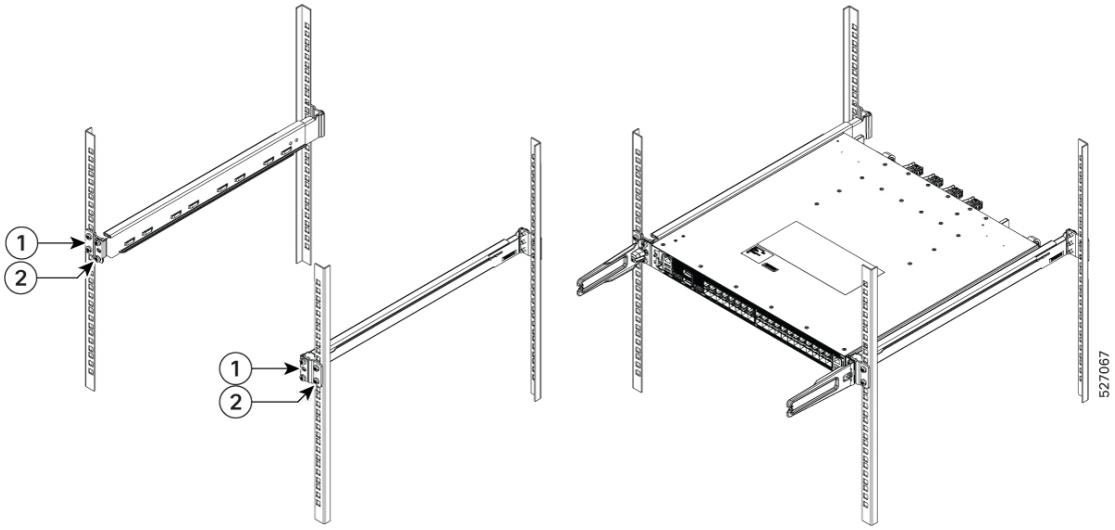



| | |
|---|---|
| 1 | 21-inch ETSI adapter (700-112689-01) |
| 2 | Screws (48-101524-01) |

2. Install the router onto the 4-post rack as follows:
   **a.** Lift and position the router into position between the four rack posts.
   **b.** Move the router until the rack-mount brackets come in contact with the four rack posts.
   **c.** Hold the chassis at level and have another while the second person inserts two screws 12-24 in each of the four rack-mount brackets (using a total of four screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails.
   **d.** Tighten the 12-24 screws to 30 in-lb (3.39 N.m).

### Cisco 8011-32Y8L2H2FH on the 23-inch 2-post rack

1. Install the Left (L) and Right (R) slider assembly brackets on the 23-inch 2-post rack.


*Figure 56: Installing L & R slider assembly brackets on the 23-inch 2-post rack*

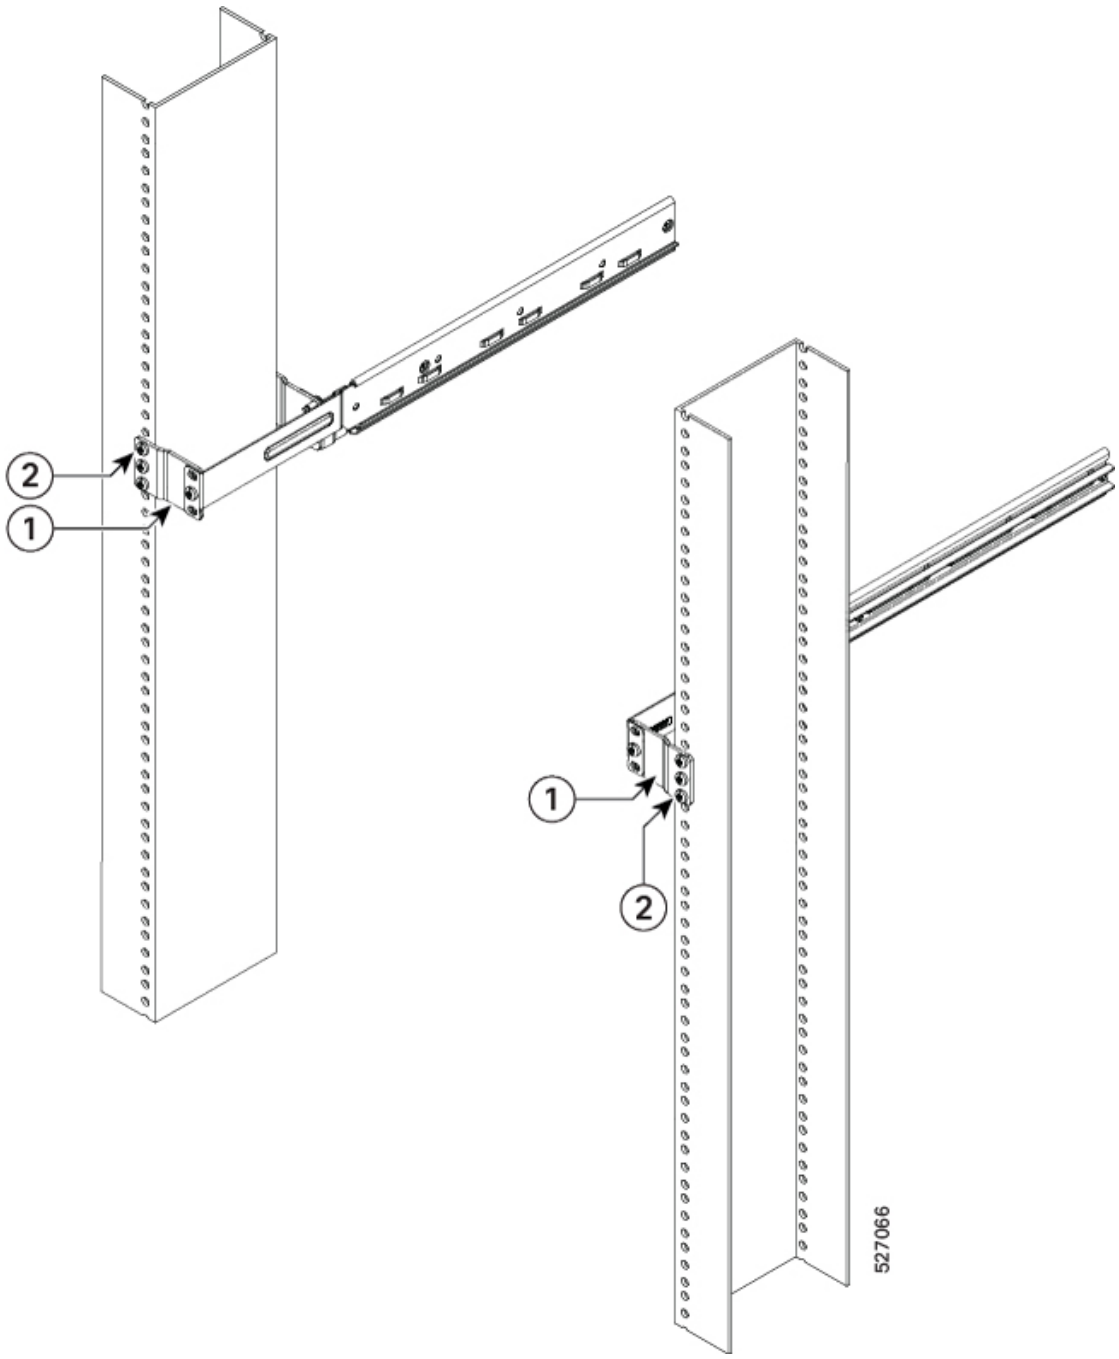


| | |
|---|---|
| 1 | 23-inch adapter (700-112688-01) |
| 2 | Screws (48-101524-01) |

2. Install the cable management with 23-inch 2-post rack mount brackets in the front.

*Figure 57: Installing cable management with 23-inch 2-post rack-mount brackets in the front*

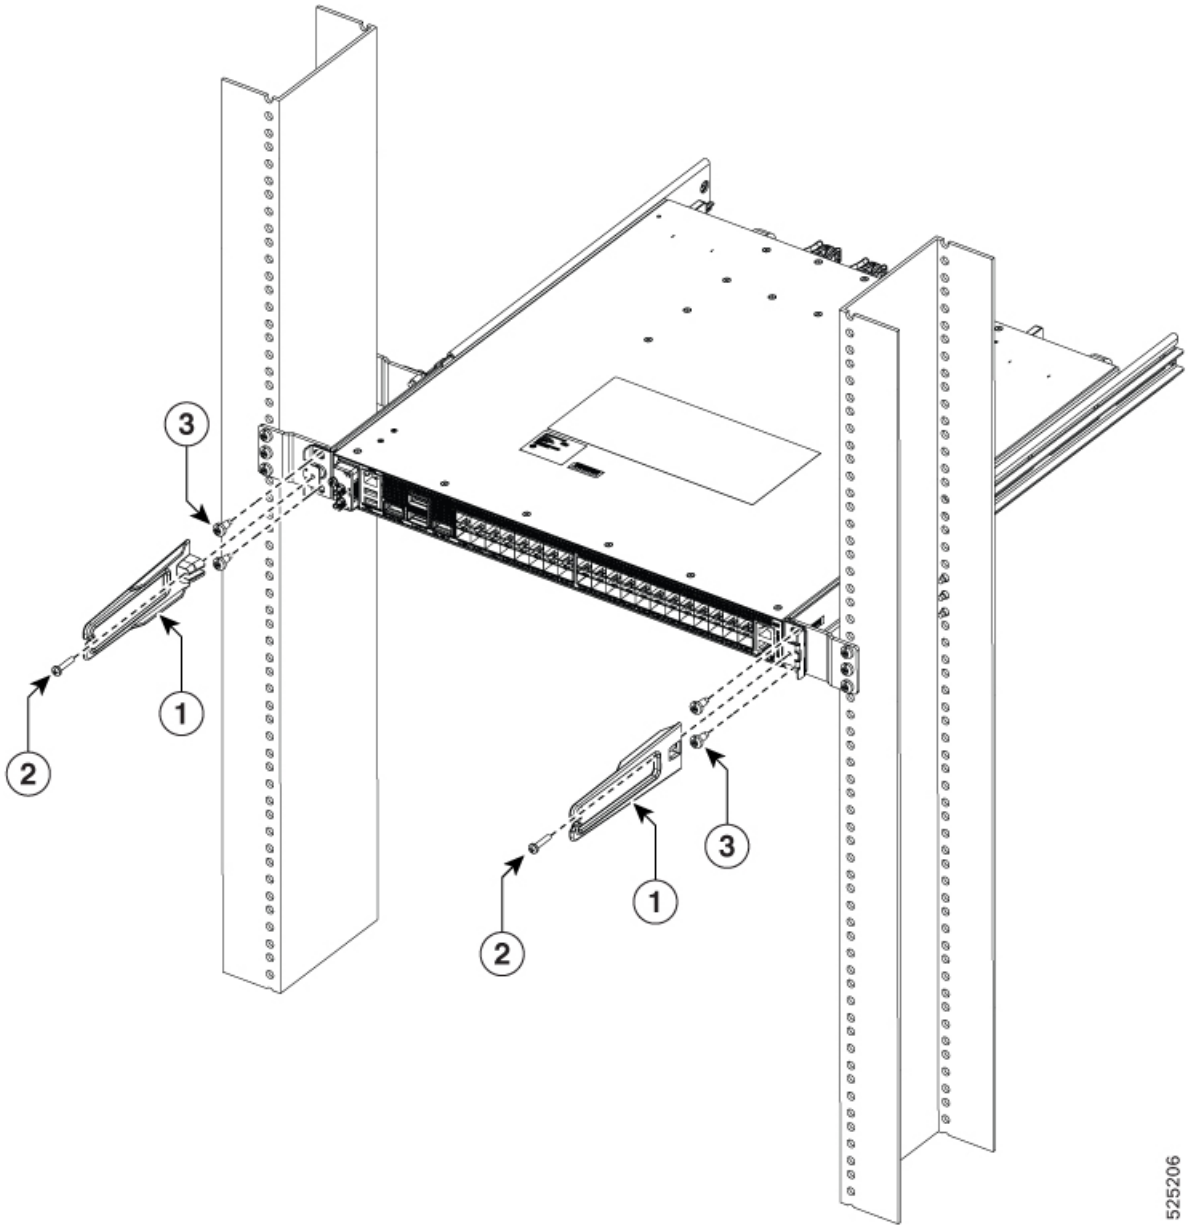


| | |
|---|---|
| 1 | Cable management (700-05613-01) |
| 2 | Screws (48-0654-01) |
| 3 | Screws (48-101524-01) |

3. Install the router onto the 2-post racks as follows:
   a. Lift and position the router into position between the two rack posts.
   b. Move the router until the rack-mount brackets come in contact with the two rack posts.

c. Hold the chassis at level and have another while the second person inserts two screws 12-24 in each of the two rack-mount brackets (using a total of four screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails.


d. Tighten the 12-24 screws to 30 in-lb (3.39 N.m).

### Cisco 8011-32Y8L2H2FH on the 23-inch 4-post rack

1. Install the Left (L) and Right (R) slider assembly brackets on the 23-inch 4-post rack.

   Install the cable management with 23-inch 4-post rack mount brackets in the front.

   ***Figure 58: Installing L & R slider assembly brackets on 23-inch 4-post rack***

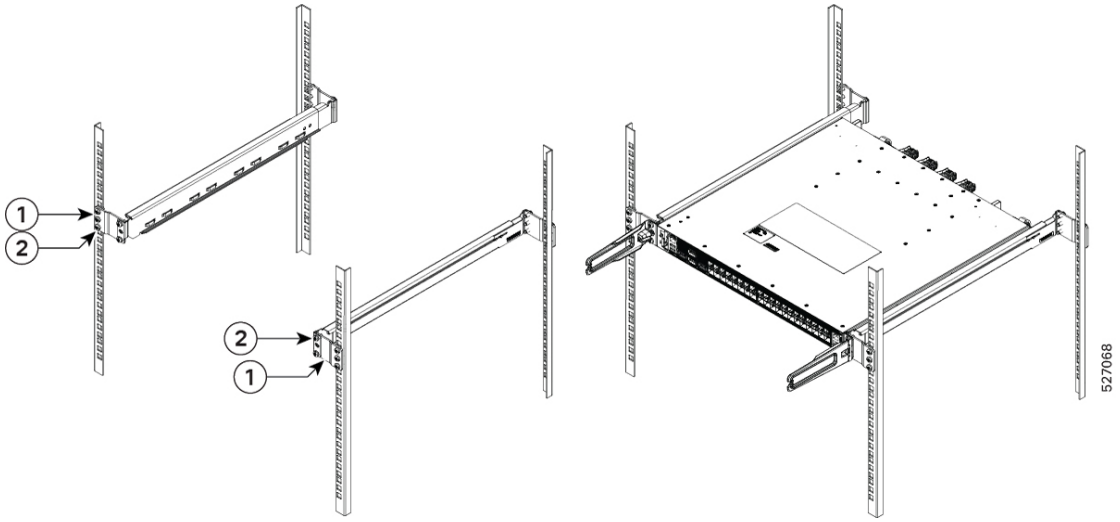


| | |
|---|---|
| 1 | 23-inch adapter (700-112688-01) |
| 2 | Screws (48-101524-01) |

2. Install the router onto the 4-post rack as follows:

   a. Lift and position the router into position between the four rack posts.

   b. Move the router until the rack-mount brackets come in contact with the four rack posts.

   c. Hold the chassis at level and have another while the second person inserts two screws 12-24 in each of the four rack-mount brackets (using a total of four screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails.

   d. Tighten the 12-24 screws to 30 in-lb (3.39 N.m).

### Cisco 8011-12G12X4Y Router

1. Attach the rack-mount brackets and the cable management to the router as follows:

   a. The router has port-side intake modules, position the router so that its ports are facing the cold aisle.


**b.** Position the bracket ears facing front or middle rack-mount, on the side of the chassis so that the holes are aligned.

**c.** Use four M3 screws to attach the brackets to the chassis.

**d.** Repeat Steps 1b and 1c with the other rack-mount bracket on the other side of the router.


**e.** Use four No. 12-24 screws and mount the router to the rack.

***Figure 59: Installing 19 inch Rack-Mount Brackets in the Front***

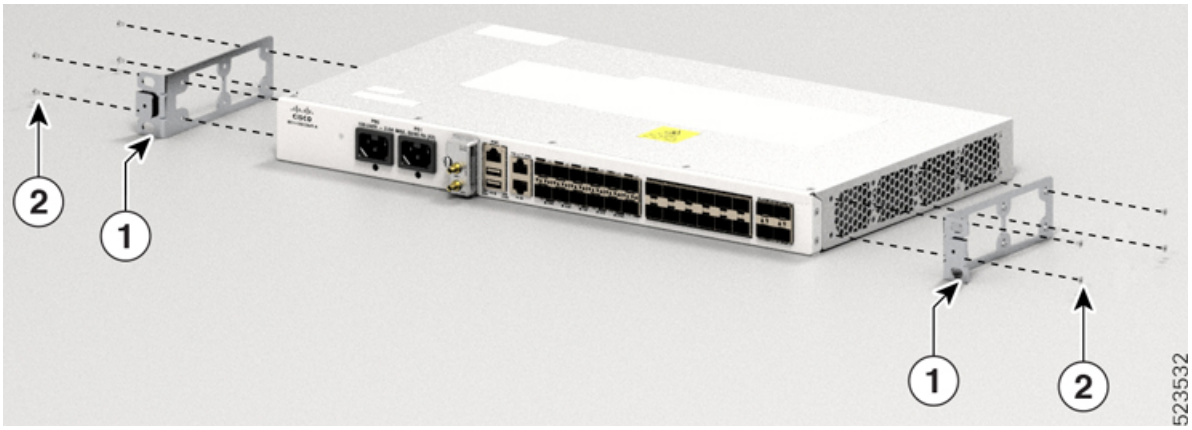


| | |
|---|---|
| 1 | Mount Bracket |
| 2 | Screw |


***Figure 60: Installing Cable Management and 19 inch Rack-Mount Brackets in the Front***

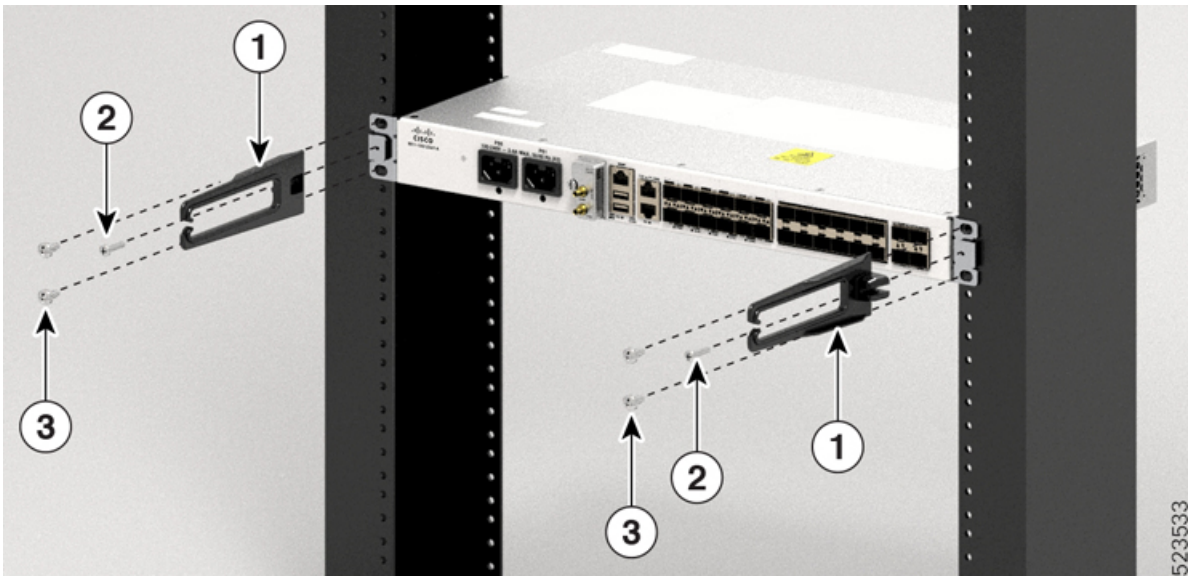


| | |
|---|---|
| 1 | Cable Management Bracket |
| 2 | Cable Management Screw |


| | |
|---|---|
| 3 | Screw |

*Figure 61: Installing 19 inch Rack-Mount Brackets in the Middle*

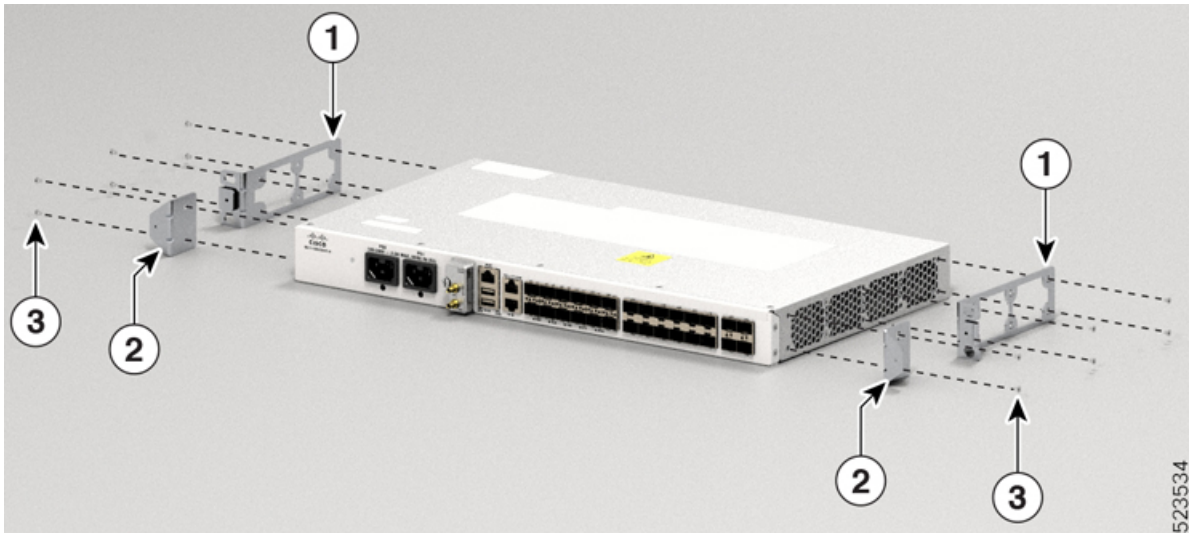


| | |
|---|---|
| 1 | Mount Bracket |
| 2 | Cable Management Bracket |
| 3 | Screw |


*Figure 62: Installing Cable Management and 19 inch Rack-Mount Brackets in the Middle*

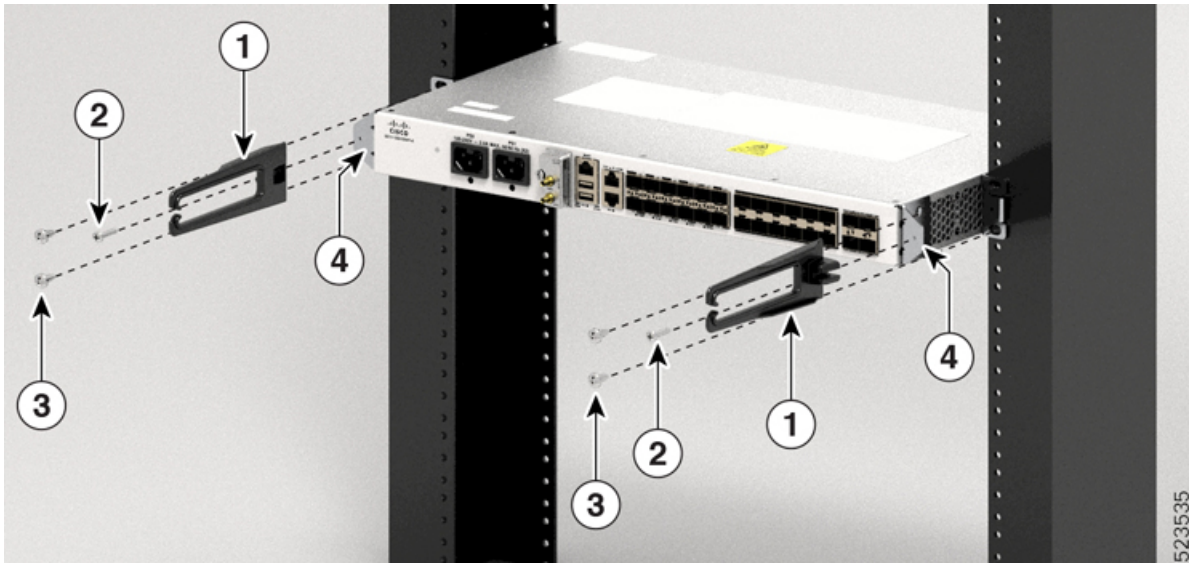


| | |
|---|---|
| 1 | Cable management bracket |
| 2 | Cable management screw |


| | |
|---|---|
| 3 | Screw |
| 4 | Bracket |

*Figure 63: Installing 23 inch Rack-Mount Brackets in the Front*

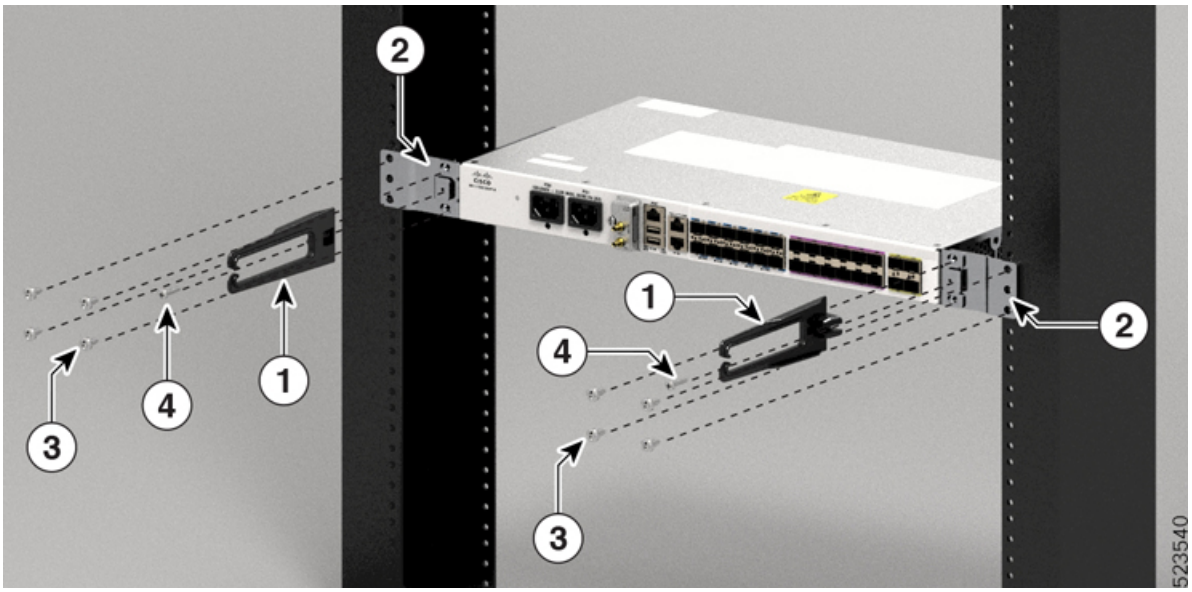


| | |
|---|---|
| 1 | Mount Bracket |
| 2 | Screw |


*Figure 64: Installing 23 inch Rack-Mount Brackets in the Middle*

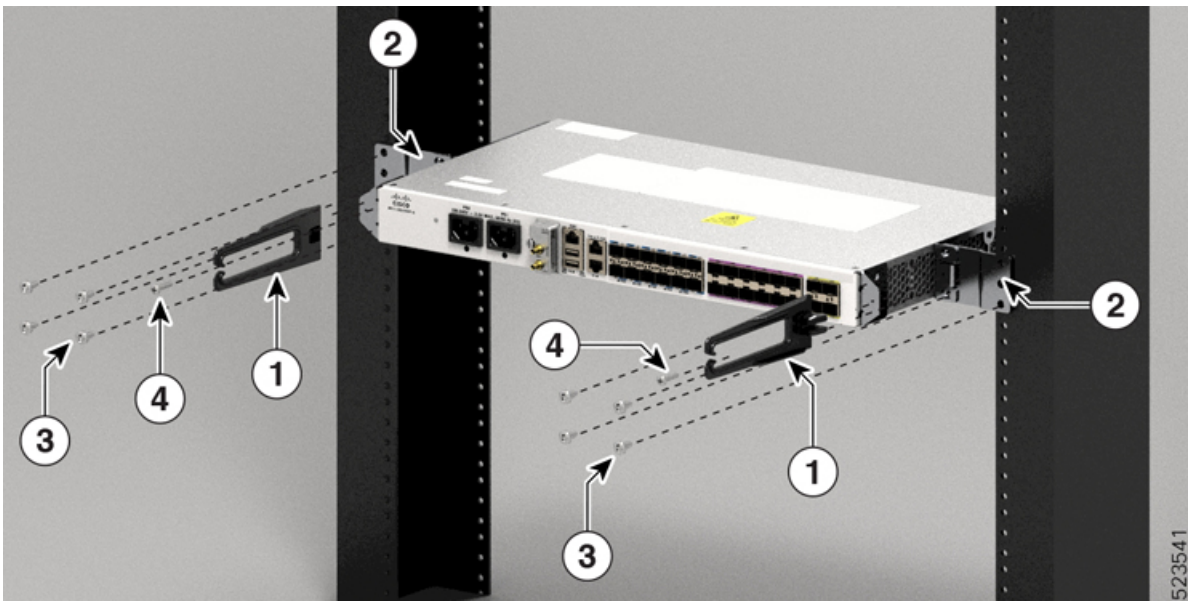


| | |
|---|---|
| 1, 2 | Mount Bracket |


| | |
|---|---|
| 3 | Screw |

*Figure 65: Installing Cable Management and ETSI Rack-Mount Brackets in the Front*

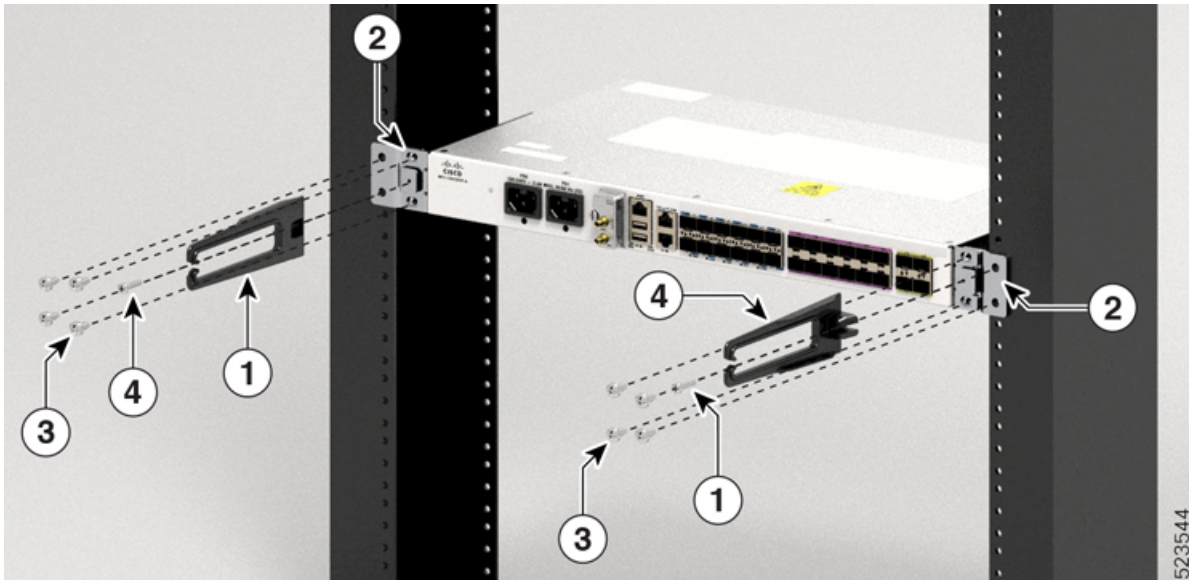


| | |
|---|---|
| 1 | Cable Management Bracket |
| 2 | Cable Management Screw |
| 3 | Screw |

*Figure 66: Installing Cable Management and ETSI Rack-Mount Brackets in the Middle*

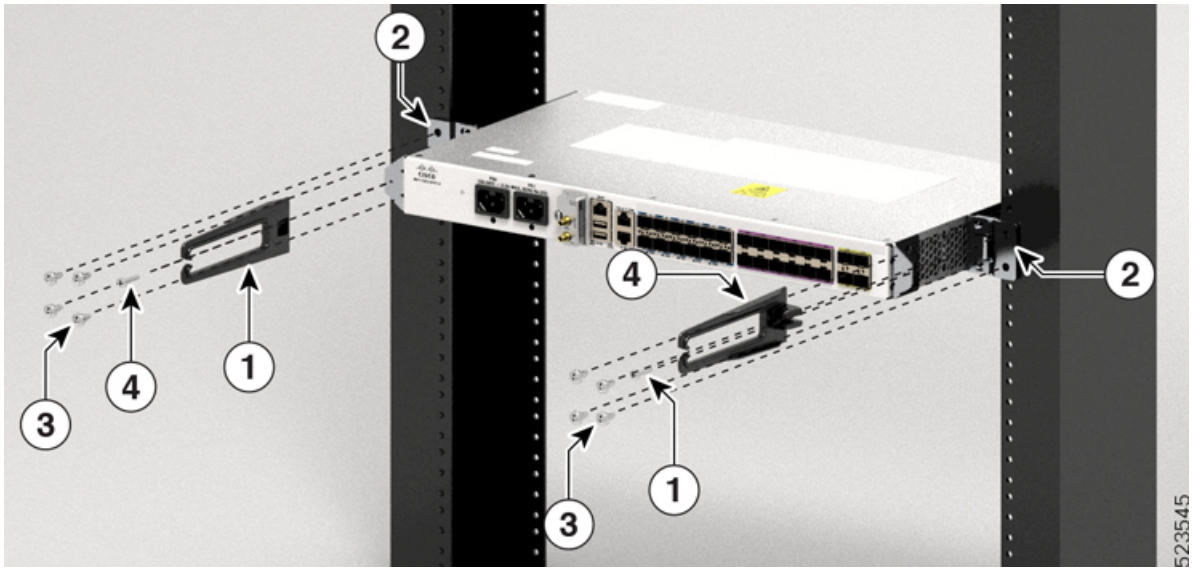


| | |
|---|---|
| 1 | Cable Management Bracket |

| | |
|---|---|
| 2 | Cable Management Screw |
| 3 | Screw |

2. Install the router onto the 2-post rack as follows:
   a. Lift and position the router into position between the two rack posts.
   b. Move the router until the rack-mount brackets come in contact with the two rack posts.
   c. Hold the chassis at level and have another while the second person inserts two screws 12-24 in each of the two rack-mount brackets (using a total of four screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails.
   d. Tighten the 12-24 screws to 30 in-lb (3.39 N.m).

# Wall Mount

**Note** This feature is supported only for the Cisco 8011-4G24Y4H-I Router.


The router is shipped with wall mounting brackets that are to be secured on the sides of the router.

Install the wall mounting brackets and cable guides on to the chassis before you mount the chassis on the wall.

### Install Wall Brackets

1. Remove the wall mounting brackets from the accessory kit and position them beside the router. You can install the brackets as shown in the figure.

*Figure 67: Install Wall Mount Brackets*

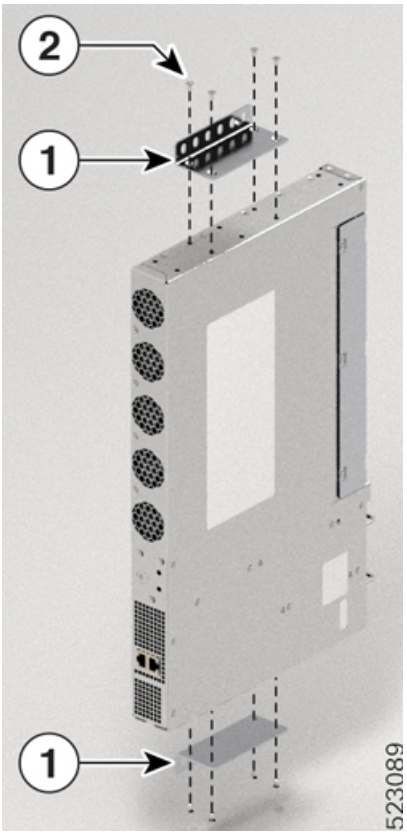


| | |
|---|---|
| 1 | Wall Mount Bracket |
| 2 | Screw |

2. Secure the bracket to the router with the recommended maximum torque of 13.3 inch-pounds (1.5 newton meters) using M4 flat head screws.


### Wall Mount the Router

**Caution** Before mounting the router, ensure that all unused holes at the sides of the router are always protected by screws.

**Note** While you mount the router, always ensure that the power supplies are at the bottom position.

For the support of the router and cables, ensure that the router is attached securely to wall studs or to a firmly attached plywood mounting backboard.

*Figure 68: Install Brackets to Wall*

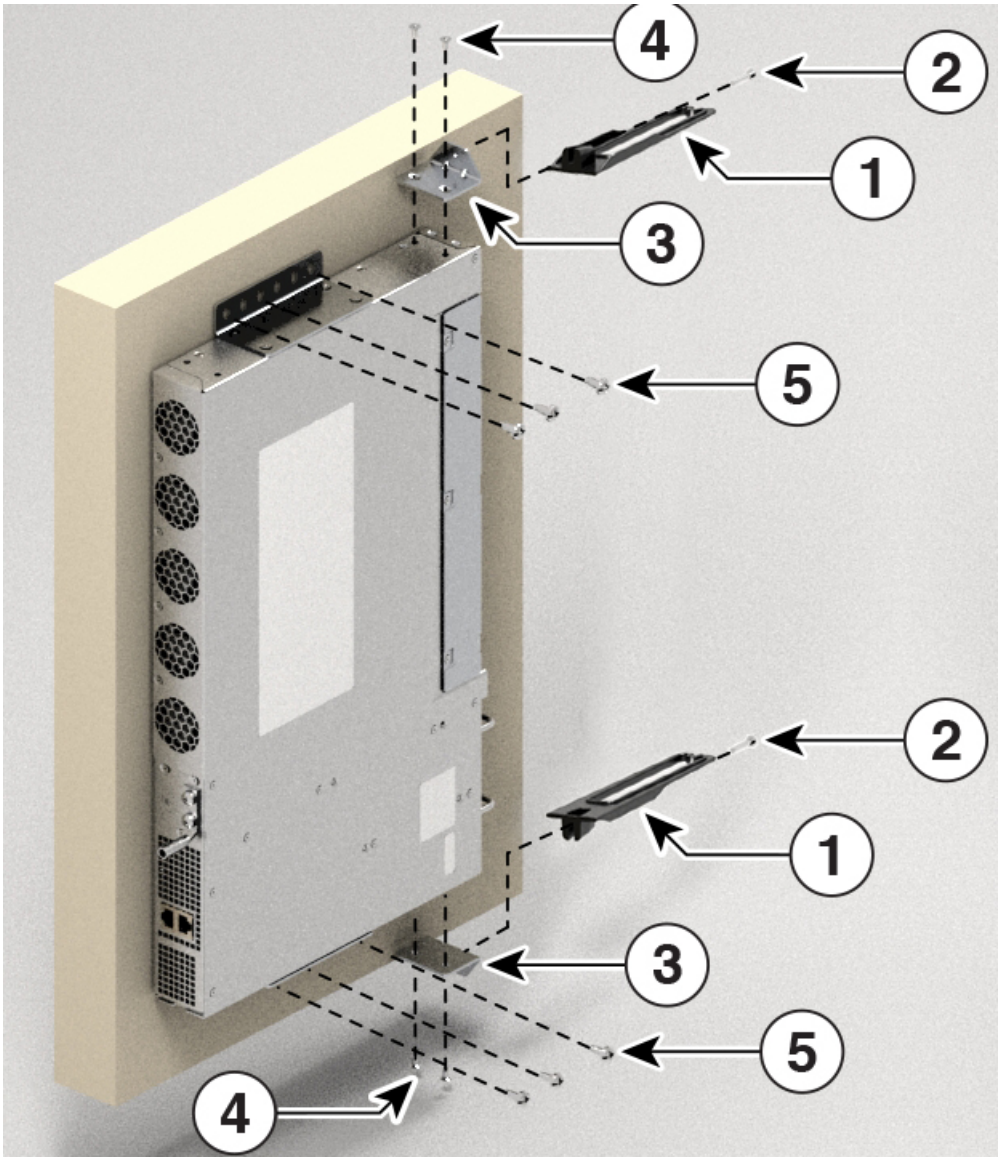


| | |
|---|---|
| 1 | Cable Management |
| 2 | Cable Management Screw |
| 3 | Cable Management Bracket |
| 4 | Cable Management Bracket Screw |
| 5 | Wall Mount Bracket Screw |

# Ground the Router

Before you begin this task, ensure that you have read and understood the safety warnings in the Preventing ESD Damage section of the *Safety Warnings* handout.

Before you connect the power or turn on the power to the router, you must provide an adequate router ground (earth) connection to your router.

This section describes how to ground the router. The grounding lug location is on the back panel of the router.


**Note** A minimum of 5 inches (127 mm) space must be provided at the rear to accommodate 90 degree grounding lug with a minimum bend radius for 6 AWG ground cable.

### Cisco 8011-4G24Y4H-I Router

To ground the router:

1. Verify that the ground cable is connected to the top of the rack and according to local site practice.

***Figure 69: Ground Lug***

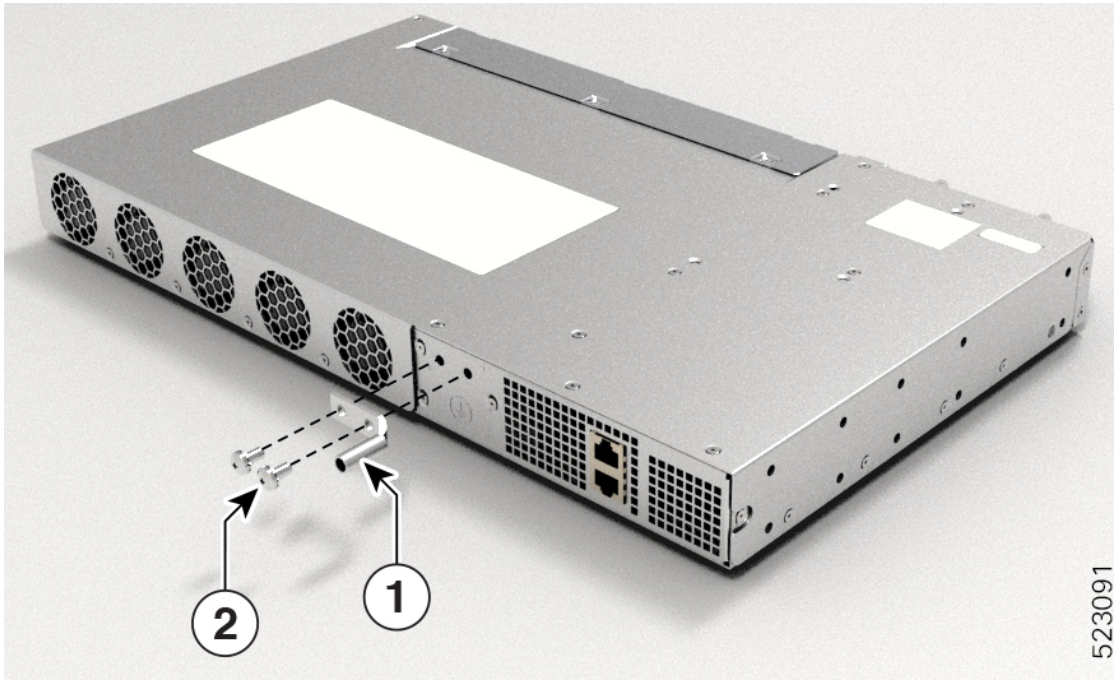


| | |
|---|---|
| 1 | Lug (Part number is 32-0608-01) |
| 2 | Screw (Part number is 48-101620-01) |

**Caution** Use only Cisco supplied screws for mounting the grounding lugs. If procured from local market or from outside other source, ensure that the grounding lug screw length should not exceed 0.365 inches (9.27 mm). Using excessive length screw for mounting the grounding lug may cause short-circuit as it may come in contact with parts inside the router.


2. Attach one end of the shelf ground cable (No. 6 AWG cable) to the ground point on the rear of the router using the specified dual-hole lug connector.
   a. Use a wire-stripping tool to remove approximately 0.75 inches (19 mm) of the covering from the end of the grounding cable.
   b. Insert the stripped end of the grounding cable into the open end of the grounding lug.
   c. Use the crimping tool to secure the grounding cable in the grounding lug.
   d. Remove the adhesive label from the grounding pad on the chassis.
   e. Place the grounding lug against the grounding pad so that there is solid metal-to-metal contact, and insert the two 10-32 screws with washer through the holes in the grounding lug and into the grounding pad. Tighten the 10-32# screws to 27.5 inch-pounds (3.1 Nm).
   f. Ensure that the lug and cable do not interfere with other equipment.
   g. Prepare the other end of the grounding cable and connect it to an appropriate grounding point in your site to ensure adequate earth ground.

### Cisco 8011-32Y8L2H2FH Router

To ground the router:

1. Verify that the ground cable is connected to the top of the rack and according to local site practice.

*Figure 70: Ground Lug*

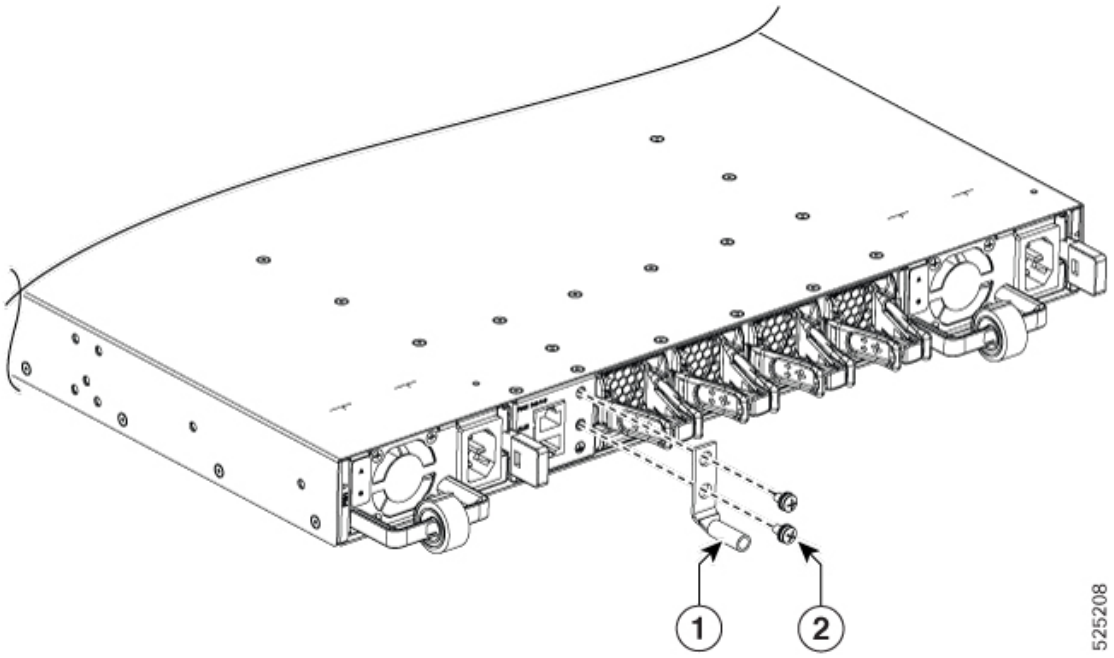


| | |
|---|---|
| 1 | Lug (Part number is 32-0670-01) |
| 2 | Screw (Part number is 48-0418-01) |

**Caution** Use only Cisco supplied screws for mounting the grounding lugs. If procured from local market or from outside other source, ensure that the grounding lug screw length should not exceed 0.315 inches (8 mm). Using excessive length screw for mounting the grounding lug may cause short-circuit as it may come in contact with parts inside the router.

2. Attach one end of the shelf ground cable (No. 6 AWG cable) to the ground point on the rear of the router using the specified dual-hole lug connector.
   a. Use a wire-stripping tool to remove approximately 0.75 inches (19 mm) of the covering from the end of the grounding cable.
   b. Insert the stripped end of the grounding cable into the open end of the grounding lug.
   c. Use the crimping tool to secure the grounding cable in the grounding lug.
   d. Remove the adhesive label from the grounding pad on the chassis.
   e. Place the grounding lug against the grounding pad so that there is solid metal-to-metal contact, and insert the two M4 screws with washer through the holes in the grounding lug and into the grounding pad. Tighten the M4 screws to 13.5 inch-pounds (1.5 Nm).
   f. Ensure that the lug and cable do not interfere with other equipment.


**g.** Prepare the other end of the grounding cable and connect it to an appropriate grounding point in your site to ensure adequate earth ground.

### Cisco 8011-12G12X4Y Router

To ground the device:

1. Verify that the ground cable is connected to the top of the rack and according to local site practice.

***Figure 71: Ground Lug***

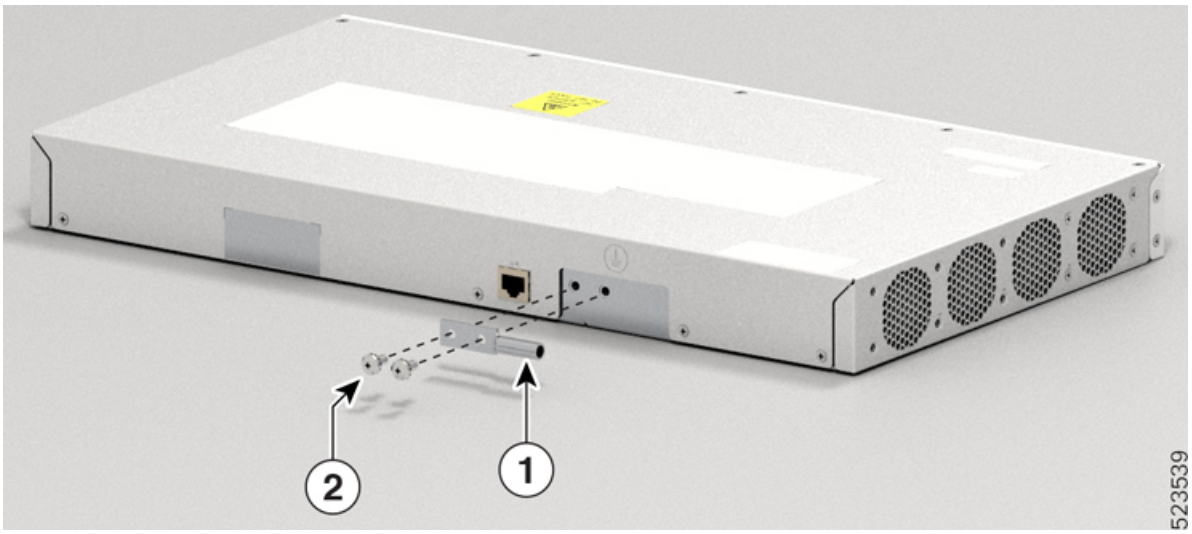


| | |
|---|---|
| 1 | Lug (32-0619-01) |
| 2 | Screw (48-101620-01)<br>(SCR,M,PAN,PH,SEX,10-32x0.365"L,CSwZN,NICKEL ALLOY) |

**Warning** Use only Cisco supplied screws for mounting the grounding lugs. If procured from local market or from outside other source, ensure that the grounding lug screw length should not exceed 0.365 inches (9.27 mm). Using excessive length screw for mounting the grounding lug may cause short-circuit as it may come in contact with parts inside the router.

2. Attach one end of the shelf ground cable (No. 6 AWG cable) to the ground point on the rear of the router using the specified dual-hole lug connector.
   **a.** Use a wire-stripping tool to remove approximately 0.75 inches (19 mm) of the covering from the end of the grounding cable.
   **b.** Insert the stripped end of the grounding cable into the open end of the grounding lug.
   **c.** Use the crimping tool to secure the grounding cable in the grounding lug.
   **d.** Remove the adhesive label from the grounding pad on the chassis.

e. Place the grounding lug against the grounding pad so that there is solid metal-to-metal contact, and insert the two M4 screws with washers through the holes in the grounding lug and into the grounding pad.

f. Ensure that the lug and cable do not interfere with other equipment.

g. Prepare the other end of the grounding cable and connect it to an appropriate grounding point in your site to ensure adequate earth ground.

# Connect to an AC Power Source




**Note** A dual pole breaker is needed for the installation. The rating of the dual pole breaker for 110V is 20A and for 220V is 16A. The minimum cable size is 14AWG for 110V and 16AWG for 220V.

### Cisco 8011-4G24Y4H-I Router

To connect to a power source:

1. Plug the power supply cord in to the power supply module.
2. Wrap the tie around the power supply cord.
3. Ensure that the power supply cord is secured to the power supply module.
4. Tighten the tie around the power supply cord as shown.
5. Ensure that the power cord is secured always to a cable support to ensure the cable load doesn't act on the PSU.

*Figure 72: Attach the AC Power Cables*

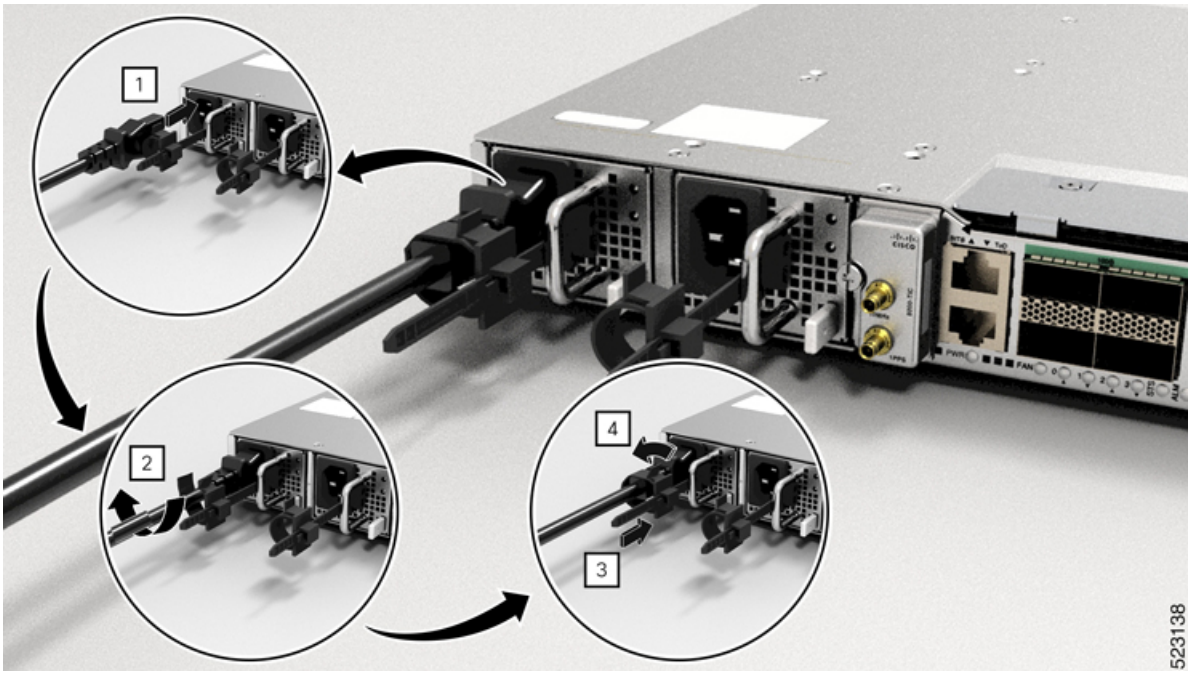


**Note** These images are for representation purpose only. Certain Cisco 8010 Series Routers may not include a tie for the power supply cord.

| | |
|---|---|
| 1 | Insert power cord |
| 2 | Wrap power cord with tie |
| 3 | Attach the power cord |
| 4 | Secure power cord with tie |

### Cisco 8011-32Y8L2H2FH Router

**Note** Prior to connecting the power supply to a power source, ensure that the chassis is properly grounded.

To connect to a power source, follow these steps:


1. Plug the power cable into the power supply.
2. Plug the other end of the power cable into a power source supplied by the data center.

**Note** When using redundant mode, connect each power supply to a separate power source.

3. Verify that the power supply is receiving power by checking that the LED is on and is amber or red. For more information about the power supply LEDs and the conditions that they indicate, see Power Status LEDs.

   When you first activate the power supply, you can verify the functionality of the LED by checking that LED turns on for a couple of seconds. If the LED is flashing amber or red, check the power connections on the power supply and the power source.

***Figure 73: Attach the AC Power Cables***

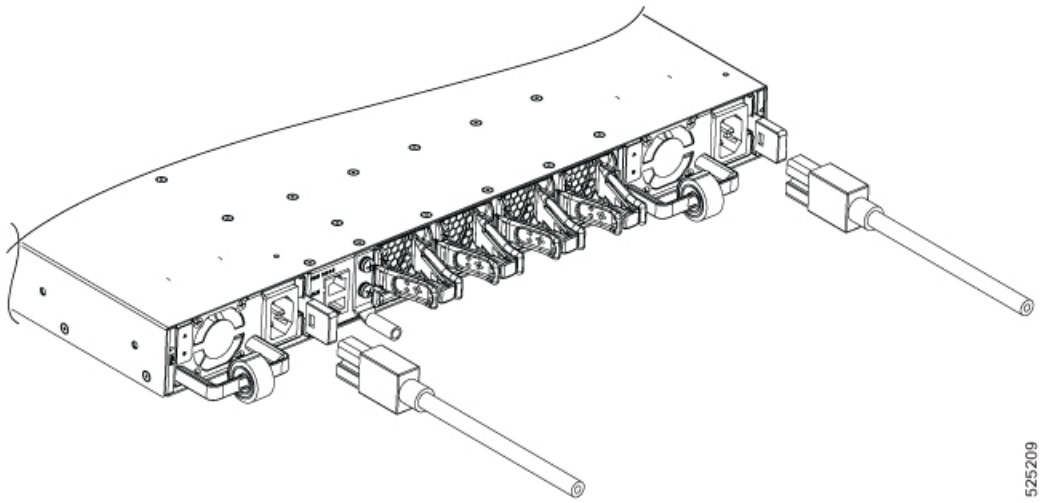



**Note** These images are for representation purpose only. Certain Cisco 8010 Series Routers may not include a tie for the power supply cord.

### Cisco 8011-12G12X4Y Router

To connect to a power source:

1. Plug the power supply cord in to the power supply module.
2. Wrap the tie around the power supply cord.
3. Ensure that the power supply cord is secured to the power supply module.
4. Tighten the tie around the power supply cord as shown.
5. Ensure that the power cord is secured always to a cable support to ensure the cable load doesn't act on the PSU.

*Figure 74: Attach the AC Power Cables*

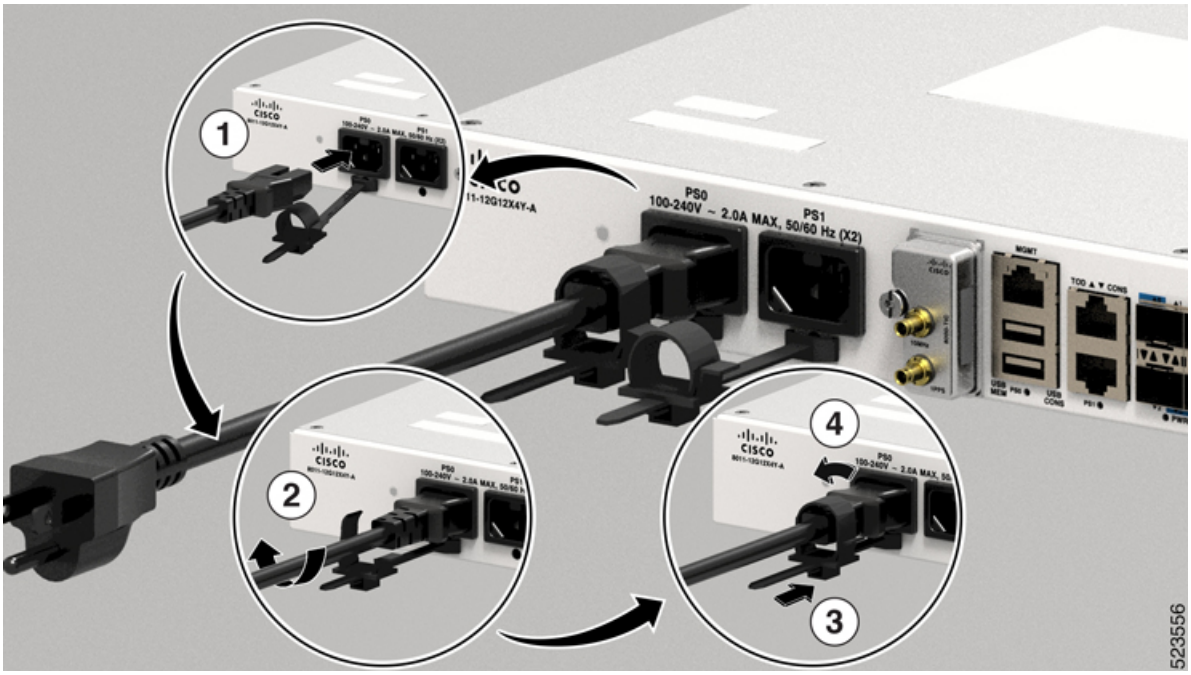


**Note** These images are for representation purpose only. Certain Cisco 8010 Series Routers may not include a tie for the power supply cord.

| | |
|---|---|
| 1 | Insert power cord |
| 2 | Wrap power cord with tie |
| 3 | Attach the power cord |
| 4 | Secure power cord with tie |

### Turn On an AC Power Supply Module

Perform the following procedure to activate an AC power supply:

1. Plug the power cord into the power supply.
2. Connect the other end of the power cord to an AC-input power source.
3. Verify power supply operation by checking if the respective power supply front panel LED (PM0 or PM1) is green.
4. If the LEDs indicate a power problem, see *Appendix* for troubleshooting information.
5. If you're also connecting a redundant AC power supply, repeat these steps for the second power source.

**Note** If you're connecting a redundant AC power supply, ensure that each power supply is connected to a separate power source in order to prevent power loss in the event of a power failure.

### Operating Voltage Range

- **Cisco 8011-4G24Y4H-I:** 100V-240VAC, 50/60Hz, 5-2.2A maximum.
- **Cisco 8011-32Y8L2H2FH:** 100V-240VAC, 50/60Hz, 7.6-3.65A maximum.
- **Cisco 8011-12G12X4Y:** 100V-240VAC, 50/60Hz, 2A maximum.


# Connect to a DC Power Source

### Cisco 8011-4G24Y4H-I Router

**Note** When installing DC power supply, use 14AWG for longer cables and 14-16AWG for shorter cables, 90°C temperature rated cable. The recommended cable length is three meters maximum from source.

**Note**
- Always ensure that the building's installation for short-circuit (overcurrent) protection does not exceed 15A.
- We recommend you to use a circuit breaker or a fast acting fuse with a maximum DC rating, based on the router variants for over current protection.

*Figure 75: DC Lug Dimensions*

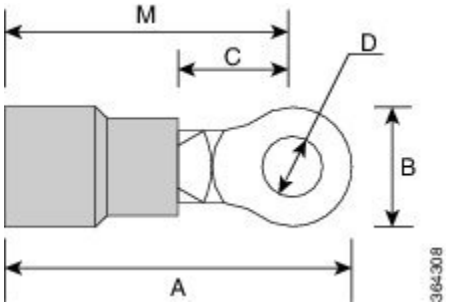



| | | | |
|---|---|---|---|
| A | 0.97 in. (2.4 cm) | C | 0.27 in. (0.68 cm) |
| B | 0.31 in. (0.78 cm) | D | 0.17 in. (0.43 cm) |
| M | 0.81 in. (2 cm) | | |

To connect to the DC power source:

1. Locate the terminal block plug.
2. Insert the DC-input power source wires into the terminal block plug.
3. Attach the DC supply wires using the designated screws.
4. Use a ratcheting torque screwdriver to torque the terminal block plug captive screw. (See the following figure.)

*Figure 76: Attach the DC Power Supply Wires*

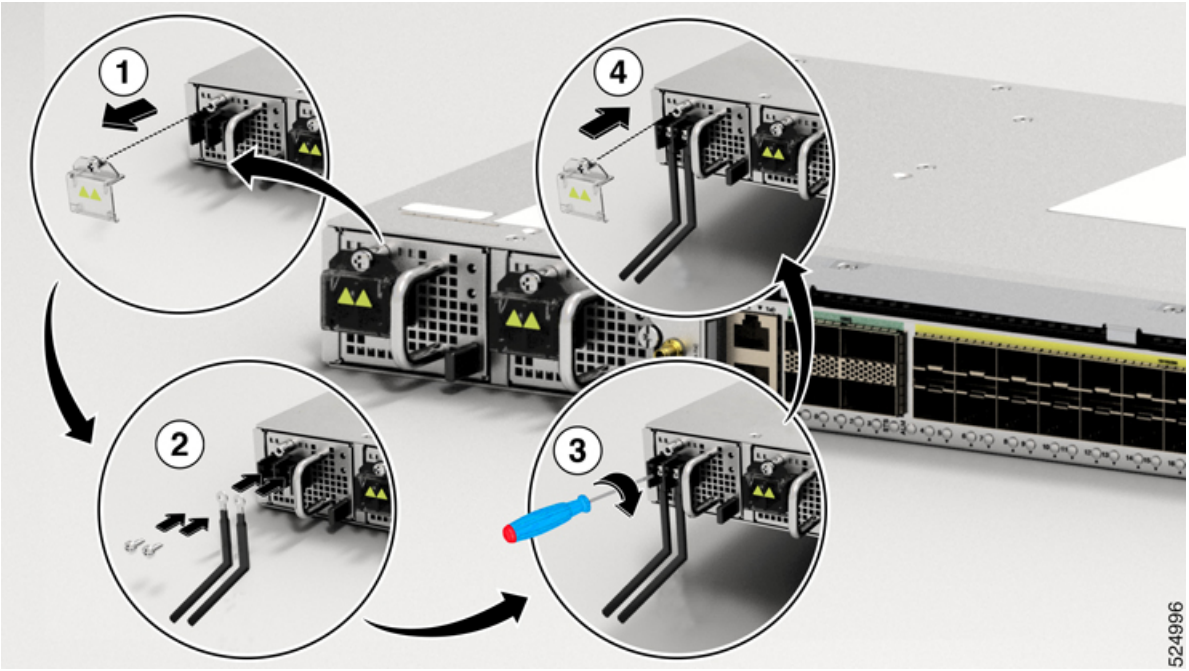


**Note** These images are for representation purpose only. Certain Cisco 8010 Series Routers may not include a tie for the power supply cord.

### Cisco 8011-32Y8L2H2FH Router

Prior to connecting the power supply to a power source, ensure that the chassis is properly grounded.

**Note** When installing DC power supply, use 14AWG for longer cables and 14-16AWG for shorter cables, 90°C temperature rated cable. The recommended cable length is three meters maximum from source.

**Note**

- Always ensure that the building's installation for short-circuit (overcurrent) protection does not exceed 30A.
- We recommend you to use a circuit breaker or a fast acting fuse with a maximum DC rating, based on the router variants for over current protection.

To connect the DC power supply directly to one or two DC power sources, follow these steps:


**Warning** **Statement 1003—**DC Power Disconnection

To reduce risk of electric shock or personal injury, disconnect DC power before removing or replacing components or performing upgrades.

1. Plug the DC power cable (CAB-48DC-40A-8AWG) into the DC power supply.
2. Turn off the power at the circuit breakers for the portions of the DC grid power that you are connecting to and verify that all of the LEDs on the DC grid power supplies are off.
3. Depending on the power supply installed, install the two cables from the DC power supply to the DC power source as follows:
   a. If the unconnected end of each power cable is not stripped off of its insulation for the last 0.75 inches (19 mm), use wire strippers to remove that amount of insulation.
   b. Attach the negative cables to the negative terminals of a DC power source, and attach the positive cables to the positive terminals of the same power source.
4. Verify that the power supply is receiving power by checking that the LED is on and is amber or red. For more information about the power supply LEDs and the conditions that they indicate, see Power Status LEDs.

   When you first activate the power supply, you can verify the functionality of the LED by checking that LED turns on for a couple of seconds. If the LED is flashing amber or red, check the power connections on the power supply and the power source

*Figure 77: Attach the DC Power Supply Wires*

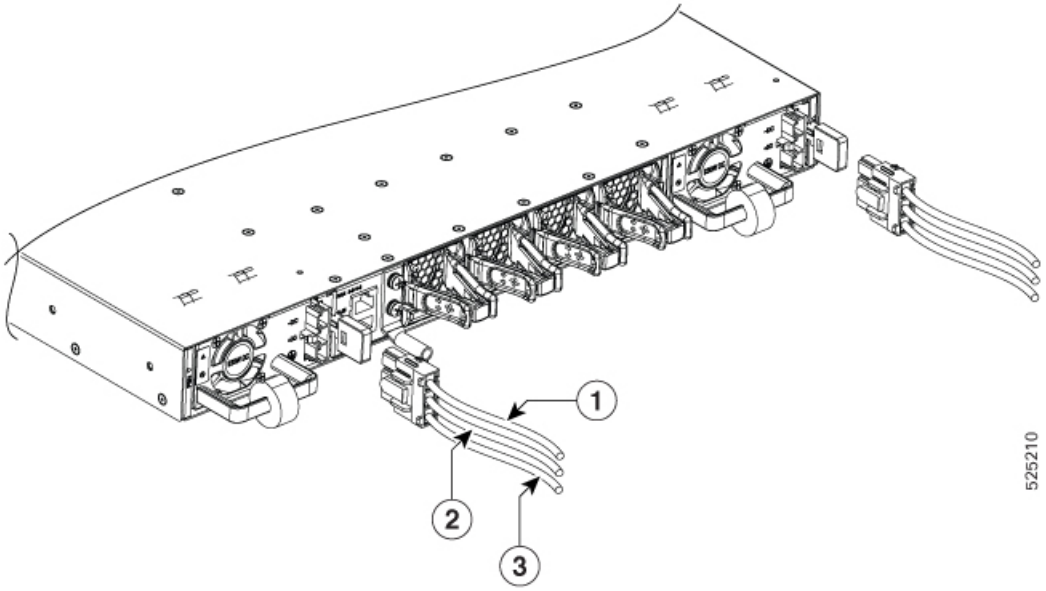


| | | | |
|---|---|---|---|
| 1 | Negative terminal | 3 | Ground terminal |
| 2 | Positive terminal | | |

**Note** These images are for representation purpose only. Certain Cisco 8010 Series Routers may not include a tie for the power supply cord.


### Cisco 8011-12G12X4Y Router

**Note** When installing DC power supply, use 14AWG for longer cables and 14-16AWG for shorter cables, 90°C temperature rated cable. The recommended cable length is three meters maximum from source.

**Note**

- Always ensure that the building's installation for short-circuit (overcurrent) protection does not exceed 6A.
- We recommend you to use a circuit breaker or a fast acting fuse with a maximum DC rating, based on the router variants for over current protection.

*Figure 78: DC Connector with In built Screw*

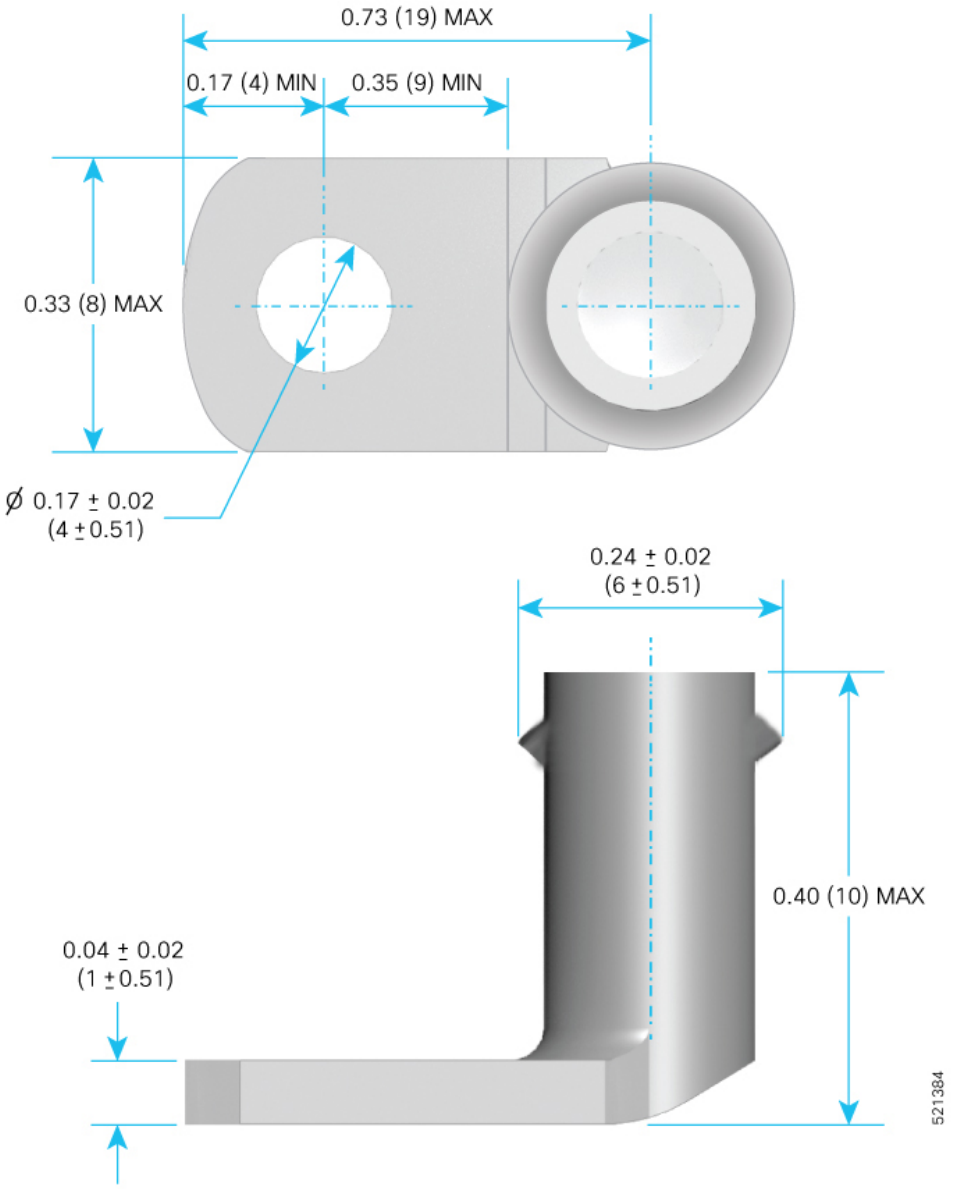



| | | | |
|---|---|---|---|
| A | 0.97 in. (2.4 cm) | C | 0.27 in. (0.68 cm) |
| B | 0.31 in. (0.78 cm) | D | 0.17 in. (0.43 cm) |
| M | 0.81 in. (2 cm) | | |

To connect to the DC power source:

1. Locate the terminal block plug.
2. Insert the DC-input power source wires into the terminal block plug.

3. Attach the DC supply wires using the designated screws.
4. Use a ratcheting torque screwdriver to torque the terminal block plug captive screw. (See the following figure.)

*Figure 79: Attach the DC Power Supply Wires*

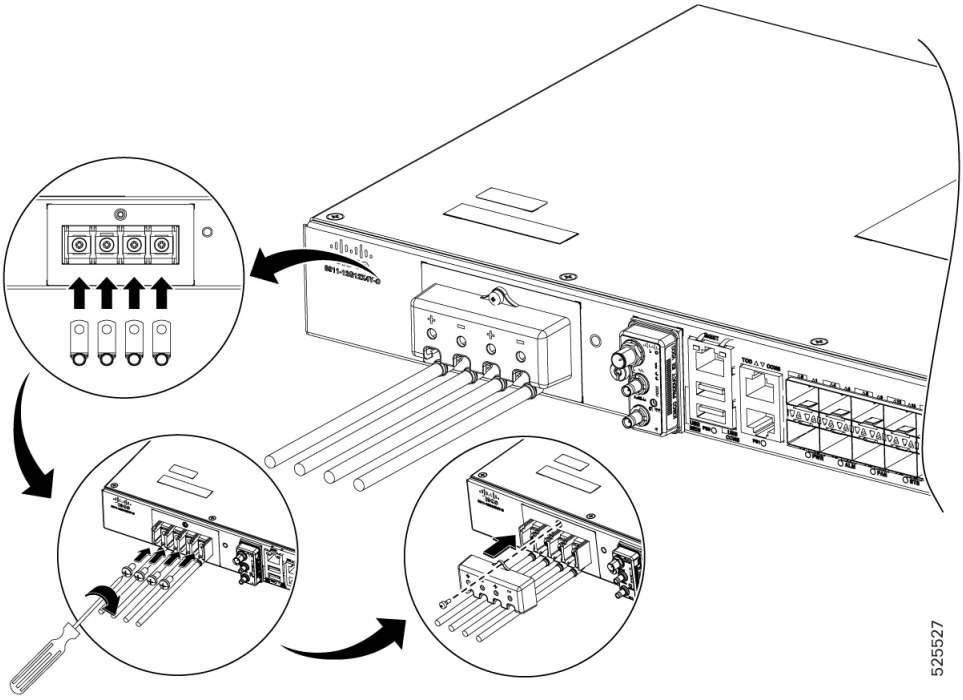


**Note** These images are for representation purpose only. Certain Cisco 8010 Series Routers may not include a tie for the power supply cord.

### Turn On a DC Power Supply Module

Perform this procedure to activate a DC power supply:

1. Verify the power supply operation by checking whether the respective power supply front panel LED (PS0 or PS1) is green.
2. If the LEDs indicate any issues with power problem, see *Appendix*.
3. If you are also connecting a redundant DC power supply, repeat these steps for the second power source.

**Note** If you are connecting a redundant mix mode (AC and DC) power supply, ensure that each power supply is connected to a separate power source to prevent power loss in the event of a power failure.

### Operating Voltage Range

*Table 21: Operating voltage range for mixed mode power supply*

# Port Connection Guidelines

These are the port connection guidelines:

- Depending on the chassis, you can use Quad Small Form-factor Pluggable Double Density (QSFP-DD), QSFP28, SFP, SFP+, and RJ45 connectors to connect the ports on the system to other network devices.
- To prevent damage to the fiber-optic cables, we recommend that you keep the transceivers disconnected from their fiber-optic cables when installing the transceiver in the system. Before removing a transceiver from the router, remove the cable from the transceiver.
- To maximize the effectiveness and life of your transceivers and optical cables, do the following:
  - Wear an ESD-preventative wrist strap that is connected to an earth ground whenever handling transceivers. The router is typically grounded during installation and provides an ESD port to which you can connect your wrist strap.
  - Do not remove and insert a transceiver more often than is necessary. Repeated removals and insertions can shorten its useful life.
  - Keep the transceivers and fiber-optic cables clean and dust free to maintain high signal accuracy and to prevent damage to the connectors. Attenuation (loss of light) is increased by contamination and should be kept below 0.35 dB.
    - Clean these parts before installation to prevent dust from scratching the fiber-optic cable ends.
    - Clean the connectors regularly; the required frequency for cleaning depends upon the environment. In addition, clean connectors when they are exposed to dust or accidentally touched. Both wet and dry cleaning techniques can be effective; refer to your site's fiber-optic connection cleaning procedures.
    - Do not touch the ends of connectors. Touching the ends can leave fingerprints and cause other contamination.
  - Inspect routinely for dust and damage. If you suspect damage, clean and then inspect fiber ends under a microscope to determine if damage has occurred.

# Console Port Connection

The system console port is an RJ45 receptacle for connecting a data terminal to perform the initial configuration of the router. After you create a local management connection, you can use the console to perform these functions through the management interface:

- Configure the router using the command-line interface (CLI).
- Monitor network statistics and errors.
- Configure Simple Network Management Protocol (SNMP) agent parameters.

- Download software updates.

The console cable is shipped with the hardware. Only RJ45 to DB-9 adapter cable is provided in the package.

*Figure 80: Cisco 8011-4G24Y4H-I Router — Connecting the USB Type-A Console Cable to the Chassis*

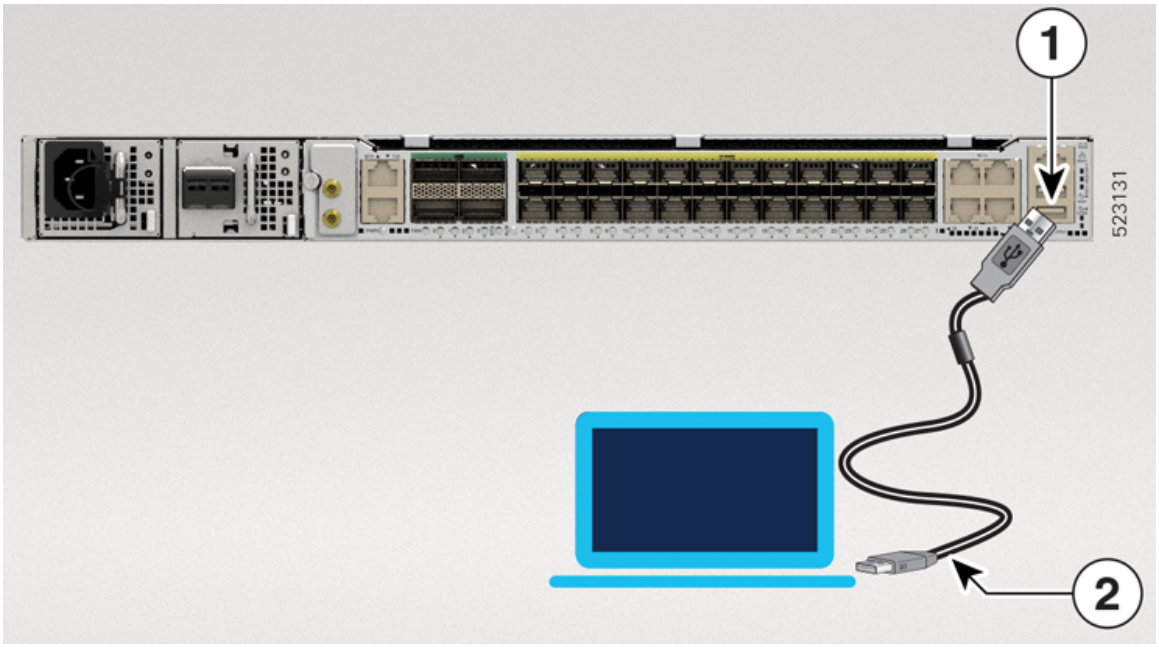



*Figure 81: Cisco 8011-32Y8L2H2FH — Connecting the USB Type-A Console Cable to the Chassis*


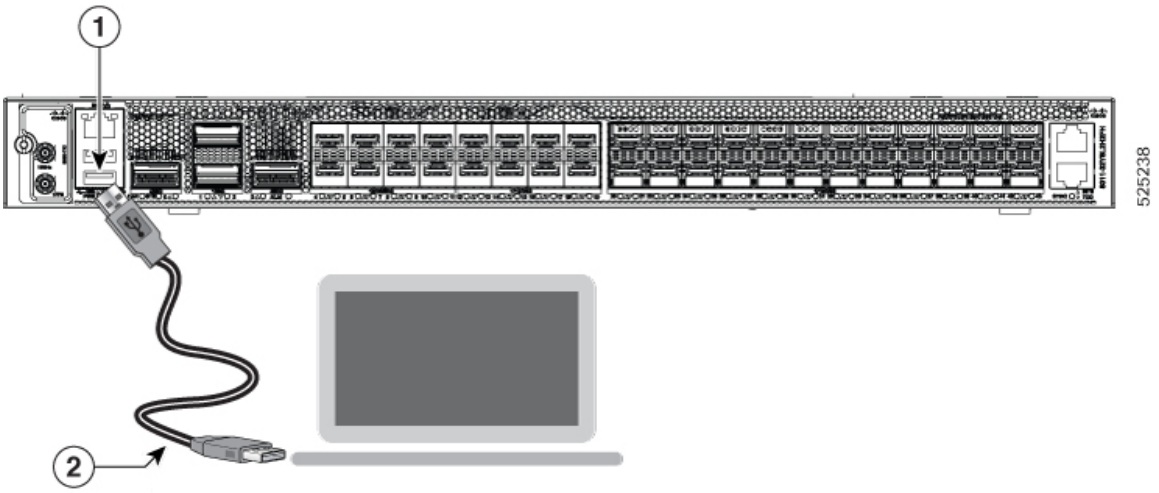


*Figure 82: Cisco 8011-12G12X4Y — Connecting the USB Type-A Console Cable to the Chassis*

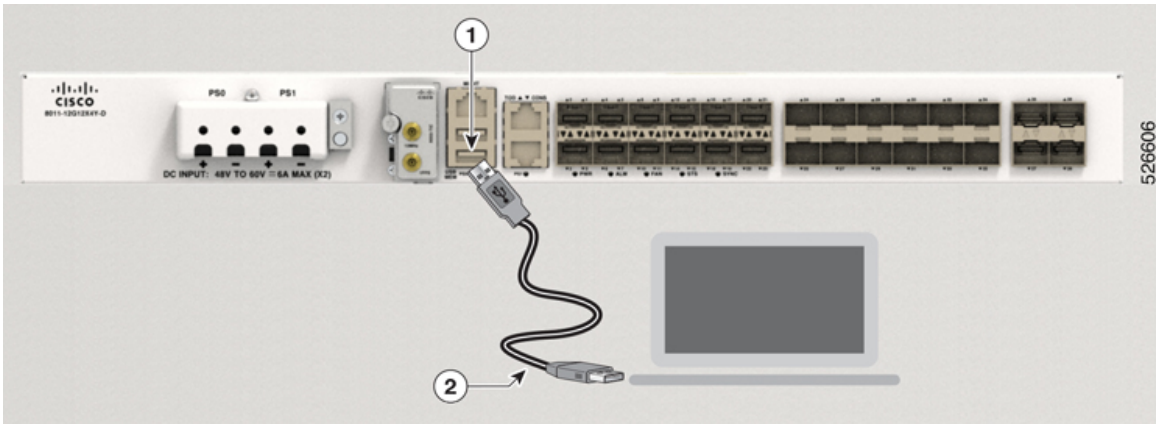


| | | | |
|---|---|---|---|
| 1 | USB Type-A console port | 2 | USB Type-A to USB Type-A cable |

# Connect a Data Terminal to the Console Port

To connect a data terminal to the console port:

### Before you begin

- Before you create a network management connection for the router or connect the router to the network, you must create a local management connection through a console terminal and configure an IP address for the router.

  The router must be fully installed in its rack, connected to a power source, and grounded.

- The necessary cabling for the console, management, and network connections must be available.
  - An RJ45 rollover cable and DB9F/RJ45 adapter are provided in the router accessory kit.
  - Network cabling should already be routed to the location of the installed router.

### Procedure

**Step 1** Set your terminal to these operational values: 115200 bps, 8 data bits, no parity, and two stop bits.

**Step 2** Attach the terminal end of the cable to the interface port on the data terminal.

**Step 3** Attach the other end of the cable to the console port.

# Management Ethernet Port Connection

The management Ethernet port provides out-of-band management, which enables you to use the Command Line Interface (CLI) to manage the router by its IP address. This port uses a 10/100/1000 Ethernet connection with an RJ45 interface.

*Figure 83: Cisco 8011-4G24Y4H-I — Management Ethernet Port*

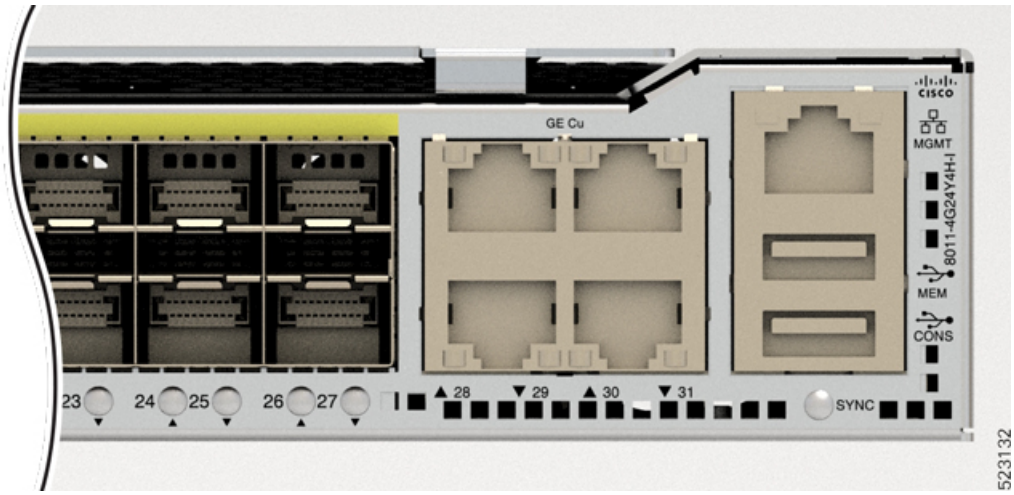



*Figure 84: Cisco 8011-32Y8L2H2FH — Management Ethernet Port*


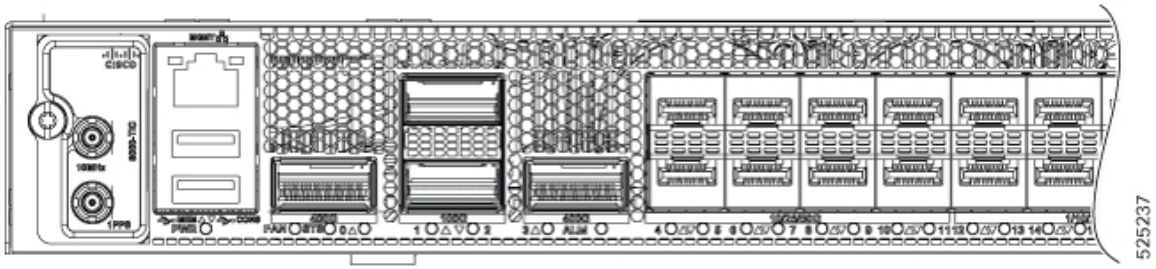


*Figure 85: Cisco 8011-12G12X4Y — Management Ethernet Port*

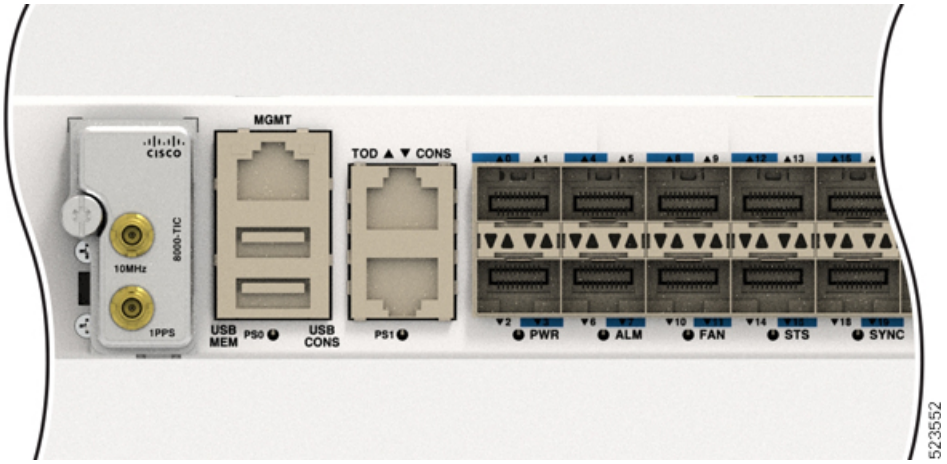


**Note** To comply with GR-1089-CORE, the intra-building port(s) of the equipment must use shielded intra-building cabling or wiring that is grounded at both ends.

# Connect to the Management Ethernet Port

To connect cables to the system management port:

### Before you begin

You must complete the initial router configuration.

**Note** To prevent an IP address conflict, do not connect the management Ethernet port until the initial configuration is complete.

### Procedure

**Step 1** Attach category 5 cables directly to the RJ45 receptacle on the management Ethernet port.

**Step 2** Connect the network end of your RJ45 cable to a switch, hub, repeater, or other external equipment.

# Connecting Cables to Timing Interfaces Card

Perform these steps on how to connect cables from the router to a Timing Interfaces Card unit for input 10Mhz or 1PPS interface.

1. Connect one end of a mini-coax cable to the Timing Interfaces Card unit.
2. Connect the other end of the mini-coax cable to the 10MHz or 1PPS port on the router.

# Inserting and Securing Timing Interfaces Card with GNSS Module

### Summary

This process involves physically integrating the module into a device and fastening it to ensure proper connection and stability.


The key components involved in the process are:

- Installer: The individual performing the physical installation and securing actions.
- GNSS module: The hardware component being installed, which provides Global Navigation Satellite System capabilities to the device.
- Device chassis: The main equipment or system where the GNSS module is inserted.
- Screwdriver: A tool used to tighten the captive screws on the module, ensuring it is firmly secured.

### Workflow

**Note** You can insert and secure the Cisco 8000-TIC-GNSS module only on the Cisco 8011-32Y8L2H2FH Router.

*Figure 86: Cisco 8011-32Y8L2H2FH Router: Inserting and securing the Cisco 8000-TIC-GNSS module*

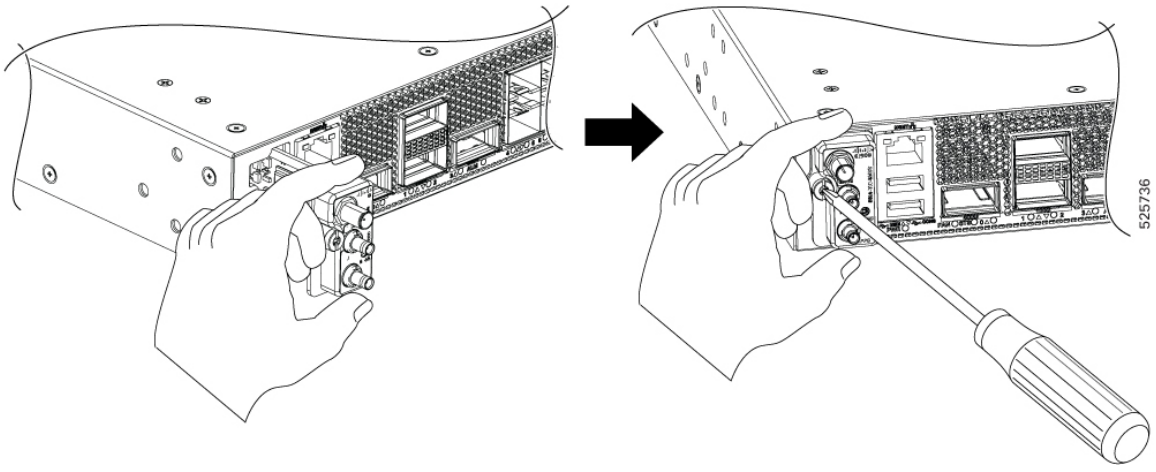


These are the stages of inserting and securing a Timing Interfaces Card with GNSS module:

1. Module Insertion: The installer carefully aligns the GNSS module with the designated slot on the device chassis and pushes it into place until it is fully seated within the device's internal connectors.

2. Module Securing: The installer uses a screwdriver to tighten the captive screws located on the faceplate of the GNSS module. This action secures the module firmly to the device chassis, preventing accidental dislodgement and ensuring a stable connection.

**Note** Ensure that the captive screws are tightened with a torque of 5lbs-in or 0.65 Nm.

**Result**

The GNSS module is successfully installed and secured within the device, establishing a stable physical connection and preparing it for operational use.

# Install and Remove Transceiver Module

**Caution** Removing and installing a transceiver can shorten its useful life. Do not remove and insert transceivers more than it is absolutely necessary. We recommended that you disconnect cables before installing or removing transceivers to prevent damage to the cable or transceiver

This section shows how to install and remove transceiver module:

## Safety Precautions for Module Installation and Removal

Be sure to observe the following safety precautions when you work on the chassis.

**Warning** **Statement 1006—**Chassis Warning for Rack-Mounting and Servicing

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

**Warning** **Statement 1008—**Class 1 Laser Product

This product is a Class 1 laser product.

**Note** **Statement 1089—**Instructed and Skilled Person Definitions

An instructed person is someone who has been instructed and trained by a skilled person and takes the necessary precautions when working with equipment.

A skilled person or qualified personnel is someone who has training or experience in the equipment technology and understands potential hazards when working with equipment.

**Warning** **Statement 1090—**Installation by a Skilled Person

Only a skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of a skilled person.

# Install and Remove SFP Modules

Before you remove or install an SFP module, read the installation information in this section.

**Caution** Protect all the unused ports by inserting clean dust covers or dust caps into them.

**Warning** **Statement 1055—**Class 1/1M Laser

Invisible laser radiation is present. Do not expose to users of telescopic optics. This applies to Class 1/1M laser products.




**Warning** **Statement 1056—**Unterminated Fiber Cable

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not view directly with optical instruments. Viewing the laser output with certain optical instruments, for example, eye loupes, magnifiers, and microscopes, within a distance of 100 mm, may pose an eye hazard.

**Caution** Protect the system by inserting a clean SFP module cage cover (shown in the following figure) into the optical module cage when there is no SFP module installed. The SFP module cage cover is not a standard part of the accessories kit.

*Figure 87: SFP Module Cage Cover*




**Caution** Protect the SFP or SFP+ modules by inserting clean dust covers into them after the cables are removed. Be sure to clean the optic surfaces of the fiber cables before you plug them back into the optical ports of another module. Avoid getting dust and other contaminants into the optical ports of your SFP modules, because the optics do not work correctly when obstructed by dust.


**Caution** We strongly recommend that you do not install or remove the SFP module with fiber-optic cables attached to it because of the potential of damaging the cable, the cable connector, or the optical interfaces in the module. Disconnect all cables before removing or installing an SFP module. Removing and inserting a module can shorten its useful life; so you should not remove and insert modules more than it is absolutely necessary.

**Note** When installing an SFP module, you would hear a click as the triangular pin on the bottom of the module snaps into position into the hole in the receptacle. The click indicates that the module is correctly seated and secured in the receptacle. Verify that the modules are completely seated and secured in their assigned receptacles on the system by firmly pushing on each SFP module.

## Bale Clasp SFP Module

The bale clasp SFP module has a clasp that you use to remove or install the module. (See the figure below.)

*Figure 88: Bale Clasp SFP Module*

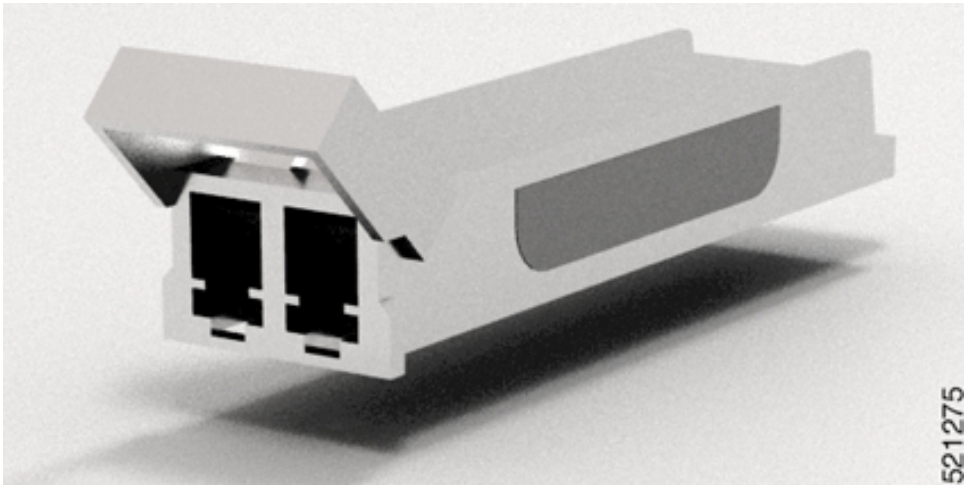



## Install a Bale Clasp SFP Module

To install this type of SFP module:

1. Attach an ESD-preventive wrist or ankle strap and follow its instructions for use.
2. Close the bale clasp before inserting the SFP module.
3. Line up the SFP module with the port and slide it into the port. (See the figure below.)

*Figure 89: Installing a Bale Clasp SFP Module into a Port*

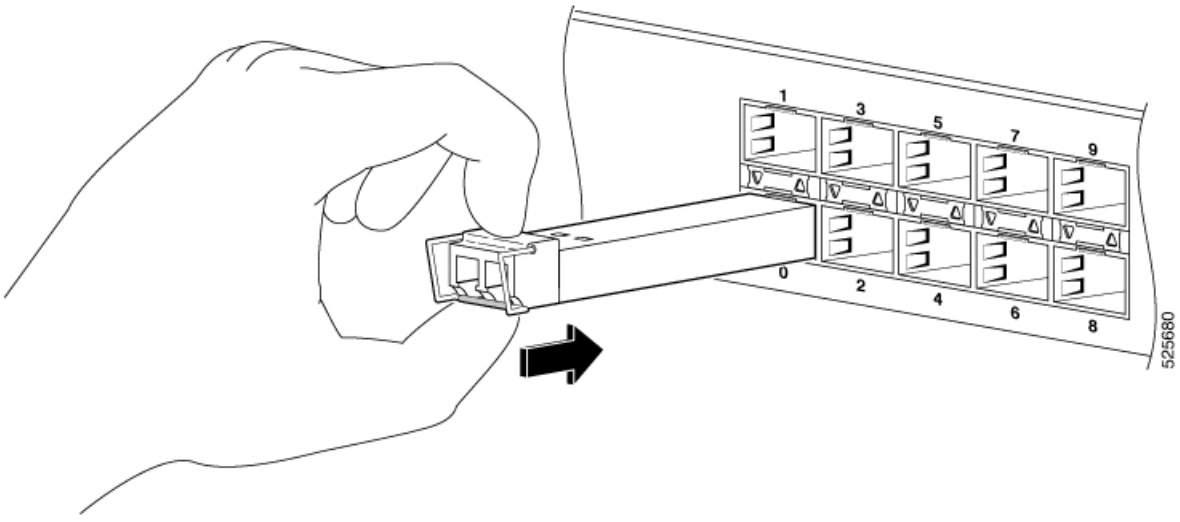


**Note** When installing an SFP or SFP+ module, you should hear a click as the triangular pin on the bottom of the SFP module snaps into the hole in the receptacle. This click indicates that the module is correctly seated and secured in the receptacle. Verify that the SFP modules are completely seated and secured in their assigned receptacles on the system by firmly pushing on each SFP module.


## Remove a Bale Clasp SFP Module

To remove this type of SFP module:

1. Attach an ESD-preventive wrist or ankle strap and follow its instructions for use.
2. Disconnect and remove all interface cables from the ports; note the current connections of the cables to the ports on the system.
3. Open the bale clasp on the SFP module with your index finger, as shown in the figure below. If the bale clasp is obstructed and if you cannot open it, use your index finger, use a small flat-blade screwdriver or other long, narrow instrument to open the bale clasp.
4. Grasp the SFP module between your thumb and index finger and carefully remove it from the port, as shown in the figure below.

**Note** This action must be performed during your first instance. After all ports are populated, this may not be possible.

*Figure 90: Removing a bale clasp SFP module*

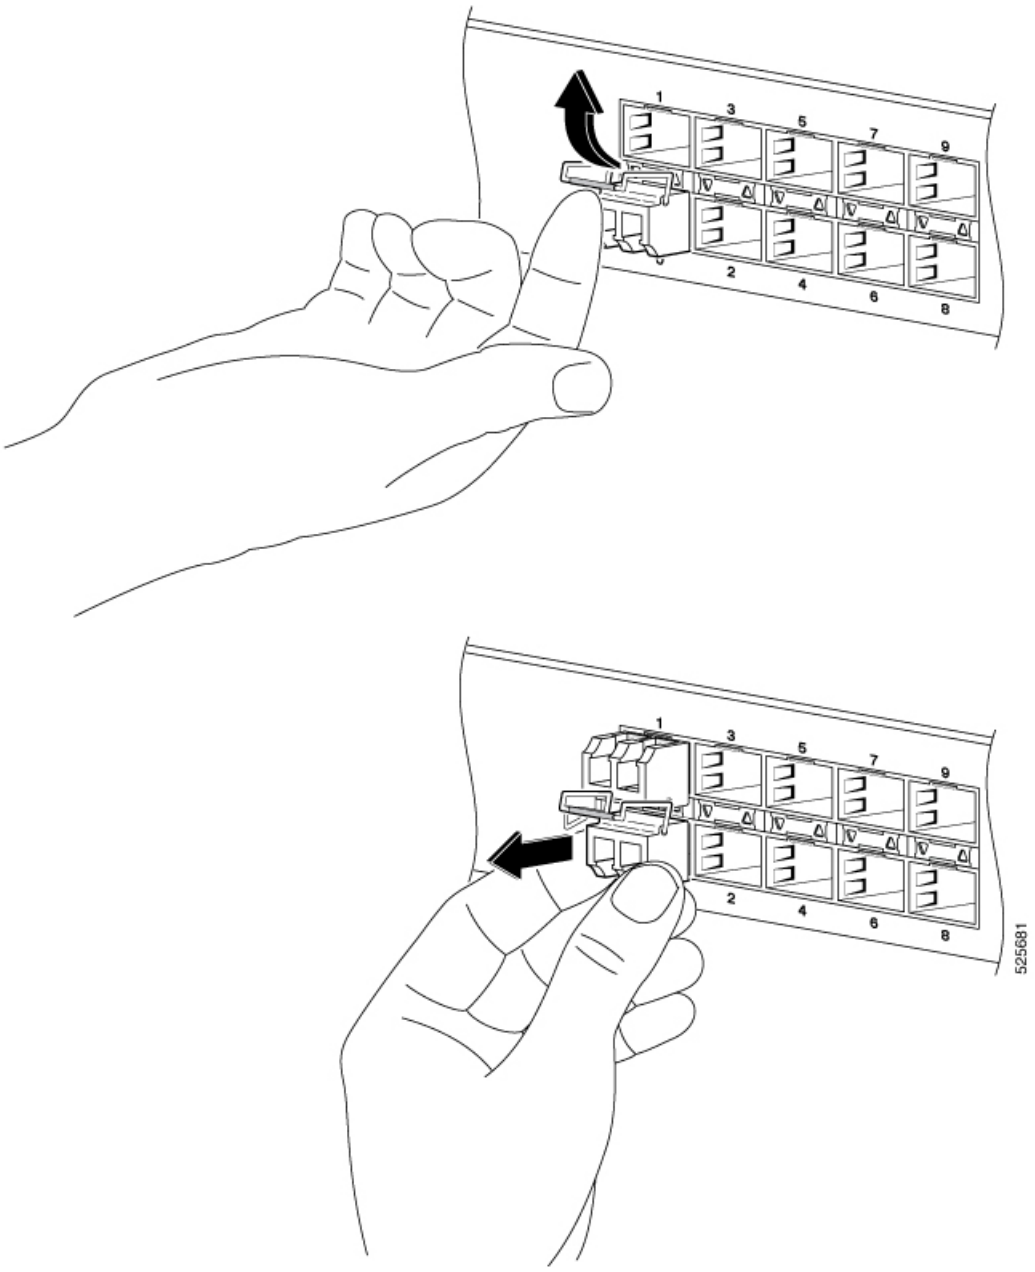


5. Place the SFP module that you removed on an antistatic mat, or immediately place it in a static shielding bag if you plan to return it to the factory.
6. Protect your system by inserting a clean SFP module cage covers into the optical module cage when there is no SFP module installed.

# Connect Interface Ports

You can connect optical interface ports on with other devices for network connectivity.

## Connect a Fiber-Optic Port to the Network

Depending on the model that you are using, you can use either QSFP+ or QSFP28 transceivers. Some transceivers work with fiber-optic cables that you attach to the transceivers and other transceivers work with pre-attached copper cables. When installing fiber-optic cables for a port, you must install SFP transceivers for 1-Gigabit optical ports or install SFP+ transceivers for 10-Gigabit optical ports or QSFP+ transceivers for 100-Gigabit ports before installing the fiber-optic cable in the transceivers.



**Caution** Removing and installing a transceiver can shorten its useful life. Do not remove and insert transceivers more than it is absolutely necessary. We recommended that you disconnect cables before installing or removing transceivers to prevent damage to the cable or transceiver.

## Disconnect Optical Ports from the Network

When you need to remove fiber-optic transceivers, you must first remove the fiber-optic cables from the transceiver before you remove the transceiver from the port.

# Maintain Transceivers and Optical Cables

To maintain high signal accuracy and to prevent damage to the connectors, transceivers and fiber-optic cables must be kept clean and free of dust. Attenuation (loss of light) is increased by contamination and should be below 0.35 dB.

Consider the following maintenance guidelines:

- Transceivers are static sensitive. To prevent ESD damage, wear an ESD-preventative wrist strap that is connected to the grounded chassis.
- Do not remove and insert a transceiver more than it is necessary. Repeated removals and insertions can shorten its useful life.
- Keep all optical connections covered when not in use. Clean them before use to prevent dust from scratching the fiber-optic cable ends.
- Do not touch the ends of connectors. Touching the ends would leave fingerprints and cause other contamination.
- Clean the connectors regularly; the required frequency of cleaning depends upon the environment. In addition, clean connectors if they are exposed to dust or have been accidentally touched. Both wet and dry cleaning techniques can be effective; refer to your site's fiber-optic connection cleaning procedures.
- Inspect routinely for dust and damage. Clean and then inspect fiber ends under a microscope to determine whether any damage has occurred.

# Installing the Air Filter (AF-CVR-C)

This section describes installing the air filter, AF-CVR-C, on the following Cisco 8010 router variants:

- 8011-12G12X4Y-A
- 8011-12G12X4Y-D

**Note** The maximum operating temperature is 60°C when air filters and dust covers are installed on the system.

The maximum operating temperature increases to 70°C when air filters and dust covers are removed from the system.

**Note** Air filters are consumable items and must be ordered separately by customers. Customers may contact TAC for assistance in identifying the correct air filter PID to order. We recommend having spare air filters in stock.


### Before you begin

- Complete the "Rack Mount" procedure.
- Since the air filter is installed from the top, make sure that there is approximately 2 rack units of space above the router.

### Procedure

**Step 1** Position the air filter on top of the air inlet side of the chassis as shown in the figure.

*Figure 91: Position the air filter*

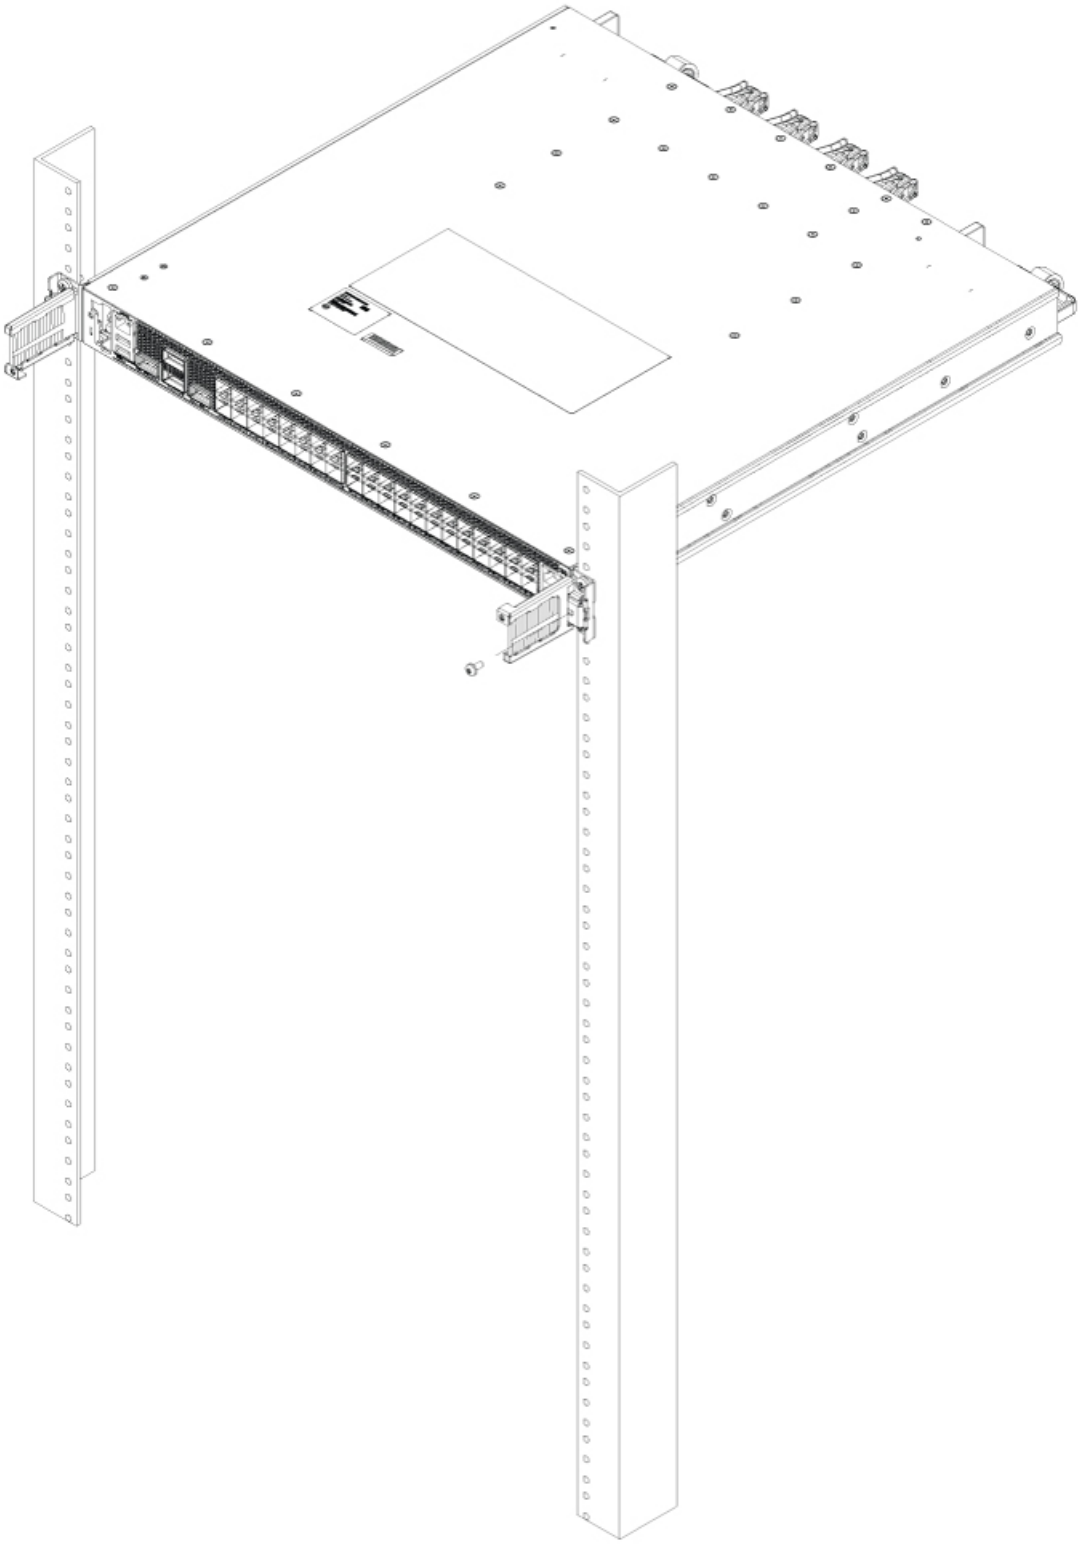

**Note**
Locate the label "TOP REAR" on the air filter's top bracket. The label serves as an installation guide indicating that this side of the air filter should be positioned at the top of the router chassis.

**Step 2** From the top, slide the air filter to cover the air vents as shown in the figure.

***Figure 92: Slide the air filter***

**Note**
There are three magnetic points on the air filter as shown in the figure. The magnetic points keep the air filter secured to the router chassis.

***Figure 93: Magnetic points***

# Install the air filter (AF-CVR-A, AF-CVR-B, AF-CVR-C) (front and side views)

This section describes installing the air filter, AF-CVR-A, on the following Cisco 8010 router variants:

- 8011-12G12X4Y-A
- 8011-12G12X4Y-D

**Note** Air filters are consumable items and must be ordered separately by customers. Customers may contact TAC for assistance in identifying the correct air filter PID to order. We recommend having spare air filters in stock.


### Before you begin

- Complete the "Rack Mount" procedure.
- Since the air filter is installed from the top, make sure that there is approximately 2 rack units of space above the router.

### Procedure

**Step 1** Mount the cable management onto the mounting ears on both sides.

*Figure 94: Mount the cable management*

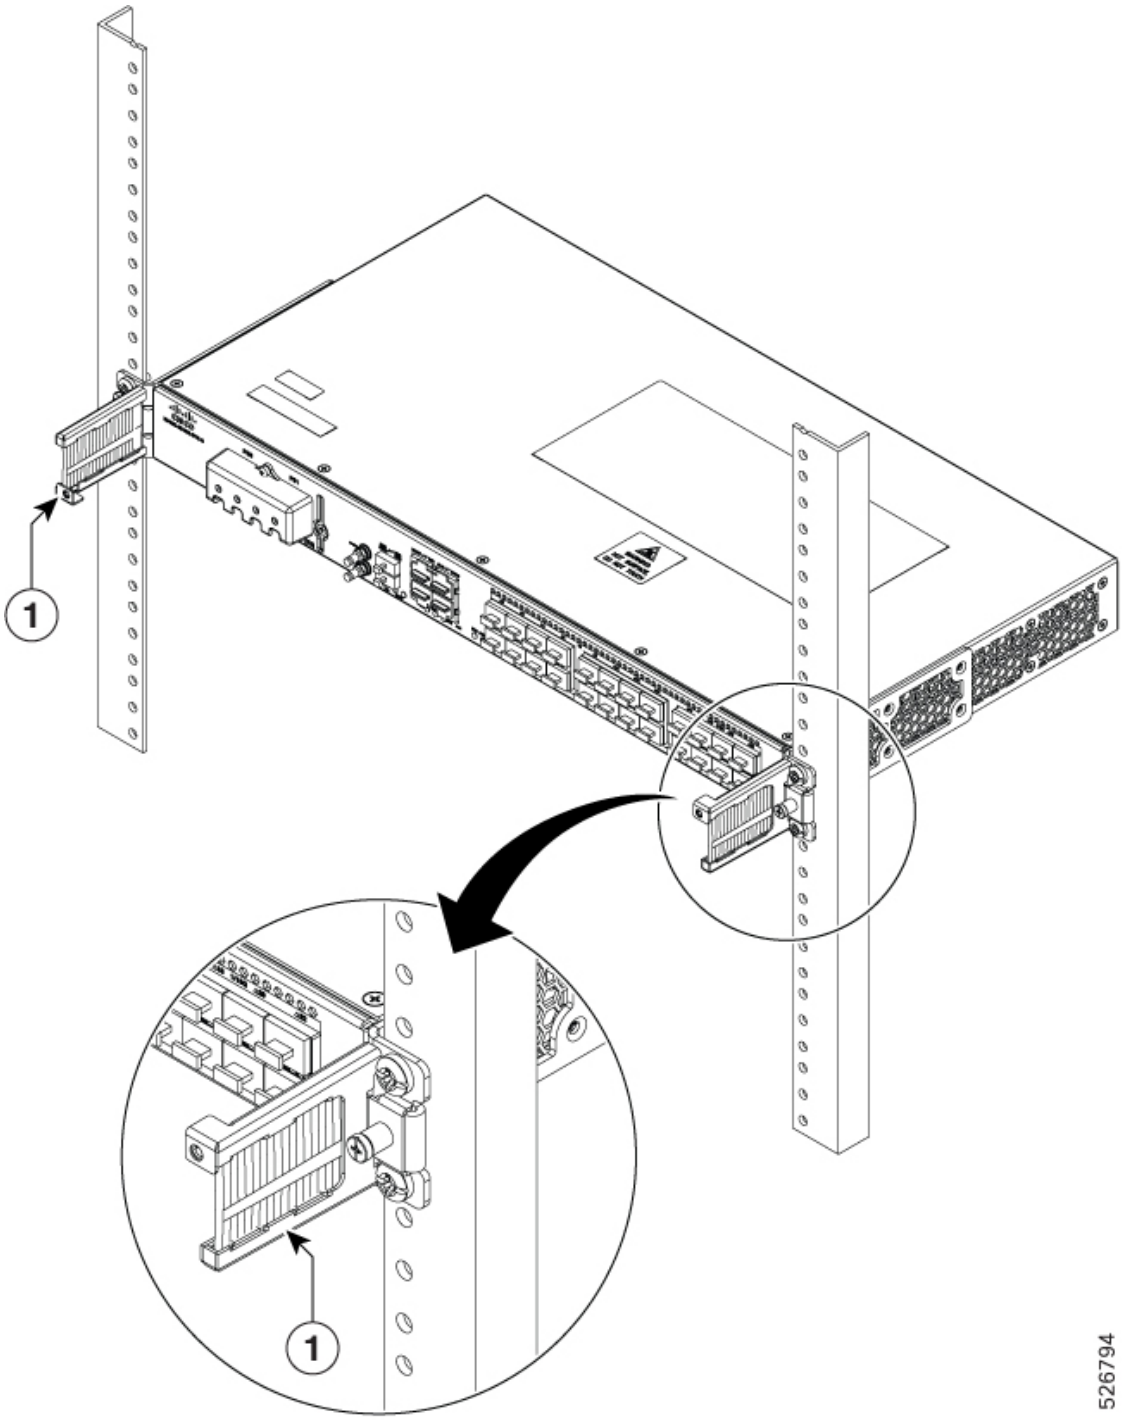



| Part | Part Number | Quantity |
|---|---|---|
| 1 - Cable management | 800-52079-01 | 2 |

**Note**

Use thumb screw to fix cable management with rack mount bracket.


**Step 2** Install the air filter (800-52742-01) inside the front air filter cover (700-137145-01).


***Figure 95: Air filter with filter cover***

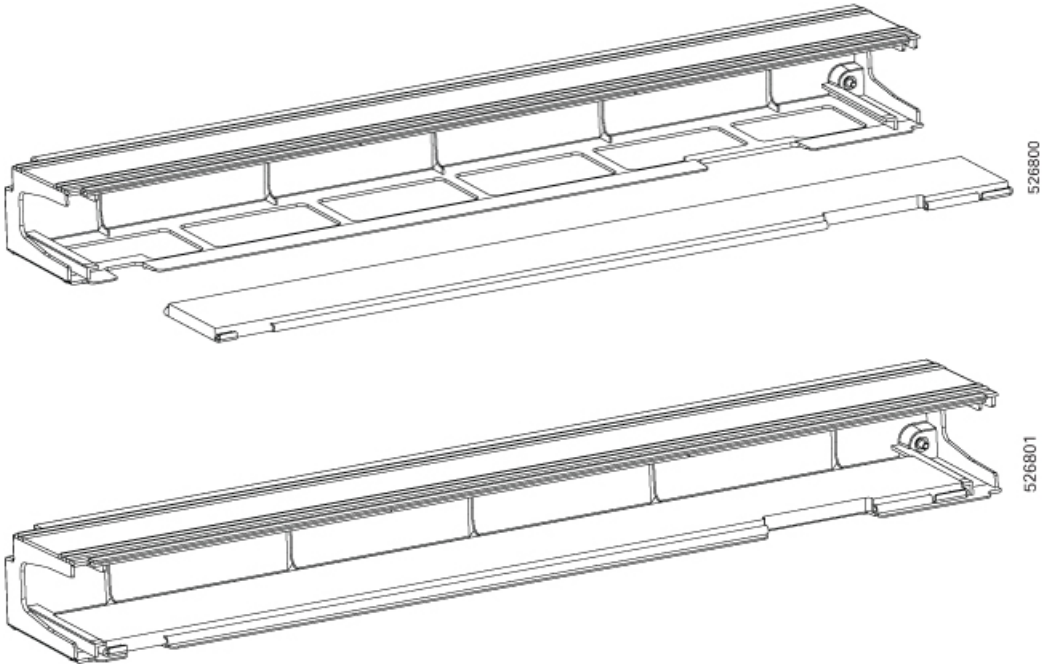


**Step 3** Assemble the front air filter cover.

*Figure 96: Front air filter*

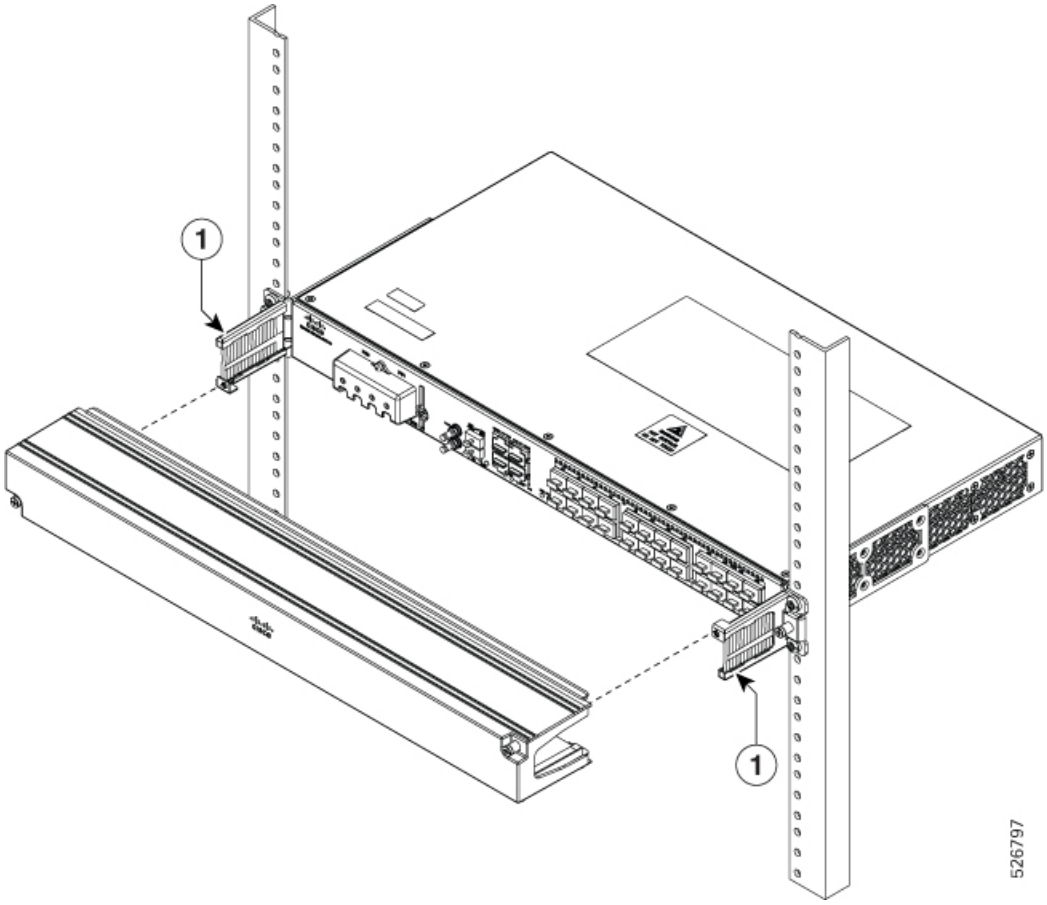


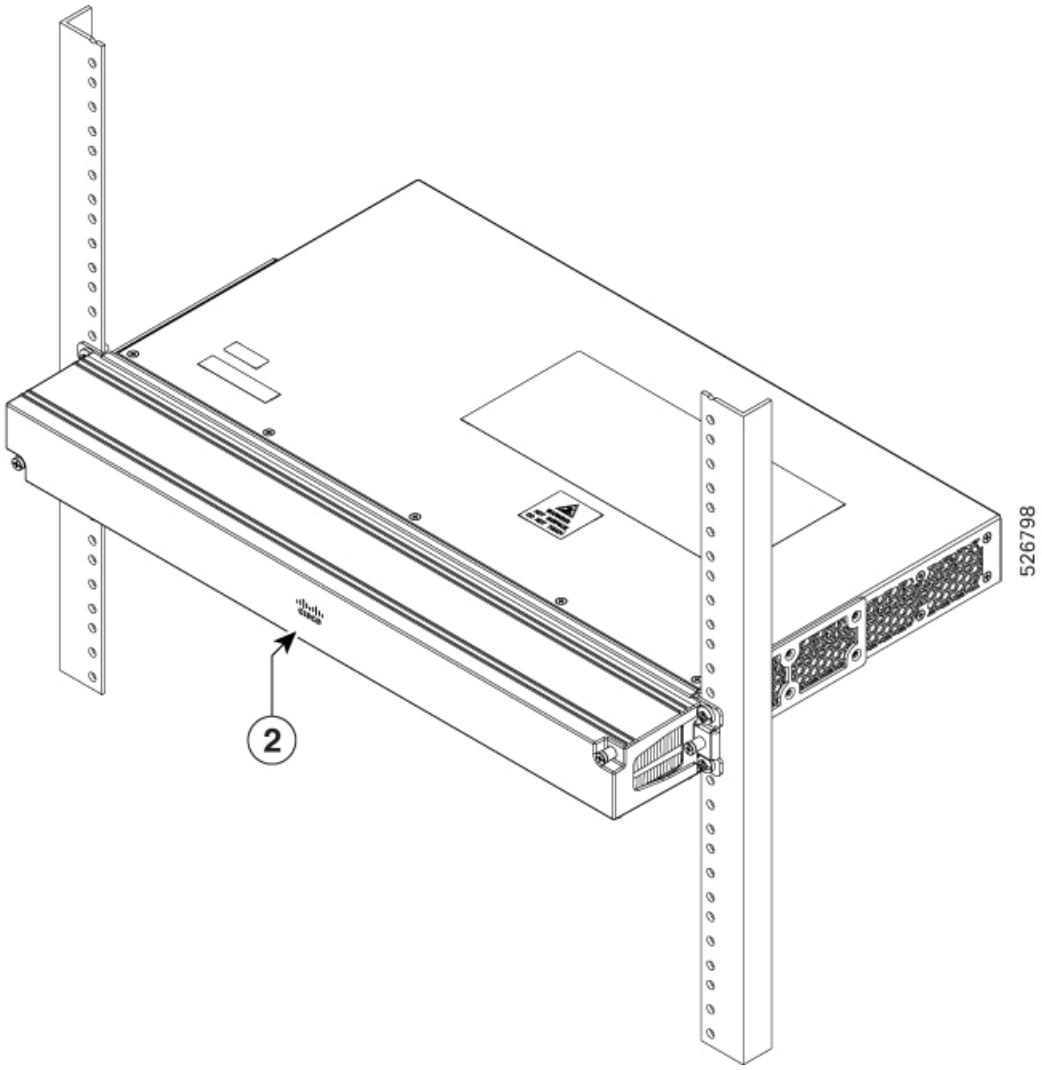


| Part | Part Number | Quantity |
|---|---|---|
| 1 - Cable management | 800-52079-01 | 2 |
| 2 - Air filter front cover | 700-137145-01 | 1 |


**Step 4** Fix the side-mounted air filter onto the air baffle (RH).

*Figure 97: Side-mounted air filter*

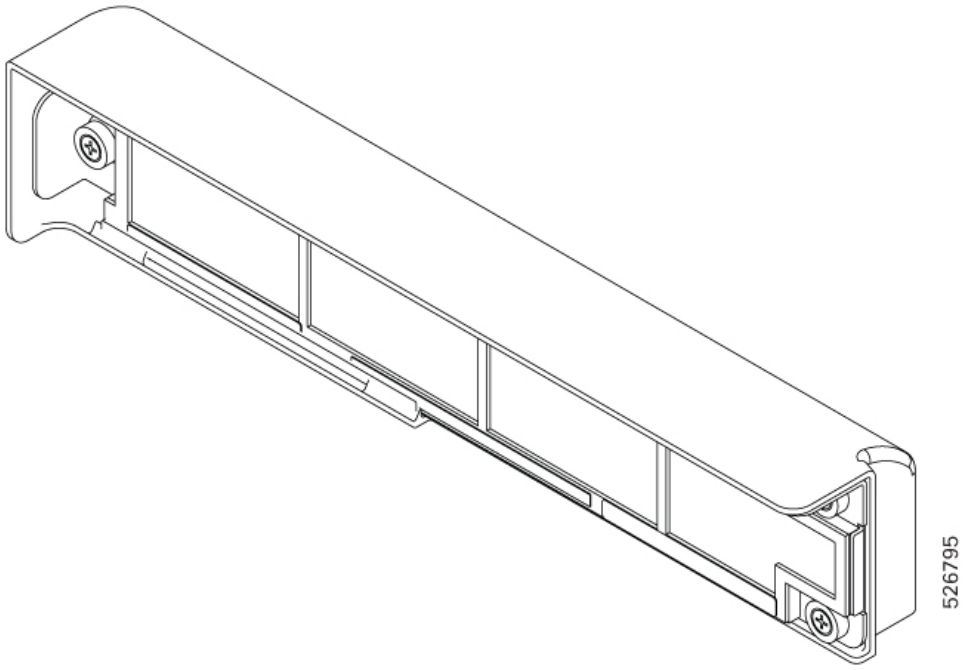


| Part | Part Number | Quantity |
|---|---|---|
| 1 - Air filter | 800-52029-01 | 1 |
| 2 - Air baffle | 700-137564-01 | 1 |

*Figure 98: Air filter*

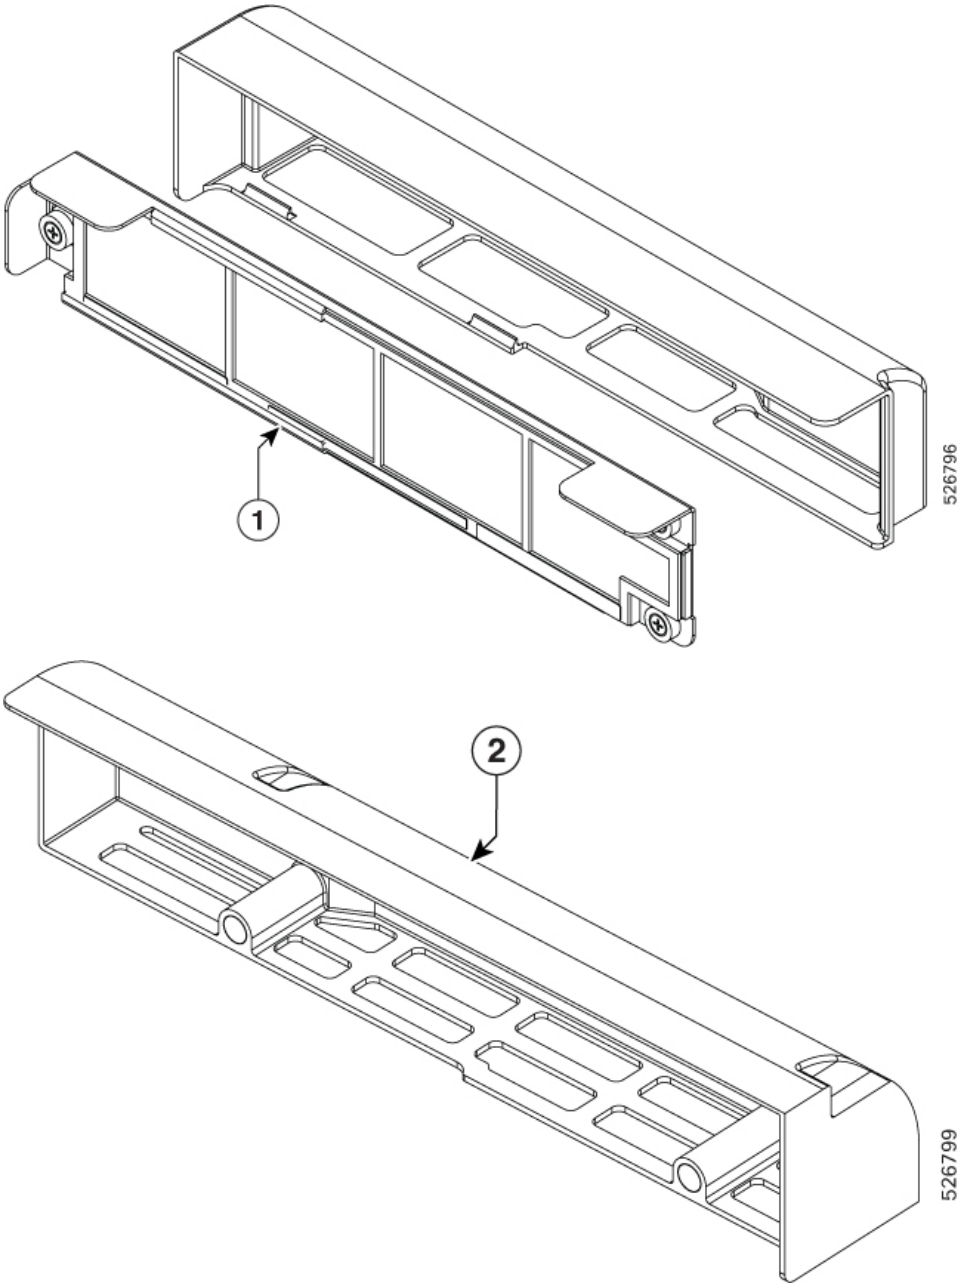



| Part | Part Number | Quantity |
|---|---|---|
| 1 - Air baffle - Right side with air filter | 700-137564-01<br>800-52029-01 | 1 |
| 2 - Air baffle left side | 700-137569-01 | 1 |

**Note**
Air filter baffle with air filter should be assembled in right side of the chassis air inlet.

**Step 5** Mount both the right and left air baffles on the chassis.


***Figure 99: Mounting air filters on both sides of chassis***

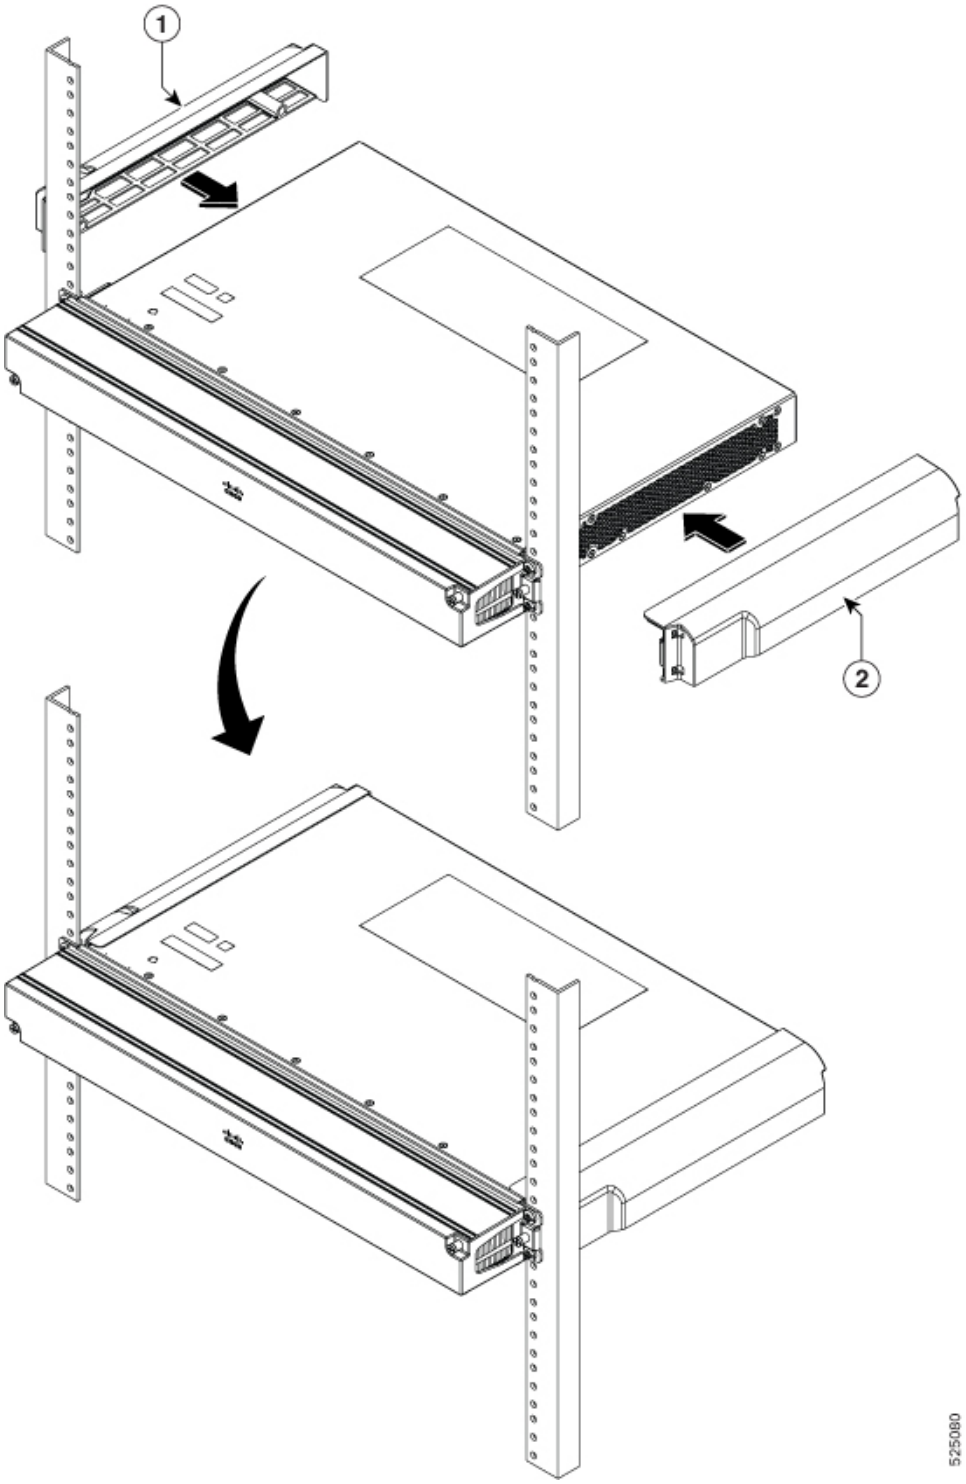

| Part | Part Number | Quantity |
|---|---|---|
| 1 - Exhaust Baffle | 700-137569-01 | 1 |
| 2 - Right side air baffle with filter | 700-137564-01<br>800-52029-01 | 1 |

**Warning**
We recommend that you use only the screws with part number 48-101690-01 to mount the chassis on rack. Other screws are not recommended for the side filter assembly.

**Warning**
The ports without optics should be closed with dust caps.

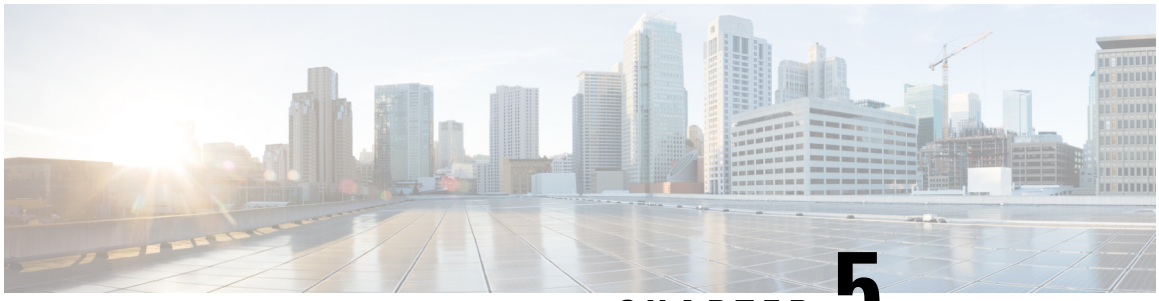

CHAPTER 5

# Configure the Router

Before you begin this task, ensure that you have read and understood the safety warnings in the *Compliance and Safety Information* section.

Configuring the Cisco router involves these tasks:

- Create the Initial Router Configuration, on page 133
- Verify Router Installation, on page 134

# Create the Initial Router Configuration

You must assign an IP address to the router management interface so that you can then connect the router to the network.

When you initially power up the router, it boots up and asks a series of questions to help configure the router. To enable you to connect the router to the network, you can use the default choices for each configuration except for the IP address, which you must provide.

### Before you begin

- A console device must be connected with the router.
- The router must be connected to a power source.

### Procedure

**Step 1** Power up the router.

The LEDs on each power supply light up (green) when the power supply units are sending power to the router, and the software asks you to specify a password to use with the router.

**Step 2** When the system is booted up for the first time, a new username and a password is to be created. The following prompt appears:

```
!!!!!!!!!!!!!!!!!!!! NO root-system username is configured. Need to configure root-system username.
 !!!!!!!!!!!!!!!!!!!!
```

```
--- Administrative User Dialog ---


Enter root-system username:
% Entry must not be null.

Enter root-system username: root
Enter secret:
Use the 'configure' command to modify this configuration.
User Access Verification

Username: root
Password:


RP/0/RP0/CPU0:ios#
```

**Step 3** Enter a new password to use for this router.

The software checks the security strength of it and rejects your password if it is not considered to be a strong password. To increase the security strength of your password, make sure that it adheres to the following guidelines:

- At least eight characters
- Minimizes or avoids the use of consecutive characters (such as "abcd")
- Minimizes or avoids repeating characters (such as "aaa")
- Does not contain recognizable words from the dictionary
- Does not contain proper names
- Contains both uppercase and lowercase characters
- Contains both numbers and letters

**Note**
Clear text passwords cannot include the dollar sign ($) special character.

**Tip**
If a password is trivial (such as a short, easy-to-decipher password), the software rejects the password configuration. Be sure to configure a strong password as described by the guidelines in this step. Passwords are case sensitive.

If you enter a strong password, the software asks you to confirm the password.

**Step 4** Re-enter the password.

When you enter the same password, the software accepts the password.

# Verify Router Installation

After installing the Cisco router, you use the **show** commands to verify the installation and configuration. If any issue is detected, take corrective action before continuing with further configurations.

1. **show inventory**

Displays information about the field replaceable units (FRUs), including product IDs, serial numbers, and version IDs.

Example:

```
#show inventory
```

2. **show environment**

   Displays all environment-related router information.

   Example:

   ```
   # show environment
   ```

3. **show environment temperature**

   Displays temperature readings for on-board temperature sensors and for PSU. Each temperature sensor has three thresholds:

   - Minor temperature threshold: When a minor threshold is exceeded, a minor alarm occurs and the following actions occur for all sensors:
     - System messages are displayed
     - SNMP notifications (if configured) are sent
     - Log environmental alarm event is triggered (Run the **show alarm** command to review this.)
   - Major temperature threshold: When a major threshold is exceeded, a major alarm occurs and the following actions occur for all sensors:
     - System messages are displayed
     - SNMP notifications (if configured) are sent
     - Log environmental alarm event is triggered (Run the **show alarm** command to review this.)
   - Critical temperature threshold: When a critical threshold is exceeded, a critical alarm occurs and the following actions occurs:
     - For all the main board sensors the system is shut down.
     - For the PSU sensor, the particular PSU is turned off .

4. **show environment power**

   Displays the power usage information for the entire router.

   Example:

   ```
   #show environment power
   ```

5. **show environment voltage**

   Displays the voltage for the entire router.

   Example:

   ```
   #show environment voltage
   ```

6. **show environment current**

Displays current for different voltage rails of the router.

Example:


```
#show environment current
```

7. **show environment fan**

   Displays the speed of all the fans including the fan in PSU.

   Example:

   ```
   #show environment fan
   ```

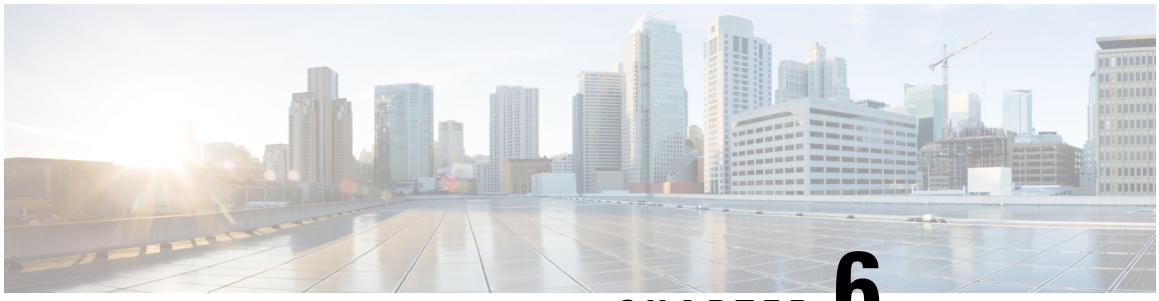

CHAPTER 6

# Replace Chassis Components


- Replace Fan Modules, on page 137
- Replace Power Supply, on page 139
- Replace DC Power Supply Modules, on page 140
- Replace AC Power Supply Modules, on page 144


## Replace Fan Modules

**Note** Fan modules can be replaced only on the Cisco 8011-32Y8L2H2FH Router.

**Caution** If you cannot replace a fan module (FAN-1RU-PI-V3) within three minutes, we recommend that you leave it in the chassis until you are prepared to replace it within that specified time limit.


**Note** If you remove more than one fan module at a time during operations, the router allows up to 2 minutes of operations before shutting down, unless you replace extra missing fan modules within that time. If the router senses an over temperature condition when multiple fan modules are removed, the shutdown can occur in less than 2 minutes.


### Procedure

**Step 1** Press both the latches on the fan module to disengage the fan module connection from the chassis.

**Step 2** Simultaneously press the latches, and pull the fan module fully out of the chassis.

*Figure 100: Remove fan module from the Cisco 8011-32Y8L2H2FH chassis*

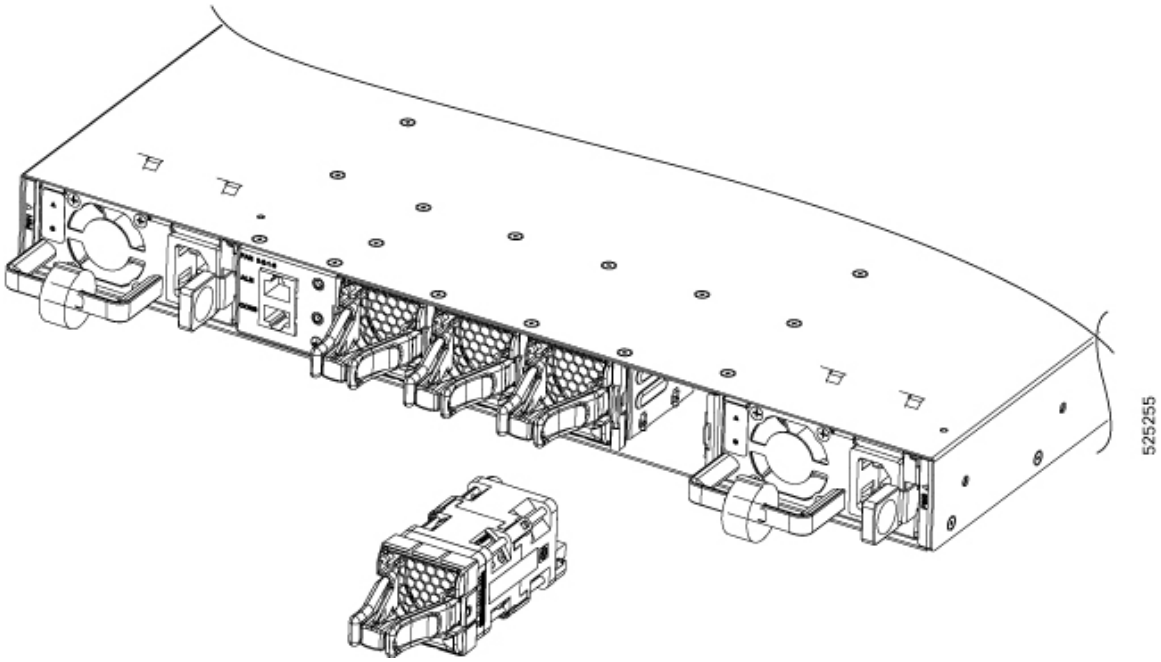

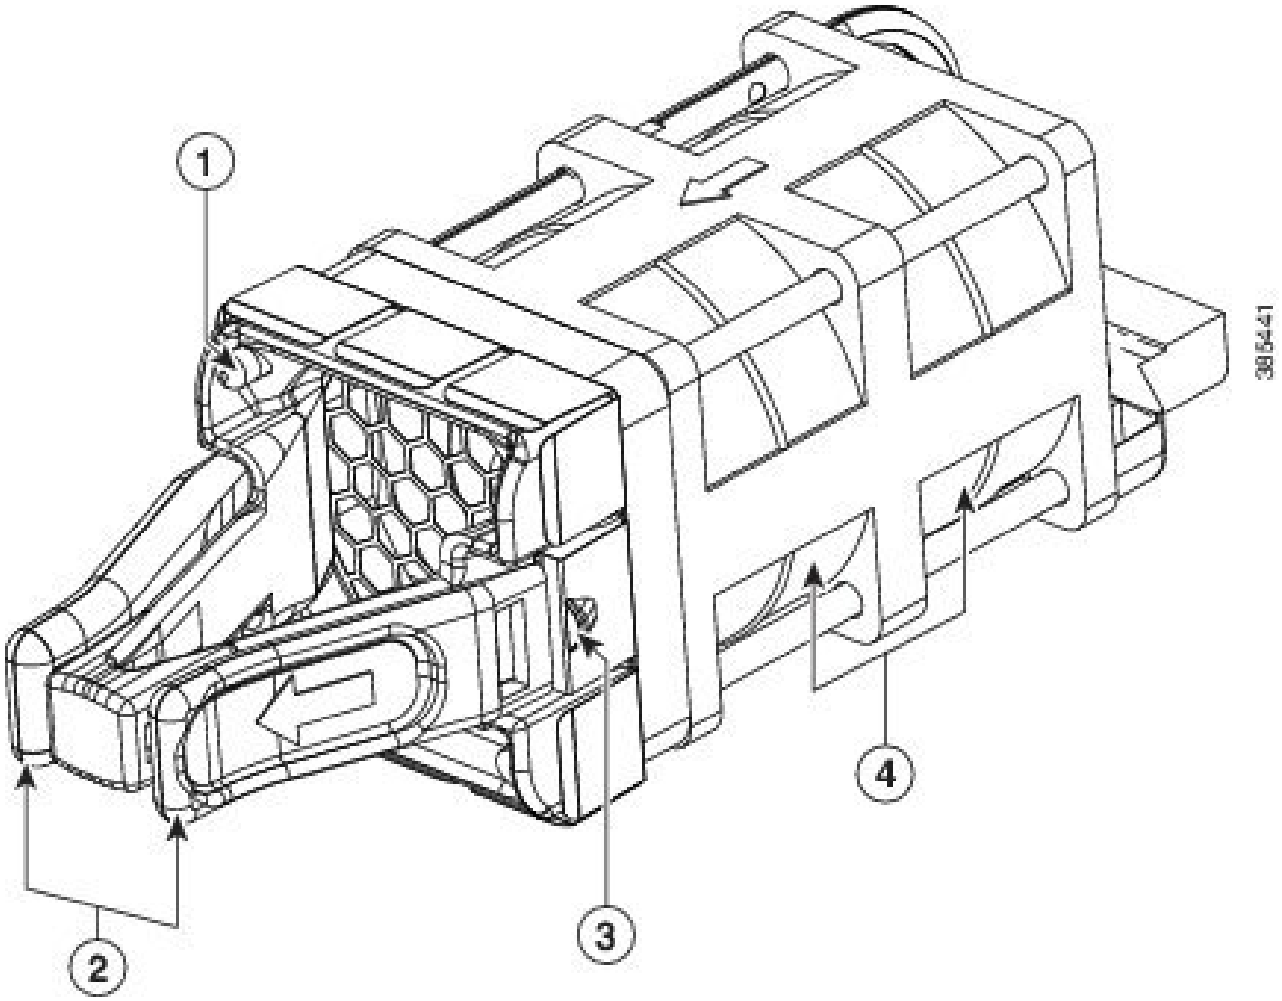


| | | | |
|---|---|---|---|
| 1 | Fan LED | 3 | Fan assembly retention latch |
| 2 | Fan ssembly levers | 4 | Fan |

# Replace Power Supply

The Cisco 8010 Large Density Routers provide a choice of two different power supplies as AC and DC.

### Cisco 8011-4G24Y4H-I Router

The router also supports a combination of AC (PWR-400-AC) and DC (PWR-400-DC) PSUs together:

- DC power (PWR-400-DC)—The DC power supply uses two-position terminal block-style connector with positive latching or securing, and labeled connections for + 48V and -48V. The terminal block connector is of suitable size to carry the appropriate AWG wire size to handle the input current of the power supply. No ON/OFF switch is provided.

- AC power (PWR-400-AC)—The AC power supply has an IEC 320-type power receptacle and a 16 Amp service connector. You can use standard right angle power cords with the AC power supply. The power supply includes a power cord retainer. No ON/OFF switch is provided.

#### Cisco 8011-32Y8L2H2FH Router

The router also supports a combination of AC (PWR-650-AC-R) and DC (PWR-930-DC-R) PSUs together:

- DC power (PWR-930-DC-R)—The DC power supply uses two-position terminal block-style connector with positive latching or securing, and labeled connections for + 48V and -48V. The terminal block connector is of suitable size to carry the appropriate AWG wire size to handle the input current of the power supply. No ON/OFF switch is provided.
- AC power (PWR-650-AC-R)—The AC power supply has an IEC 320-type power receptacle and a 16 Amp service connector. You can use standard right angle power cords with the AC power supply. The power supply includes a power cord retainer. No ON/OFF switch is provided.

You can install dual power supplies for redundancy.

**Note** Products that have an AC power connection are required to have an external SPD provided as part of the building installation to comply with the Telcordia GR-1089 NEBS standard for electromagnetic compatibility and safety.

**Caution** Don’t use interface module and power supply ejector handles to lift the chassis; using the handles to lift the chassis can deform or damage the handles.

**PSU Redundancy Lost Alarm**:

PSU redundancy lost alarms are generated when there’s no proper input feed applied on any one of Power Modules (PMs) (PM0 or PM1). The alarms are also generated when the output for PM0 or PM1 isn’t proper.

The following alarms are raised for PSU redundancy lost event with a faulty PM0:

- Power Module Generic Fault
- Power Module Error
- Power Group Redundancy Lost

# Replace DC Power Supply Modules

## Remove the DC Power Supply Module

This section provides information about removing and replacing the DC power supply.

**Warning** **Statement 1003—**DC Power Disconnection

To reduce risk of electric shock or personal injury, disconnect DC power before removing or replacing components or performing upgrades.

**Procedure**

**Step 1** Before servicing the power supply, switch off the circuit breaker in your equipment area. As an additional precaution, tape the circuit-breaker switch in the Off position.

**Step 2** Slip on the ESD-preventive wrist strap that is included in the accessory kit.

**Step 3** Switch the power supply circuit-breaker switch to the Off (O) position.

**Step 4** Pull the terminal block plug cover out of the terminal block head in the power supply.

**Step 5** Unscrew the terminal block screws and remove the cables.

**Step 6** Grasp the power supply handle. Press the power supply lock towards the left and simultaneously pull the power supply out from the chassis while supporting it with the other hand.

# Install the DC Power Supply Module

This equipment is suitable for installation in network telecommunications facilities and locations where the NEC applies.

This equipment is suitable for installations utilizing the Common Bonding Network (CBN).

The grounding architecture of this product is DC-Isolated (DC-I) for DC-powered products. DC-powered products have a nominal operating DC voltage of 48 VDC.

Perform the following procedure to install the power supply module:

**Procedure**

**Step 1** Ensure that the system (earth) ground connection is made. (See the following figure.)

**Step 2** If necessary, remove the blank power supply filler plate from the chassis power supply bay opening by loosening the captive installation screws.

**Step 3** Verify that power to the DC circuit connected to the power supply you are installing is turned off. To ensure that power has been removed from the DC circuits, locate the circuit breakers for the DC circuits, switch the circuit breakers to the OFF position, and tape the circuit-breaker switches in the OFF position.

**Step 4** Grasp the power supply handle with one hand. Place your other hand underneath the power supply. Slide the power supply into the power supply bay. Make sure that the power supply is fully seated in the bay.

*Figure 101: Cisco 8011-4G24Y4H-I — Install DC Power Supply Module*


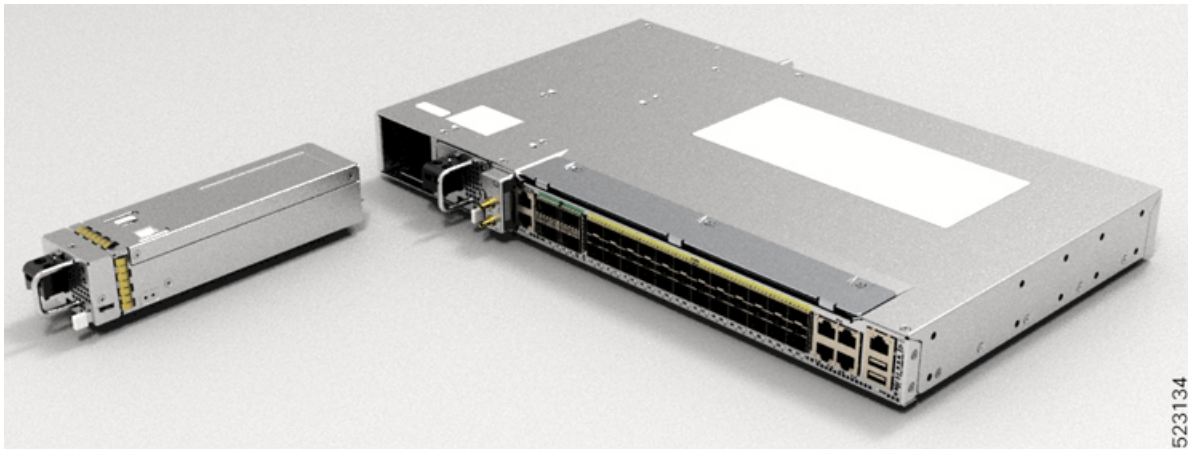


*Figure 102: Cisco 8011-32Y8L2H2FH — Install DC Power Supply Module*

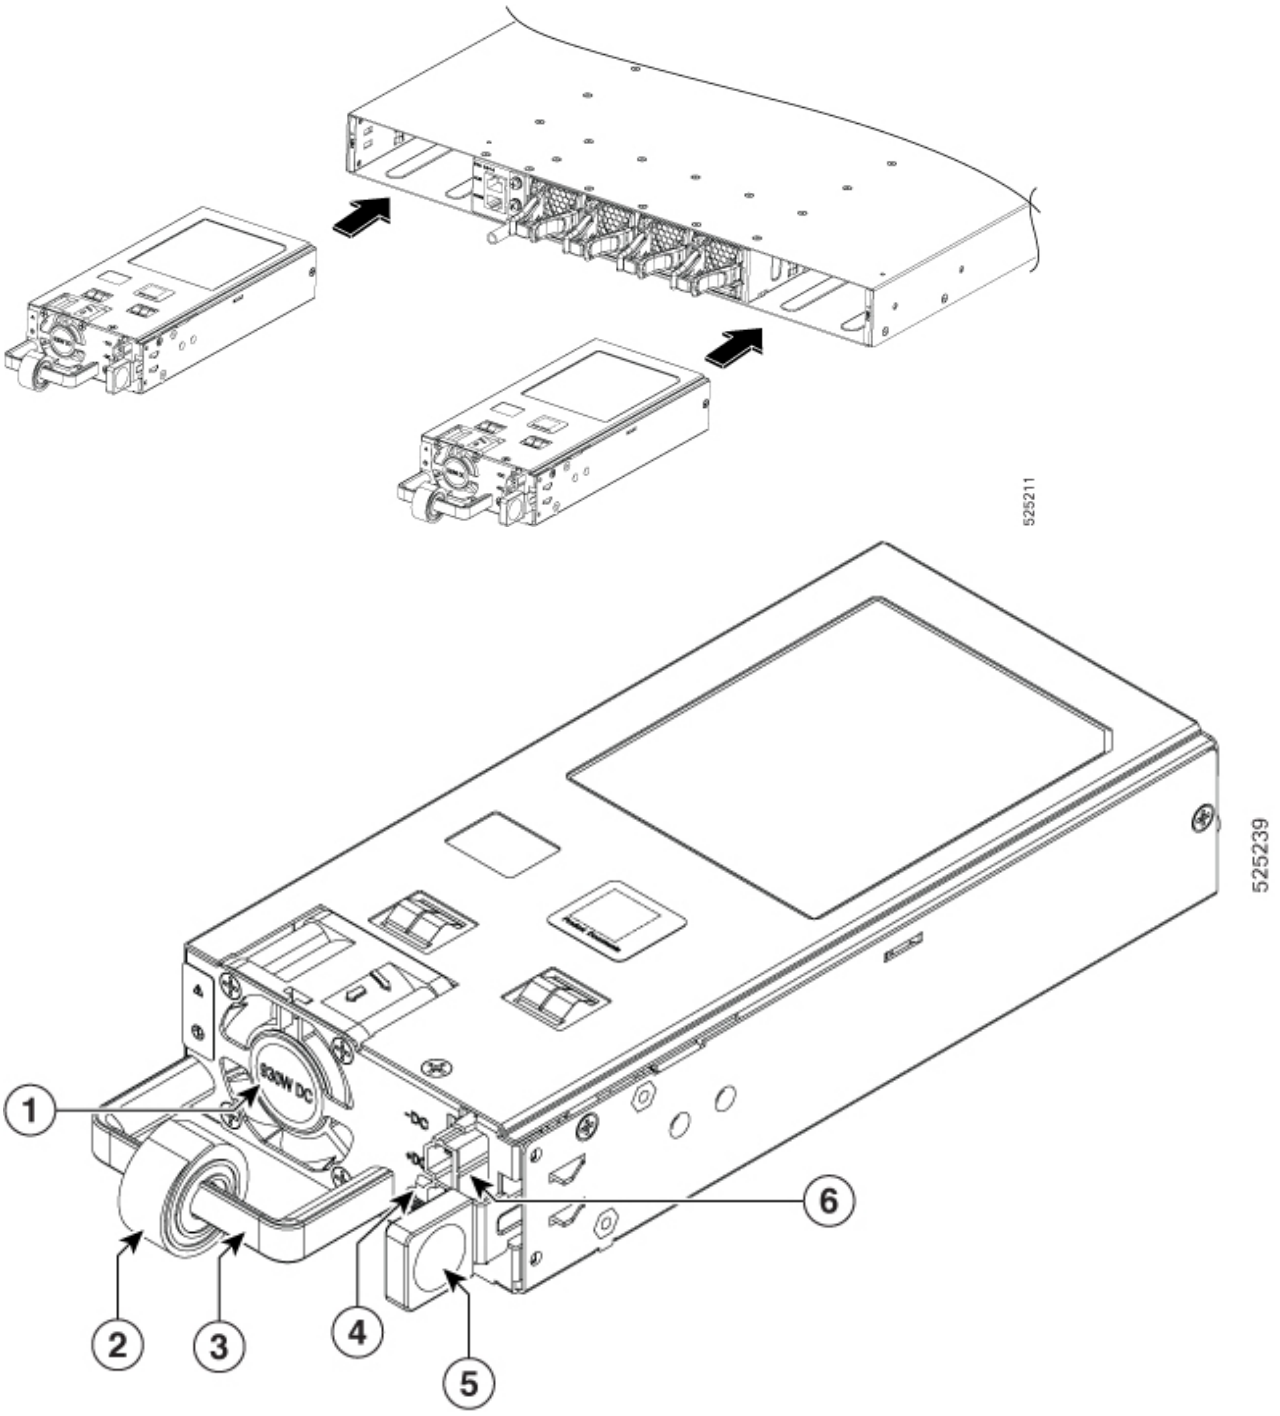


| | | | |
|---|---|---|---|
| 1 | PSU fan | 2 | Power cord retainer |
| 3 | Release handle | 4 | DC+ connector |

| | | | |
|---|---|---|---|
| 5 | Release latch | 6 | DC- connector |

# Replace AC Power Supply Modules

## Remove the AC Power Supply Module

### Before you begin

This section describes how to remove and replace the AC power supply.

**Warning** **Statement 1046—**Installing or Replacing the Unit

To reduce risk of electric shock, when installing or replacing the unit, the ground connection must always be made first and disconnected last.

If your unit has modules, secure them with the provided screws.

**Warning** **Statement 1074—**Comply with Local and National Electrical Codes

To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.

To remove and replace the AC power supply:

### Procedure

**Step 1** Disconnect the power cord from the power source. Do not touch any metal on the power cord when it is still connected to the power supply.

**Step 2** Loosen the tie and remove the power cord from the tie-and holder.

**Step 3** Remove the power cord from the power connection on the power supply. Do not touch the metal prongs embedded in the power supply.

**Step 4** Grasp the power supply handle. Press the power supply lock towards the left and simultaneously pull the power supply out from the chassis while supporting it with the other hand.

# Install the AC Power Supply Module

Follow these steps to install the AC power supply module:

### Procedure

**Step 1** Ensure that the system (earth) ground connection is made.

**Step 2** If necessary, remove the blank power supply filler plate from the chassis power supply bay opening by loosening the captive installation screws.

**Step 3** Grasp the power supply handle with one hand. Place your other hand underneath the power supply. Slide the power supply into the power supply bay. Make sure that the power supply is fully seated in the bay. (See the following figure.)

*Figure 103: Cisco 8011-4G24Y4H-I — Install AC Power Supply Module*


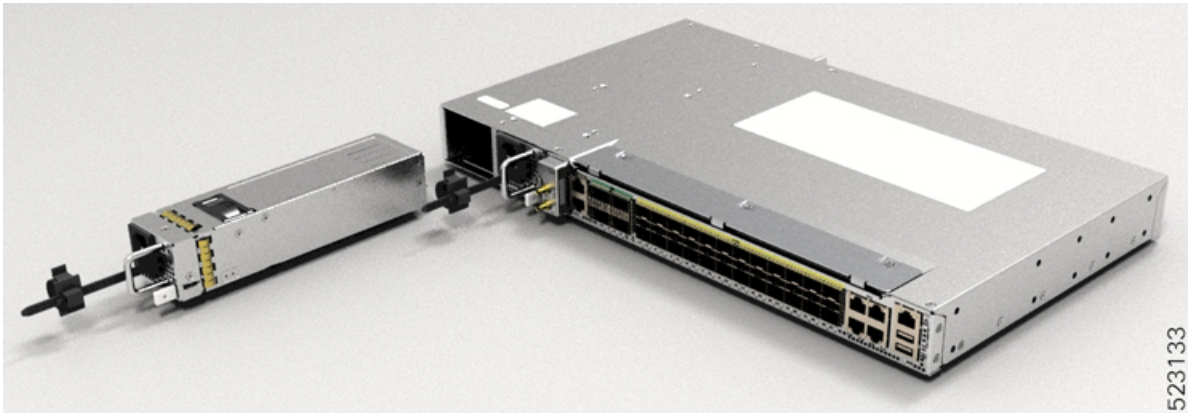



*Figure 104: Cisco 8011-32Y8L2H2FH — Install AC Power Supply Module*

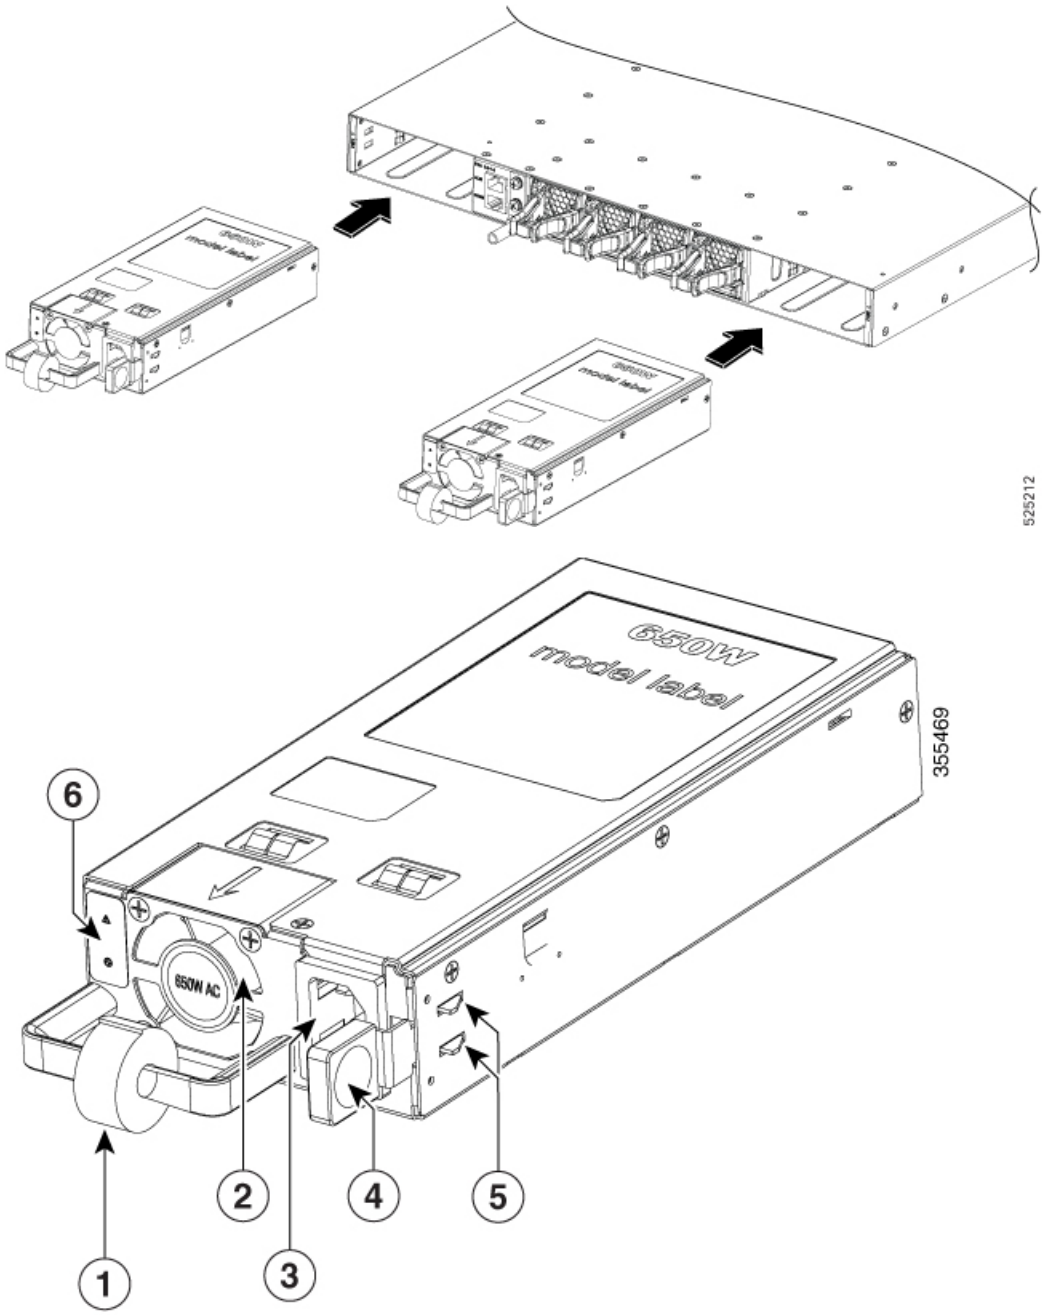


| | | | |
|---|---|---|---|
| 1 | Velco strap | 4 | Release latch |
| 2 | PSU fan | 5 | Retainer clips |
| 3 | AC power cord connector | 6 | Power status and power supply failure LEDs |

**Step 4** Slide the AC power supply cord inside the tie of the tie-and-holder and tighten the tie around the power supply cord.

**Step 5** Plug the power supply cord into the AC power supply.

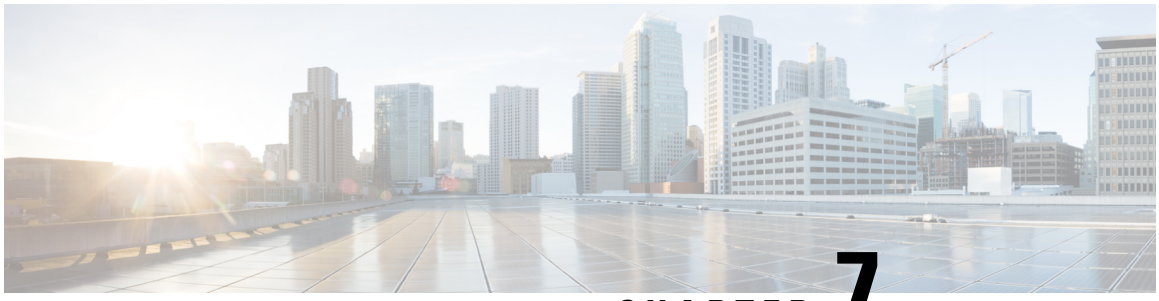


CHAPTER 7

# Appendix

Certain troubleshooting aids of the Cisco 8010 Large Density Routers enable you to perform these tasks that assist the troubleshooting process:

### Cisco 8011-4G24Y4H-I Router


***Figure 105: Cisco 8011-4G24Y4H-I Router LEDs***

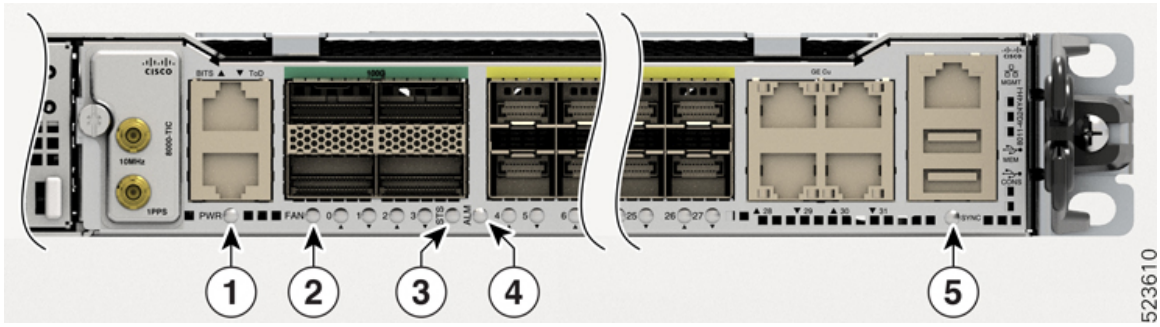


| | | | |
|---|---|---|---|
| 1 | Router Power Status LED | 2 | Fan Assembly LEDs |
| 3 | System Status LED | 4 | Alarm Status LED |
| 5 | Synchronization LED | | |

### Cisco 8011-32Y8L2H2FH Router


***Figure 106: Cisco 8011-32Y8L2H2FH Router LEDs***

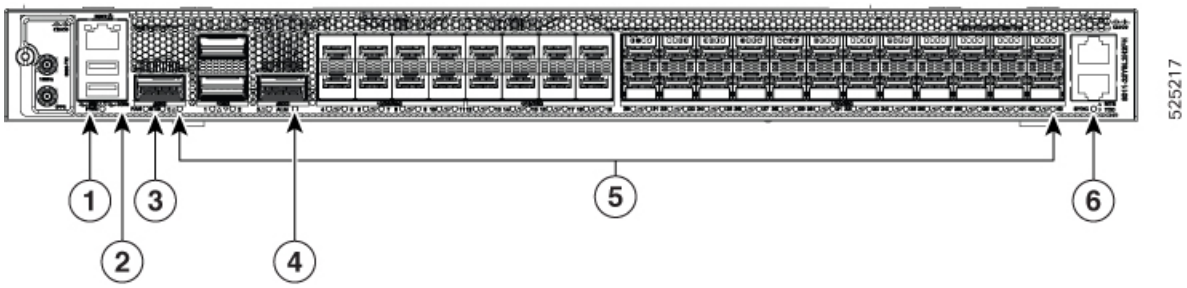

| | | | |
|---|---|---|---|
| 1 | Router power status LED | 2 | Fan assembly LEDs |
| 3 | System status LED | 4 | Port LED |
| 5 | Alarm LEDs | 6 | Synchorization LED |

### Cisco 8011-12G12X4Y Router

*Figure 107: Cisco 8011-12G12X4Y Router LEDs*

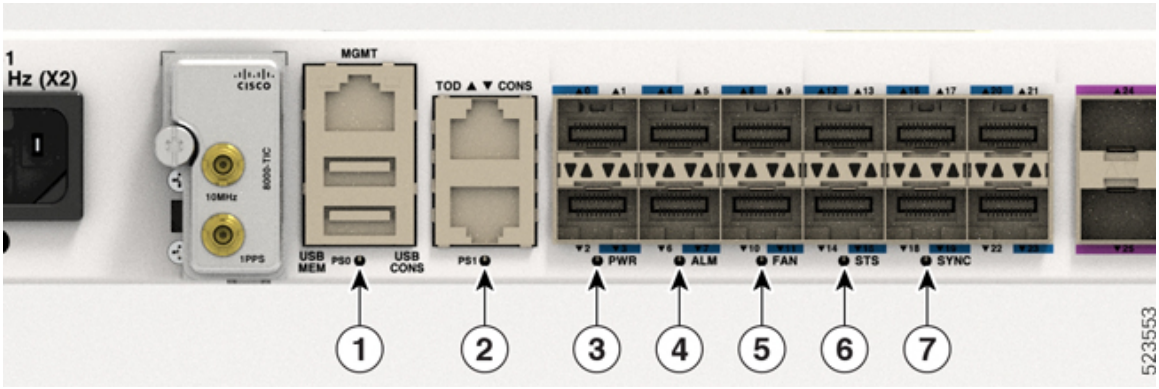


| | | | |
|---|---|---|---|
| 1, 2 | Power Supply Module LEDs | 3 | Router Power Status LED |
| 4 | Alarm Status LED | 5 | Fan Assembly LEDs |
| 6 | System Status LED | 7 | Synchronization LED |


- LEDs, on page 150
- System Specifications, on page 158


# LEDs

The Cisco 8010 Large Density Density Router LEDs are similar for most of the variants, and any differences between the routers are specifically called out.

## Router LEDs

All the data port LEDs in the Cisco router are at the front panel.

*Figure 108: Cisco 8011-32Y8L2H2FH Router LEDs*

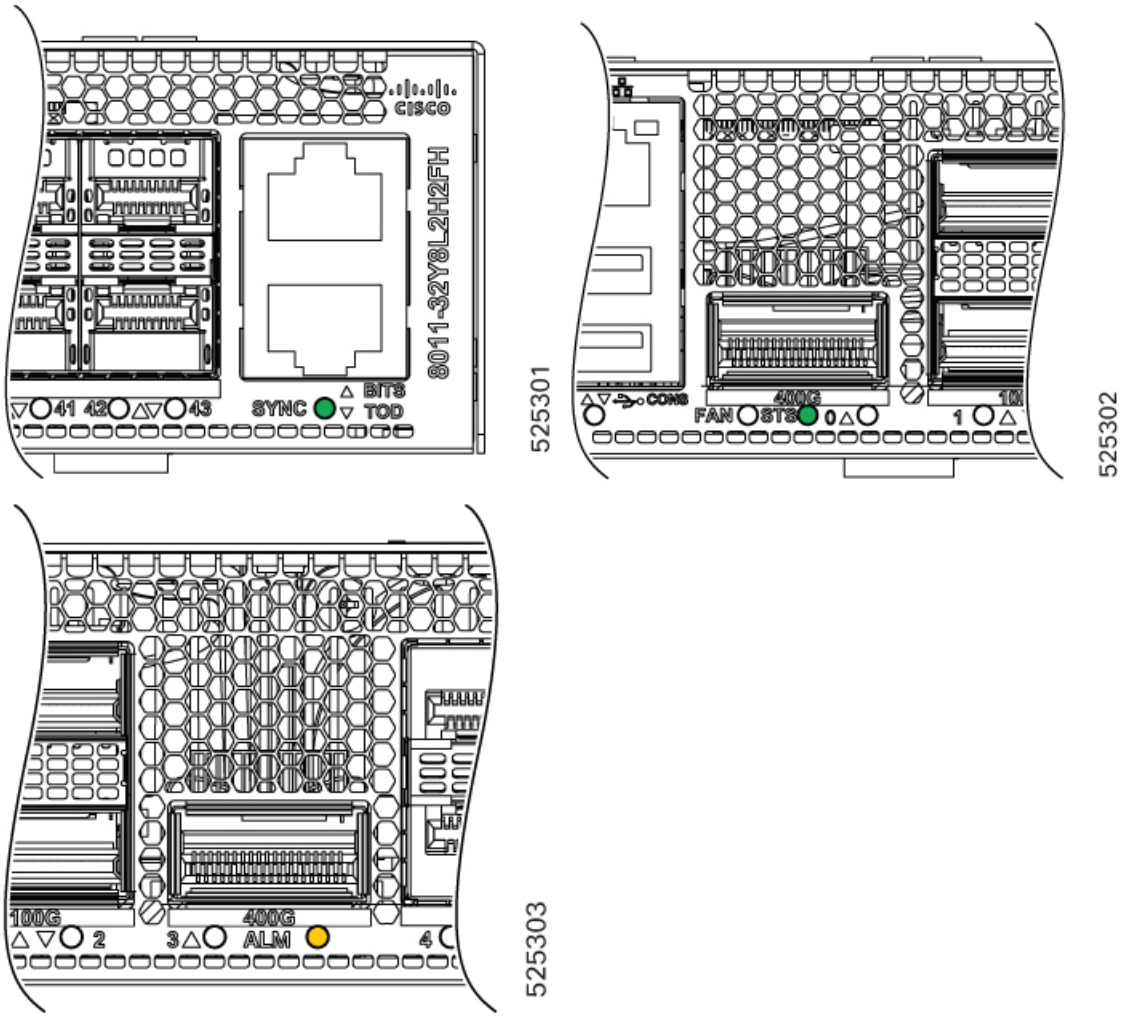


*Table 22: Router LED Descriptions*

| LED Label | Color | Status |
|---|---|---|
| STS | Off | The module is powered-off (set by hardware); only standby power mode is available. |
| | Flashing Amber (Slow) | The module is booting up (set by IOFPGA). |
| | Flashing Amber (Fast) | The module is booting up (set by BIOS), shutting down, or is being reloaded. |
| | Amber | Host kernel is booted and is ready to start SysAdmin VM. |
| | Green | The module is operational and has no active major or critical alarms. |
| ALM | Off | No alarm |
| | Red | Critical alarm - system scope, critical temperature. |
| | Flashing Red | Critical alarm - Relating to voltage rail failures. |
| | Amber | Major alarm - system-scope. |
| | Flashing Amber | Minor alarm - system-scope |
| SYNC | Off | Time core clock synchronization is disabled or in free-running state. |
| | Green | Time core is synchronized to an external source including IEEE1588. |
| | Flashing Green | System is in Synchronous Ethernet mode. |
| | Amber | Acquiring state or Holdover: Time core is in acquiring state or holdover mode. |

# GNSS LEDs

**Note** GNSS LEDs are available only on the Cisco 8011-32Y8L2H2FH Router.

*Figure 109: Cisco 8011-32Y8L2H2FH — GNSS LED*

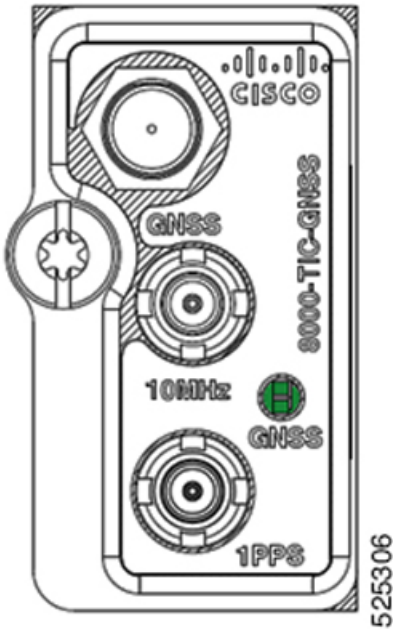



*Table 23: Cisco 8011-32Y8L2H2FH — GNSS LEDs*

| LED | Color | Status |
|---|---|---|
| GNSS | Off | GNSS is not configured. |
| | Green | GNSS normal state. Self-survey is complete. |
| | Amber | Auto holdover. |
| | Red | Power up. GNSS is not tracking any satellite. |
| | Flashing green | Learning state is normal. Self-survey is not completed. |

# Fan Module LEDs

*Figure 110: Cisco 8011-32Y8L2H2FH — Fan Module LED*

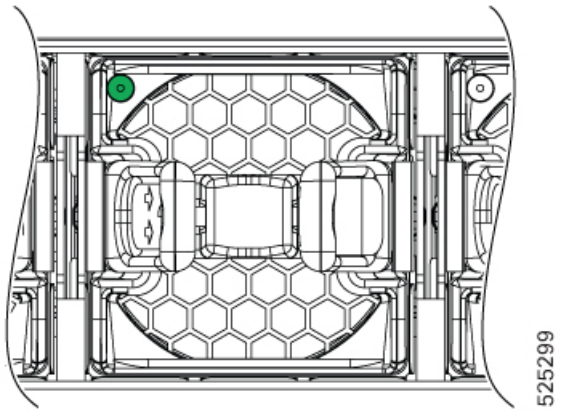



*Table 24: Cisco 8011-32Y8L2H2FH — Fan Module LEDs*

| LED | Color | Status |
|---|---|---|
| STATUS | Green | Fan operating normally. |
| | Red | Fan failure. |
| | Off | Fan is not receiving power. |

# Fan Assembly LEDs


The **Cisco 8011-4G24Y4H-I Router** contains:

- 5 fixed fans at the back panel.
- Fan modules are numbered from left to right as Fan 4 to Fan 0.

The **Cisco 8011-32Y8L2H2FH Router** contains:

- 4 modular fans at the back panel.
- Fan modules are numbered from left to right as Fan 3 to Fan 0.

*Figure 111: Cisco 8011-32Y8L2H2FH Router — Fan assembly LED*

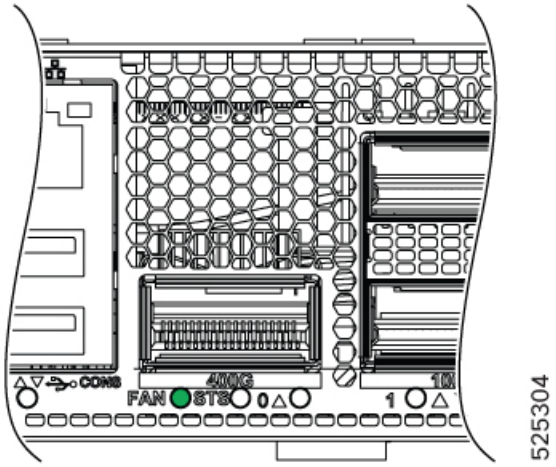


There is an LED on the front panel of the router that reflect the different status of the fans.

*Table 25: Fan Assembly LEDs*

| LED Label | Color | Status |
|---|---|---|
| FAN | Off | Fan tray is not receiving power. |
| | Green | Fans are operating normally. |
| | Amber | Single fan failure. |
| | Red | More than one fan failure. |

# Power Supply LEDs

*Table 26: Cisco 8011-32Y8L2H2FH — Power Supply LEDs*

| State | Color - Green (AC/DC power status) | Color - Amber (Power supply status) |
|---|---|---|
| Blinking | AC power OK, DC output not enabled, sleep mode, 12V standby is ON. | • Power supply warning (PS still operational; 12V main is ON)<br>• Temperature warning<br>• Current limit (OCP) |

| State | Color - Green (AC/DC power status) | Color - Amber (Power supply status) |
|---|---|---|
| Solid On | DC output OK regardless of warning. | • Critical power supply failure<br>• 12V main is OFF<br>• No AC input (Standby power comes from shared PSU):<br>  • High temperature (critical)<br>  • High voltage, low voltage<br>  • Fan failure |
| Off | • No AC power input<br>• Has AC input; 12V main and 12V standby are off<br>• PSKILL is true | No failures or warnings |

# Power Status LEDs

*Table 27: Power Status LEDs*

| LED Label | Color | Status |
|---|---|---|
| PWR | Off | Sytem is powered off. |
| | Green | All the power supplies are on and operating normally. |
| | Amber | Standby FPGA upgrade is in progress (this is expected to take about three to five minutes). |
| | Red | Power redundancy is lost due to a power feed failure or an internal power supply failure. |

# SFP Port LEDs

*Table 28: SFP Port LEDs*

| LED Label | Color | Status |
|---|---|---|
| STATUS | Off | Admin is down |
| | Green | Link is up in 1/10/25G ports |
| | Yellow | Fault or Error or Link Down |

# Copper Port LEDs

**Note** Copper port LEDs are available only on the Cisco 8011-4G24Y4H-I Router.

*Table 29: 1G Copper Port LEDs*

| LED Label | Color | Status |
|---|---|---|
| Left LED | Green | Link is up in 10/100/1000 Mbps |
| | Blinking Green | Activity in 1G/100/10 Mbps |
| | Amber or Orange | Fault/Error/Link is down |
| | Off | Admin is down |
| Right LED | Green | Link is up in full duplex |

# Management Port LEDs

*Figure 112: Management port LED*

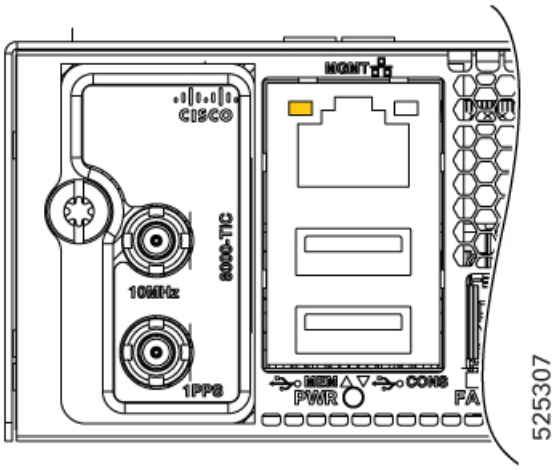



*Table 30: Management port LEDs*

| LED Label | Color | Status |
|---|---|---|
| Left LED | Green | Link is up in 1000 Mbps |
| | Blinking Green | Activity in 1000 Mbps |
| | Amber or Orange | Link is up in 100/10Mbps |
| | Blinking Amber or Orange | Activity in 100/10Mbps |
| | Off | Link is down |
| Right LED | Off | Unused |

# System Specifications

For more information on the weight, power consumption, environmental specifications, and other details, see *Cisco 8010 Series Router Data Sheet*.

# RJ45 Connectors


The RJ45 connector connects Category 3, Category 5, Category 5e, Category 6, or Category 6A foil twisted-pair or unshielded twisted-pair cable from the external network to the following module interface connectors:

- Router chassis
  - CONSOLE port
  - MGMT ETH port

**Caution** To comply with GR-1089 intrabuilding, lightning immunity requirements, you must use a foil twisted-pair (FTP) cable that is properly grounded at both ends.

The following figure shows the RJ45 connector.

***Figure 113: RJ45 Connector***

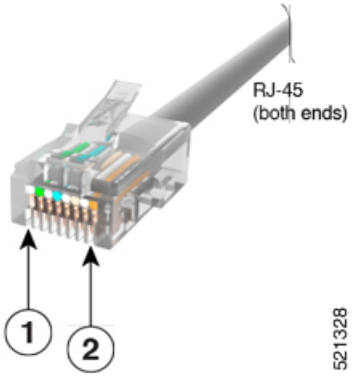


| | |
|---|---|
| 1 | Transmit data (bidirectional) |
| 2 | NC (Not Connected) |

# Transceiver and Cable Specifications

To determine which transceivers and cables are supported by this router, see Cisco Transceiver Modules Compatibility Information.

To see the transceiver specifications and installation information, see Cisco Transceiver Modules Install and Upgrade Guides.

# RJ45 ToD and 1PPS Port Pinouts

The following table summarizes the RJ45 ToD and 1PPS port pinouts:

***Table 31: RJ45 ToD and 1PPS Port Pinouts***

| Pin | Signal Name | Direction | Description |
|---|---|---|---|
| 1 | NA | NA | NA |
| 2 | NA | NA | NA |
| 3 | 1PPS_N | Output or Input | 1PPS RS422 signal |
| 4 | GND | NA | NA |
| 5 | GND | NA | NA |

| Pin | Signal Name | Direction | Description |
|---|---|---|---|
| 6 | 1PPS_P | Output or Input | 1PPS RS422 signal |
| 7 | TOD_N | Output or Input | Time-of-Day character |
| 8 | TOD_P | Output or Input | Time-of-Day character |

# Console Port Pinouts

This summarizes the Console port pinouts:

***Table 32: Console Port Pinouts***

| Pin | Signal Name | Direction | Description |
|---|---|---|---|
| 1 | ACONS-TX | Output | Aux Consoles transmit output, RS232 |
| 2 | NC | NA | NA |
| 3 | CONS-TX | Output | Console RS232 transmit |
| 4 | GND | NA | Ground |
| 5 | GND | NA | Ground |
| 6 | CONS-RX | Input | Console RS232 receive |
| 7 | ACONS-RX | Input | Aux Consoles receive input, RS232 |
| 8 | NC | NA | NA |

# Alarm Port Pinouts

This summarizes the alarm port pinouts:

***Table 33: Alarm Port Pinouts***

| Pin | Signal Name | Description |
|---|---|---|
| 1 | ALARM1_IN | Alarm input 1 |
| 2 | ALARM2_IN | Alarm input 2 |
| 3 | NC | NA |
| 4 | ALARM3_IN | Alarm input 3 |
| 5 | ALARM4_IN | Alarm input 4 |
| 6 | NC | NA |

| Pin | Signal Name | Description |
|---|---|---|
| 7 | NC | NA |
| 8 | ALARM_I_COMMON | Alarm input COM |

To set the description of the alarm:

```
RP/0/RP0/CPU0:ios(config)# environment alarm-contact contact-number description
description
```

To set the severity of the alarm:

```
RP/0/RP0/CPU0:ios(config)# environment alarm-contact contact-number severity
[critical | major | minor] [
```

To set the trigger for the alarm:

```
RP/0/RP0/CPU0:ios(config)# environment alarm-contact contact-number trigger [open
 | closed]
```



**Note** You can configure up to four external alarms.

The *contact-number* is the pin number of the connected alarm port, that is Alarm input 1 to Alarm input 4.

The **description** string can be up to 80 alphanumeric characters in length and is included in any generated system messages.

For **severity**, enter any one of: **critical**, **major**, or **minor**.

Description and severity are both mandatory values.

Use the **show alarms** command in admin mode to view the alarm details. Use the **show logging** command to view the displays the state of syslog error and event logging.

An SNMP trap is sent for every external alarm that is raised or cleared on the system.

# USB Port Console Pinouts

This table summarizes the USB port console pinouts:

***Table 34: USB Port Console Pinouts***

| Pin | Signal Name | Description |
|---|---|---|
| A1 | VCC | +5 VDC |
| A2 | D– | Data– |
| A3 | D+ | Data+ |
| A4 | GND | Ground |

# USB Port Memory Pinouts

This table summarizes the USB port memory pinouts:

***Table 35: USB Port Memory Pinouts***

| Pin | Signal Name | Description |
|---|---|---|
| A1 | VCC | +5 VDC |
| A2 | D– | Data– |
| A3 | D+ | Data+ |
| A4 | GND | Ground |

# Management Ethernet Port Pinouts

This table summarizes the management ethernet port pinouts:

***Table 36: Management Ethernet Port Pinouts***

| Pin | Signal Name |
|---|---|
| 1 | TRP0+ |
| 2 | TRP0– |
| 3 | TRP1+ |
| 4 | TRP2+ |
| 5 | TRP2– |
| 6 | TRP1– |
| 7 | TRP3+ |
| 8 | TRP3– |