

Hardware Installation Guide for Cisco 8800 Series Routers

First Published: 2019-11-07

Last Modified: 2026-09-11

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED “AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: https://www.cisco.com/c/en/us/about/legal/trademarks.html. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2019–2026 Cisco Systems, Inc. All rights reserved.



CONTENTS

CHAPTER 1 **Cisco 8800 Series Routers Overview** 1

Cisco 8800 Series Routers 2

Line Card Overview 4

Route Processor Card Overview 15

Fabric Card Overview 18

Temperature and Physical Specifications 20

Weight and Power Consumption 20

Airflow Direction 20

Maximum Power Available to the Router 20

Supported Optics 25

CHAPTER 2 **Prepare for Installation** 27

Safety Guidelines 28

Compliance and Safety Information 28

Laser Safety 30

Energy Hazard 30

Preventing Electrostatic Discharge Damage 31

Cautions and regulatory compliance statements for NEBS 31

Installation Guidelines 33

Procure Tools and Equipment 33

Rack Mount and Accessory Kits 34

Prepare Your Location 35

Prepare Yourself 36

Prepare Rack for Chassis Installation 37

Clearance Requirements 38

CHAPTER 3 **Unpack and Install the Chassis** 41

Unpack the Chassis 41

(Only Cisco 8818) Install the Pull bars on the Chassis 51

Install Bottom-Support Rails 55

Transfer Chassis to a Mechanical Lifting Device 61

Mount Chassis Into the Rack 64

Ground the Chassis 81

Install Cable Management on a Chassis 88

Attach Front Door to Chassis 99

Ground the Front Door 103

CHAPTER 4 **Powering on the Router** 105

Power Module Overview 105

Connect DC Power Supply to Power Source 108

Connect HVAC/HVDC Power Supply to Power Source 111

Power Supply Power Cord Specifications 114

CHAPTER 5 **Connect Router to the Network** 129

Connecting a Console to the Switch 129

Connect the Management Interface 130

Transceivers, Connectors, and Cables 131

Transceiver and Cable Specifications 131

RJ-45 Connectors 131

Install and Remove SFP28 and SFP+ Modules 132

Bale Clasp SFP28 or SFP+ Module 133

Install a Bale Clasp SFP28 or SFP+ Module 133

Remove a Bale Clasp SFP28 or SFP+ Module 134

Using the Optical Transceiver Extraction Tool 136

Install and Remove QSFP Transceiver Modules 139

Required Tools and Equipment 140

Installing the Transceiver Module 141

Attach the Optical Network Cable 144

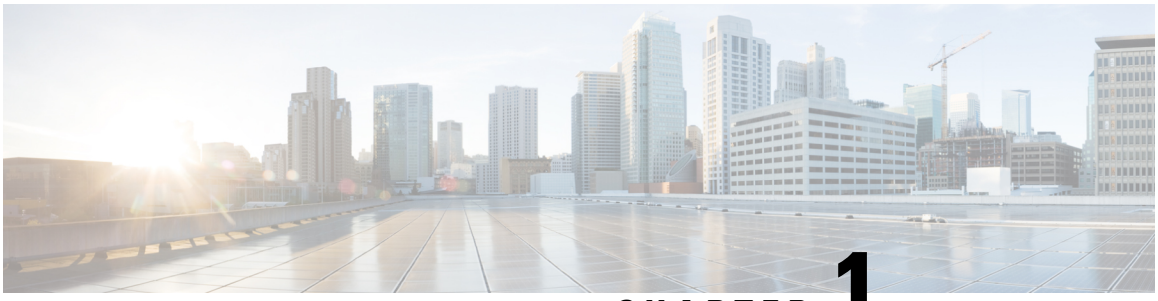
Removing the Transceiver Module 146

Connect Interface Ports 147
Connect a Fiber-Optic Port to the Network 147
Disconnect Optical Ports from the Network 148
Maintain Transceivers and Optical Cables 148
Create the Initial Router Configuration 148
Verify Chassis Installation 150
Router Verification Checks 157
Perform Pre-check Procedures on the Router 157
Perform Fabric Link Status Checks 159
Perform Post-Check Procedures on the Router 160
Set Fabric Bandwidth Threshold 161

CHAPTER 6 **Replace Chassis Components** 163
Replace Chassis Door Foam Air Filters 163
Provision of Grace Period Before Route Processor Shutdown from Ejector Lever 165
Replace a Route Processor Card 166
Replace the 8800-RP Card 166
Install a New 8800-RP Card 169
Replace the 8800-RP2 Card 171
Install an 8800-RP2 Card 174
Replace the 8800-RP2-S Card 176
Install an 8800-RP2-S Card 179
Migrating from 8800-RP to 8800-RP2 Card 181
Migrating from 8800-RP to 8800-RP2-S Card 183
Replace a Line Card 184
Replace or Install a Line Card - Ejector Levers with Buttons 185
Replace or Install a Line Card - Ejector Levers with Latches 192
Replace a Fan Tray 198
Remove Fan Tray 200
Install Fan Tray 200
Replace Fabric Card 202
Remove a Fabric Card 203
Install a Fabric Card 206
Replace Power Supply Components 212

Install Power Shelf Bezel 212
Replace DC Power Module 215
Disconnect DC Power 216
Reconnect DC Power 216
Replace HVAC and HVDC Power Module 217

CHAPTER 7 LEDs 221
Chassis LED 221
Port Status LEDs 221
Power Supply LEDs 222
Fan Tray LEDs 223
Temperature Warning Label 224
Route Processor Card LEDs 225
Fabric Card LEDs 229
Line Card LEDs 230



CHAPTER 1

Cisco 8800 Series Routers Overview

The Cisco 8800 series routers include:

Table 1: Feature History Table

Hardware	Release Information	Description
8812-FAN-V2 fan tray	Release 26.3.1	To maintain optimal cooling, the 8812-FAN-V2 high-performance fan tray must be installed in the Cisco 8812 router.
8804-FAN-V2, 8808-FAN-V2, and 8818-FAN-V2 fan trays	Release 26.2.1	To maintain optimal cooling, the 8804-FAN-V2, 8808-FAN-V2, and 8818-FAN-V2 high-performance fan trays must be installed if the router is configured with: • P200-based line cards • P100-based line cards using ZRP optical modules
Cisco 8804	Release 7.3.2	This release introduces Cisco 8804, a 4-slot 10 RU (rack unit) modular router that provides 57.6 Tbps of network bandwidth. For more information, see the Cisco 8800 section in the Datasheet here.

- The Cisco 8818 is a 33-RU router that supports distributed forwarding across multiple field replaceable units (FRUs).
- The Cisco 8812 is a 21-RU router that supports distributed forwarding across multiple field replaceable units (FRUs).
- The Cisco 8808 is a 16-RU router that supports distributed forwarding across multiple field replaceable units (FRUs).
- The Cisco 8804 is a 10-RU router that supports distributed forwarding across multiple field replaceable units (FRUs).

- Cisco 8800 Series Routers, on page 2
- Line Card Overview, on page 4
- Route Processor Card Overview, on page 15
- Fabric Card Overview, on page 18
- Temperature and Physical Specifications, on page 20
- Weight and Power Consumption, on page 20
- Airflow Direction, on page 20
- Maximum Power Available to the Router, on page 20
- Supported Optics, on page 25

Cisco 8800 Series Routers

Table 2: Feature History Table

Feature Name	Release	Description
PSU4.8KW-DC100 power supply for Cisco 8804 and 8808 routers.	Release 7.3.2	This feature introduces support for the 4.8 KW power supply for 48V 100A DC (DC100) on the Cisco 8804 and 8808 routers. The power supply accepts a nominal input voltage of 48V 100A DC, with an operational tolerance range of -40 to -75 VDC.

The following table describes the Cisco 8818 router components, and the supported quantity.

Table 3: Cisco 8818 Router Components

Component	Quantity
Line cards	18
Route Processors	2
Fabric Cards	8
Fan trays	4
Power trays	6
Power supplies	HVAC/HVDC—18 (3 per tray) DC60—24 (4 per tray) DC100—24 (4 per tray)

The following table describes the Cisco 8812 router components, and the supported quantity.

Table 4: Cisco 8812 Router Components

Component	Quantity
Line cards	12
Route Processors	2
Fabric Cards	8
Fan trays	4
Power trays	3
Power supplies	HVAC/HVDC—9 (3 per tray) DC60—12 (4 per tray) DC100—12 (4 per tray)

The following table describes the Cisco 8808 router components, and the supported quantity.

Table 5: Cisco 8808 Router Components

Component	Quantity
Line cards	8
Route Processors	2
Fabric Cards	8
Fan trays	4
Power trays	3
Power supplies	HVAC/HVDC—9 (3 per tray) DC60—12 (4 per tray) DC100—12 (4 per tray)

The following table describes the Cisco 8804 router components, and the supported quantity.

Table 6: Cisco 8804 Router Components

Component	Quantity
Line cards	4
Route Processors	2
Fabric Cards	8
Fan trays	4
Power trays	2

Component	Quantity
Power supplies	HVAC/HVDC—6 (3 per tray) DC60—8 (4 per tray) DC100—8 (4 per tray)

Line Card Overview

Table 7: Feature History Table

Feature Name	Release	Description
88-LC0-36FH-M with MACsec, based on Q200 Silicon Chip	Release 7.3.15	This release introduces the Q200 silicon chip-based 88-LC0-36FH-M Line Card with these highlights: • A 36-port combination line card providing 14.4 Tbps of throughput. • Thirty-six ports of 400 GE. • 400 GE ports support 400 (QSFP28-DD), 400 (QSFP+), 400 (QSFP+28) GbE breakout. The 88-LC0-36FH-M Line Card is supported on all Cisco 8000 distributed chassis with 8000-RP2 route processors and all 8000-FC1 fabric cards. See the Cisco 8000 Series Routers Data Sheet for more information on this line card.
88-LC0-36FH without MACsec, based on Q200 Silicon Chip	Release 7.3.15	This release introduces the Q200 silicon chip-based 88-LC0-36FH Line Card with these highlights: • A 36-port combination line card providing 14.4 Tbps of throughput. • Thirty-six ports of 400 GE. • 400 GE ports support 400 (QSFP28-DD), 400 (QSFP+), 400 (QSFP+28) GbE breakout. The 88-LC0-36FH-M Line Card is supported on all Cisco 8000 distributed chassis with 8000-RP2 route processors and all 8000-FC1 fabric cards See the Cisco 8000 Series Routers Data Sheet for more information on this line card.

Feature Name	Release	Description
88-LC0-34H14FH, based on Q200 Silicon Chip	Release 7.5.1 and Release 7.3.3	This release introduces a 48-port combo line card that provides 9 Tbps of throughput. The 88-LC0-34H14FH line card is Q200 silicon chip-based and comprises 34 ports of 100 GbE (QSFP28) and 14 ports of 400 GbE (QSFP-DD). Sixteen 100 GbE ports are MACsec capable. 100 GbE ports support 4x10/25 GbE breakout, and 400 GbE ports support 4x100 GbE, 2x100 GbE, and 4x10/25 GbE breakout. The 88-LC0-34H14FH line card is supported on Cisco 8800 series modular chassis. For more information on this line card, see the Cisco 8000 Series Routers Data Sheet.
88-LC1-36EH based on P100 Silicon One Chip	Release 24.2.11	This release introduces the P100 silicon one chip-based 88-LC1-36EH line card with these highlights: • A 36-port combination line card providing 28.8 Tbps of throughput. • Thirty-six ports of 800 GE. • 800 GE ports support 400 (QSFP56-DD), 2x400 (QSFP-DD800), 2x400 (QDD-2X400G-FR), 8x100 (QDD-8X100G-FR), 4x100 (QSFP-DD56) 2X100 (QDD-2X100-LR4-S), 4X10/40 (QSFP+) GbE breakout. The 88-LC1-36EH Line Card is supported on Cisco 8808 modular chassis with 8800-RP2 route processors and 8808-FC1 fabric cards. See the Cisco 8000 Series Routers Data Sheet for more information on this line card.

Feature Name	Release	Description
88-LC1-52Y8H-EM Line Card based on P100 Silicon Chip	Release 24.3.1	This release introduces the P100 silicon chip-based 88-LC1-52Y8H-EM Line Card with these highlights: • Sixty-four ports provide an overall throughput of 3.7 Tbps - • Fifty-two ports of 10/25GbE using SFP+/SFP28 optics • Eight ports of 40/100GbE using QSFP+/QSFP28 optics • Four ports of 400GbE using QSFP+/QSFP28/QSFP56-DD optics; supports 400GbE, 4x100GbE, 2x100GbE, 100GbE, and 40GbE • PTP Timing with Class C performance • Supports MACsec on port speed at line rate The 88-LC1-52Y8H-EM line card is supported on Cisco 8808 modular chassis with 8800-RP2 route processors and 8808-FC1 fabric cards. For more information on this line card, see the Cisco 8000 Series Routers Data Sheet.
88-LC1-12TH24FH-E Line Card based on P100 Silicon Chip	Release 24.3.1	This release introduces the P100 silicon chip-based 88-LC1-12TH24FH-E Line Card with these highlights: • Thirty-six ports provide an overall throughput of 12 Tbps - • Twelve ports of 200GbE using QSFP+/QSFP28/QSFP28-DD/QSFP56-DD optics; supports 40GbE, 100GbE, 2x100GbE and 200GbE • Twenty-four ports of 400GbE using QSFP+/QSFP28/QSFP28-DD/QSFP56-DD optics; supports 40GbE, 100GbE, 2x100GbE, 200GbE, 4x100GbE and 400GbE • PTP Timing with Class C performance The 88-LC1-12TH24FH-E Line Card is supported on Cisco 8808 modular chassis with 8800-RP2 route processors and 8808-FC1 fabric cards. For more information on this line card, see the Cisco 8000 Series Routers Data Sheet.

Feature Name	Release	Description

88-LC1-48Y8H-EM Line Card based on K100 NPU	Release 26.3.1	The 88-LC1-48Y8H-EM line card based on K100 NPU supports the following:
		• Sixty-four ports provide an overall throughput of 4.8Tbps—
		  • 8 ports of 400/200/100/40 GbE using QSFP56-DD/QSFP56/QSFP28-DD/QSFP28/QSFP+ optics.
		  • 8 ports of 100/40 GbE using QSFP28/QSFP+ optics.
		  • 48 ports of SFP supporting various speed combinations accounting to a maximum bandwidth of 800Gbps:
		  • 32 ports of 25/10/1 GbE using SFP28/SFP+/SFP optics.
		  • 16 ports of 10/1 GbE using SFP+/SFP optics.
		• PTP Timing with Class C performance on all ports.
		• Supports MACsec on all port speeds at line rate
		The 88-LC1-48Y8H-EM line card is supported on the following modular chassis configurations, both requiring the 8800-RP2 route processor:
		• Cisco 8804 with 8804-FC1 fabric card.
		• Cisco 8808 with 8808-FC1 fabric card.
		For more information on this line card, see the Cisco 8000 Series Routers Data Sheet.

Feature Name	Release	Description

88-LC1-16H16F-EM Line Card based on K100 NPU	Release 26.3.1	The 88-LC1-16H16F-EM line card based on K100 NPU supports the following:
		• Forty ports provide an overall throughput of 9.6Tbps—
		  • 16 ports of 400/200/100/40 GbE using QSFP56-DD/QSFP56/QSFP28-DD/QSFP28/QSFP+ optics.
		  • 16 ports of 100/40 GbE using QSFP28/QSFP+ optics. They support 25/10 GbE using SFP28/SFP+ over the QSFP CVR adapter.
		  • 8 port of 200/100/40 GbE using QSFP56/QSFP28-DD/QSFP28/QSFP+ optics.
		• PTP Timing with Class C performance on all ports.
		• Supports MACsec on all port speeds at line rate.
		The 88-LC1-16H16F-EM line card is supported on the following modular chassis configurations, both requiring the 8800-RP2 route processor:
		• Cisco 8804 with 8804-FC1 fabric card.
		• Cisco 8808 with 8808-FC1 fabric card.
		For more information on this line card, see the Cisco 8000 Series Routers Data Sheet.

Cisco 8800 Series Routers support the following line cards:

Table 8: Supported Line Cards and Transceivers

Line Card PIDs	Transceivers
8800-LC-48H	QSFP28 / QSFP+
8800-LC-36FH	QSFP56-DD / QSFP28 / QSFP+
88-LC0-36FH	QSFP56-DD / QSFP28 / QSFP+
88-LC0-36FH-M	QSFP56-DD / QSFP28 / QSFP+
88-LC1-36EH	QSFP-DD800 / QSFP56-DD / QSFP28 / QSFP+
88-LC1-52Y8H-EM	QSFP56-DD / QSFP28 / QSFP+ / SFP28 / SFP+
88-LC1-12TH24FH-E	QSFP56-DD / QSFP28-DD / QSFP28 / QSFP+
88-LC1-48Y8H-EM	QSFP56-DD / QSFP56 / QSFP28-DD / QSFP28 / QSFP+/SFP28 / SFP+ / SFP


Line Card PIDs	Transceivers
88-LC1-16H16F-EM	QSFP56-DD / QSFP56 / QSFP28-DD / QSFP28 / QSFP+/ SFP28 and SFP+ CVR adapter

88-LC0-36FH and 88-LC0-36FH-M line cards are compatible with Q100 and Q200 silicon based fabric cards.

88-LC0-36FH-M and 88-LC0-36FH Line Card

The following image explains the front view of the 88-LC0-36FH-M and 88-LC0-36FH line card:

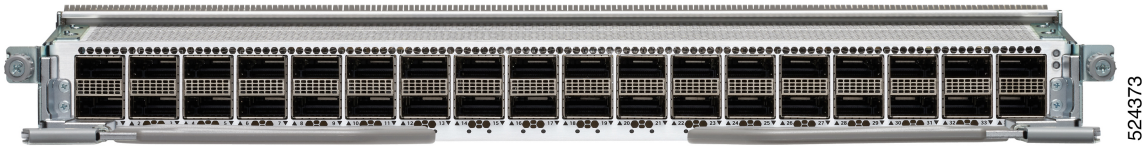Figure 1: 88-LC0-36FH-M and 88-LC0-36FH Line Card



88-LC0-34H14FH Line Card

The following image explains the port configuration details of the 88-LC0-34H14FH line card:

Figure 2: 88-LC0-34H14FH Line Card

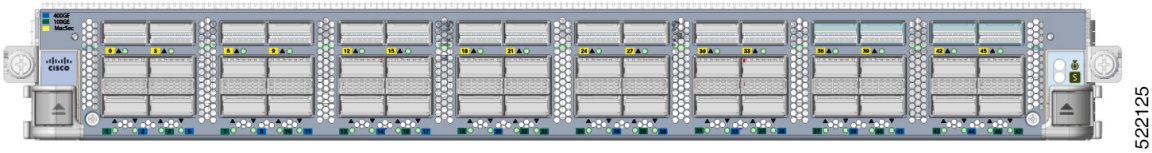


Table 9: Port Description

Port Color	Description
Blue	Fourteen 400 GbE QSFP-DD ports. These ports support 4x100 GbE, 2x100 GbE, and 4x10/25 GbE breakout.
Green	Eighteen 100 GbE QSFP28 ports. These ports support 4x10/25 GbE breakout.
Yellow	Sixteen 100 GbE QSFP28 MACsec-capable ports. These ports support 4x10/25 GbE breakout.

88-LC1-52Y8H-EM Line Card

The P100 silicon chip-based 88-LC1-52Y8H-EM line card supports the following:

- Sixty-four ports provide an overall throughput of 3.7 Tbps -
  - Fifty-two ports of 10/25GbE using SFP+/SFP28 optics
  - Eight ports of 40/100GbE using QSFP+/QSFP28 optics


- Four ports of 400GbE using QSFP+/QSFP28/QSFP56-DD optics; supports 400GbE, 4x100GbE, 2x100GbE, 100GbE, and 40GbE

- PTP Timing with Class C performance
- Supports MACsec on port speed at line rate

The 88-LC1-52Y8H-EM line card is supported in the Cisco 8808 modular chassis with 8800-RP2 route processors and 8808-FC1 fabric cards.

The following image explains the port configuration details of the 88-LC1-52Y8H-EM line card:

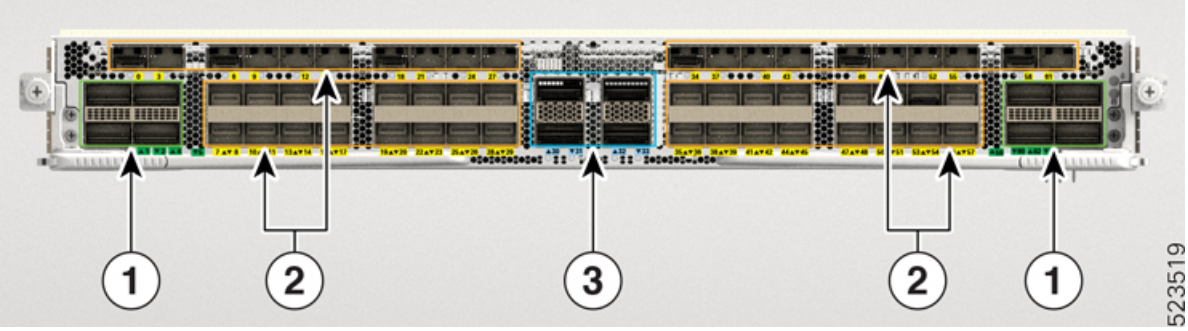Figure 3: 88-LC1-52Y8H4F-EM Line Card



1	QSFP+/QSFP28 (green)
2	SFP28 (yellow) **Note** Bottom row: Transceivers installed upside down
3	QSFP+/QSFP28/QSFP56-DD (blue)

88-LC1-36EH Performance Optimized Line Card

The P100 silicon one chip-based 88-LC1-36EH Performance Optimized Line Card supports the following:

- Thirty-six ports of 800 GE providing 28.8 Tbps of throughput.
- The 800 GE ports support 400, 2X400, 8X100, 4X100, 2X100 and 4X10/40 GbE breakout.
- The 400GbE breakout uses QSFP-DD56 optics
- The 2x400GbE breakout uses QDD-2X400G-FR or QSFP-DD800 optics.
- The 8x100GbE breakout uses QDD-8X100G-FR optics.
- The 4X100GbE breakout uses QSFP-DD optics.
- The 2X100GbE breakout uses QDD-2X100-LR4-S optics.
- The 4x10/40GbE breakout uses QSFP+ optics.

The 88-LC1-36EH Line Card is supported on Cisco 8808 modular chassis with 8800-RP2 route processors and 8808-FC1 fabric cards.

The following image explains the port configuration details of the 88-LC1-36EH Line Card:

Figure 4: 88-LC1-36EH Line Card

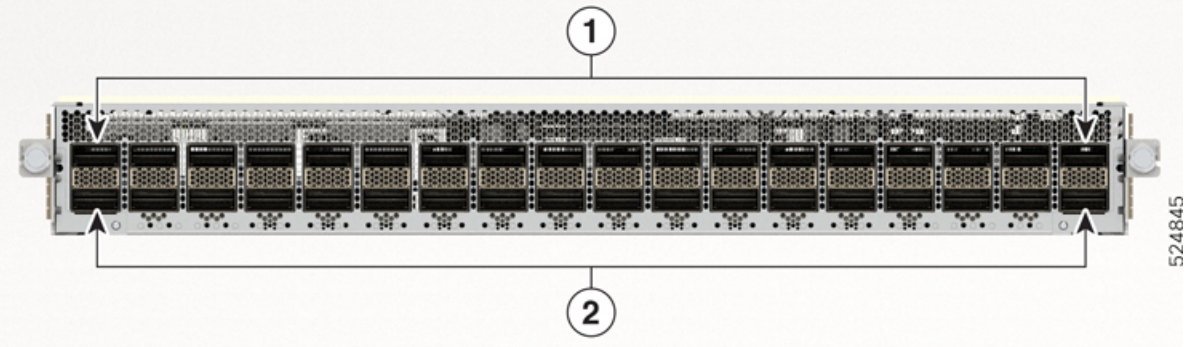


Table 10: Port Description

Port	Description
1	Even Ports (0, 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 22, 24, 26, 28, 30, 32, 34) Sixteen 800 G QSFP-DD800 ports. These ports support 400, 2X400, 8X100, 4X100, and 2X100 GbE brea
2	Odd Ports (1, 3, 5, 7,9, 11, 13, 15, 17, 19, 21, 23, 25, 27, 29, 31, 33, 35) Sixteen 800 G QSFP-DD800 ports. These ports support 400, 2X400, 8X100, 4X100, 2X100, and 4X10/ GbE breakout.

Note The 88-LC1-36EH line card supports 40GbE and 4x10GbE breakout only on the odd ports (1, 3, 5, 7,9, 11, 13, 15, 17, 19, 21, 23, 25, 27, 29, 31, 33, 35).

88-LC1-12TH24FH-E Line Card


The P100 silicon chip-based 88-LC1-12TH24FH-E Line Card supports the following:

- Thirty-six ports provide an overall throughput of 12 Tbps
- Twelve ports of 200GbE using QSFP+/QSFP28/QSFP28-DD/QSFP56-DD optics; supports 40GbE, 100GbE, 2x100GbE and 200GbE
- Twenty-four ports of 400GbE using QSFP+/QSFP28/QSFP28-DD/QSFP56-DD optics; supports 40GbE, 100GbE, 2x100GbE, 200GbE, 4x100GbE and 400GbE
- PTP Timing with Class C performance

The 88-LC1-12TH24FH-E Line Card is supported in the Cisco 8808 modular chassis with 8800-RP2 route processors and 8808-FC1 fabric cards.

The following image explains the port configuration details of the 88-LC1-12TH24FH-E Line Card:

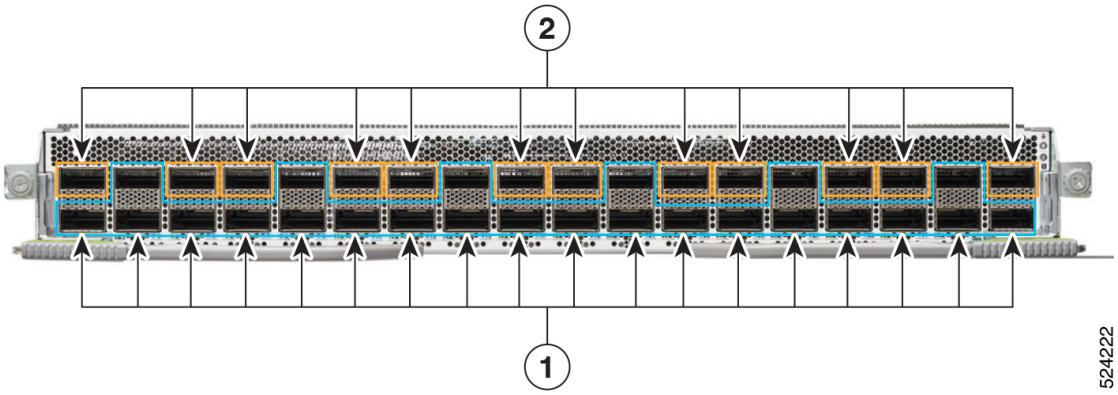Figure 5: 88-LC1-12TH24FH-E Line Card



1	Twenty-four ports of 400 GbE using QSFP+/QSFP28/QSFP28-DD/QSFP56-DD optics (blue). These ports support 40GbE, 100GbE, 2x100GbE, 200GbE, 4x100GbE and 400GbE breakout.
2	Twelve ports of 200 GbE using QSFP+/QSFP28/QSFP28-DD/QSFP56-DD optics (orange). These ports support 40GbE, 100GbE, 2x100GbE and 200GbE breakout.

Note The 400G optics are not supported on ports 0, 4, 6, 10, 12, 16, 18, 22, 24, 28, 30, 34.

Note The 88-LC1-12TH24FH-E line card supports 40GbE and 4x10GbE breakout only on the odd ports (1, 3, 5, 7,9, 11, 13, 15, 17, 19, 21, 23, 25, 27, 29, 31, 33, 35).

88-LC1-48Y8H-EM Line Card

The 88-LC1-48Y8H-EM line card based on K100 NPU supports the following:

- Sixty-four ports provide an overall throughput of 4.8Tbps—
  - 8 ports of 400/200/100/40 GbE using QSFP56-DD/QSFP56/QSFP28-DD/QSFP28/QSFP+ optics. These ports also support 4x100GbE, 2x100GbE, 4x25GbE, and 4x10GbE breakout configurations.
  - 8 ports of 100/40 GbE using QSFP28/QSFP+ optics. These ports also support 4x25GbE and 4x10GbE breakout configurations.
  - 48 ports of SFP supporting various speed combinations accounting to a maximum bandwidth of 800Gbps, using the **hw-module port-range** command:
    - 32 ports of 25/10/1 GbE using SFP28/SFP+/SFP optics.
    - 16 ports of 10/1 GbE using SFP+/SFP optics.

Note For the 88-LC1-48Y8H-EM line card, the configurable port-range is 0–63 and the only supported mode-type is 25.


- PTP Timing with Class C performance on all ports.
- Supports MACsec on all port speeds at line rate.

The 88-LC1-48Y8H-EM line card is supported on the following modular chassis configurations, both requiring the 8800-RP2 route processor:

- Cisco 8804 with 8804-FC1 fabric card.
- Cisco 8808 with 8808-FC1 fabric card.

The following image explains the port configuration details of the 88-LC1-48Y8H-EM Line Card:

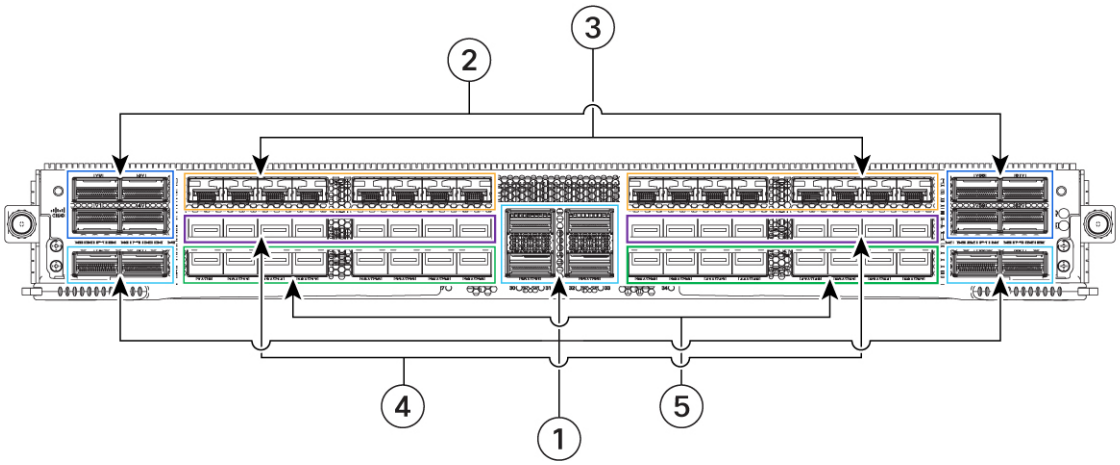Figure 6: 88-LC1-48Y8H-EM Line Card



1	Ports 2, 5, 30, 31, 32, 33, 60, 63. These ports support 400GbE, 4x100GbE, 200GbE, 2x100GbE, 100GbE, 4x25GbE, 40GbE, and 4x10GbE breakout configurations.
2	Ports 0, 1, 3, 4, 58, 59, 61, and 62. These ports support 100GbE, 4x25GbE, 40GbE, and 4x10GbE breakout configurations.
3	Ports 6, 9, 12, 15, 18, 21, 24, 27, 34, 37, 40, 43, 46, 49, 52 and 55 These SFP ports support 25GbE, 10GbE, and 1GbE configurations.
4	Ports 7, 10, 13, 16, 19, 22, 25, 28, 35, 38, 41, 44, 47, 50, 53 and 56. These SFP ports support 25GbE, 10GbE and 1GbE configurations. To operate these ports at 25GbE, refer to the Configure mode 25 section in the Router Hardware Management Guide for Cisco 8000 Series Routers, Cisco IOS XR Releases.
5	Ports 8, 11, 14, 17, 20, 23, 26, 29, 36, 39, 42, 45, 48, 51, 54, 57. These SFP ports support 10GbE and 1GbE configurations.

88-LC1-16H16F-EM

The 88-LC1-16H16F-EM line card based on K100 NPU supports the following:


- Forty ports provide an overall throughput of 9.6Tbps—
  - 16 ports of 400/200/100/40 GbE using QSFP56-DD/QSFP56/QSFP28-DD/QSFP28/QSFP+ optics.
  - 16 ports of 100/40 GbE using QSFP28/QSFP+ optics. They support 25/10 GbE using SFP28/SFP+ over the QSFP CVR adapter.
  - 8 port of 200/100/40 GbE using QSFP56/QSFP28-DD/QSFP28/QSFP+ optics.
- PTP Timing with Class C performance on all ports.
- Supports MACsec on all port speeds at line rate.

The 88-LC1-16H16F-EM line card is supported on the following modular chassis configurations, both requiring the 8800-RP2 route processor:

- Cisco 8804 with 8804-FC1 fabric card.
- Cisco 8808 with 8808-FC1 fabric card.

The following image explains the port configuration details of the 88-LC1-16H16F-EM Line Card:

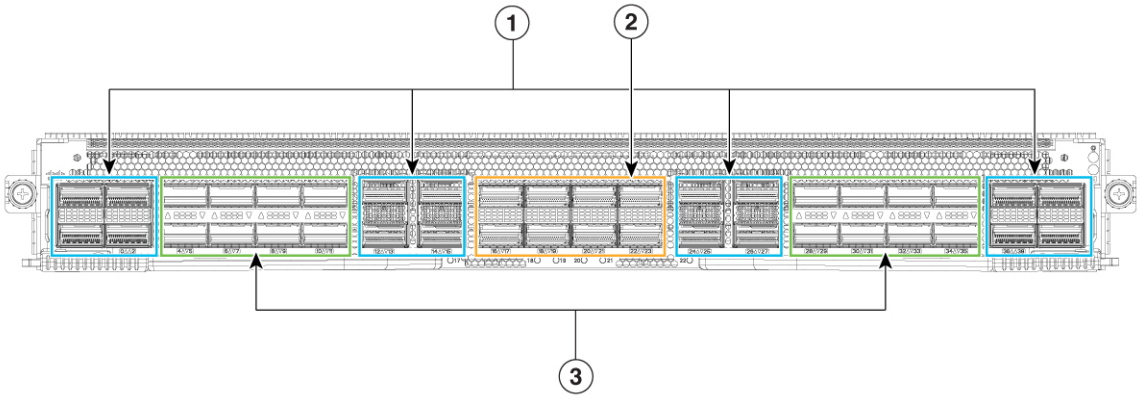Figure 7: 88-LC1-16H16F-EM Line Card



1	Ports 0, 1, 2, 3, 12, 13, 14, 15, 24, 25, 26, 27, 36, 37, 38, 39. These ports support 400GbE, 4x100GbE, 200GbE, 2x100GbE, 100GbE, 4x25GbE, 40GbE, and 4x10GbE breakout configurations. **Note** QSFP-DD Ports 1, 3, 37, and 39 do not support ZRP optics. QSFP-DD Ports 0, 2, 12, 13, 14, 15, 24, 25, 26, 27, 36 and 38 support ZRP optics.
2	Ports 16, 17, 18, 19, 20, 21, 22, 23. These ports support 200GbE, 2x100GbE, 100GbE, 4x25GbE, 40GbE, and 4x10GbE breakout configurations.
3	Ports 4, 5, 6, 7, 8, 9, 10, 11, 28, 29, 30, 31, 32, 33, 34, 35. These ports support 100GbE, 4x25GbE, 40GbE, and 4x10GbE breakout configurations.


Route Processor Card Overview

Table 11: Feature History Table

Hardware	Release Information	Description
Route Processor Card 8800-RP2-S	Release 24.4.1	This release introduces support for a new route processor card, 8800-RP2-S, on Cisco 8800 Series routers. It provides a capacity of 8-core x86 CPU at 2.7GHz with 64GB RAM and only supports Secure Zero-Touch Provisioning (sZTP). sZTP streamlines the network deployment process, making it faster, more reliable, and more secure. For more information, see the Cisco 8800 Series Route Processor section in the Datasheet here.
Route Processor Card 8800-RP2	Release 7.11.1	This release introduces support for a new route processor card, 8800-RP2, on Cisco 8800 Series routers. It provides a capacity of 8-core x86 CPU at 2.7GHz with 64GB RAM. For more information, see the Cisco 8800 Series Route Processor section in the Datasheet here.

Route Processor cards (8800-RP, 8800-RP2, and 8800-RP2-S) manage all routing operations on the Cisco 8800 Series Routers.

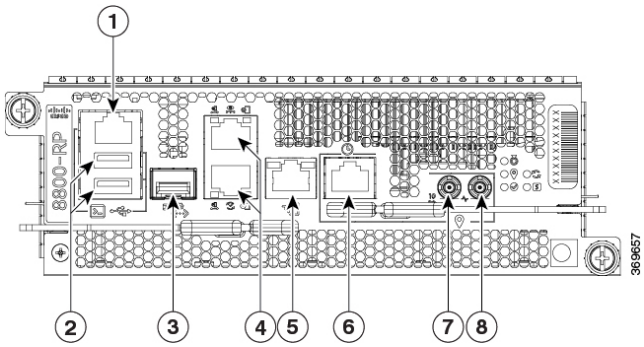
Figure 8: Route Processor - 8800-RP



1	Console RS-232 Serial Port RJ45	**5**	SyncE BITS/DTI/J.211

2	USB Port Type-A (2-ports). Port A gets detected ahead of Port B. Top: Port B Bottom: Port A	**6**	G.703 Time-of-Day (TOD)
3	Control Plane Expansion SFP/SFP+ port	**7**	1.0/2.3 50 ohm connector for 10 MHz, input, and output
4	Top: Management Ethernet (10/100/1000-Mbps) RJ-45 (Copper) port LAN. Bottom: IEEE 1588 Precision Time Protocol (PTP)	**8**	1.0/2.3 50 ohm connector for 1 PPS, input, and output

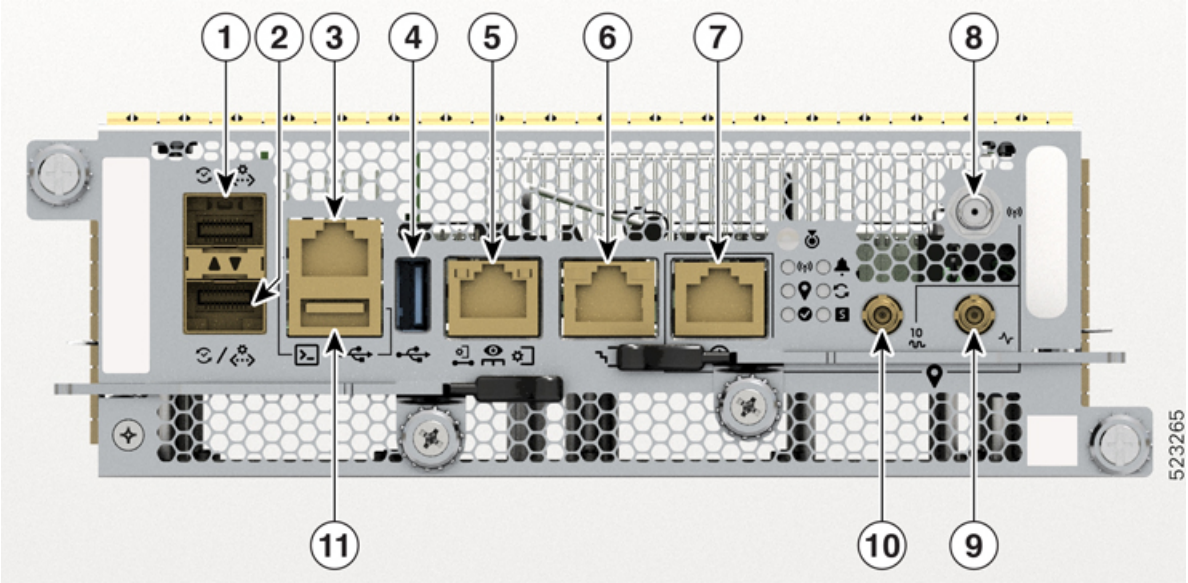
Figure 9: Route Processor - 8800-RP2



1	Control Plane Expansion SFP/SFP+ Port	**7**	G.703 Time-of-Day (TOD)
2	IEEE 1588 Precision Time Protocol (PTP) Port	**8**	GNSS Port
3	Console RS-232 Serial Port RJ45	**9**	1.0/2.3 50 ohm connector for 1 PPS, input, and output
4	USB Port Type-A.	**10**	1.0/2.3 50 ohm connector for 10 MHz, input, and output
5	Top: Management Ethernet (10/100/1000-Mbps) RJ-45 (Copper) Port LAN.	**11**	USB Port Type-B. Port A gets detected ahead of Port B.

6	SyncE BITS/DTI/J.211		

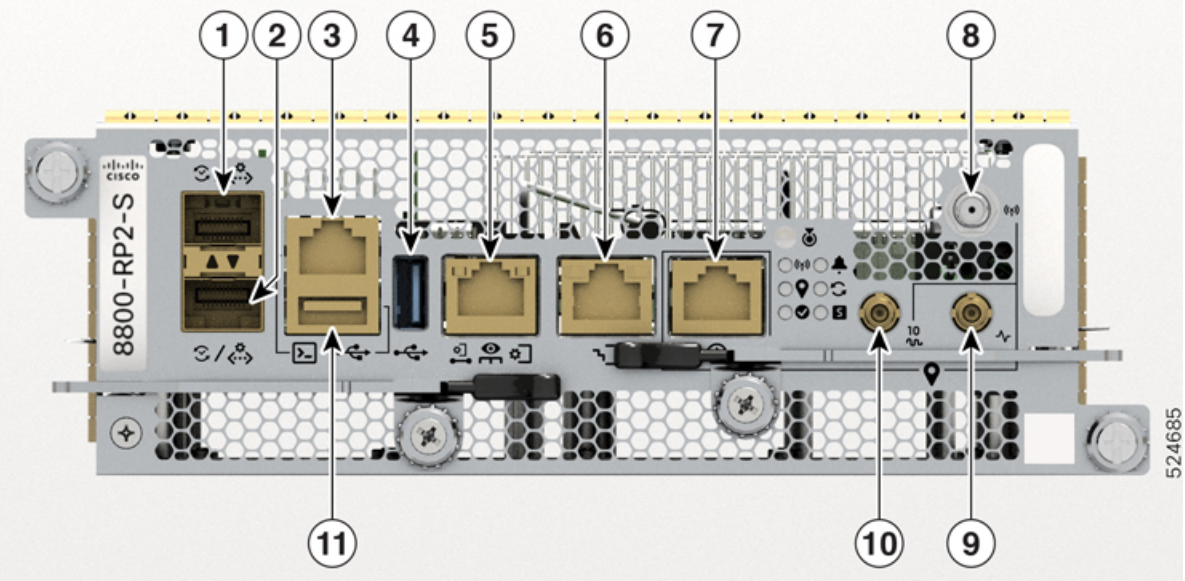Figure 10: Route Processor - 8800-RP2-S



1	Control Plane Expansion SFP/SFP+ Port	**7**	G.703 Time-of-Day (TOD)
2	IEEE 1588 Precision Time Protocol (PTP) Port	**8**	GNSS Port
3	Console RS-232 Serial Port RJ45	**9**	1.0/2.3 50 ohm connector for 1 PPS, input, and output
4	USB Port 3.0, Type-A.	**10**	1.0/2.3 50 ohm connector for 10 MHz, input, and output
5	Management Ethernet (10/100/1000-Mbps) RJ-45 (Copper) Port LAN.	**11**	USB Port 2.0, Type-B. Port A gets detected ahead of Port B.
6	SyncE BITS/DTI/J.211		

Fabric Card Overview

Table 12: Feature History Table

Feature Name	Release	Description
8818-FC1 Fabric Card based on F100 Silicon Chip	Release 26.1.1	The Cisco 8818 Series Routers supports the Cisco 8818 fabric card (8818-FC1). The 8818-FC1 fabric card is based on a Silicon One F100 ASIC. Each fabric card provides 76 Tbps of switching capacity with Q200 or P100 Silicon One line cards. Because of the higher switching capacity, this fabric card offer benefits, such as faster communication, lower latency, and ability to manage higher data flows. By default, the fabric card only supports 8FC mode.
8804-FC1 Fabric Card based on F100 Silicon Chip	Release 25.1.1	The Cisco 8804 Series Routers supports the Cisco 8804 fabric card (8804-FC1). The 8804-FC1 fabric card is based on a Silicon One F100 ASIC. It provides 20.4 Tbps of switching capacity with Q200 or P100 Silicon One line cards and can reach up to 21.2 Tbps throughput. Because of the higher switching capacity, this fabric card offer benefits, such as faster communication, lower latency, and ability to manage higher data flows. The fabric card supports 8FC modes.
8808-FC1 Fabric Card based on F100 Silicon Chip	Release 24.2.1	The Cisco 8808 Series Routers support the Cisco 8808 fabric card (8808-FC1). The 8808-FC1 fabric card is based on a Silicon One F100 ASIC. The 8808-FC1 fabric card provides 36 Tbps of switching capacity between the eight line cards. Because of the higher switching capacity, this fabric card offer benefits, such as faster communication, lower latency, and ability to manage higher data flows. The fabric card supports 8FC and 5FC modes.

Feature Name	Release	Description
8804-FC0 Fabric Card based on Q200 Silicon Chip	Release 7.3.16	The Cisco 8804 modular chassis supports the Cisco 8804 fabric card (8804-FC0). The 8804-FC0 fabric card is Q200 silicon chip-based providing 9.6 Tbps. The fabric card supports 8FC and 5FC modes.
8818-FC0 Fabric Card based on Q200 Silicon Chip	Release 7.3.16	The Cisco 8818 modular chassis supports the Cisco 8818 fabric card (8818-FC0). The 8818-FC0 fabric card is Q200 silicon chip-based providing 43.2 Tbps. The fabric card supports 8FC and 5FC modes.
8808-FC0 Fabric Card based on Q200 Silicon Chip	Release 7.3.15	The Cisco 8808 modular chassis supports the Cisco 8808 fabric card (8808-FC0). The 8808-FC0 fabric card is Q200 silicon chip-based providing 21.6 Tbps. The fabric card supports 8FC and 5FC modes.

The Cisco 8800 series routers are powered by the Cisco Silicon One Q200, Q100, and F100 series processors. The following table lists the fabric cards, supported routers, and the ASIC that the fabric cards are based on.

ASIC	Fabric Card	Supported Router
Q100 Silicon	8818-FC	Cisco 8808
	8812-FC	Cisco 8812
	8808-FC	Cisco 8808
Q200 Silicon	8804-FC0	Cisco 8804
	8808-FC0	Cisco 8808
	8818-FC0	Cisco 8818
F100 Silicon	8808-FC1	Cisco 8808
	8804-FC1	Cisco 8804
	8818-FC1	Cisco 8818

Caution The system doesn't support a mix of the following:

- Q100 Silicon based fabric cards
- Q200 Silicon based fabric cards
- F100 Silicon based fabric cards

Attempting to mix Q100, Q200, and F100 Silicon based fabric cards in a system could result in an equipment failure.

Temperature and Physical Specifications

For temperature and physical specifications, refer to the *Physical characteristics* table in the Cisco 8000 Series Routers Data Sheet.

Weight and Power Consumption

For weight and power consumption, refer to the *Physical characteristics* table in the Cisco 8000 Series Routers Data Sheet.

Airflow Direction

The airflow through the fan trays and power supplies on the Cisco 8800 series routers routers are from front to back (port side intake).

To ensure proper airflow for the router in your facility, position the router with its air intake on a cold aisle and the air exhaust on a hot aisle.

Maximum Power Available to the Router

The maximum power available for operations depends on the input power from your power source, the number and output capabilities of your power supplies, and the power redundancy mode that you use.

The following table lists the amount of power available for Cisco 8800 series routers from all available power trays.

Table 13: Maximum Power Available for a Router with HVAC/HVDC Power Supplies

Total Power Supply	Combined Mode in Watts (No redundancy)	N+1 Redundancy Mode in Watts (with Single Supply Loss)	Total Power Tray
1	6,300	—	1
2	12,600	6,300	
3	18,900	12,600	
4	25,200	18,900	2[1]
5	31,500	25,200	
6	37,800	31,500	
7	44,100	37,800	3[2]
8	50,400	44,100	
9	56,700	50,400	
10	63,000	56,700	4[3]
11	69,300	63,000	
12	75,600	69,300	
13	81,900	75,600	5[3]
14	88,200	81,900	
15	94,500	88,200	
16	100,800	94,500	6[3]
17	107,100	100,800	
18	113,400	107,100	

Note

- [1] Cisco 8804 router supports 2 power trays.
- [2] Cisco 8808 and Cisco 8812 routers support 3 power trays.
- [3] Power Tray 4, 5 and 6 are applicable for Cisco 8818 Router.

Table 14: Maximum Power Available for a Router with DC60 Power Supplies (or DC100 Power Supplies in 60A Mode)

Total Power Supply	Combined Mode in Watts (No redundancy)	N+1 Redundancy Mode in Watts (with Single Supply Loss)	N+N Redundancy Mode in Watts (with Feed Loss)	Total Power Tray
1	4,400	—	2,200	1
2	8,800	4,400	4,400	
3	13,200	8,800	6,600	
4	17,600	13,200	8,800	
5	22,000	17,600	11,000	2[1]
6	26,400	22,000	13,200	
7	30,800	26,400	15,400	
8	35,200	30,800	17,600	
9	39,600	35,200	19,800	3[2]
10	44,000	39,600	22,000	
11	48,400	44,000	24,200	
12	52,800	48,400	26,400	

Note

- [1] Cisco 8804 router supports 2 power trays.
- [2] Cisco 8808 and Cisco 8812 routers support 3 power trays.

Total Power Supply	Combined Mode in Watts (No redundancy)	N+1 Redundancy Mode in Watts (with Single Supply Loss)	N+N Redundancy Mode in Watts (with Feed Loss)	Total Power Tray
13	57,200	52,800	28,600	4[3]
14	61,600	57,200	30,800	
15	66,000	61,600	33,000	
16	70,400	66,000	35,200	

Total Power Supply	Combined Mode in Watts (No redundancy)	N+1 Redundancy Mode in Watts (with Single Supply Loss)	N+N Redundancy Mode in Watts (with Feed Loss)	Total Power Tray
17	74,800	70,400	37,400	5[3]
18	79,200	74,800	39,600	
19	83,600	79,200	41,800	
20	88,000	83,600	44,000	
21	92,400	88,000	46,200	6[3]
22	96,800	92,400	48,400	
23	101,200	96,800	50,600	
24	105,600	101,200	52,800	

Note [3] Power Tray 4, 5 and 6 are applicable for Cisco 8818 Router.

Table 15: Maximum Power Available for a Router with DC100 Power Supplies

Total Power Supply	Combined Mode in Watts (No redundancy)	N+1 Redundancy Mode in Watts (with Single Supply Loss)	N+N Redundancy Mode in Watts (with Feed Loss)	Total Power Tray
1	4,800	—	2,400	1
2	9,600	4,800	4,800	
3	14,400	9,600	7,200	
4	19,200	14,400	9,600	
5	24,000	19,200	12,000	2[1]
6	28,800	24,000	14,400	
7	33,600	28,800	16,800	
8	38,400	33,600	19,200	
9	43,200	38,400	21,600	3[2]
10	48,000	43,200	24,000	
11	52,800	48,000	26,400	
12	57,600	52,800	28,800	

Note

- [1] Cisco 8804 router supports 2 power trays.
- [2] Cisco 8808 and Cisco 8812 routers support 3 power trays.

Total Power Supply	Combined Mode in Watts (No redundancy)	N+1 Redundancy Mode in Watts (with Single Supply Loss)	N+N Redundancy Mode in Watts (with Feed Loss)	Total Power Tray
13	62,400	57,600	31,200	4[3]
14	67,200	62,400	33,600	
15	72,000	67,200	36,000	
16	76,800	72,000	38,400	
17	81,600	76,800	40,800	5[3]
18	86,400	81,600	43,200	
19	91,200	86,400	45,600	
20	96,000	91,200	48,000	
21	10,0800	96,000	50,400	6[3]
22	105,600	10,0800	52,800	
23	110,400	105,600	55,200	
24	115,200	110,400	57,600	

Note [3] Power Tray 4, 5 and 6 are applicable for Cisco 8818 Router.

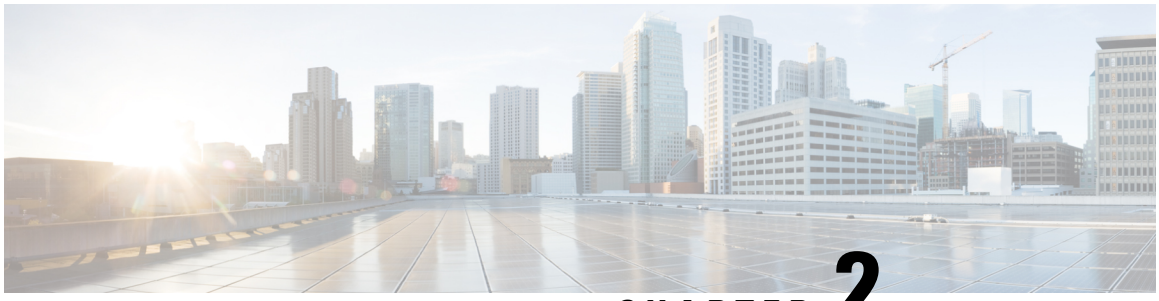
Supported Optics



Note To determine which transceivers and cables are supported by this router, refer to the Transceiver Module Group (TMG) Compatibility Matrix Tool:

https://tmgmatrix.cisco.com

- For QSFP-DD data sheets, refer to the Cisco 400G QSFP-DD Cable and Transceiver Modules Data Sheet.
- For QSFP28 data sheets, refer to the Cisco 100GBASE QSFP-100G Modules Data Sheet.
- For QSFP+ data sheets, refer to the Cisco 40GBASE QSFP Modules Data Sheet.



CHAPTER 2

Prepare for Installation

Note The images in this chapter are only for representational purposes, unless specified otherwise. The chassis' actual appearance and size may vary.

Warning **Statement 1071**—Warning Definition

IMPORTANT SAFETY INSTRUCTIONS

Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Read the installation instructions before using, installing, or connecting the system to the power source. Use the statement number at the beginning of each warning statement to locate its translation in the translated safety warnings for this device.

SAVE THESE INSTRUCTIONS



- Safety Guidelines, on page 28
- Compliance and Safety Information, on page 28
- Laser Safety, on page 30
- Energy Hazard, on page 30
- Preventing Electrostatic Discharge Damage, on page 31
- Cautions and regulatory compliance statements for NEBS, on page 31
- Installation Guidelines, on page 33
- Procure Tools and Equipment, on page 33
- Prepare Your Location , on page 35
- Prepare Yourself , on page 36
- Prepare Rack for Chassis Installation, on page 37
- Clearance Requirements, on page 38

Safety Guidelines

Before you perform any procedure in this document, review the safety guidelines in this section to avoid injuring yourself or damaging the equipment. The following guidelines are for your safety and to protect the equipment. Because the guidelines do not include all hazards, be constantly alert.

- Keep the work area clear, smoke and dust-free during and after installation. Do not allow dirt or debris to enter into any laser-based components.
- Do not wear loose clothing, jewelry, or other items that could get caught in the switch or other associated components.
- Cisco equipment operates safely when used in accordance with its specifications and product-usage instructions.
- Be sure to power down a fixed configuration PDU or modular configuration power shelf before removing it from the chassis.
- If potentially hazardous conditions exist, do not work alone.
- Take care when connecting multiple units to the supply circuit so that wiring is not overloaded.
- This equipment must be grounded. Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain about whether suitable grounding is available.
- When installing or replacing the unit, the ground connection must always be made first and disconnected last.
- To prevent personal injury or damage to the chassis, never attempt to lift or tilt the chassis using the handles on modules (such as power supplies, fans, or cards); these types of handles are not designed to support the weight of the unit.
- Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.
- The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide out the unit for servicing. Failure to stabilize the rack may cause the rack to tip over.

Compliance and Safety Information



Note **Statement 1089—**Instructed and Skilled Person Definitions

An instructed person is someone who has been instructed and trained by a skilled person and takes the necessary precautions when working with equipment.

A skilled person or qualified personnel is someone who has training or experience in the equipment technology and understands potential hazards when working with equipment.

Warning **Statement 1005—**Circuit Breaker

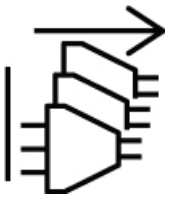
This product relies on the building's installation for short-circuit (overcurrent) protection. To reduce risk of electric shock or fire, ensure that the protective device is rated not greater than:

8202, 8202-32FH-M, 8202-32FH-MO: AC=20 (NA)/16A (EU), LVDC: 80A, HVDC: 15A

8212-48FH-M, 8223-64EF-M and 8223-64E-MO: AC =20A (NA)/16A (EU), LVDC: 125A, HVDC: 20A

Warning **Statement 1028—**More Than One Power Supply

This unit might have more than one power supply connection. To reduce risk of electric shock, remove all connections to de-energize the unit.



Warning **Statement 1003—**DC Power Disconnection

To reduce risk of electric shock or personal injury, disconnect DC power before removing or replacing components or performing upgrades.

Warning **Statement 9001—**Product Disposal

Ultimate disposal of this product should be handled according to all national laws and regulations.

Warning **Statement 1074—**Comply with Local and National Electrical Codes

To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.

Warning **Statement 1091—**Installation by an Instructed Person or Skilled Person

Only an instructed person or skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of an instructed person or skilled person.

Warning **Statement 1029—**Blank Faceplates and Cover Panels

Blank faceplates and cover panels serve three important functions: they reduce the risk of electric shock and fire, they contain electromagnetic interference (EMI) that might disrupt other equipment, and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place.

Laser Safety

Warning **Statement 1051—**Laser Radiation

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.

Warning **Statement 1055—**Class 1/1M Laser

Invisible laser radiation is present. Do not expose to users of telescopic optics. This applies to Class 1/1M laser products.



Warning **Statement 1255—**Laser Compliance Statement

Pluggable optical modules comply with IEC 60825-1 Ed. 3 and 21 CFR 1040.10 and 1040.11 with or without exception for conformance with IEC 60825-1 Ed. 3 as described in Laser Notice No. 56, dated May 8, 2019.

Energy Hazard

The switches can be configured for a DC power source. Do not touch terminals while they are live. Observe the following warning to prevent injury.

Warning **Statement 1086—**Replace Cover on Power Terminals

Hazardous voltage or energy may be present on power terminals. To reduce the risk of electric shock, make sure the power terminal cover is in place when the power terminal is not being serviced. Be sure uninsulated conductors are not accessible when the cover is in place.

Preventing Electrostatic Discharge Damage

Many switch components can be damaged by static electricity. Not exercising the proper electrostatic discharge (ESD) precautions can result in intermittent or complete component failures. To minimize the potential for ESD damage, always use an ESD-preventive antistatic wrist strap (or ankle strap) and ensure that it makes adequate skin contact.



Note Check the resistance value of the ESD-preventive strap periodically. The measurement should be 1–10 megohms.

Before you perform any of the procedures in this guide, attach an ESD-preventive strap to your wrist and connect the leash to the chassis.

Cautions and regulatory compliance statements for NEBS

The NEBS-GR-1089-CORE regulatory compliance statements and requirements are discussed in this section.



Note **Statement 7001—**ESD Mitigation

This equipment may be ESD sensitive. Always use an ESD ankle or wrist strap before handling equipment. Connect the equipment end of the ESD strap to an unfinished surface of the equipment chassis or to the ESD jack on the equipment if provided.



Warning **Statement 7003—**Shielded Cable Requirements for Intrabuilding Lightning Surge

The intrabuilding port(s) of the equipment or subassembly, which is the management Ethernet port, must use shielded intrabuilding cabling/wiring that is grounded at both ends.



Warning **Statement 7005—**Intrabuilding Lightning Surge and AC Power Fault

The intrabuilding port(s) of the equipment or subassembly, which is the management Ethernet port, must not be metallically connected to interfaces that connect to the OSP or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of Primary Protectors is not sufficient protection in order to connect these interfaces metallically to OSP wiring.

Warning **Statement 7011—**Surge Protection Device Requirements for GR-1089 Antenna Ports

Protect equipment antenna ports, that are classified as Type 6 according to GR-1089-CORE, with lightning surge protectors that are rated at a minimum of 600 V peak surge of 1.2/50 uS duration.

Connecting a Cable to the GNSS Antenna Interface

- GNSS modules have built-in ESD protections on all pins, including the RF-input pin. However, additional surge protection is required if an outdoor antenna is being connected. The Lightning Protector must be able to provide a low clamping voltage (less than 600V).
- A lightning protection must be mounted at the place where the antenna cable enters the building. The primary lightning protection must be capable of conducting all potentially dangerous electrical energy to PE (Protective Earth).
- Surge arrestors should support DC-pass and suitable for the GPS frequency range as per the constellation used with low attenuation.

Warning **Statement 7012—**Equipment Interfacing with AC Power Ports

Connect this equipment to AC mains that are provided with a surge protective device (SPD) at the service equipment that complies with NFPA 70, the National Electrical Code (NEC).

Note **Statement 7013—**Equipment Grounding Systems—Common Bonding Network (CBN)

This equipment is suitable for installations using the CBN.

Note **Statement 7016—**Battery Return Conductor

The battery return conductor of this equipment shall be treated as (DC-I).

Note **Statement 7018—**System Recover Time

The equipment is designed to boot up in less than 30 minutes provided the neighboring devices are fully operational.

Note **Statement 8015—**Installation Location Network Telecommunications Facilities

This equipment is suitable for installation in network telecommunications facilities.

Note **Statement 8016—**Installation Location Where the National Electric Code (NEC) Applies

This equipment is suitable for installation in locations where the NEC applies.

Installation Guidelines

Before installing the switche, ensure that the following guidelines are met:

- Site is properly prepared so that there is sufficient room for installation and maintenance.
- Operating environment is within the ranges that are listed in Environment and Physical specifications. For more details on environmental requirements, see Cisco 8200 Series Routers Data Sheet.
- Chassis is mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting the chassis in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the chassis in the rack.
- Airflow around the chassis and through the vents is unrestricted.
- Cabling is away from sources of electrical noise, such as radios, power lines, and fluorescent lighting fixtures. Make sure that the cabling is safely away from other devices that might damage the cables.
- Each port must match the wave-length specifications on each end of the cable, and the cable must not exceed the stipulated cable length.

Procure Tools and Equipment

Obtain these necessary tools and equipment for installing the chassis:

- Number 1 and number 2 Phillips screwdrivers with torque capability to rack-mount the chassis.
- 3/16-inch flat-blade screwdriver.
- Tape measure and level.
- ESD wrist strap or other grounding device.
- Antistatic mat or antistatic foam.
- Two-hole 2 AWG lug (1) is provided with the accessory kit. If you choose to use a different sized ground wire, you must procure your own two-hole lug that has .25 inch holes and .625 inch spacing between the holes.
- Grounding cable that is compatible with the ground lug being used to ground the equipment. The grounding cable must be long enough to reach the intended ground bus. It is recommended to consult with a licensed electrician on grounding methods that meet your local and national requirements.
- Crimping tool for lug.



- Wire-stripping tool.
- A maximum of 70 rack mount screws can be used based on your rack selection.


Rack Mount and Accessory Kits

Router Accessory Kit

The rack mount and accessory kits include the following:

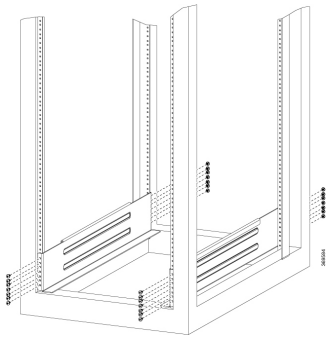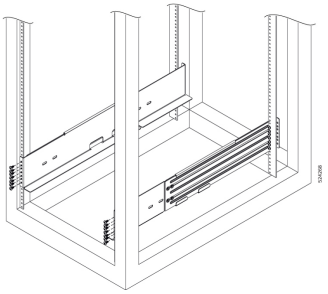Table 16: Rack Mount and Accessory Kits

PID	Illustration	Description	Quantity
8800-INSTKIT		Rack mount rails: • Non-adjustable support rails • Set the vertical support rack rails at 32" pitch	1
		Ground lug kit • Two-hole lug (1) • 1/4"-20 Phillips pan-head screws (2)	1
8800-ADJ-RAIL		L-type rack for installing Cisco 8804, 8808 and 8812 routers: • Adjustable support rails	1
8818-ADJ-RAIL		L-type rack for installing the Cisco 8818 router: • Adjustable support rails	1

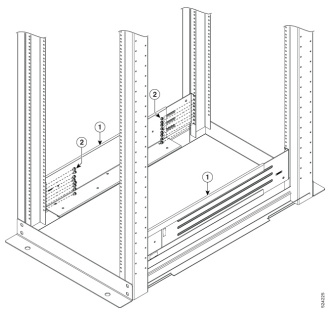PID	Illustration	Description	Quantity
8800-RAIL-KIT		U-type rack: • Adjustable support rail - left side • Adjustable support rail - right side	2 One for each side

More Hardware Components

If you purchased this product through a Cisco reseller, you might receive more contents in your kit, such as documentation, hardware, and power cables.

The shipped cables depend on your specification when placing an order. See the *Power Supply Power Cord Specifications* section for information on the available power cords.

If you notice any discrepancies or damage, send the following information to your customer service representative by email:

- Invoice number of the shipper (see the packing slip)
- Model and serial number of the missing or damaged unit
- Description of the problem and how it affects the installation
- Photos of the damage to external packaging, internal packaging, and product


Prepare Your Location

This section illustrates how the building that houses the chassis must be properly grounded to the earth ground.

Note Unless specified otherwise, the image is only for representational purposes. The rack's actual appearance and size may vary.

Note This image is only for representational purposes. Your grounding requirement depends on your building.

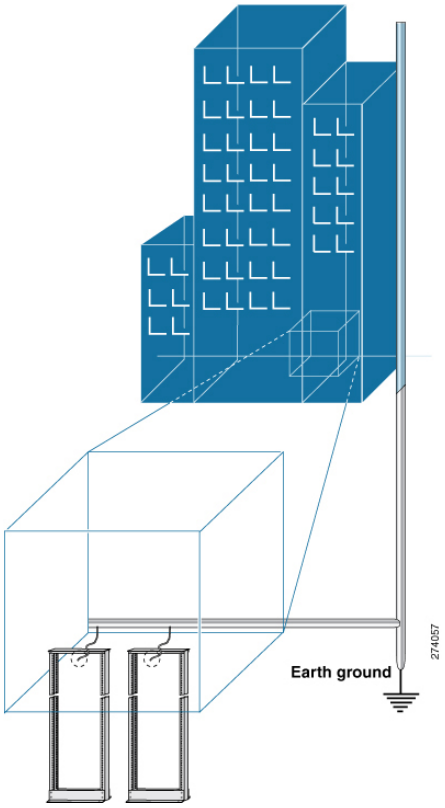
Figure 11: Building with Rack Room Connected to Earth Ground



Prepare Yourself

This section illustrates how to prepare yourself before removing the chassis from the sealed antistatic bag. The figures show how to cuff the ESD strap around the wrist and the ground cord that connects the cuff to the ground. ESD wrist straps are the primary means of controlling static charge on personnel.

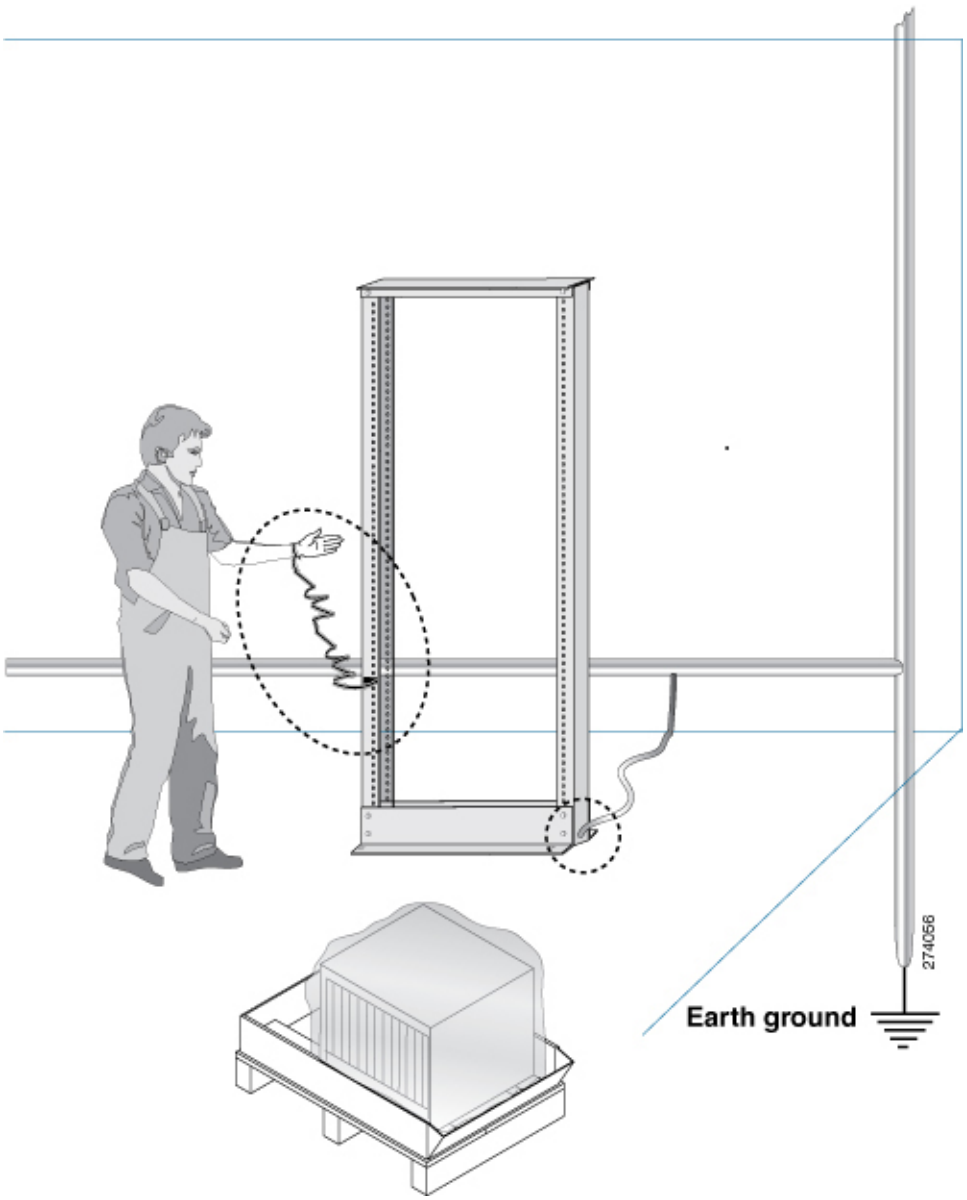Figure 12: Wearing the ESD Strap



Prepare Rack for Chassis Installation

Install the Cisco 8800 Series Routers on a standard 19 inch, Electronic Industries Alliance (EIA) rack with mounting rails that conform to English universal hole spacing according to Section 1 of the ANSI/EIA-310-D-1992 standard.

The spacing between the posts of the rack must be (EIA-310-D-1992 19-inch rack compatible) wide enough to accommodate the width of the chassis.

Before you move the chassis or mount the chassis into the rack, we recommend that you do the following:

Procedure

Step 1 Place the rack at the location where you plan to install the chassis.

Step 2 (Optional) Secure the rack to the floor.

To bolt the rack to the floor, a floor bolt kit (also called an anchor embedment kit) is required. For information on bolting the rack to the floor, consult a company that specializes in floor mounting kits (such as Hilti; see Hilti.com for details). Make sure that floor mounting bolts are accessible, especially if annual retorquing of bolts is required.

Note
Ensure that the rack in which the chassis is being installed is grounded to earth ground.


Clearance Requirements

To ensure adequate airflow, we recommended that you maintain a minimum of 6 in. (15.24 cm) front and rear clearance for air intake/exhaust.

If the router is installed in a perforated door cabinet, maintain a minimum of 6 in. (15.24 cm) from the inside of the door. The front and rear doors of the cabinet must be perforated with a minimum open area of 70%.

Following figure shows the clearances required for installation of Cisco 8800 Series Routers.

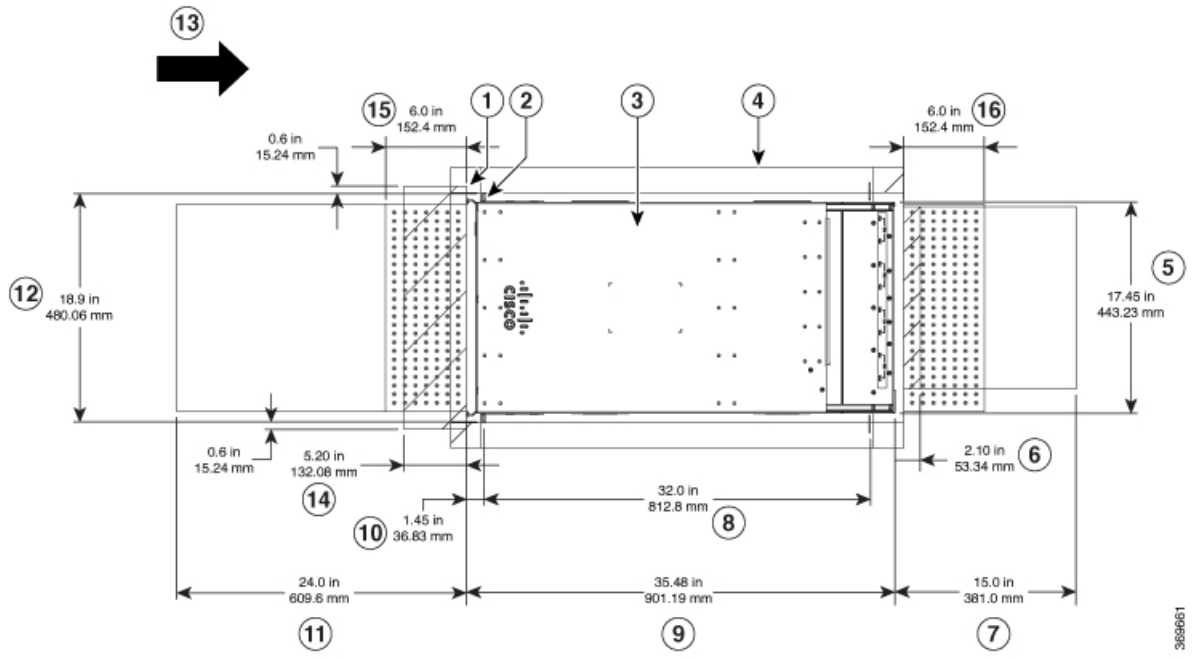Figure 13: Clearances Required Around the Chassis




1	Vertical rack post	9	Chassis depth


2	Vertical rack rail	10	Depth from the vertical rack rail to the front of the chassis
3	Chassis	11	Front service area for the line card replacement
4	Outside of the rack (no clearance required)	12	Front chassis width
5	Rear chassis width	13	Airflow direction
6	Clearance required for the fan tray handle at the rear	14	Clearance for line card ejector levers
7	Rear service area for the fan tray and fabric card replacement	15	Clearance required in front of the chassis for air intake
8	Mounting depth of rack vertical rails	16	Clearance required in rear of the chassis for air exhaust

Following figure shows the clearances required for the cable management of Cisco 8800 Series Routers.

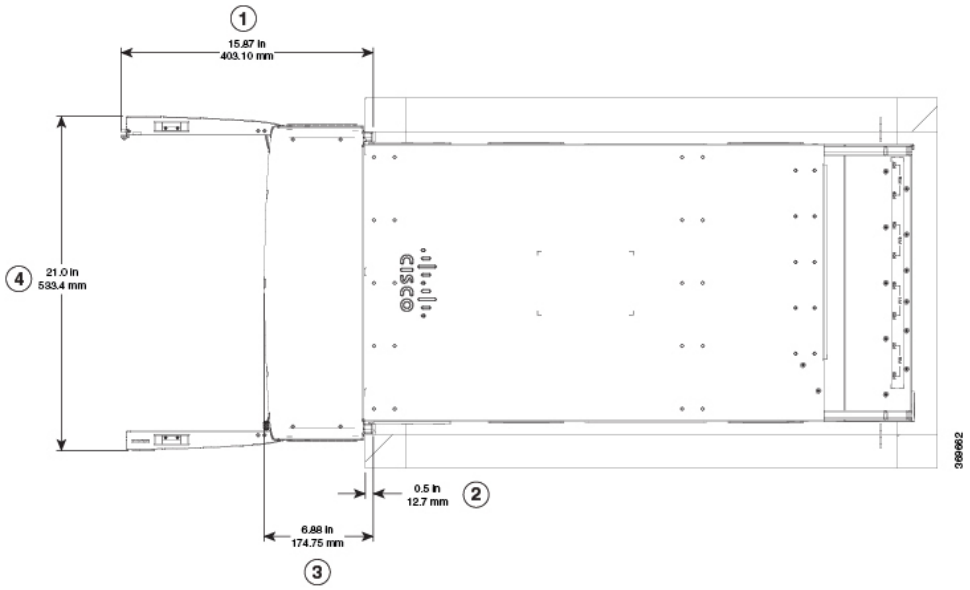Figure 14: Clearances Required Around the Chassis Door



(1) Overall door width on side (in an open position)	(3) Depth of cable management
(2) Maximum vertical rack rail setback, when filters are installed on the chassis	(4) Overall door depth on front (in an open position

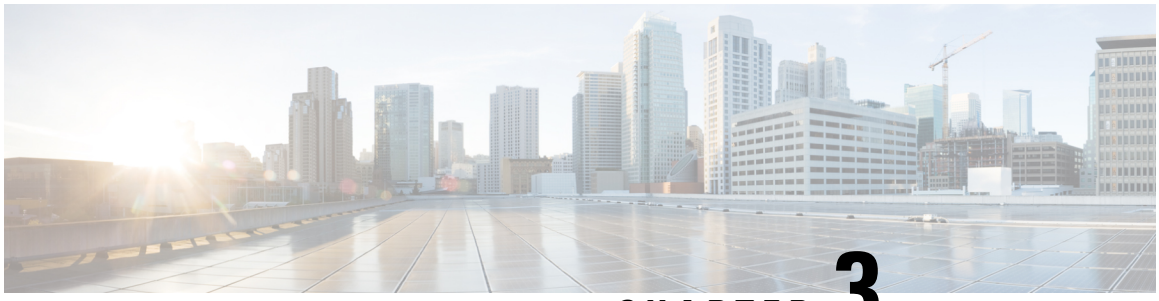

CHAPTER 3

Unpack and Install the Chassis

Note The images in this chapter are only for representation purposes, unless specified otherwise. The chassis' actual appearance and size may vary.

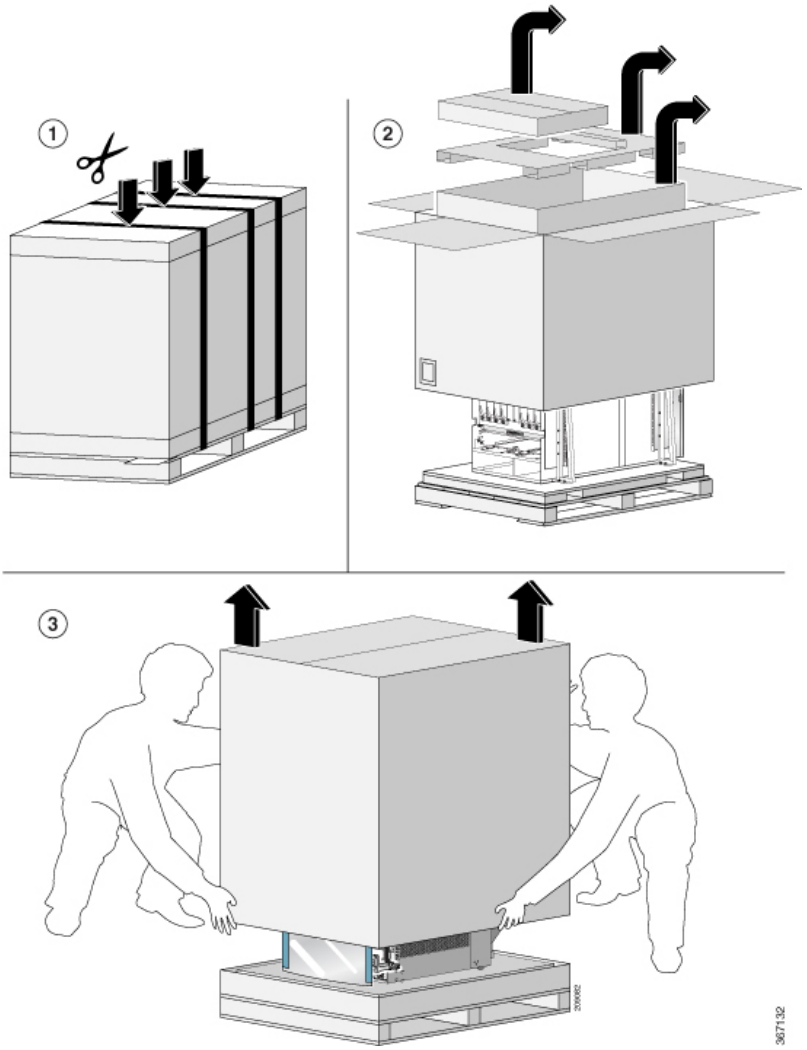
- Unpack the Chassis, on page 41
- (Only Cisco 8818) Install the Pull bars on the Chassis, on page 51
- Install Bottom-Support Rails, on page 55
- Transfer Chassis to a Mechanical Lifting Device, on page 61
- Mount Chassis Into the Rack, on page 64
- Install Cable Management on a Chassis , on page 88
- Attach Front Door to Chassis, on page 99

Unpack the Chassis

Tip Be sure to save the packaging in case you need to return any of the components products.

Ensure that there is sufficient room around the chassis pallet for unpacking. For information about the chassis dimensions and clearance requirements see, *Clearance Requirements*.

Carefully move the pallet containing the chassis to the staging area where you plan on unpacking it.



Note Unpack the Cisco 8818 chassis, then immediately install the pull-bars. Do not remove the shipping brackets or move the chassis from the pallet until this is done. See (Only Cisco 8818) Install the Pull bars on the Chassis, on page 51.

Figure 15: Remove Shipping Brackets from 8812 Chassis

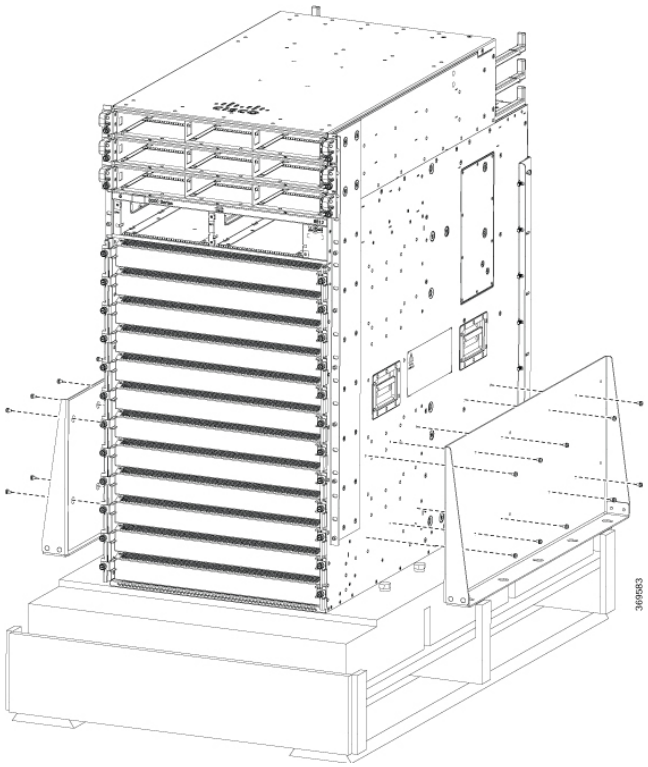


Figure 16: Remove Shipping Brackets from 8808 Chassis


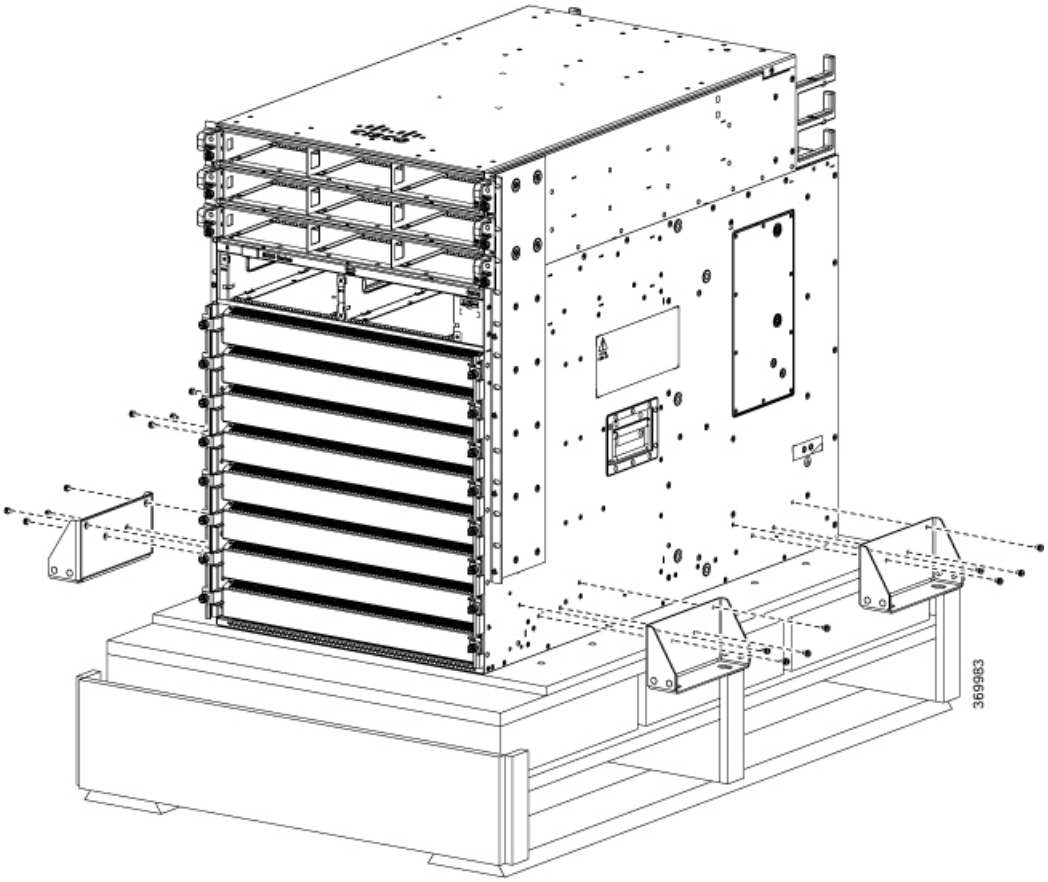


Figure 17: Remove Shipping Brackets from 8804 Chassis

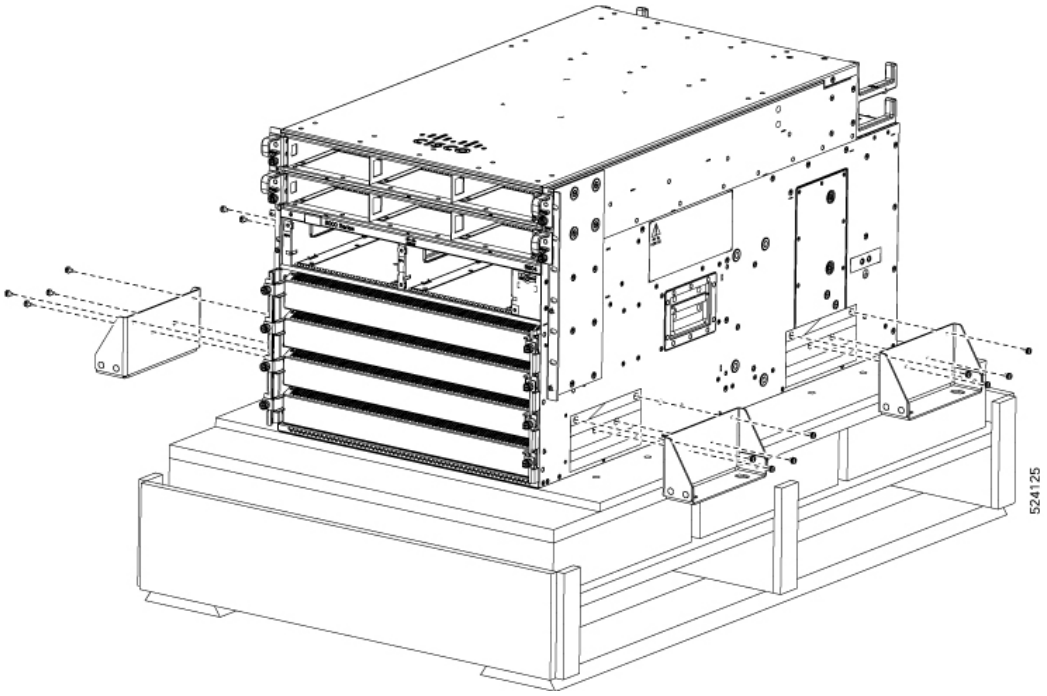

Remove the shipping brackets:


- 20 x M4 screws from the 8812 chassis
- 16 x M4 screws from the 8808 chassis
- 16 x M4 screws from the 8804 chassis

To make the chassis weigh less for moving, remove the following module and place them where their connectors will not be damaged:

- Fan trays


Leave the chassis on the pallet until you are ready to move and install the chassis in a rack.

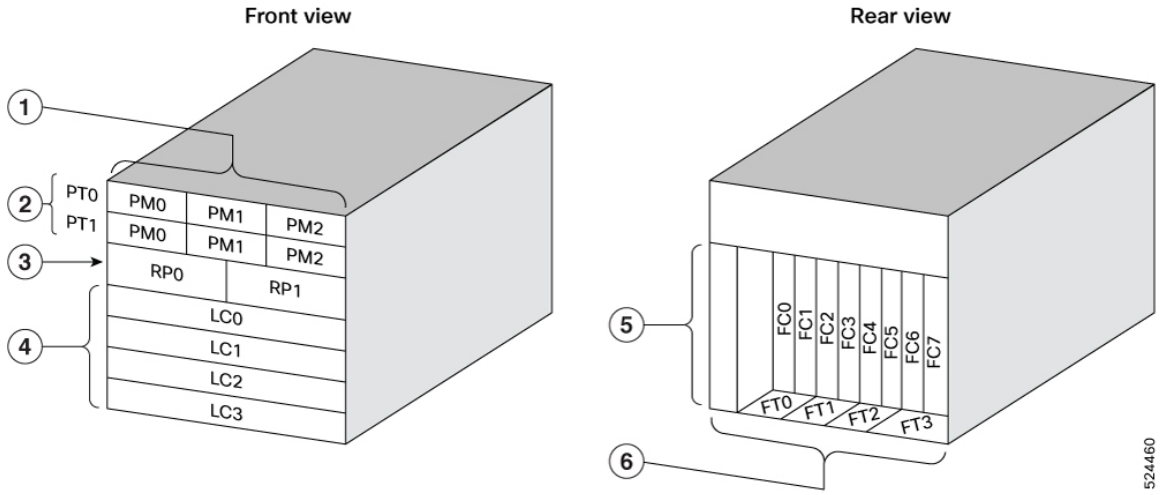Figure 18: Cisco 8804 Router Components and Slot Numbering for AC Power System




1	Power Modules	4	Line Cards
2	Power Trays	5	Fabric Cards
3	Route Processors	6	Fan Trays

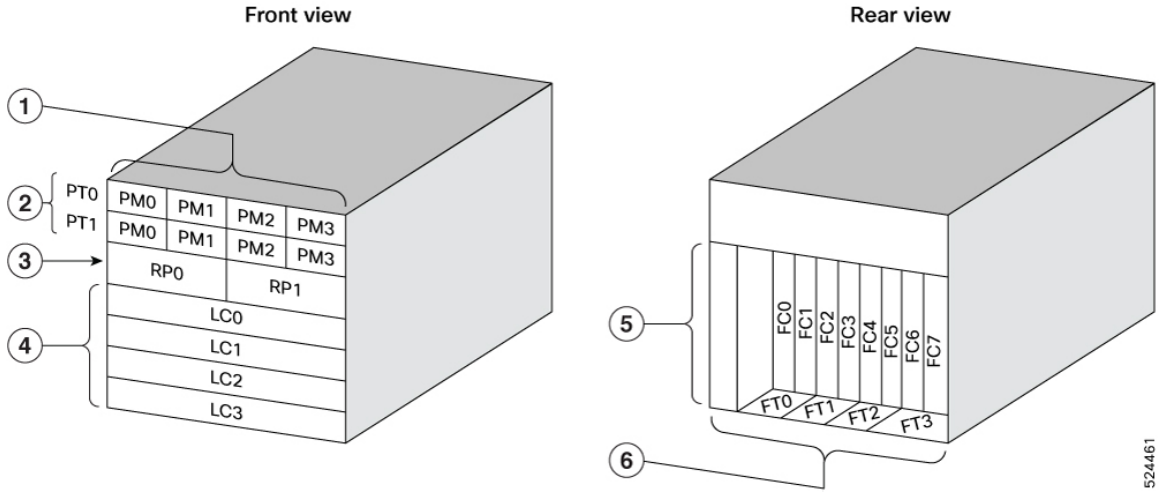Figure 19: Cisco 8804 Router Components and Slot Numbering for DC Power System




1	Power Modules	4	Line Cards
2	Power Trays	5	Fabric Cards
3	Route Processors	6	Fan Trays

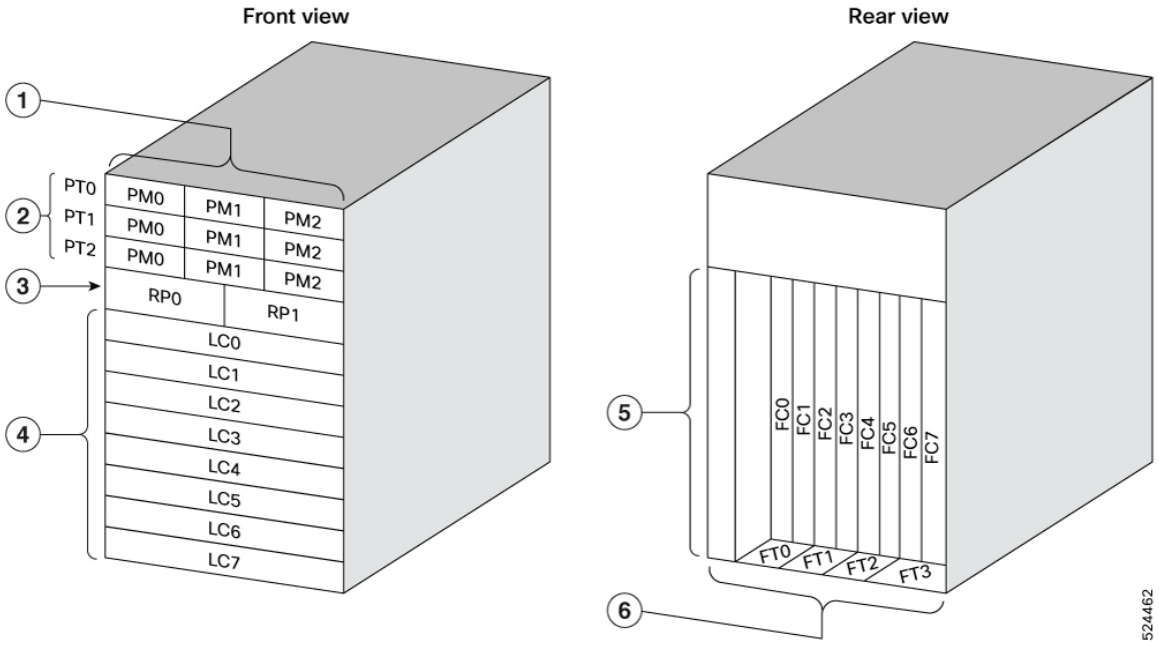Figure 20: Cisco 8808 Router Components and Slot Numbering for AC Power System




1	Power Modules	4	Line Cards
2	Power Trays	5	Fabric Cards
3	Route Processors	6	Fan Trays

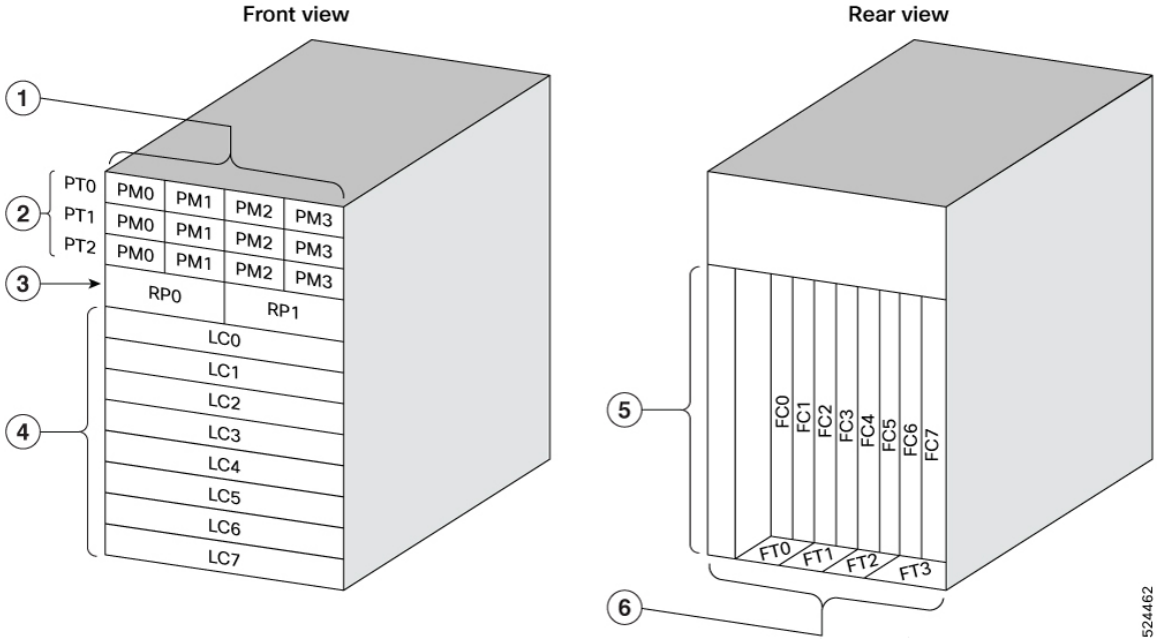Figure 21: Cisco 8808 Router Components and Slot Numbering for DC Power System




1	Power Modules	4	Line Cards
2	Power Trays	5	Fabric Cards
3	Route Processors	6	Fan Trays

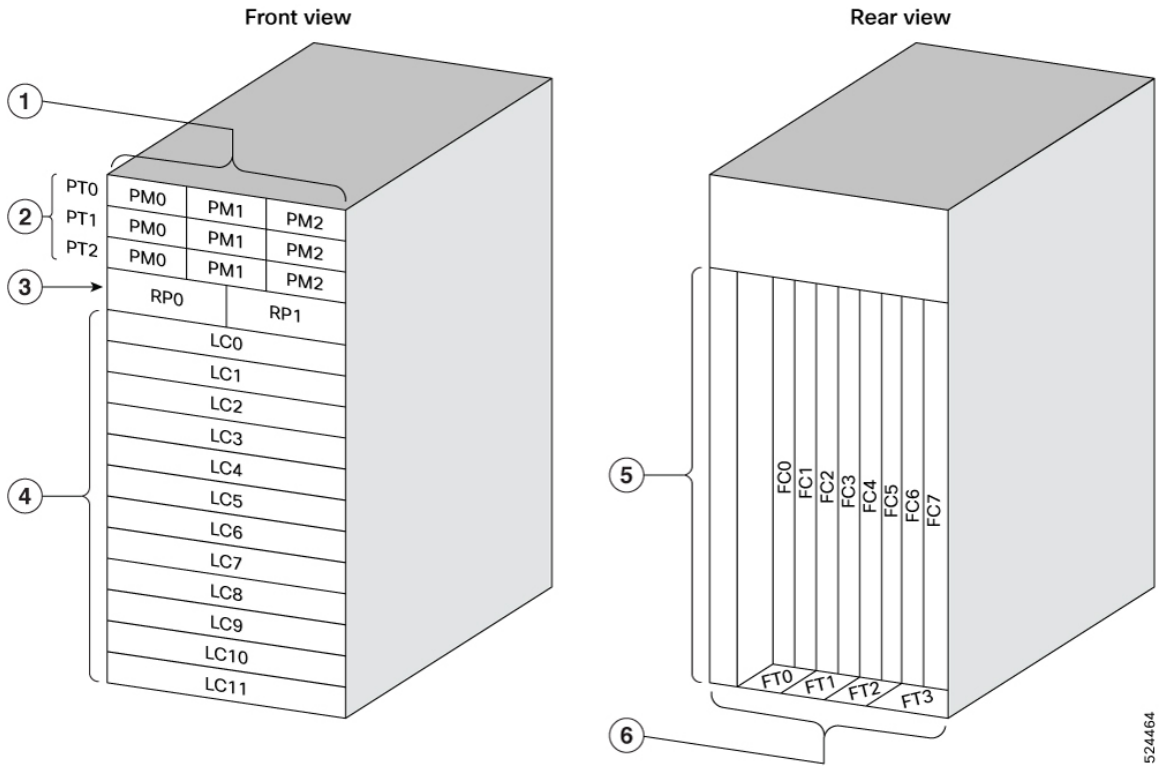Figure 22: Cisco 8812 Router Components and Slot Numbering for AC Power System




1	Power Modules	4	Line Cards
2	Power Trays	5	Fabric Cards
3	Route Processors	6	Fan Trays

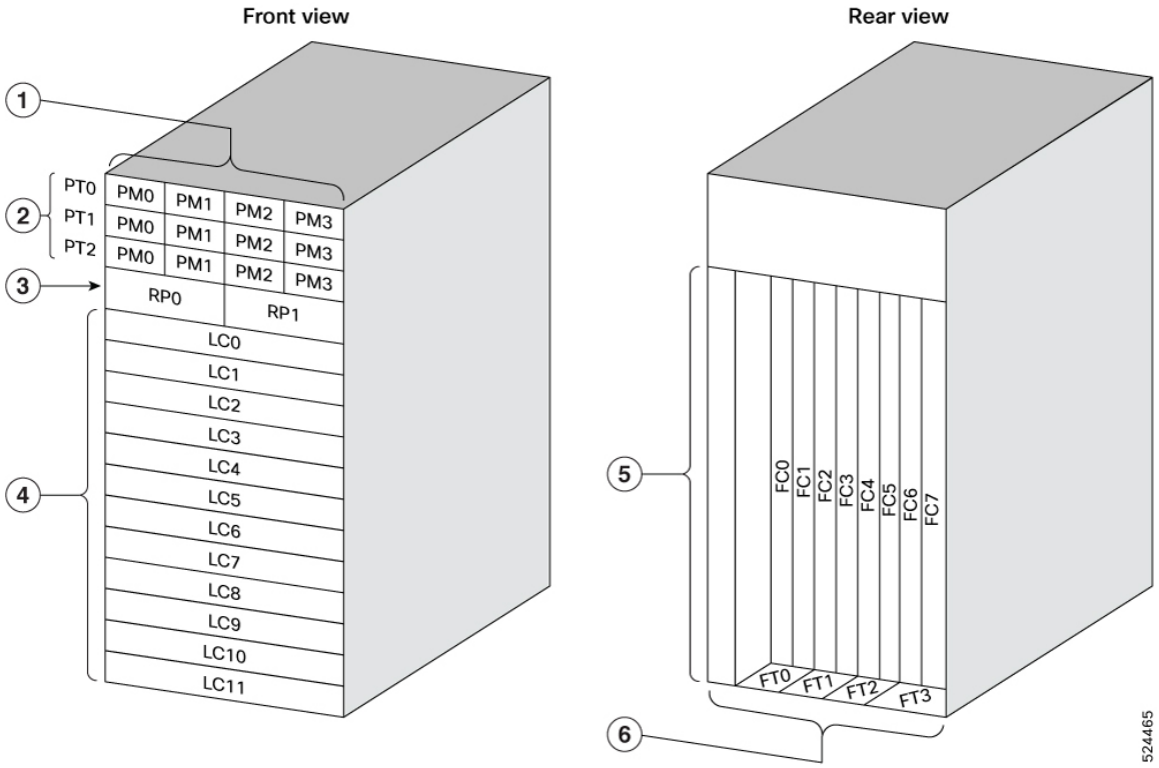Figure 23: Cisco 8812 Router Components and Slot Numbering for DC Power System




1	Power Modules	4	Line Cards
2	Power Trays	5	Fabric Cards
3	Route Processors	6	Fan Trays

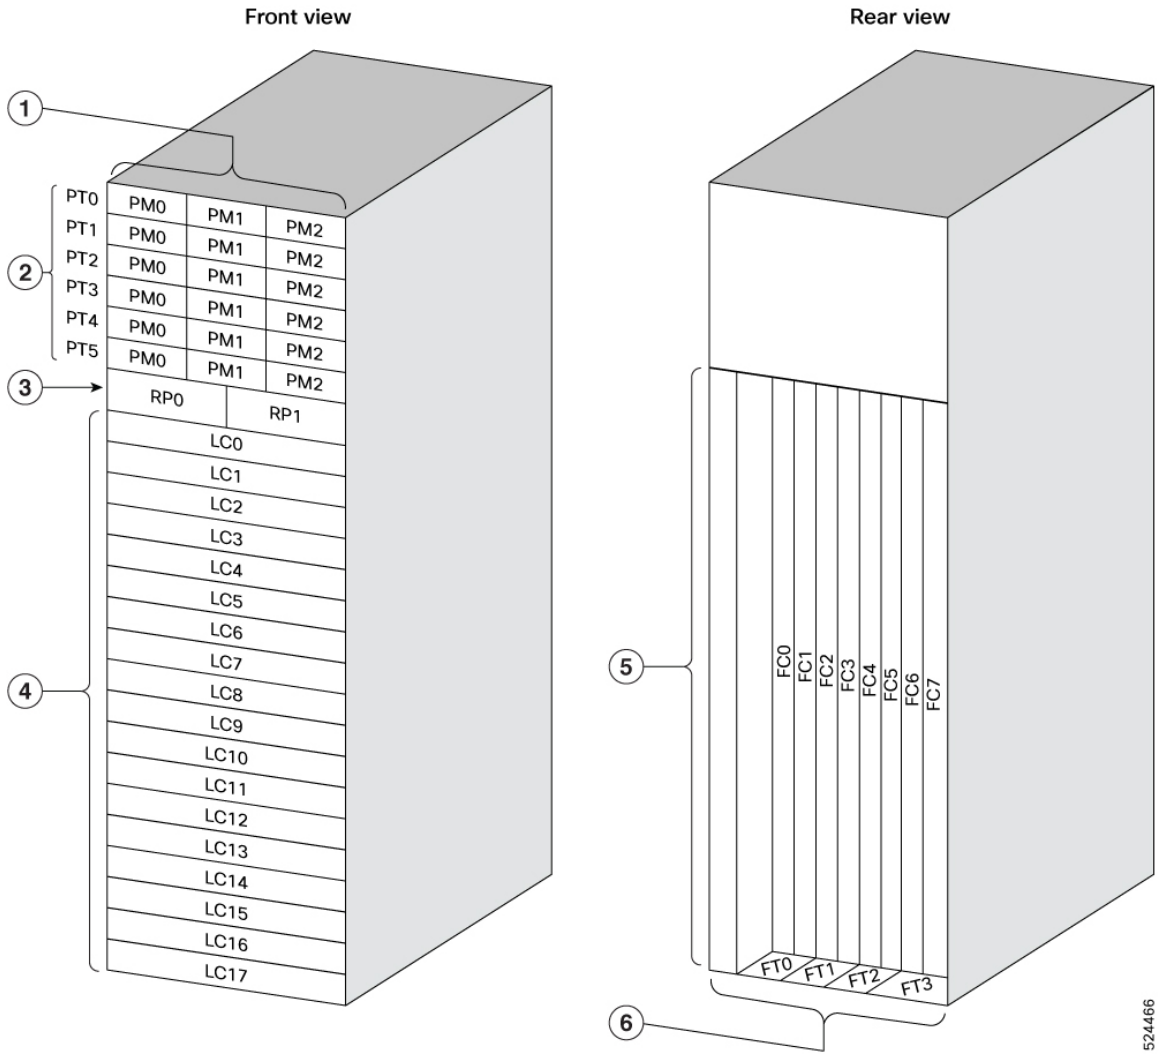Figure 24: Cisco 8818 Router Components and Slot Numbering for AC Power System



1	Power Modules	4	Line Cards
2	Power Trays	5	Fabric Cards
3	Route Processors	6	Fan Trays

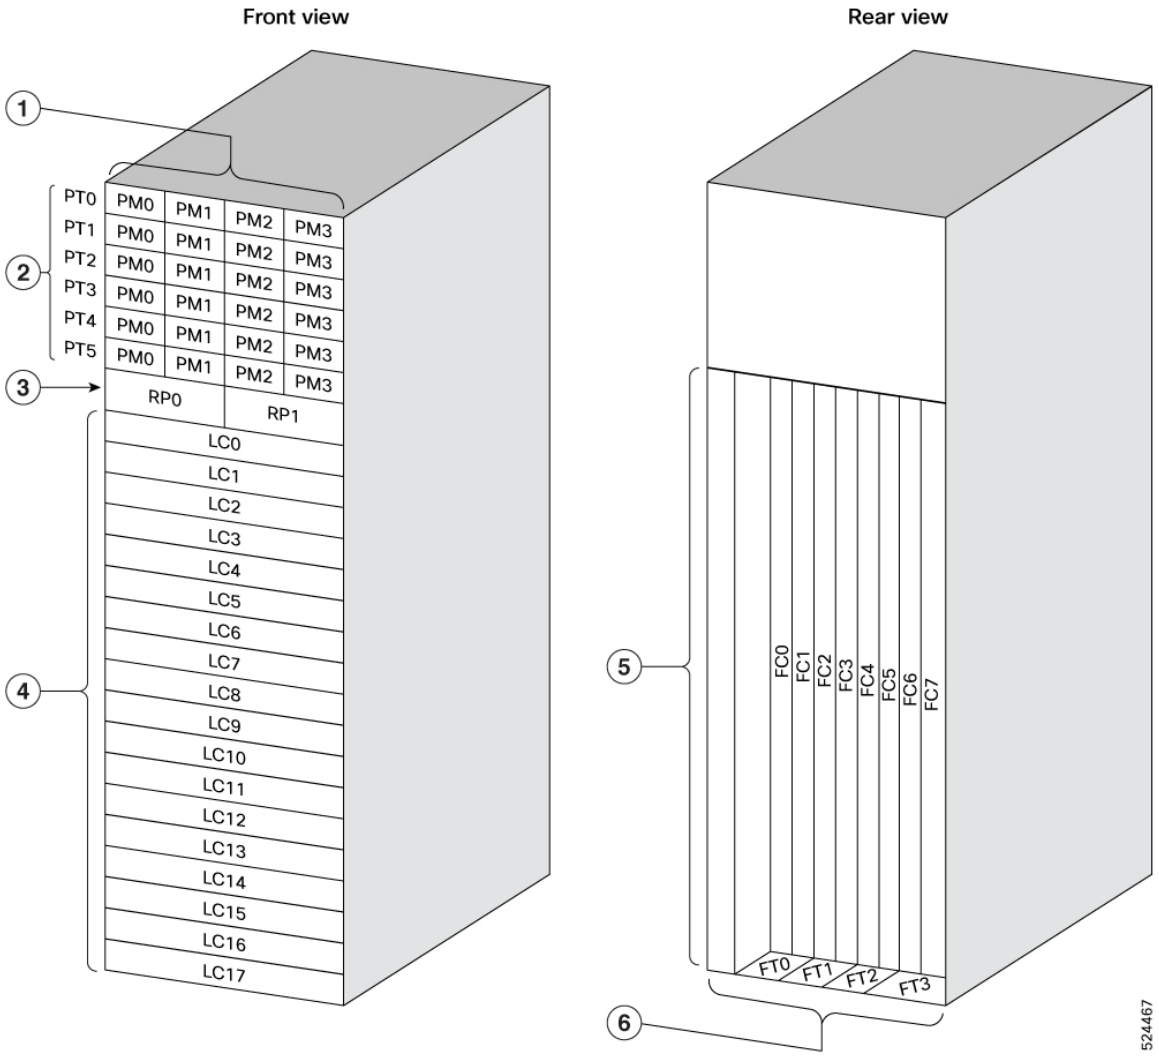Figure 25: Cisco 8818 Router Components and Slot Numbering for DC Power System



1	Power Modules	4	Line Cards
2	Power Trays	5	Fabric Cards
3	Route Processors	6	Fan Trays

(Only Cisco 8818) Install the Pull bars on the Chassis

This procedure outlines the steps for installing the pull-bars on the 8818 chassis. The pull-bars serve as an aid for moving the chassis to the lifting device or closer to the rack where the chassis is installed.

Caution Do not use these pull-bars to lift the chassis. Follow the orientation specified on the pull-bars to identify the correct right and left orientation.

Before you begin

- The chassis must be unpacked.
- Remove the pre-installed modules, including blanks and fan trays, and place them in a secure location to prevent damage to their connectors. Make sure the chassis is empty.
- Keep the chassis on the pallet and leave the shipping brackets attached until the pull-bars are installed on the chassis.

Required tools and equipment:

- Front and rear pull-bar kits

Note The pull-bar kits are shipped with the chassis.

- Phillips screwdriver with a torque capability (customer supplied)

Procedure


Step 1 Attach the front pull-bar to the front of the chassis at a position that is shown in the image.

Note
If the chassis has pre-installed blanks, then remove the required blanks to install the front pull-bar.

Examine the orientation of the front pull-bar and ensure that the right and left sides of the pull-bar are positioned correctly.

Use the screws (#6-32 x 0.375-in UNC captive screws) present in the plastic bag attached to the front pull-bar. Tighten three screws on each side of the pull-bar with enough torque to ensure the pull-bar is firmly attached to the chassis.

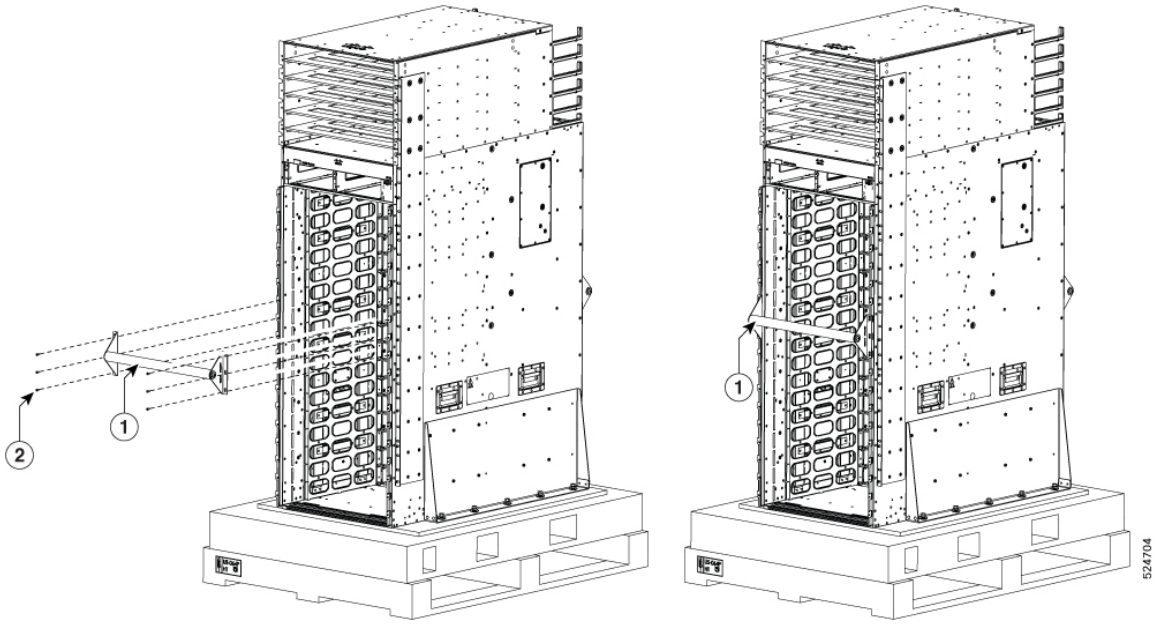Figure 26: Pull-Bar for 8818 Chassis- Front View



1	Pull-bar	2	Screws

Step 2 Attach the rear pull-bar to the rear of the chassis at a position that is shown in the image.

Note
If the chassis has pre-installed fan trays, then remove the fan trays to install the front pull-bar.

Use the screws present in the plastic bag attached to the rear pull-bar:


- Two screws (#10-32 x .375-in UNC captive screws) on the left side.
- Two screws (#10-32 x .25-in UNC captive screws) on the right side.

Tighten two screws on each side of the pull-bar with enough torque to ensure the pull-bar is firmly attached to the chassis.

Note
If the chassis has pre-installed fan trays, then remove the fan trays to install the rear pull-bar.

Examine the orientation of the rear pull-bar and ensure that the right and left sides of the pull-bar are positioned correctly.

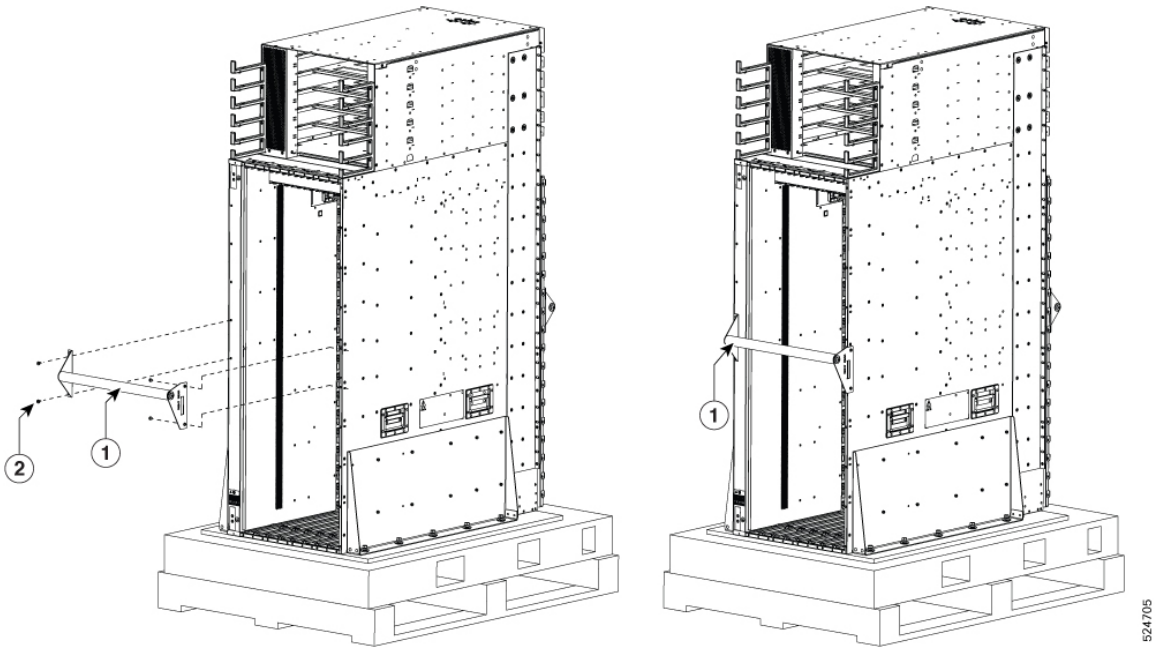
Figure 27: Pull-Bar for 8818 Chassis- Rear View



1	Pull-bar	2	Screws

Step 3 Remove the shipping brackets from either sides of the chassis after the pull-bars are attached to the front and rear of the chassis.

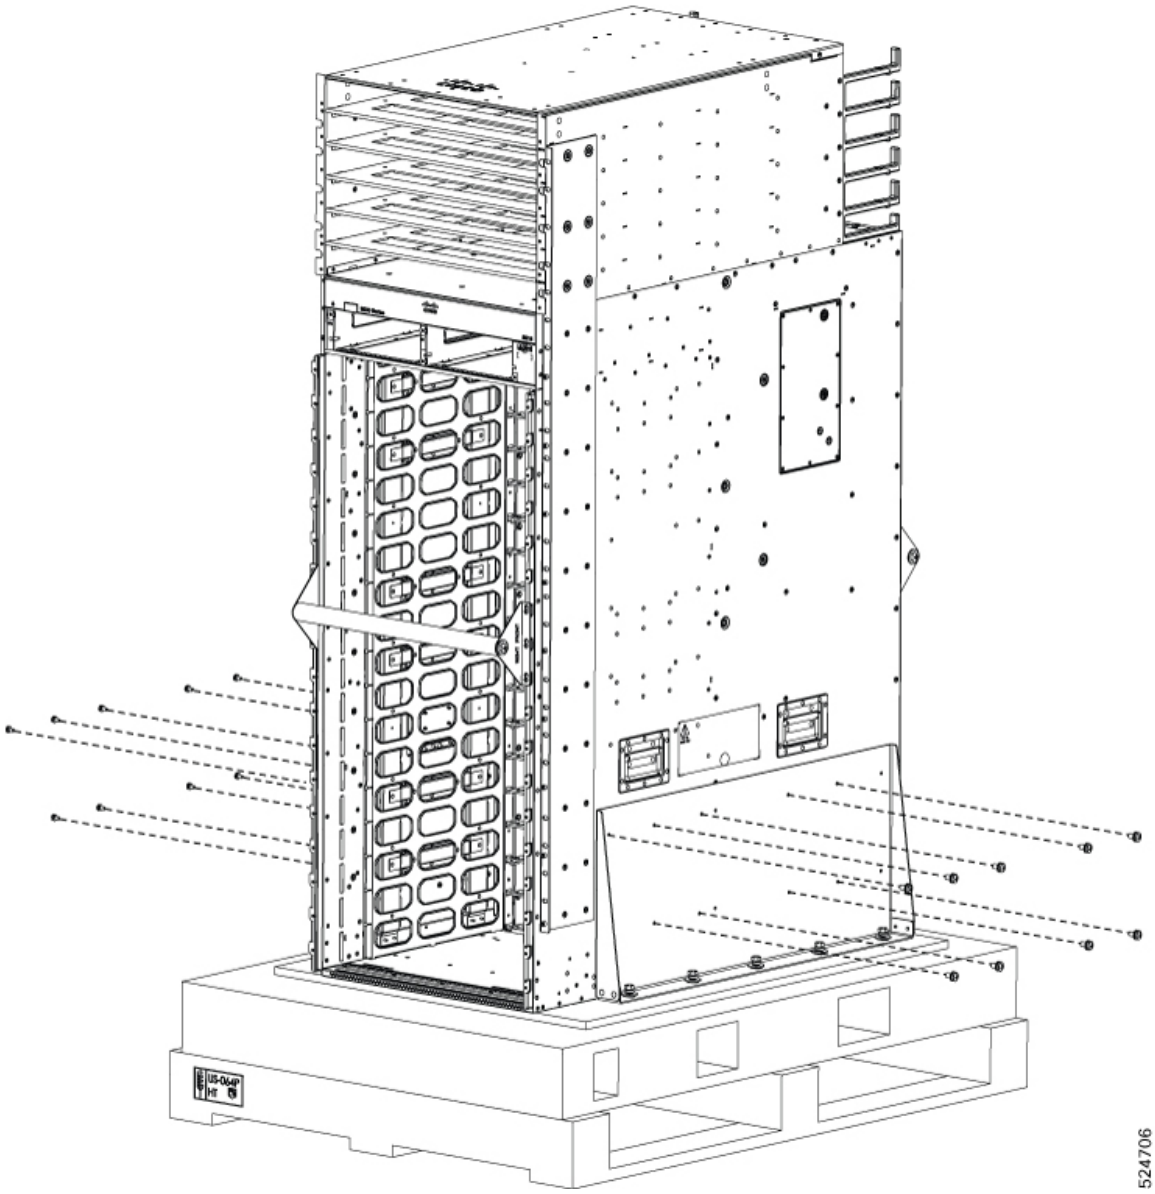Figure 28: Remove Shipping Brackets from 8818 Chassis



Install Bottom-Support Rails

The bottom-support rails support the weight of the router chassis in the rack. To maximize the stability of the rack, you must attach these rails at the lowest possible rack unit (RU).

Procedure

Step 1 Position the vertical rack rails at 32" depth to match with the length of the bottom-support rails. Check spacing considerations.

- Maintain at least 21 RU (36.75 inches [93.34 cm]) for 8812 chassis and 16 RU (28 inches [71.12 cm]) for 8808 chassis of vertical space above support rails.
- Select the appropriate rail kit based on your rack type and chassis model:
  - L-type Racks: Use the 8800-ADJ-RAIL for Cisco 8804, 8808, and 8812 routers, or the 8818-ADJ-RAIL for the Cisco 8818 router.
  - U-type Racks: Use the 8800-RAIL-KIT. This kit is required for racks that do not accommodate a 32-inch rail depth.

Step 2 Attach the bottom-support rail to the rack using a Phillips torque screwdriver on M6 x 19 mm or 12–24 x 3/4 inch screws for each end of the rail (as shown in the following figure) and tighten each screw to 40 in-lbs (4.5 N-m) of torque.

Figure 29: Attach Bottom-Support Rails to a Rack - 8800-INSTKIT - Front View

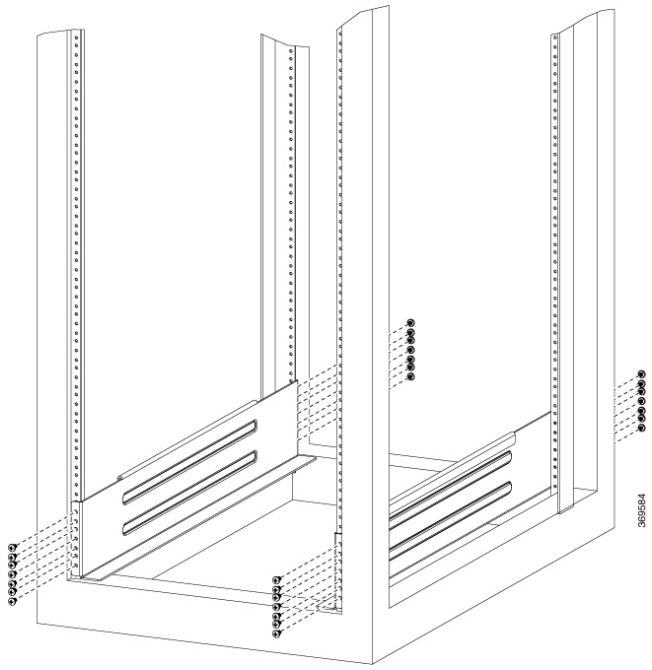


Figure 30: Attach Bottom-Support Rails to a Rack - 8800-ADJ-RAIL (L-Type Rack) - Front View

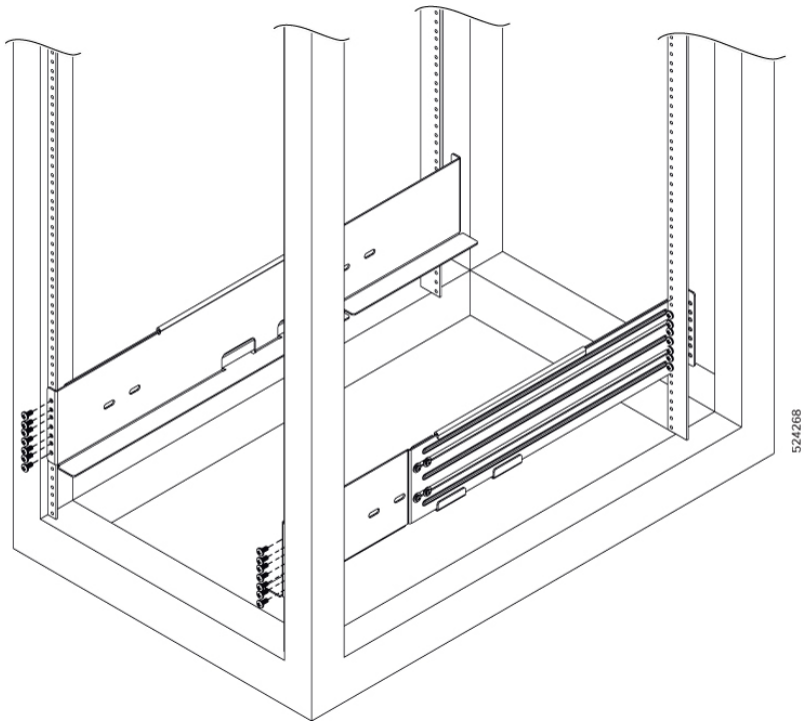


Figure 31: Attach Bottom-Support Rails to a Rack - 8818-ADJ-RAIL (L-Type Rack) - Front View

Figure 32: Attach Bottom-Support Rails to a Rack - 8800-ADJ-RAIL (L-Type Rack) - Rear View

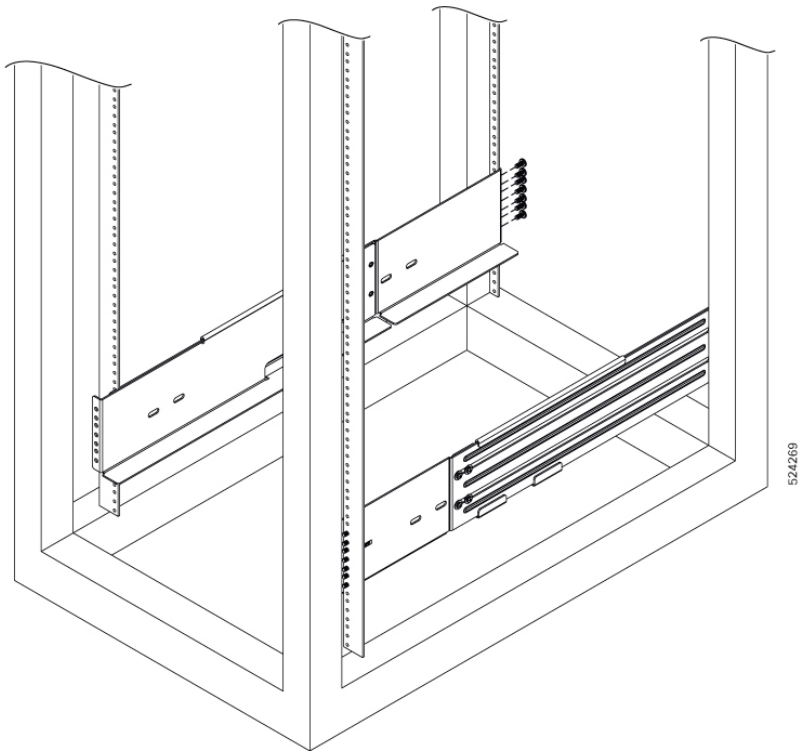


Figure 33: Attach Bottom-Support Rails to a Rack - 8818-ADJ-RAIL (L-Type Rack) - Rear View

Figure 34: Attach Bottom-Support Rails to a Rack - 8800-RAIL-KIT (U-Type Rack)


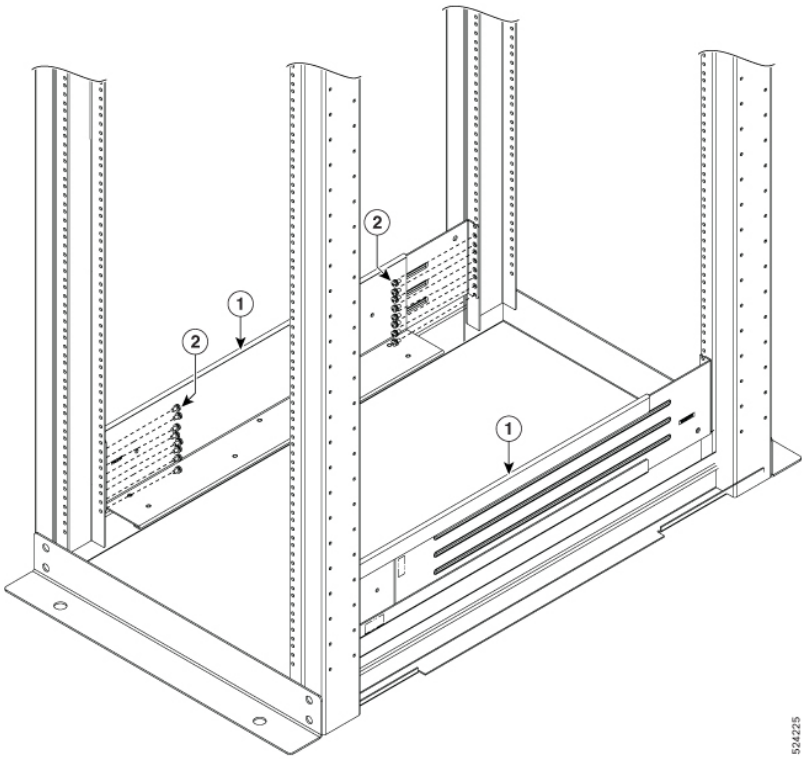


Figure 35: Attach Bottom-Support Rails to an EIA-320 Rack (Front View) - For 8818 Chassis Installation with Pull-Bars

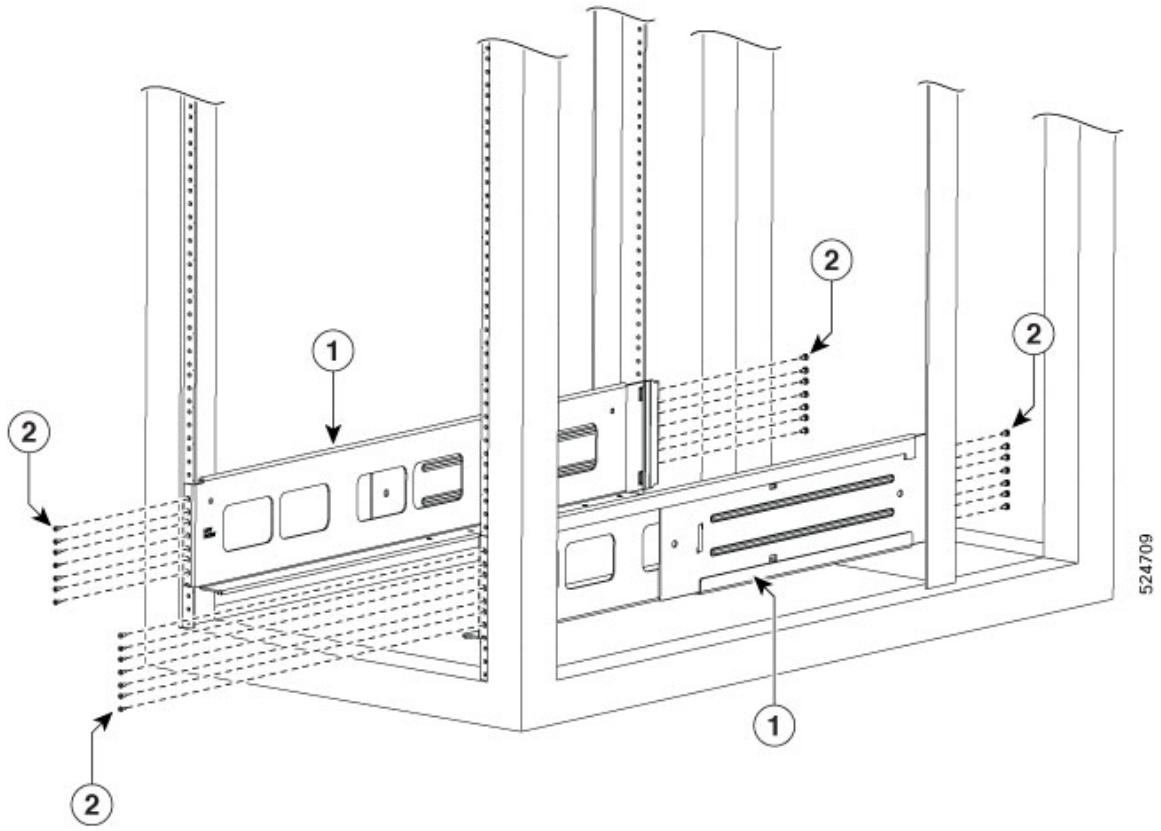

1	Bottom support rails
2	M6 x 19 mm or 12–24 x 3/4 inch screws

Note
Use at least three screws on each end of each bottom-support rail.

Step 3 Repeat Steps 1 and 2 to attach the other bottom-support rail to the rack.

Note
Make sure that the two bottom-support rails are level with one another. If they are not level, adjust the higher rail down to the level of the lower rail.

What to do next

Mount the chassis into the rack.

Transfer Chassis to a Mechanical Lifting Device

Procedure

Step 1 Place the mechanical lifting device in front of the chassis on the pallet (or on Line Card side) as shown.

Figure 36: Align the Lifting Device in Front of the Cisco 8818 Chassis with Pull-Bars Installed



Figure 37: Align the Lifting Device in Front of the Chassis on the Pallet - Other Chassis




Step 2 Prepare to use the mechanical lifting device by placing a piece of cardboard on the surface of the lift (to prevent scratching).

Step 3 Move the chassis carefully from the pallet onto the lifting device:


- (Cisco 8818) With at least two or three people move the chassis carefully from the pallet using the pull-bars attached, onto the lifting device as shown.

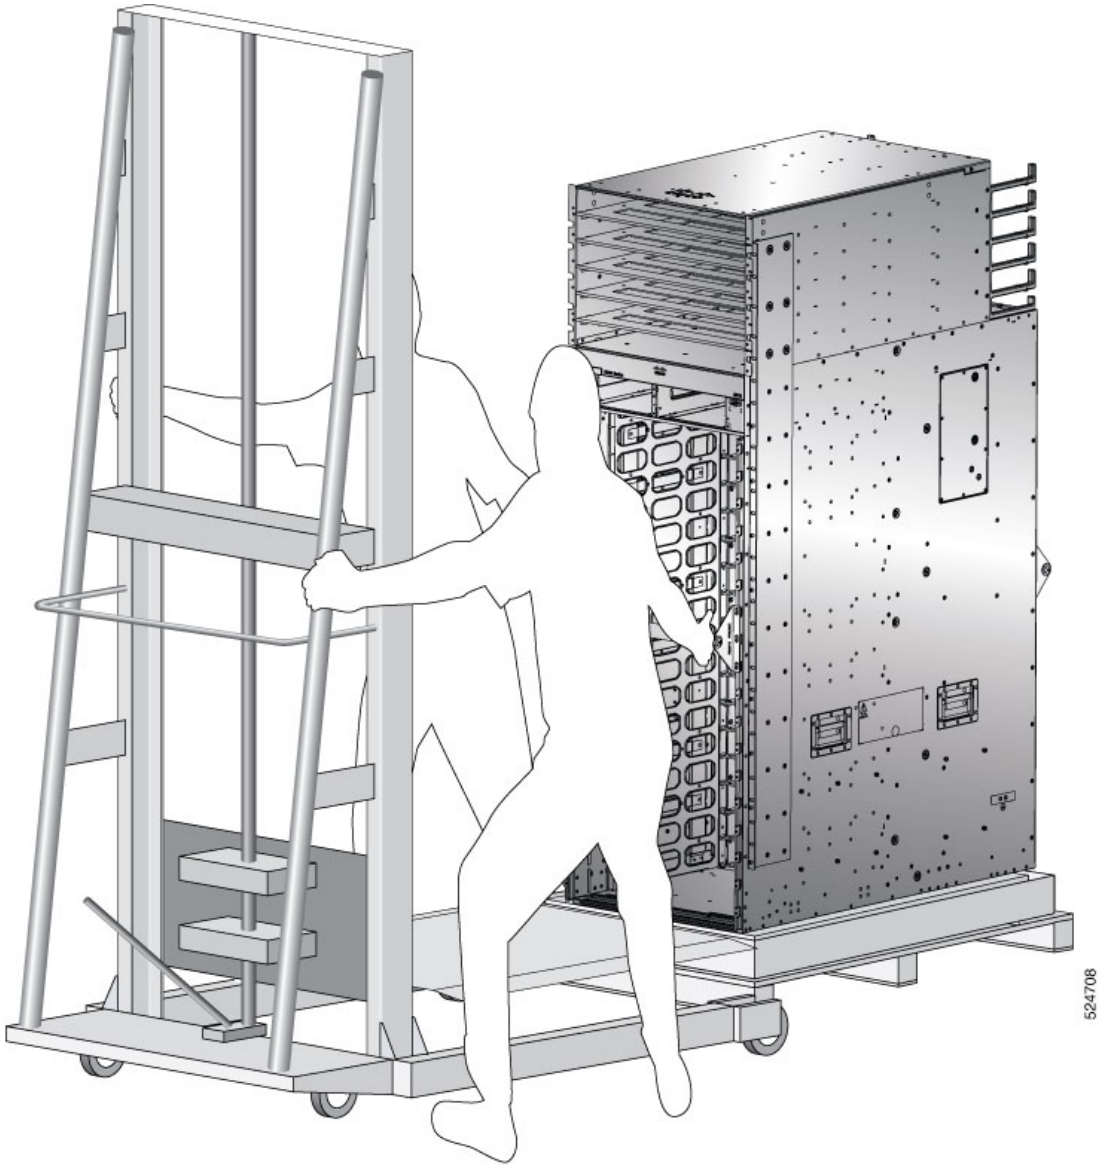Figure 38: Move the Cisco 8818 Chassis Using the Pull-Bars on to the Lifting Device



- (Other Chassis) With at least two or three people move the chassis carefully from the pallet onto the lifting device as shown.

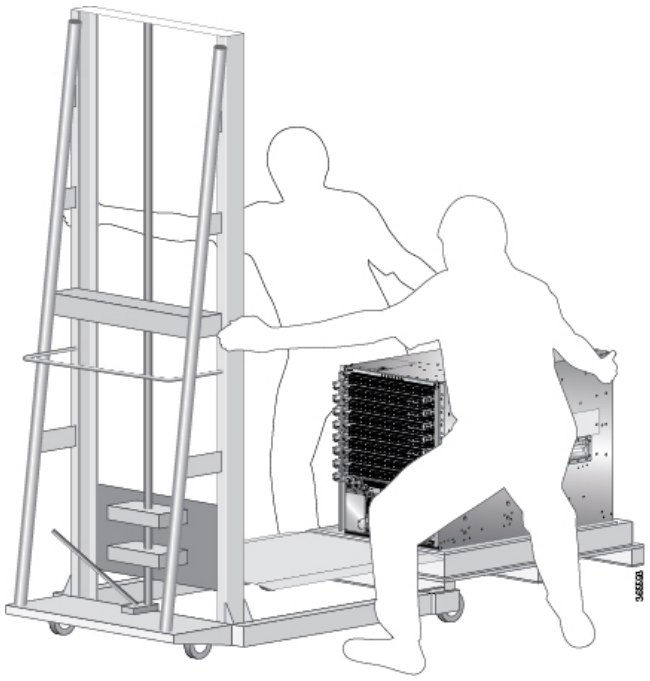Figure 39: Move the Chassis on to the Lifting Device



What to do next

After moving the chassis to the room or area where you will install it, begin the procedure to mount the chassis into the rack.

Mount Chassis Into the Rack

To accommodate equipment racks with different mounting hole patterns, the chassis mounting brackets have groups of screw holes on either side. The mounting holes in the chassis mounting brackets are spaced so that one mounting hole in each hole group aligns with a corresponding hole in the equipment rack. By using the corresponding mounting hole (in the same hole group) on the opposite side of the chassis, you can level the chassis in the rack.

Note

- To lift the chassis, use a mechanical lift. Do not use the handles on the side of the chassis. Use the side handles for only repositioning the chassis after it is already on the mechanical lift or in the rack or cabinet. In Cisco 8818 chassis with pull-bars installed, use the pull-bars to move the chassis.
- Do not remove the blanks during rack installation. However, in case of Cisco 8818 chassis, the pre-installed modules and blanks are removed before installing the pull-bars.

Table 17: Rear Rack Mount Kits

Chassis	Rear Rack Mount Kit for Racks with Vertical Rail Depth of 32 inches	Rear Rack Mount Kit for Racks with Vertical Rail Depth of 32.56 to 32.87 inches
Cisco 8818	8818-RMBRKT	8818-RMBRKT-G1
Cisco 8812	8812-RMBRKT	-
Cisco 8808	8808-RMBRKT	8808-RMBRKT-G1
Cisco 8804	8804-RMBRKT	-

Before you begin



Note You should remove the power shelf to facilitate attaching chassis to the rack.


Procedure

Step 1 Using your mechanical lift, raise the chassis so that it is in level with or not more than 1/4 inch [0.635cm] above the rails.

Step 2 Push the chassis all the way onto the rack so that the vertical mounting brackets on the front of the chassis come in contact with the vertical mounting rails on the rack.

Step 3 Use screws provided with the rack to secure the chassis with the vertical mounting rails on the rack. Refer to "Screws Required to Secure the Cisco 8800 Chassis to the Rack" for details on the number of screws required.

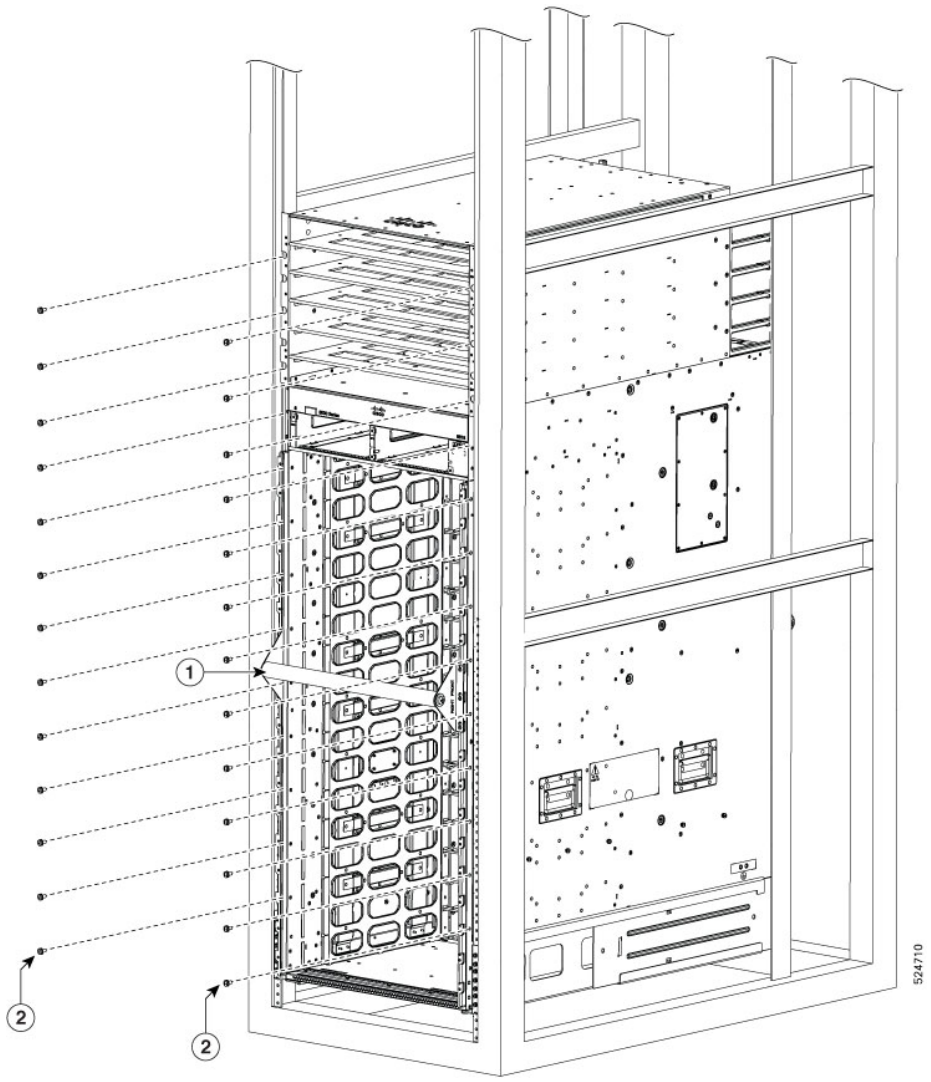Figure 40: Attach 8818 Chassis with Pull-Bar to Rack - Front



Note
Remove the pull-bars after installing the 8818 chassis to the rack.

1	Pull-bar	3	Screws

Figure 41: Attach 8812 Chassis to Rack - Front

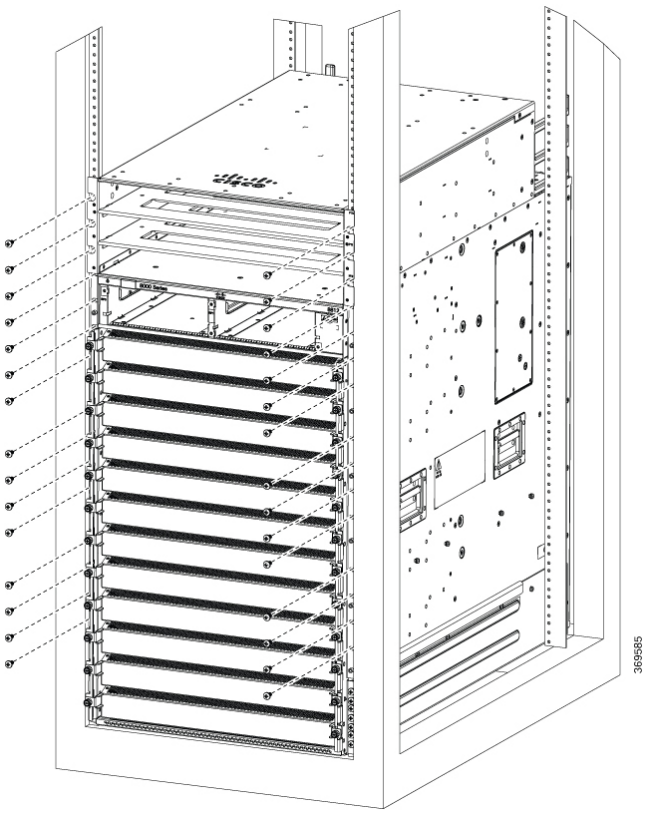


Figure 42: Attach 8808 Chassis to Rack - Front

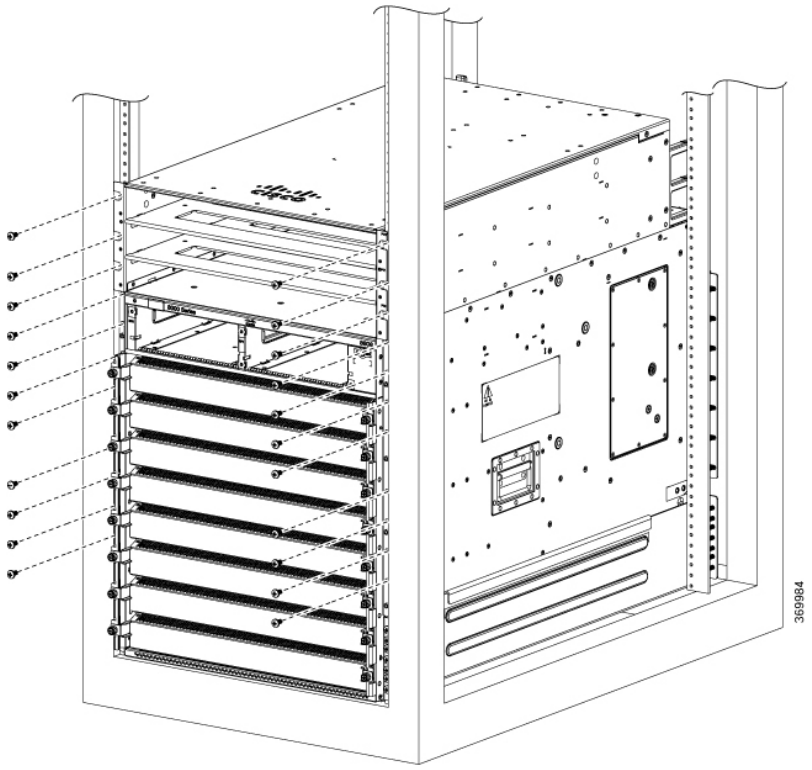


Figure 43: Attach 8804 Chassis to Rack - Front


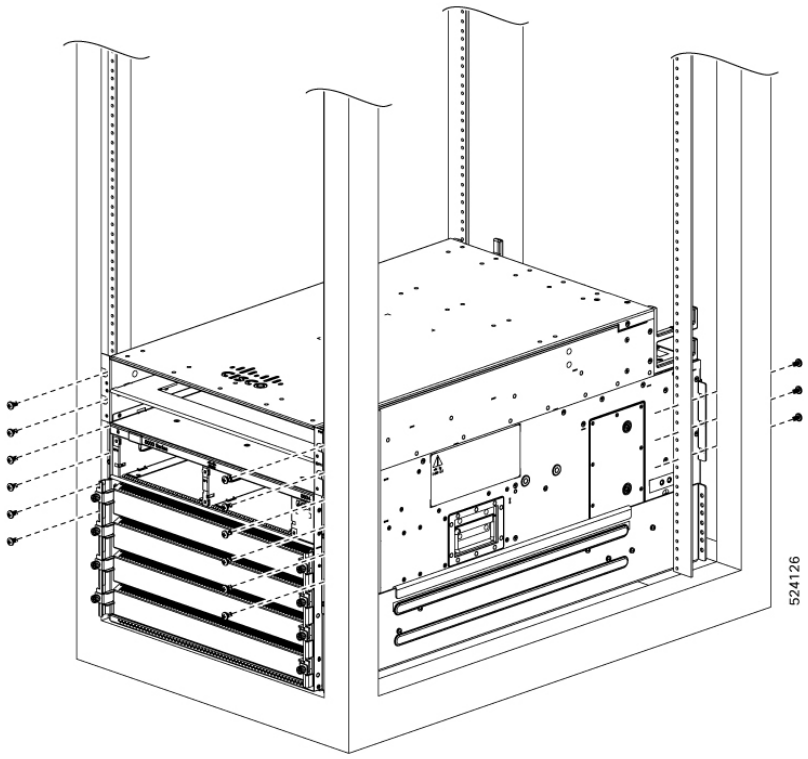


Table 18: Screws Required to Secure the Cisco 8800 Chassis to the Rack

Chassis	Screws for Front	Screws for Rear (Racks with Vertical Rail Depth of 32 inches)	Screws for Rear (Racks with Vertical Rail Depths of 32.56 to 32.87 inches)
Cisco 8818	46	17	14
Cisco 8812	30	12	-
Cisco 8808	22	14	8
Cisco 8804	12	10	-

Step 4 Use the screws provided with the rack to attach the chassis rear rails.

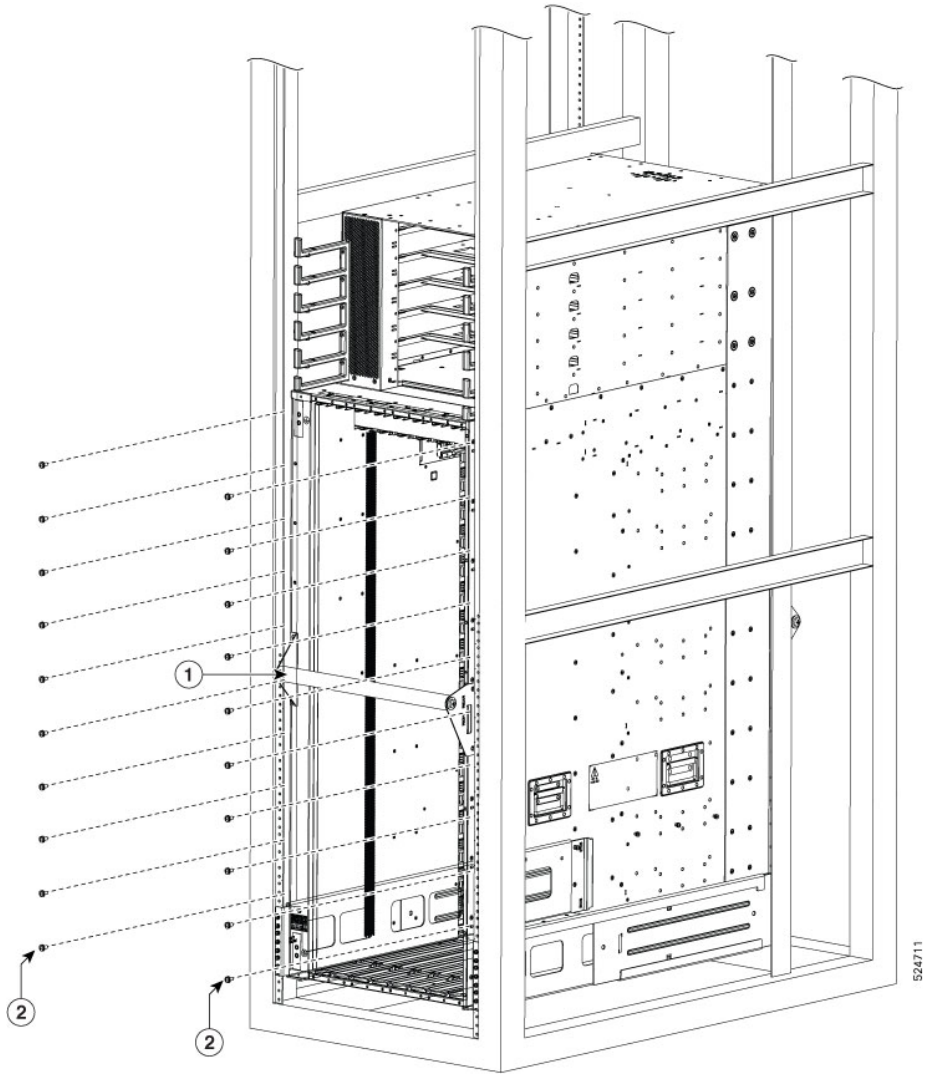
Figure 44: Attach 8818 Chassis with Pull-Bar to Rack - Rear



Note
Remove the pull-bars after installing the 8818 chassis to the rack.


1	Pull-bar	3	Screws

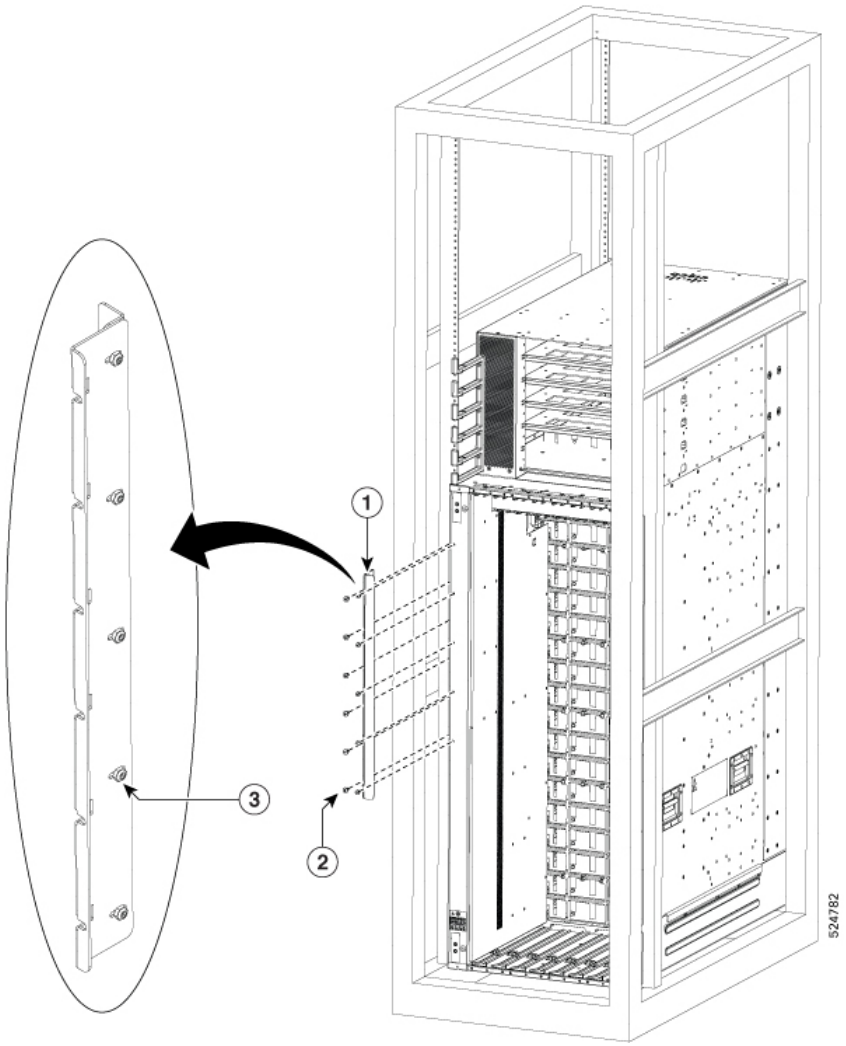Figure 45: Attach 8818 Chassis to Rack Using 8818-RMBRKT - Rear Left View




1	Rear left rack mounting bracket.	3	Adjust the brackets by loosening the nut and then tightening it again.
2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).		

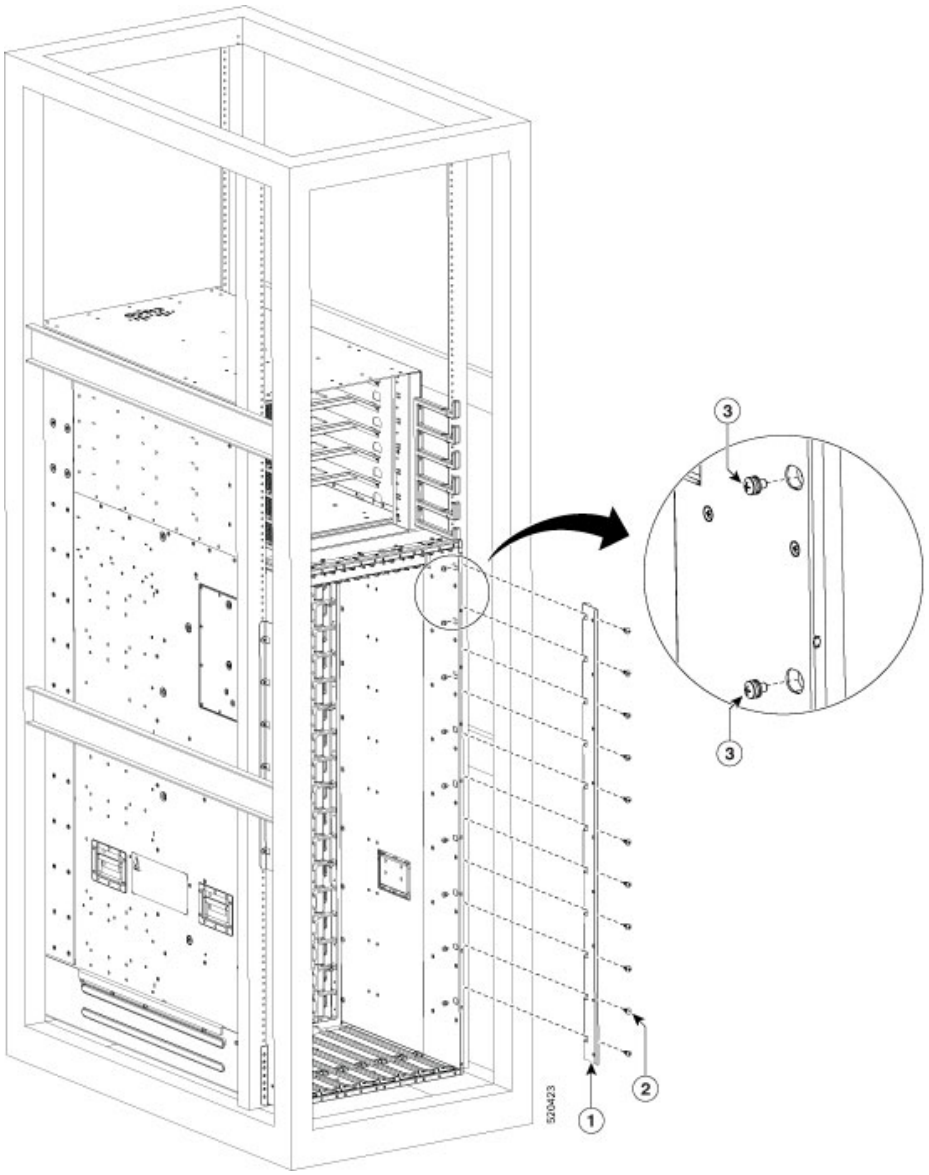Figure 46: Attach 8818 Chassis to Rack Using 8818-RMBRKT - Rear Right View




1	Rear right rack mounting bracket.	3	Install each screw from inside the chassis and tighten it to a torque of 26 in-lbs (2.93 N-m).
2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).		

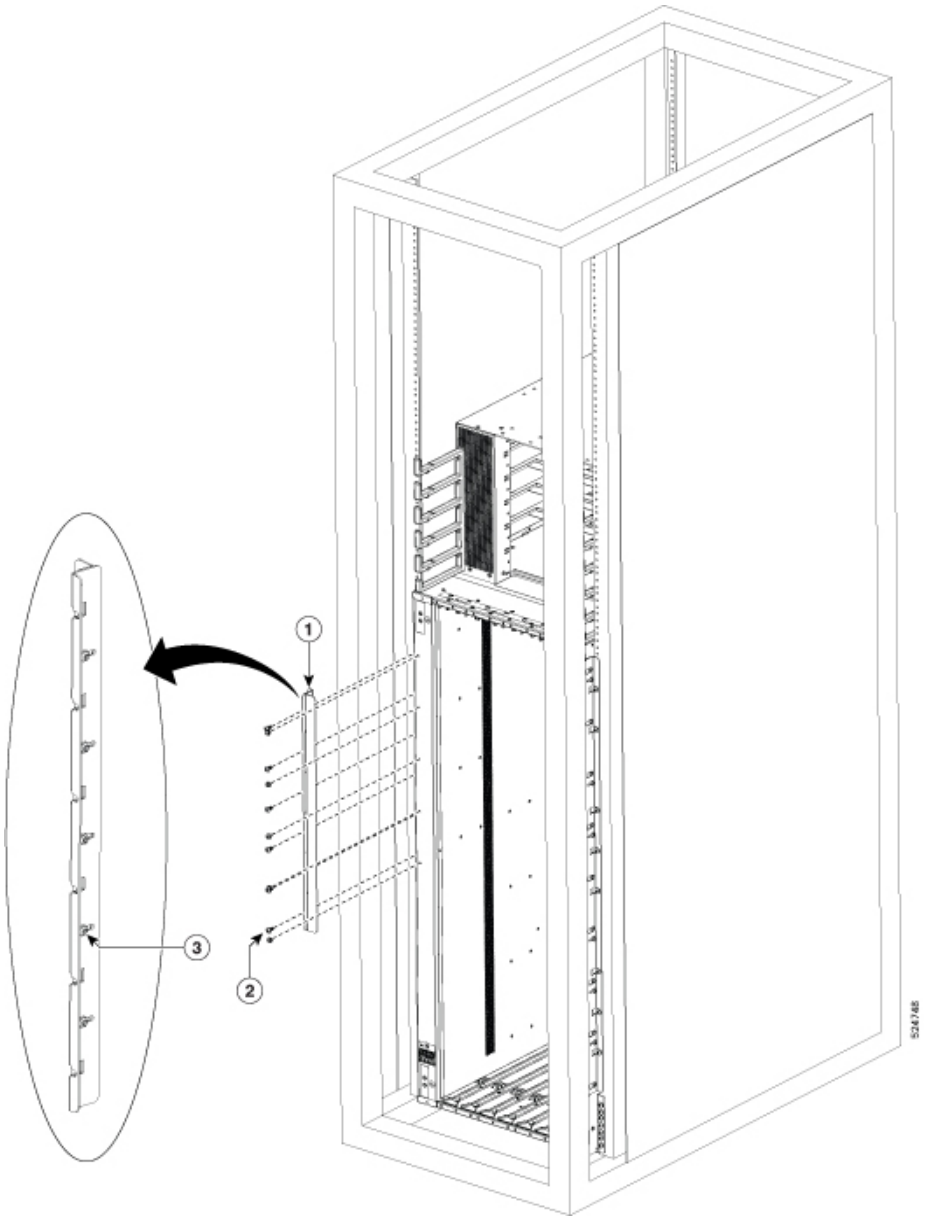Figure 47: Attach 8818 Chassis to Rack Using 8818-RMBRKT-G1 - Rear Left View




1	Rear left rack mounting bracket.	3	Adjust the brackets by loosening the nut and then tightening it again.
2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).		

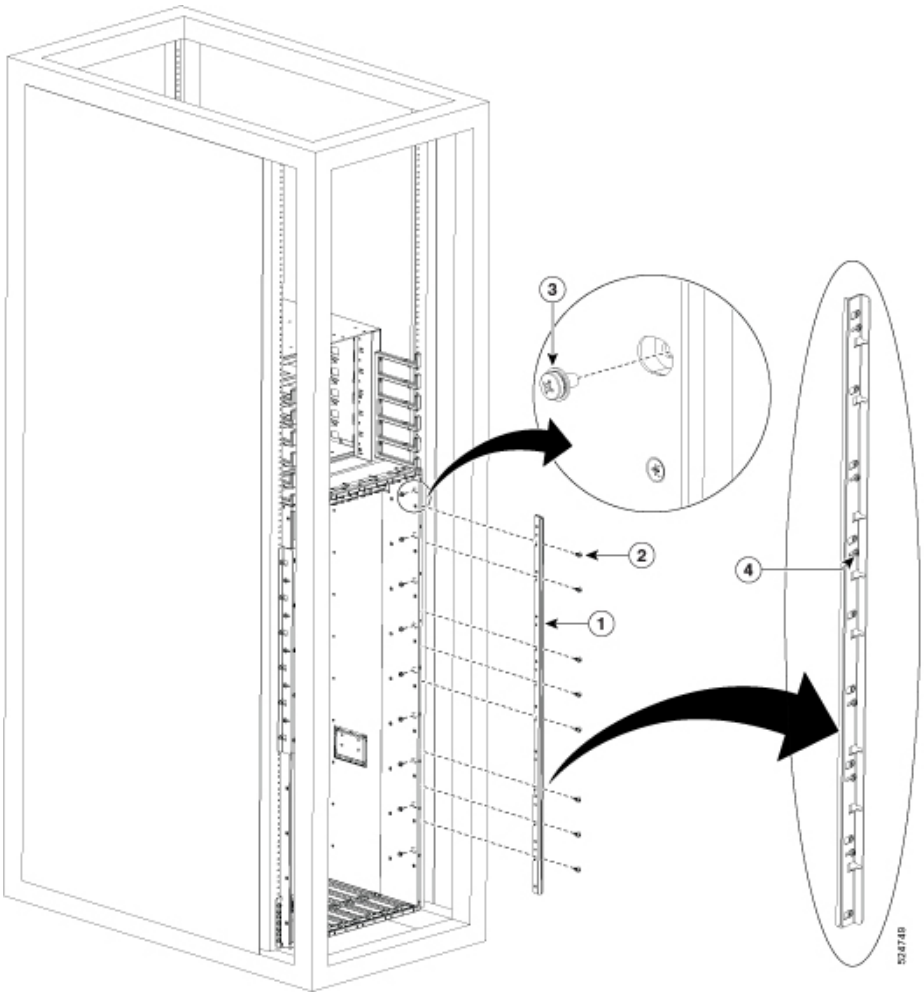Figure 48: Attach 8818 Chassis to Rack Using 8818-RMBRKT-G1 - Rear Right View




1	Rear right rack mounting bracket.	3	Install each screw from inside the chassis and tighten it to a torque of 26 in-lbs (2.93 N-m).
2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).	4	Adjust the brackets by loosening the nut and then tightening it again.

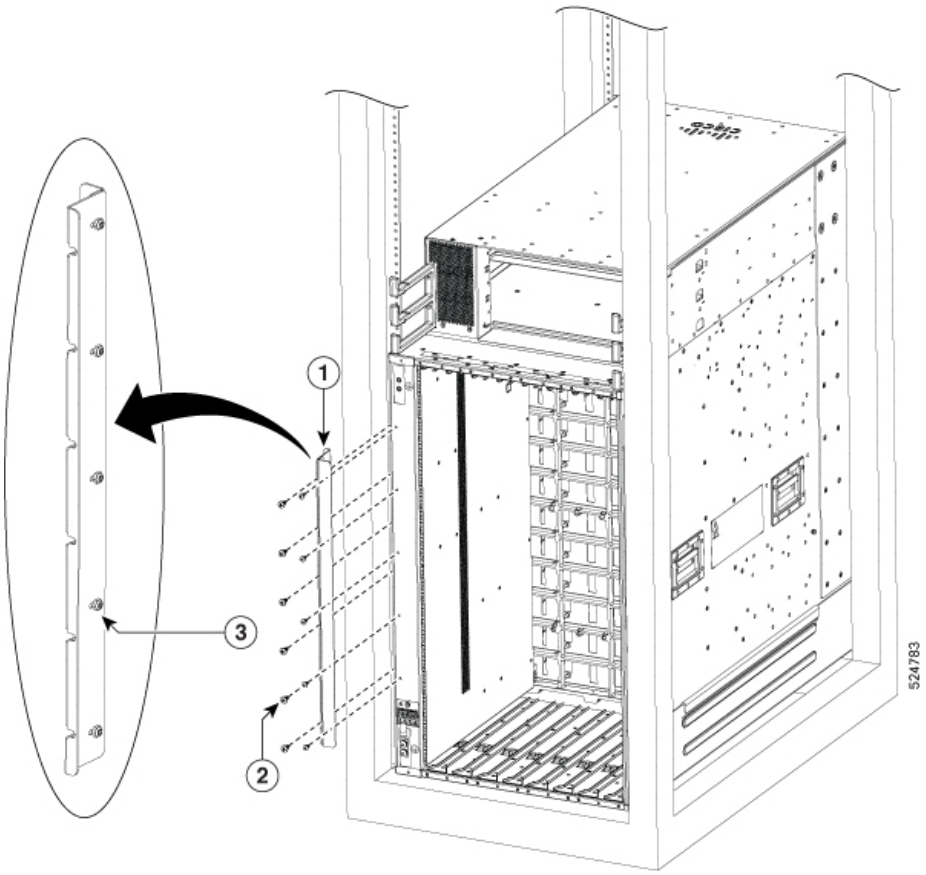Figure 49: Attach 8812 Chassis to Rack Using 8812-RMBRKT- Rear Left View




1	Rear left rack mounting bracket.	3	Adjust the brackets by loosening the nut and then tightening it again.
2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).		

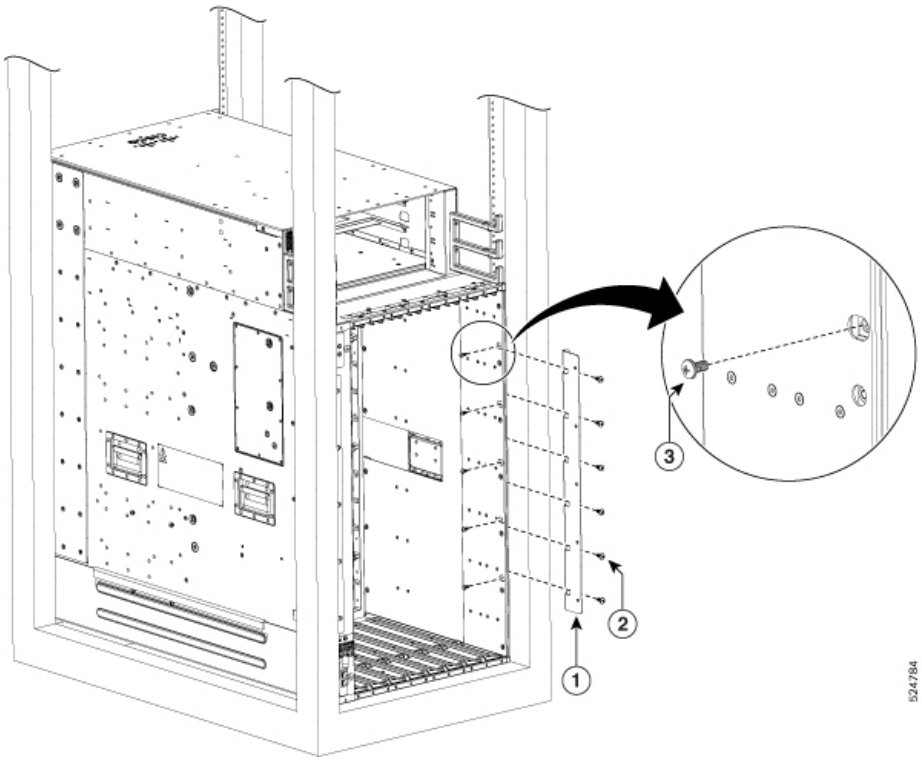Figure 50: Attach 8812 Chassis to Rack Using 8812-RMBRKT- Rear Right View




1	Rear right rack mounting bracket.	3	Install screws from inside the chassis and tighten each screw to 26 in-lbs (2.93 N-m) of torque.
2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).		

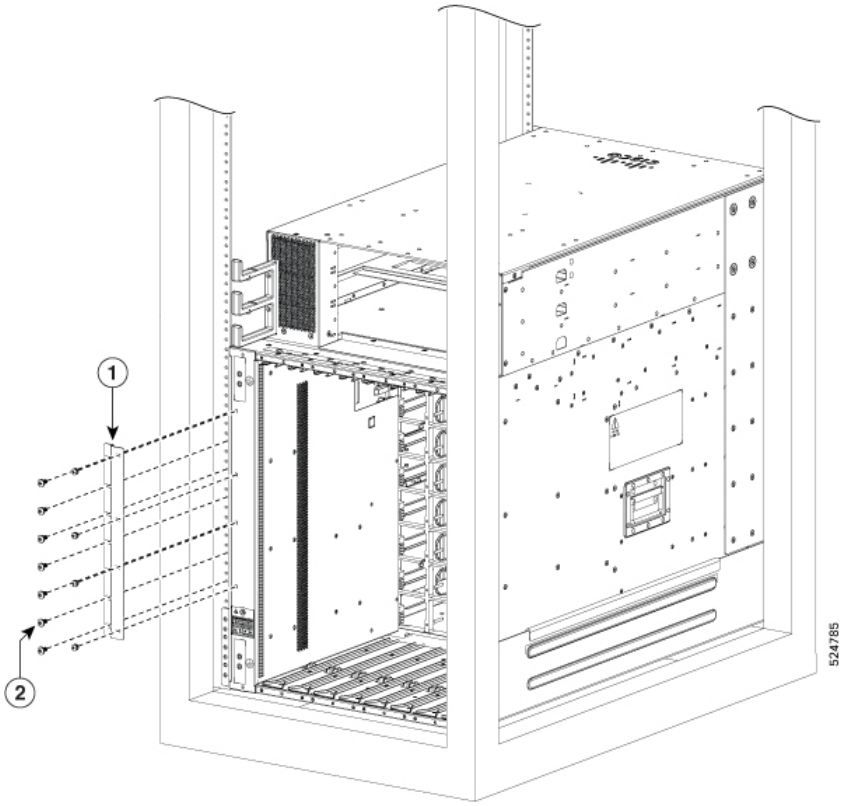Figure 51: Attach 8808 Chassis to Rack Using 8808-RMBRKT- Rear Left View




1	Rear left rack mounting bracket.	2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).

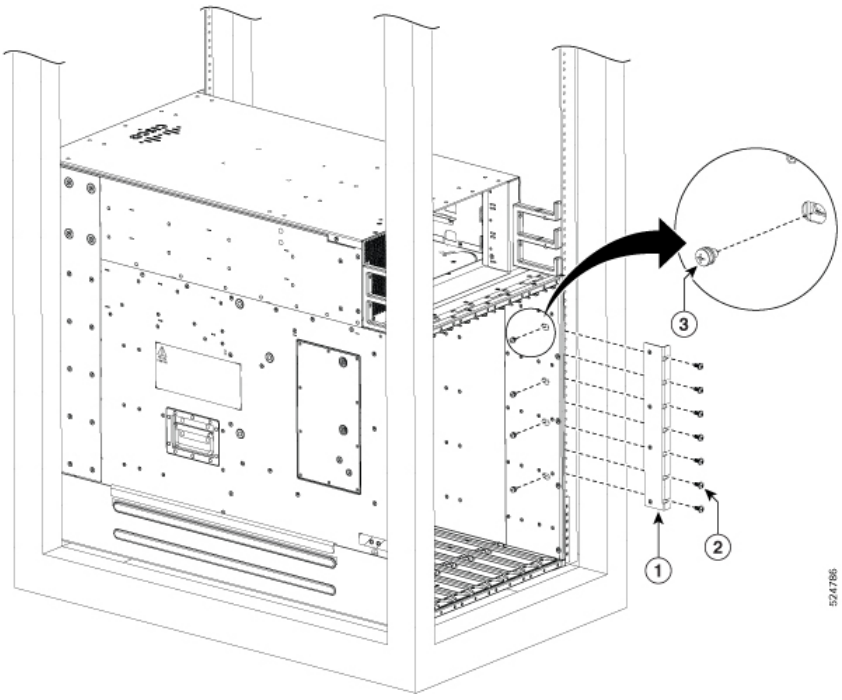Figure 52: Attach 8808 Chassis to Rack Using 8808-RMBRKT- Rear Right View




1	Rear right rack mounting bracket.	3	Install each screw from inside the chassis and tighten it to a torque of 26 in-lbs (2.93 N-m).
2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).		

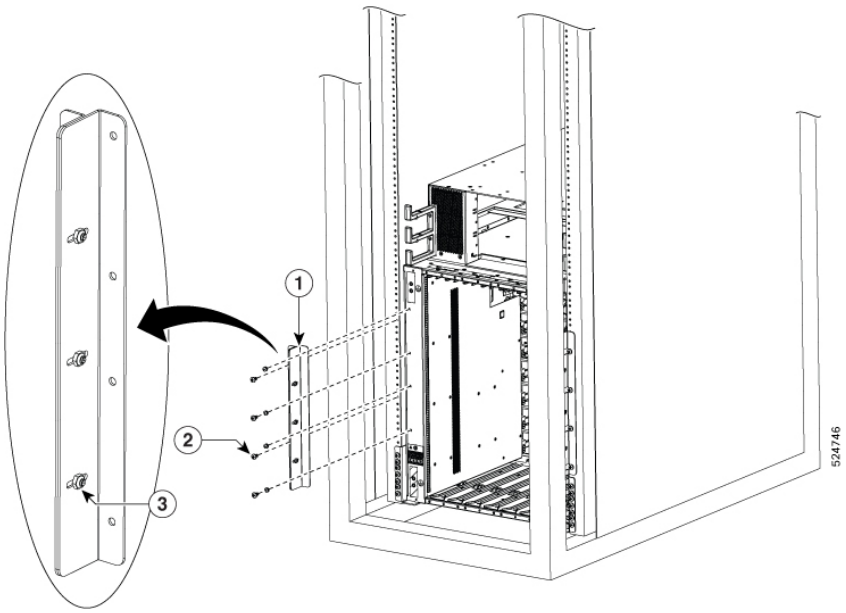Figure 53: Attach 8808 Chassis to Rack Using 8808-RMBRKT-G1 - Rear Left View




1	Rear left rack mounting bracket.	3	Adjust the brackets by loosening the nut and then tightening it again.
2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).		

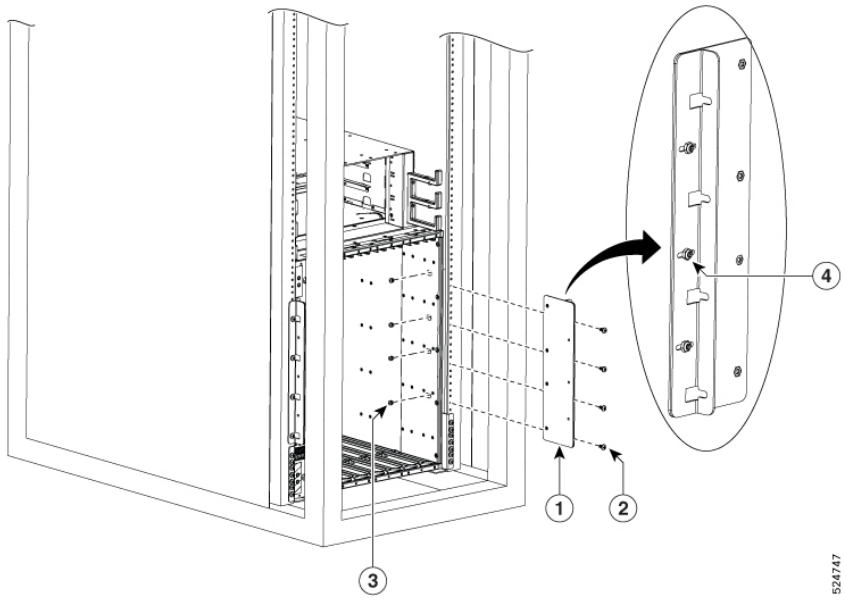Figure 54: Attach 8808 Chassis to Rack Using 8808-RMBRKT-G1 - Rear Right View




1	Rear right rack mounting bracket.	3	Install each screw from inside the chassis and tighten it to a torque of 26 in-lbs (2.93 N-m).
2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).	4	Adjust the brackets by loosening the nut and then tightening it again.

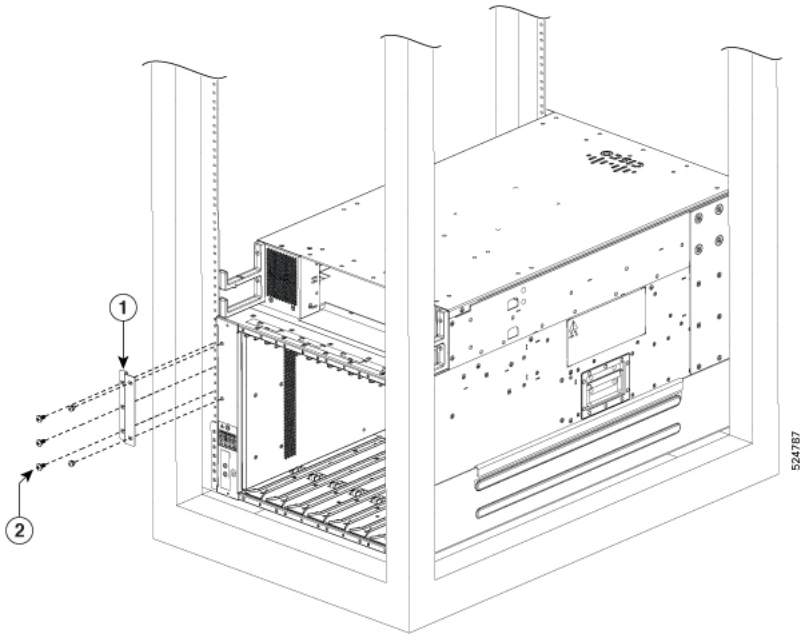Figure 55: Attach 8804 Chassis to Rack Using 8804-RMBRKT- Rear Left View



1	Rear left rack mounting bracket.	2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).

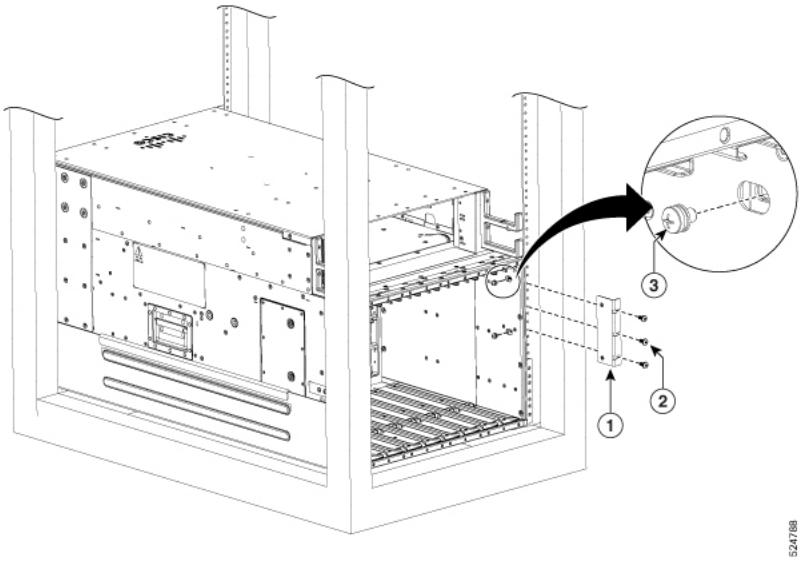Figure 56: Attach 8804 Chassis to Rack Using 8804-RMBRKT- Rear Right View



1	Rear right rack mounting bracket.	3	Install each screw from inside the chassis and tighten it to a torque of 26 in-lbs (2.93 N-m).
2	Install each screw and tighten it to a torque of 26 in-lbs (2.93 N-m).		

Note
We provide 10-32 screws to secure the left and right brackets on the Cisco 8812 and 8818 routers. For the Cisco 8804 and 8808 routers, M5 screws are used.

What to do next

Connect the chassis to the ground at your facility.


Ground the Chassis

Procedure

Step 1 Locate the chassis ground terminal on your router.


Router	Ground Lug Locations	Reference Figures
Cisco 8818	• Upper rear of the router (location 1) • Lower rear on left side of the router (location 2) • Lower rear of the router (location 3)	Refer here for the ground lug locations on Cisco 8818 router.
Cisco 8812		Refer here for the ground lug locations on Cisco 8812 router.
Cisco 8808		Refer here for the ground lug locations on Cisco 8808 router.
Cisco 8804	• Lower rear on left side of the router (location 1) • Lower rear of the router (location 2)	Refer here for the ground lug locations.

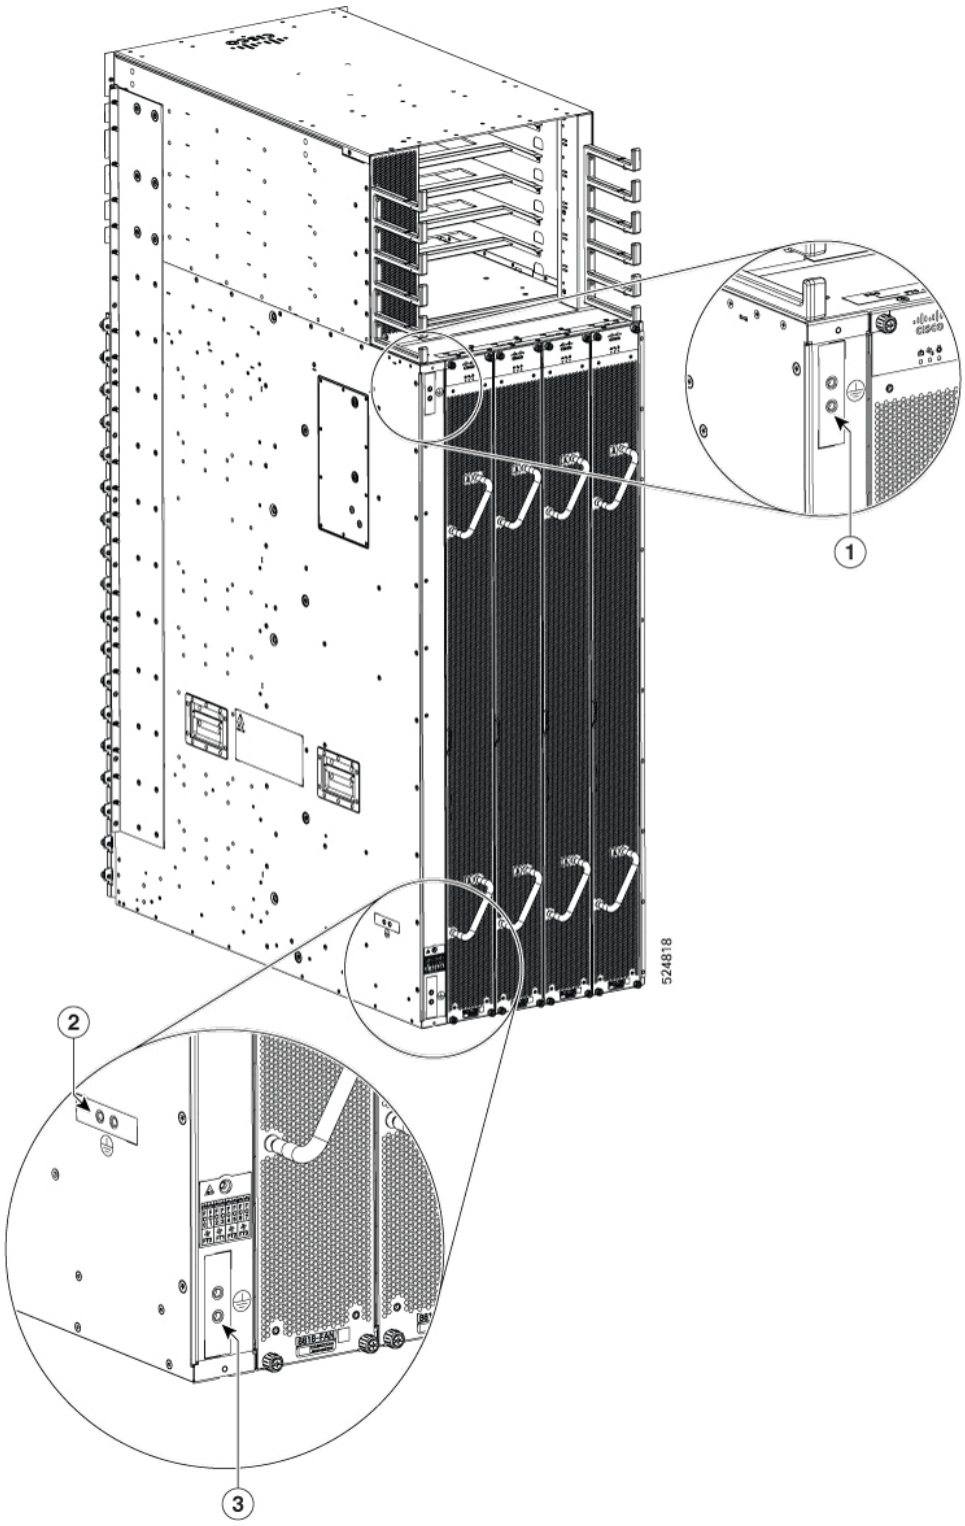Figure 57: Chassis Ground Receptacles on Cisco 8818



1	Ground lug location 1 - upper rear of the router	3	Ground lug location 3 - lower rear of the router
2	Ground lug location 2 - lower rear on left side of the router		

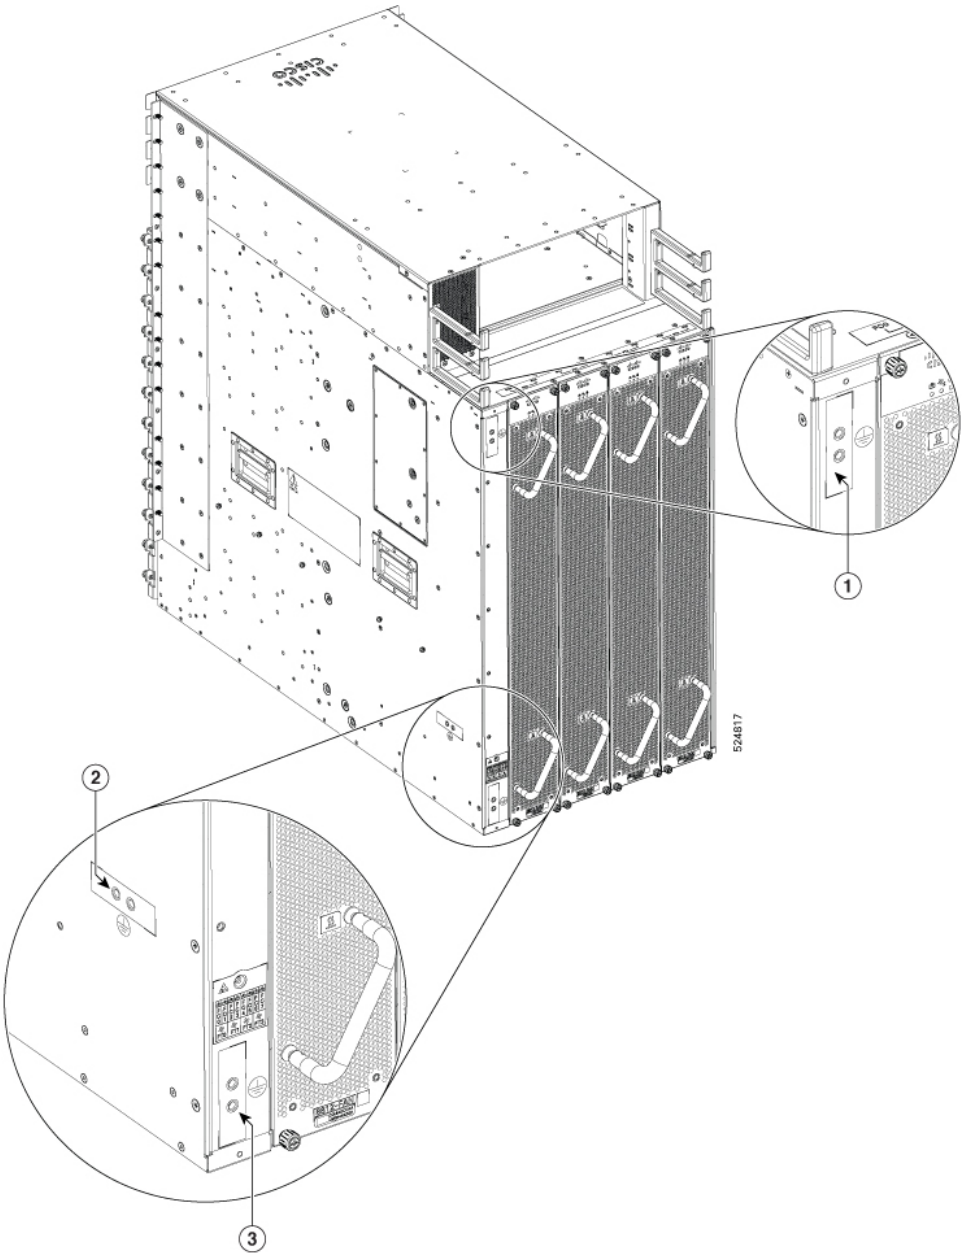
Figure 58: Chassis Ground Receptacles on Cisco 8812



1	Ground lug location 1 - upper rear of the router	3	Ground lug location 3 - lower rear of the router


2	Ground lug location 2 - lower rear on left side of the router		

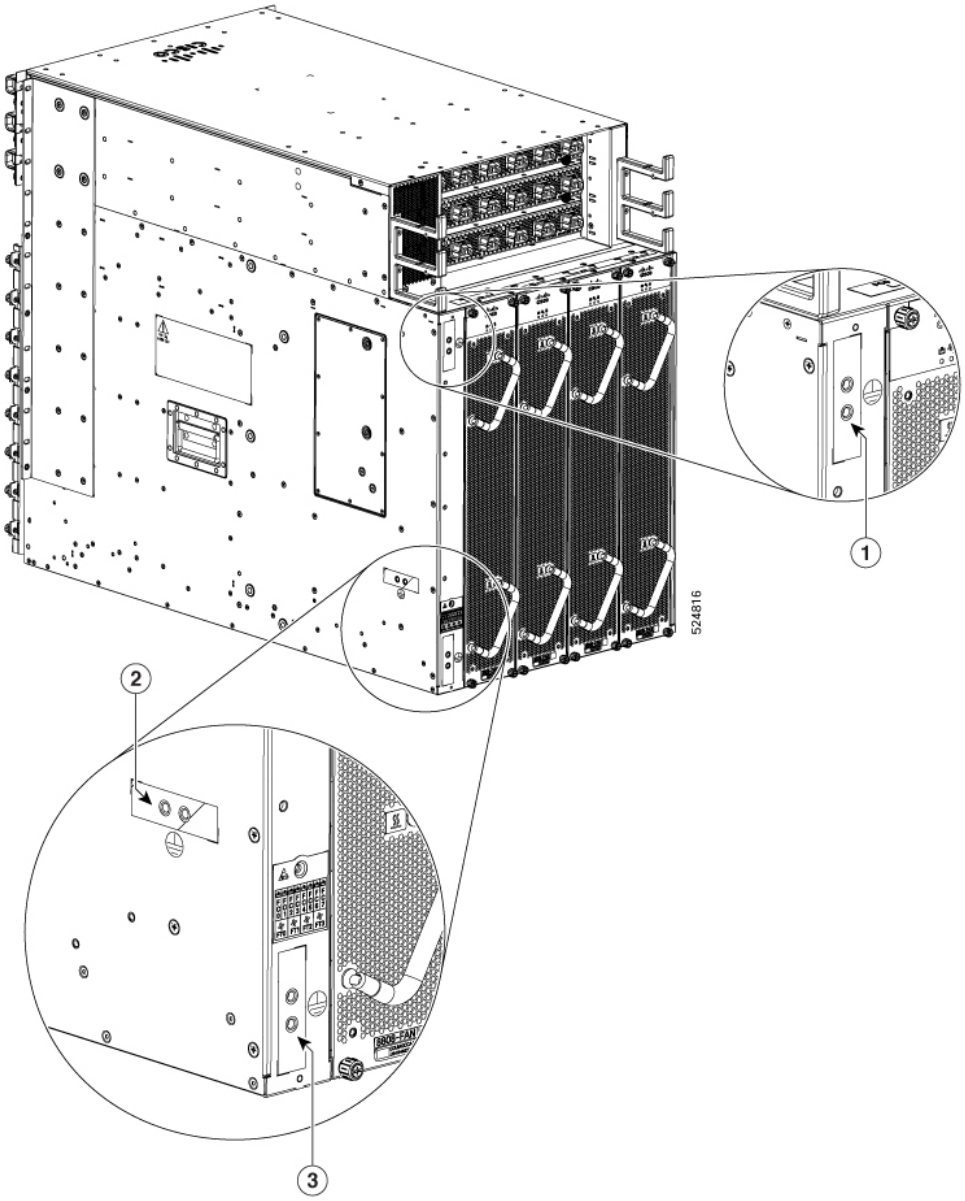Figure 59: Chassis Ground Receptacles on Cisco 8808 Chassis



1	Ground lug location 1 - upper rear of the router	3	Ground lug location 3 - lower rear of the router
2	Ground lug location 2 - lower rear on left side of the router		

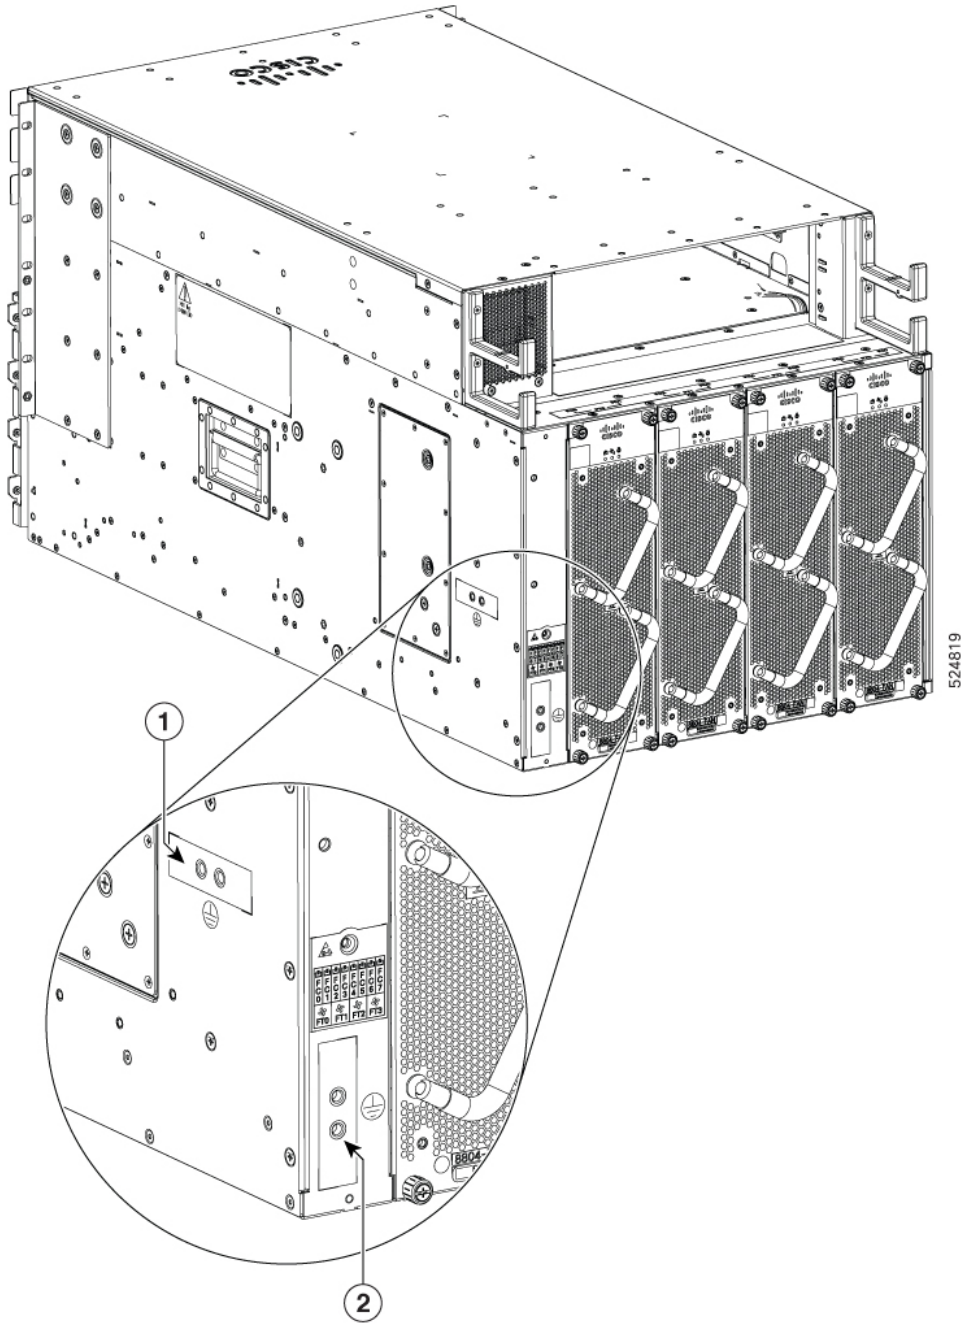Figure 60: Chassis Ground Receptacles on Cisco 8804 Chassis




1	Ground lug location 1 - lower rear on left side of the router
2	Ground lug location 2 - lower rear of the router

Step 2 Use the wire stripper to strip one end of the 2-AWG ground wire approximately 0.94 inches (23.88 mm).

Step 3 Insert the wire into the barrel on the ground lug.

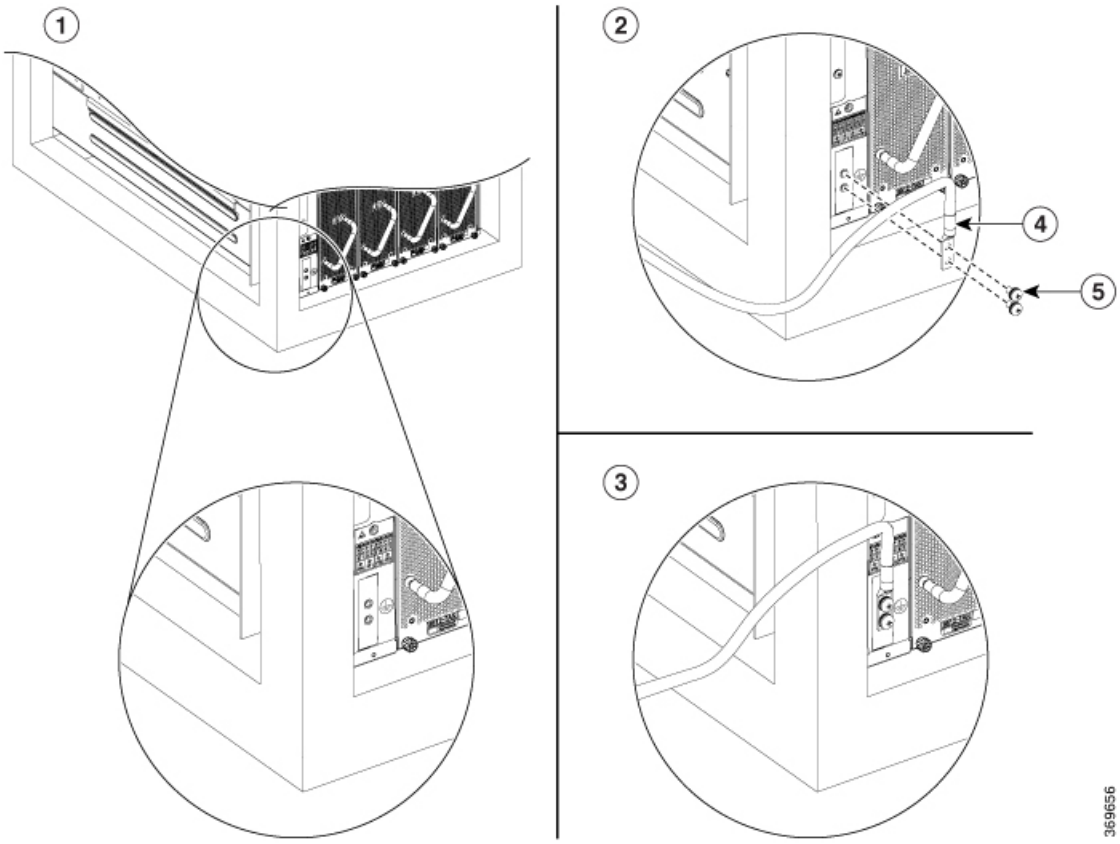Figure 61: Ground the Chassis



1	Locate ground	4	Align the lug holes
2	Prepare lug	5	Tighten the screws
3	Ground the chassis		

Step 4 Use the crimping tool to carefully crimp the barrel around the wire.

Step 5 Insert the two 1/4"-20 Phillips pan-head screws through the holes in the grounding lug. Ensure that the grounding lug does not interfere with other router hardware components.

Step 6 Use a torque screwdriver with a #3 Phillips head to carefully tighten the screws to 60 in-lbs 6.7 (N-m) of torque until the grounding lug is held firmly to the chassis. Do not overtighten the screws.

Step 7 Connect the opposite end of the grounding wire to the appropriate grounding location at your site.

What to do next

Attach the chassis doors.

Install Cable Management on a Chassis

Before you begin

The chassis must be installed and secured to the rack.

Required tools and equipment:

- Phillips screwdriver with a torque capability (customer supplied)
- Cable management brackets (8818-CBLMGMT,8812-CBLMGMT, 8808-CBLMGMT, or 8804-CBLMGMT).

Note The cable management assembly is shipped with the chassis.

Procedure

Step 1 Position one of the cable management brackets on the vertical mounting bracket so that the screw holes are aligned.

Figure 62: Cable Management Brackets for 8818 Chassis

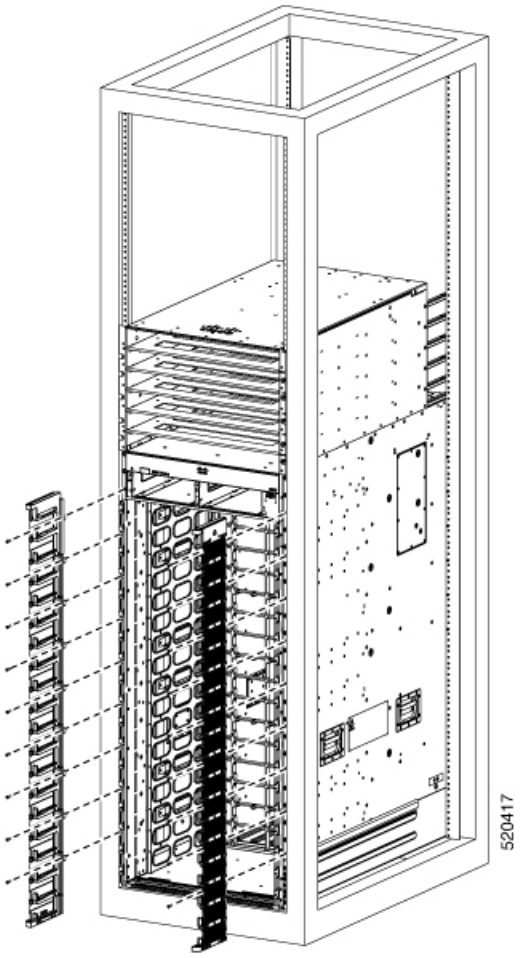


Figure 63: Cable Management Brackets for 8812 Chassis

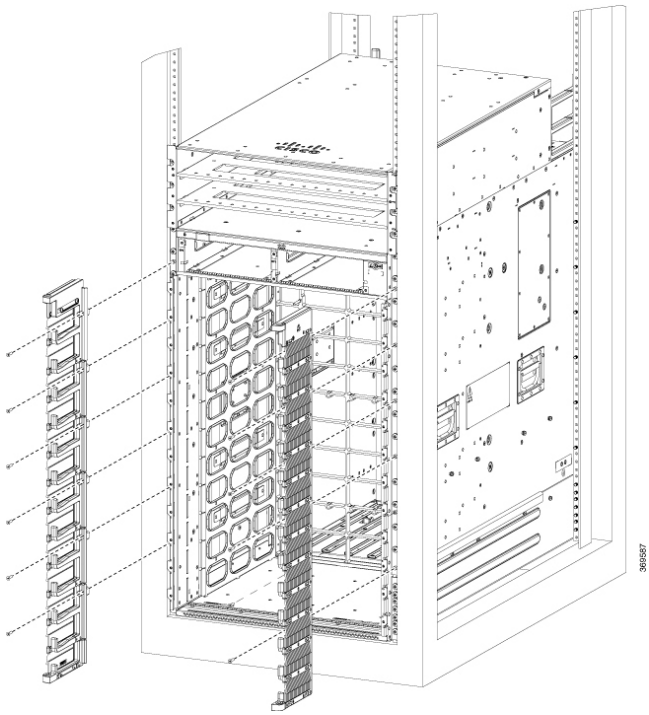


Figure 64: Cable Management Brackets for 8808 Chassis


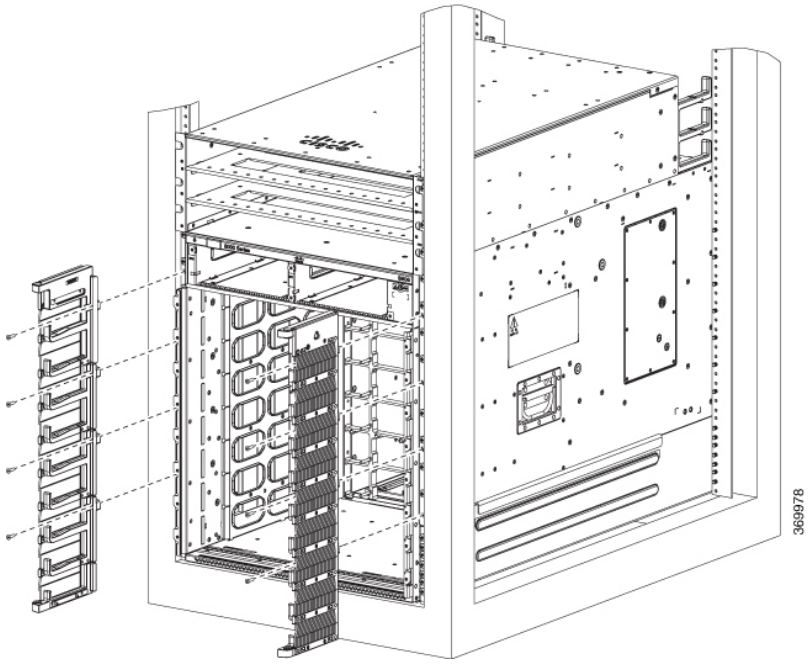


Figure 65: Cable Management Brackets for 8804 Chassis

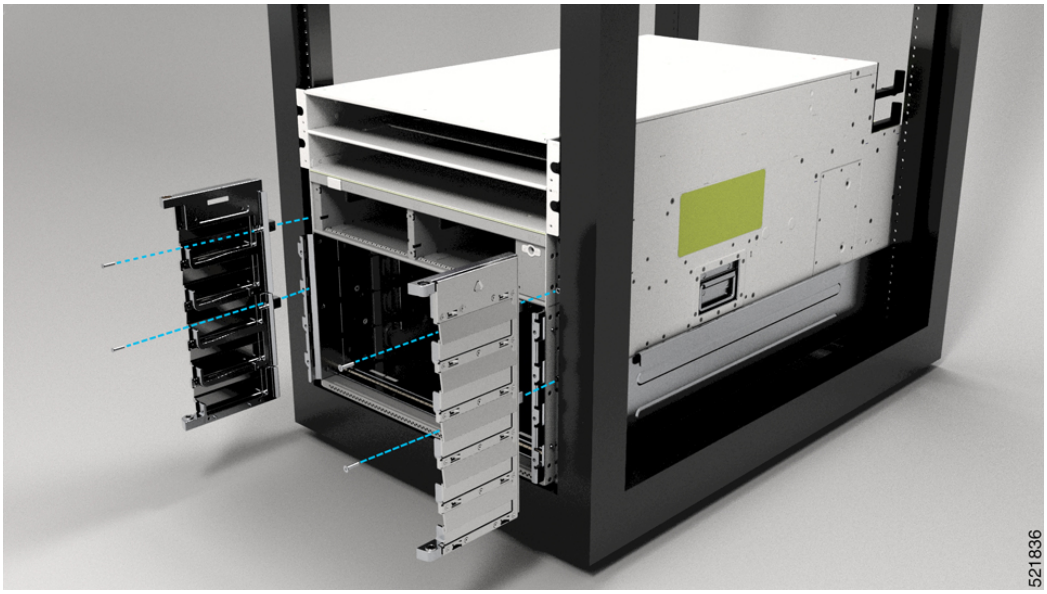

Step 2 Secure the left and right cable management brackets to the chassis vertical mounting brackets with M4 x 18-mm screws, flat-head Phillips screws (use all screws provided in the kit). Insert one screw at the top and one at the bottom, likewise add more screws in this sequence. The number of screws may vary based on the chassis.

Note
Do not fully tighten the screws until the cable management brackets, bottom cover, and top hood are installed.

Step 3 Repeat Steps 1 and 2 to attach the other cable management bracket to the vertical mounting bracket on the opposite side of the chassis.

Step 4 Remove the power shelf bezel from the chassis and proceed with bottom cover and top hood installation.

Step 5 Position the bottom cover, with its brackets pointing up, to the bottom of the two side cable management bracket screw holes.

Figure 66: Bottom Cover for 8818 Chassis

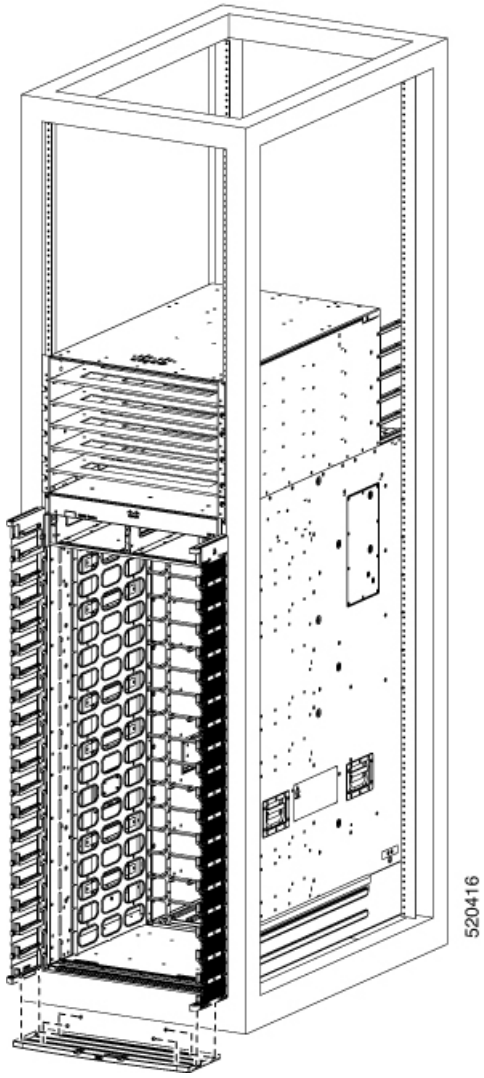


Figure 67: Bottom Cover for 8812 Chassis

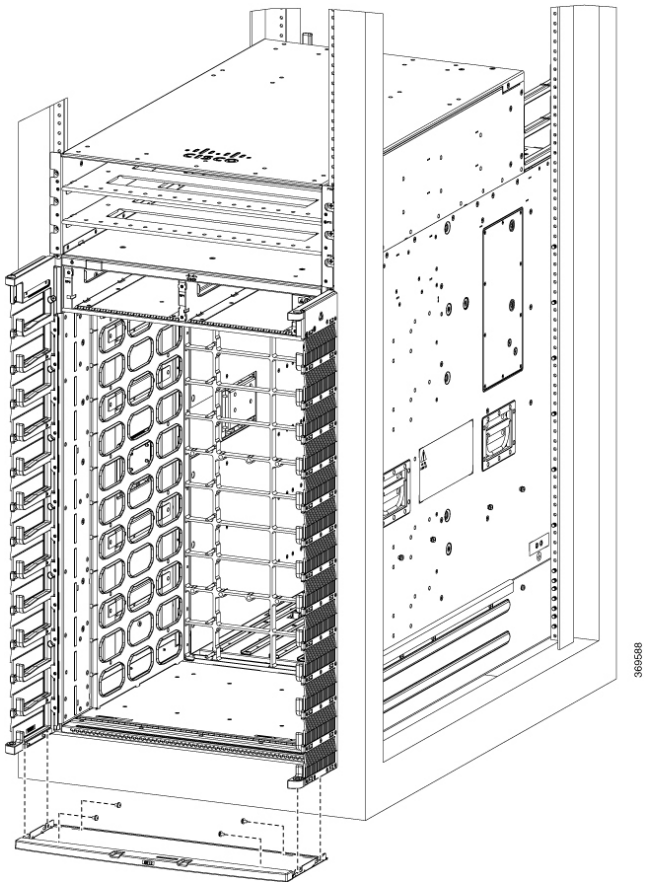


Figure 68: Bottom Cover for 8808 Chassis


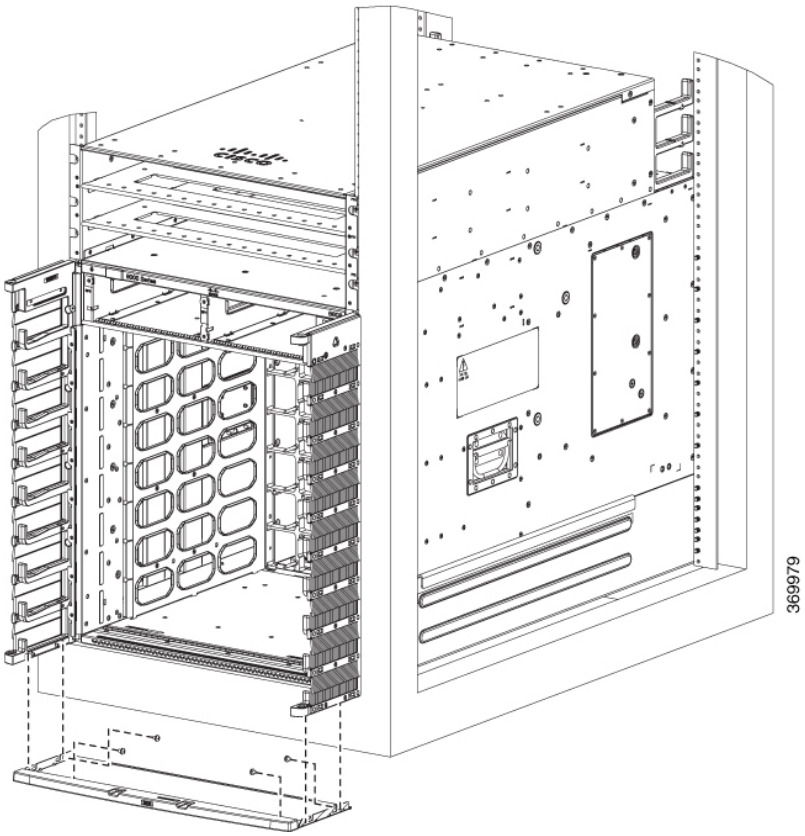



Figure 69: Bottom Cover for 8804 Chassis

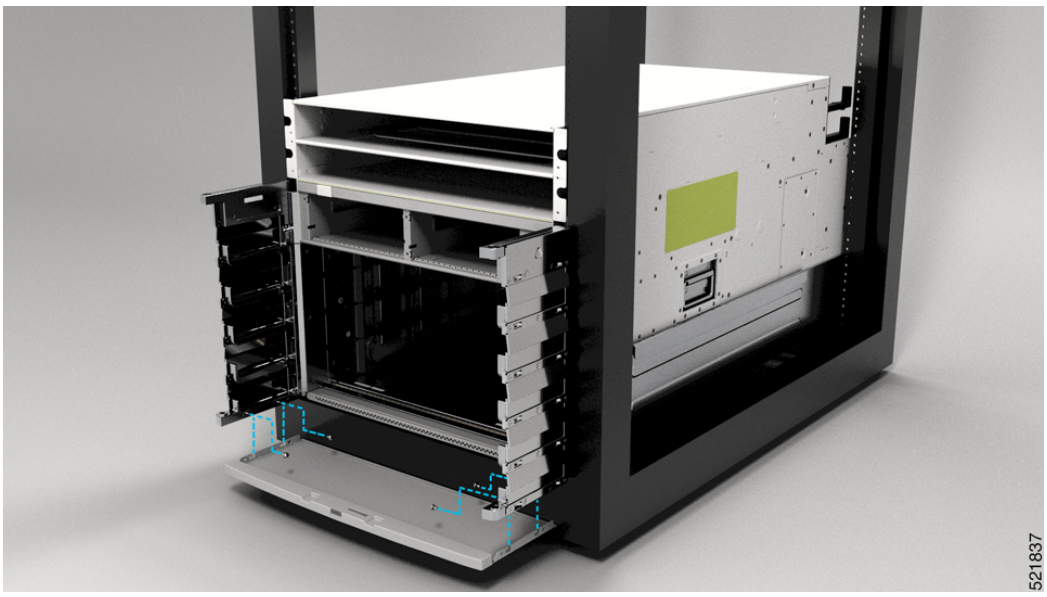

Step 6 Secure the bottom cover to the cable management brackets by using four M4 x 6 mm pan-head Phillips screws. Tighten each screw to 11.5 to 15 in-lb (1.3 to 1.7 N·m) of torque.


Step 7 Before you install the top hood, remove the connector cap from the alarm cable.

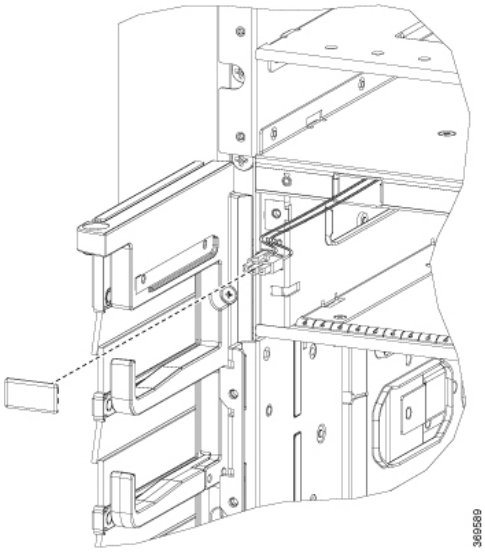Figure 70: Remove Connector Cap



Step 8 Connect the alarm cable to the top hood.

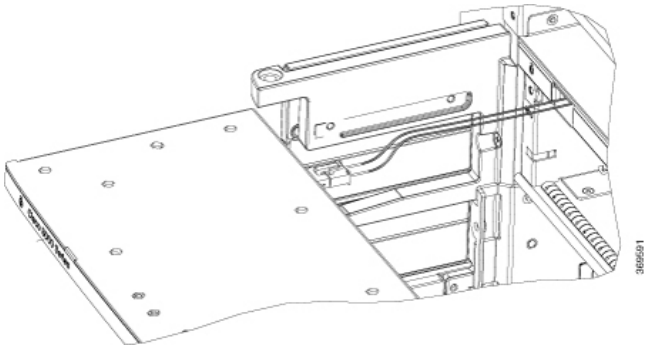Figure 71: Connect Alarm Cable



Note
Door open alarm is supported in the chassis.

Step 9 Position the top hood, with its brackets pointing down, above the cable management bracket screw holes.

Figure 72: Top Hood for 8818 Chassis

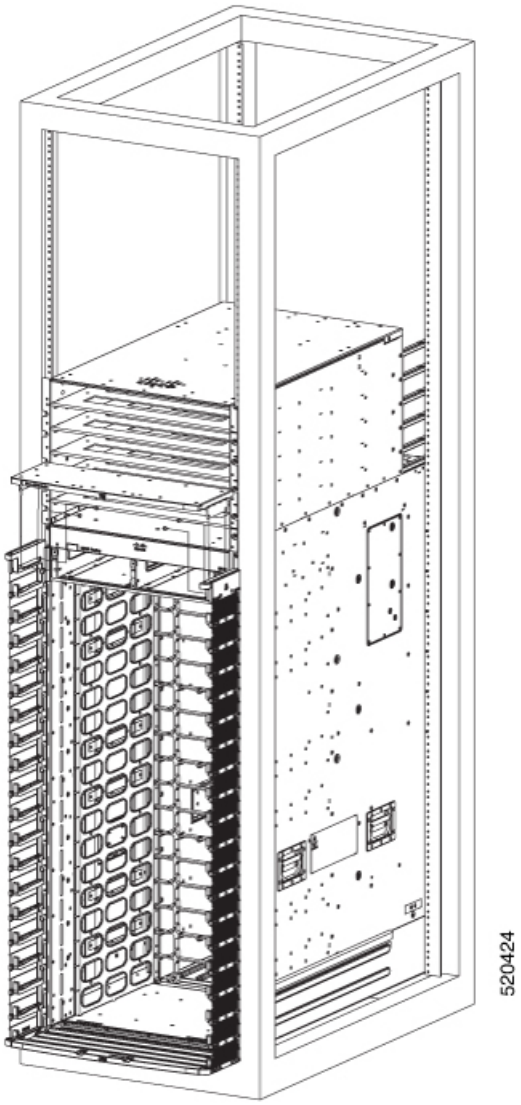


Figure 73: Top Hood for 8812 Chassis

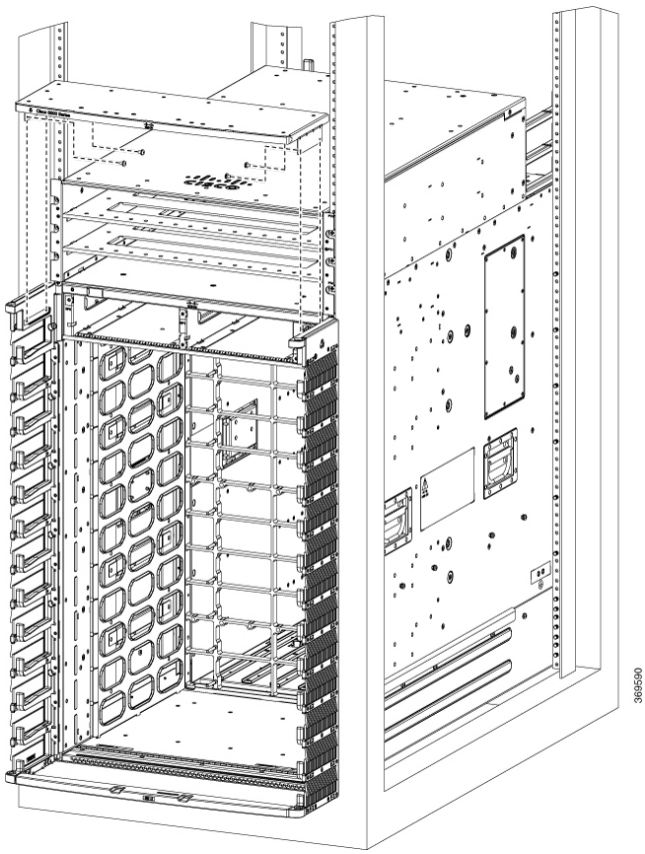


Figure 74: Top Hood for 8808 Chassis


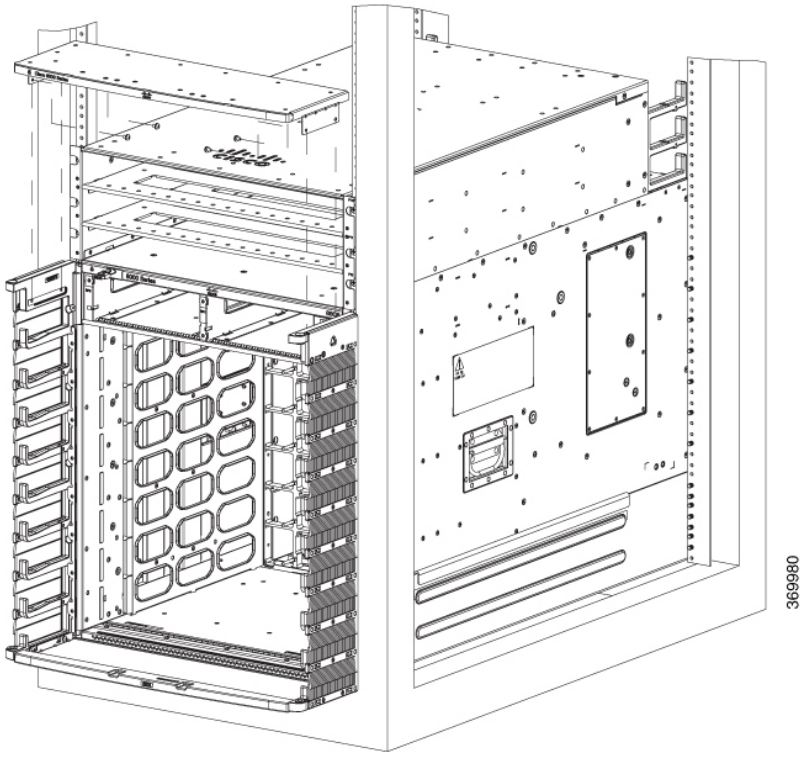


Figure 75: Top Hood for 8804 Chassis

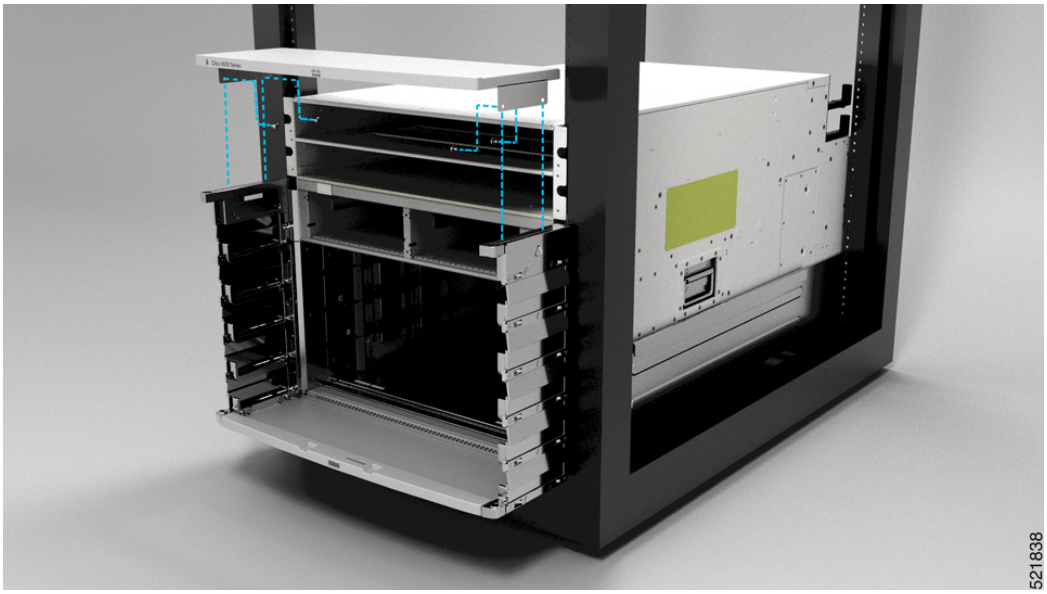

Step 10 Secure the top hood with the cable management brackets by using four M4 x 6 mm pan-head Phillips screws. Tighten each screw to 11.5 to 15 in-lb (1.3 to 1.7 N·m) of torque.

Step 11 Tighten the cable management brackets screws to 11.5 to 15 in-lb (1.3 to 1.7Nm) of torque after completing the bottom cover, and top hood installation.

Attach Front Door to Chassis

Before you begin

Before you can attach the front door to the chassis, you must attach the cable management brackets, bottom plate, and top hood onto the chassis.

Required tools and equipment:

- Phillips screwdriver with a torque capability (customer supplied)
- Door kit (8818-KIT, 8812-KIT, 8808-KIT, or 8804-KIT)

Note The door kit is optional.


Procedure

Step 1 Remove the power shelf bezel from the chassis, if already installed.

This is to ease the installation of chassis doors.

Step 2 On the back side (open side) of one door, pull in on two protruding spring pins so that the pins are held inside the door frame.

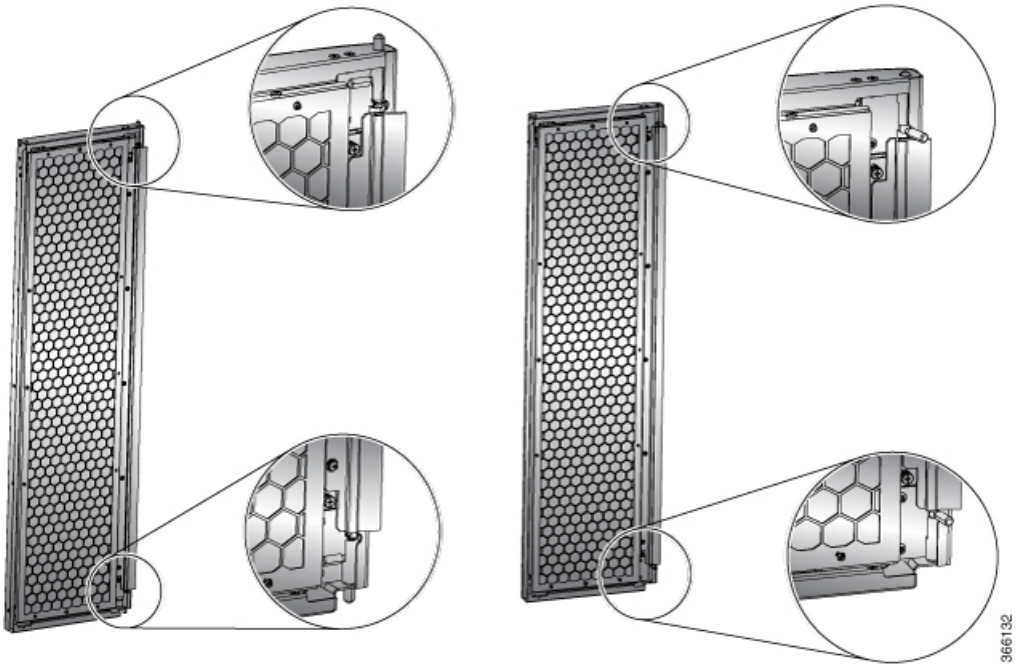Figure 76: Front Door Pins



Step 3 Align the spring pin to hole in the bottom plate and release the spring pin, so that they insert into the bottom hole.

Figure 77: Attach Front Door to 8818 Chassis

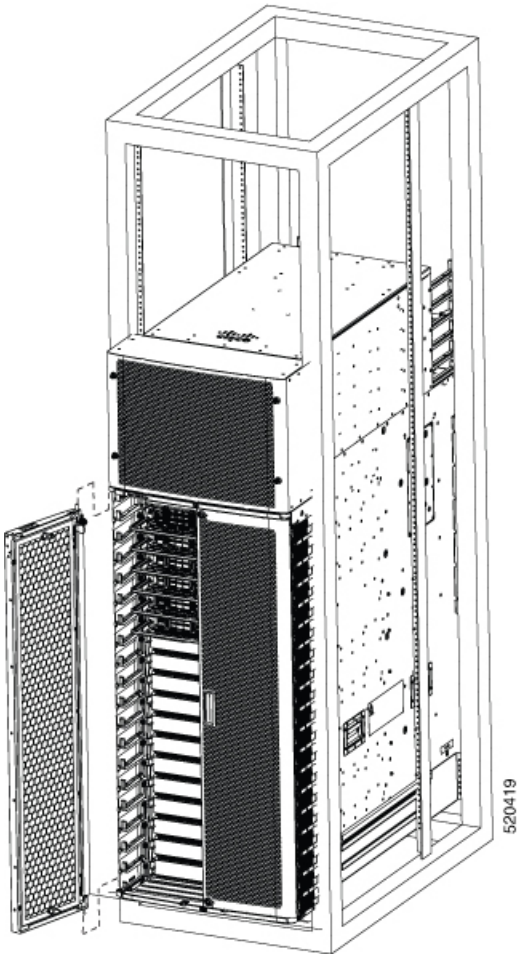


Figure 78: Attach Front Door to 8812 Chassis

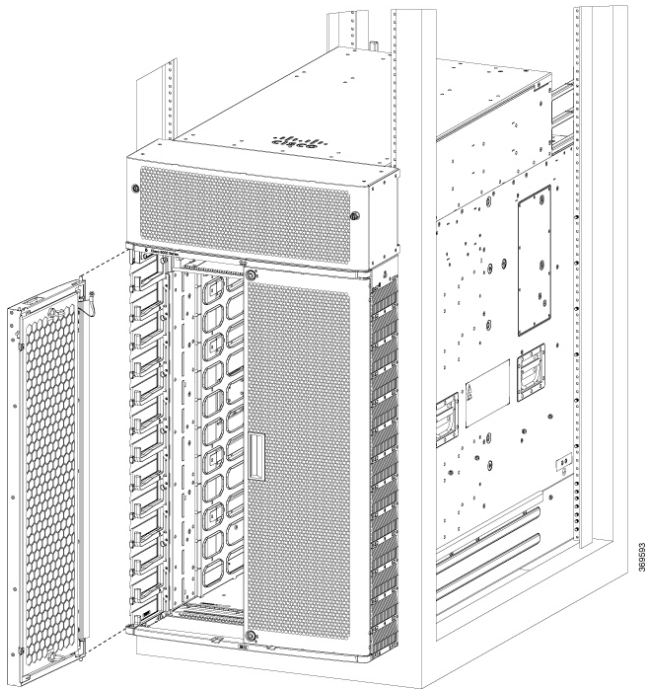


Figure 79: Attach Front Door to 8808 Chassis


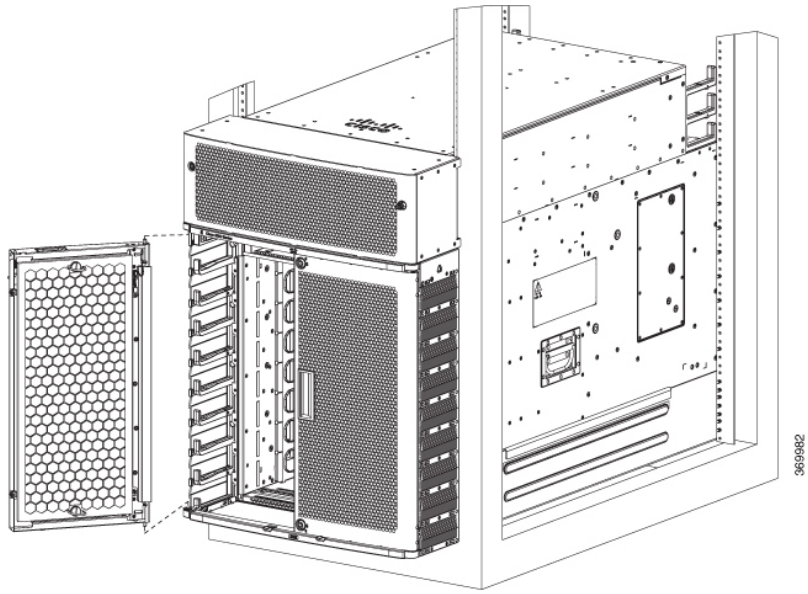


Figure 80: Attach Front Door to 8804 Chassis

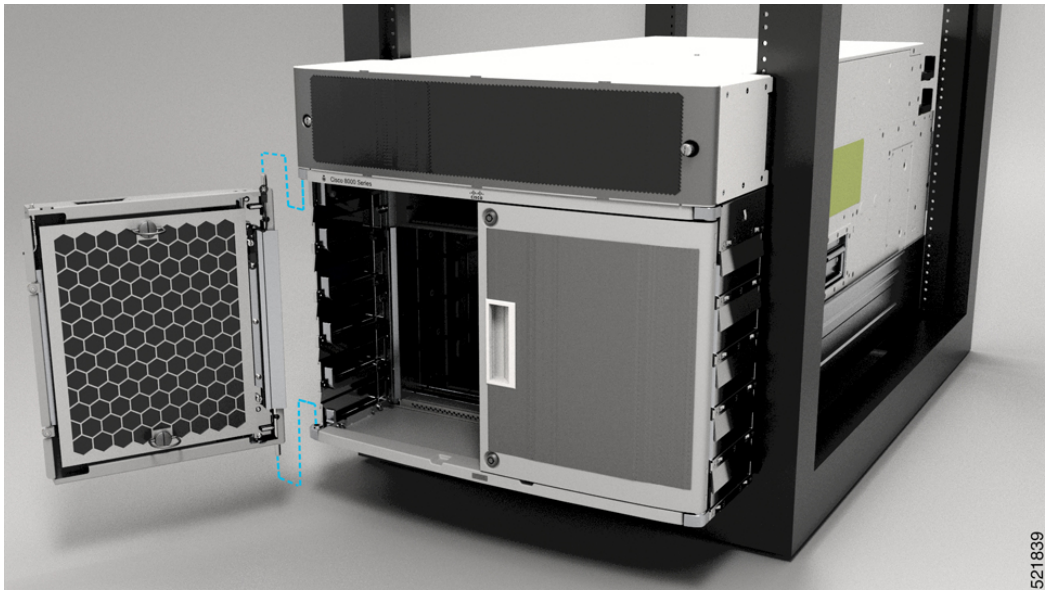

Step 4 Now align the spring pin to hole in the top hood and release the spring pin.

Step 5 Ensure the pins are properly inserted into the holes so that the door can freely swing on the spring pins.

Step 6 Repeat Steps 2–5 to install the other front door.

Step 7 Ground the front door.

For information on grounding the front door, see Ground the Front Door, on page 103.

Step 8 Replace the power supply bezel and secure it with the provided jackscrews.

For information on replacing the power supply bezel, see Install Power Shelf Bezel, on page 212.

Note
Install the following modules, if you had them removed from the chassis while mounting into the rack.

- Fan trays

For more information on replacing components, see Replace Chassis Components.

Ground the Front Door


Note To comply with GR-1089, you have to bond the front doors to the ground port on the chassis using the ground braid.

Procedure

Step 1 Install the grounding cable towards the side of the front door.

Step 2 Apply the star ring terminal end of the grounding cable to the front door. Tighten the screw to 11.5 to 15 in-lb (1.3 to 1.7 N-m) of torque to provide proper bonding.

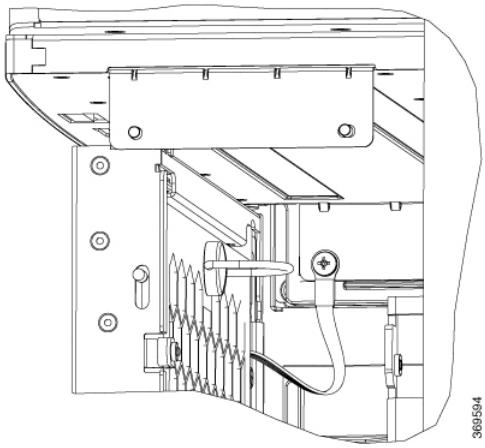Figure 81: Ground Cable to Chassis



Note
Fasten the ground straps on both the doors to the chassis.

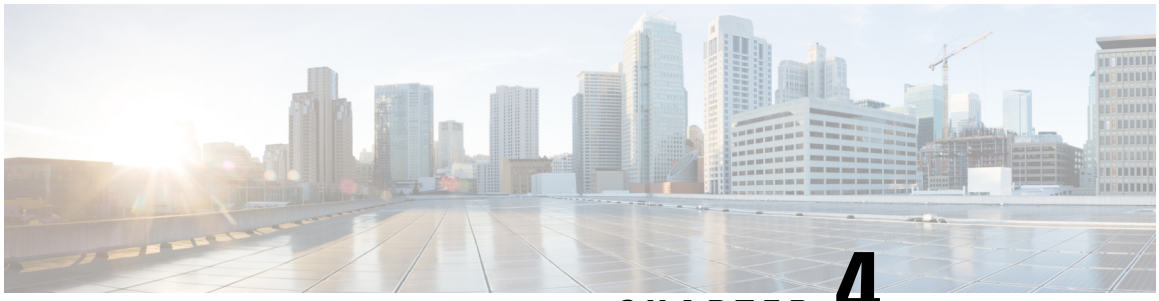
Step 3 Connect the other round terminal of the grounding cable to the ground port on the cable management bracket on either left or right side of the chassis. Use the front hole of the bracket that connects the top cover to the cable management bracket. Tighten the M4 screw to 11.5 to 15 in-lb (1.3 to 1.7 N-m) of torque.

Step 4 Repeat Steps 1–3 to install the grounding cable to the other front door.

Step 5 Close and lock the front door.

What to do next

Continue to power on the router.



CHAPTER 4

Powering on the Router

This chapter describes how to connect the power modules in the chassis and to power on the router.

- Power Module Overview, on page 105
- Connect DC Power Supply to Power Source , on page 108
- Connect HVAC/HVDC Power Supply to Power Source, on page 111
- Power Supply Power Cord Specifications, on page 114

Power Module Overview

Table 19: Feature History Table

Feature Name	Release	Description
60A support on the PSU4.8KW-DC100 (DC100) power supply	Release 7.3.2	This feature allows you to operate the 4.8 KW power supply for 48V 100A DC with 48V 60A. By default, the power module accepts 100A. To change the power mode to 60A, a toggle switch is provided in the power tray.

You can install an AC or a DC power module in the chassis. Ensure all power connection wiring conforms to the rules and regulations in the National Electrical Code (NEC) as well as local codes.

Each chassis has a power assembly shelf that supports the following number of power trays:

- Cisco 8818 chassis supports up six power trays
- Cisco 8812 and 8808 chassis supports up to three power trays
- Cisco 8804 router contains two power trays

Each power tray supports up to three AC power modules or four DC power modules.

Note Use only one kind of power tray and power module in the chassis.

Note Use only the same capacity power module in the chassis. Do not mix different capacity power modules.

High-Voltage AC / DC Power Supplies

HVAC/HVDC power modules operate in the input range of 180 VAC to 305 VAC (nominal input level of 200 to 240 VAC, 277 VAC) and 192 to 400 VDC (nominal 240 VDC, 380 VDC).

- PSU6.3KW-20A-HV: Each 6.3 KW, 20A power module can supply up to 6.3 KW to the power tray when it's supplied by two feeds (A and B). It can supply up to 3.15 KW with only one feed.
- PSU6.3KW-HV: Each 6.3 KW, 30A power module can supply up to 6.3 KW to the power tray when it's supplied by two feeds (A and B). It can supply up to 4.8 KW with only one feed.

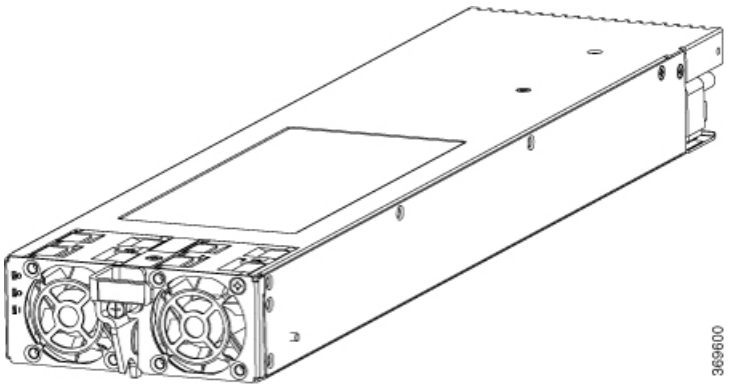
DC Power Supplies

There are two types of DC power modules supported on Cisco 8800 router series:

- PWR-4.4KW-DC-V3: The 4.4KW power supply accepts a nominal input voltage of 48V 60A DC, with an operational tolerance range of -40 to -72 VDC.

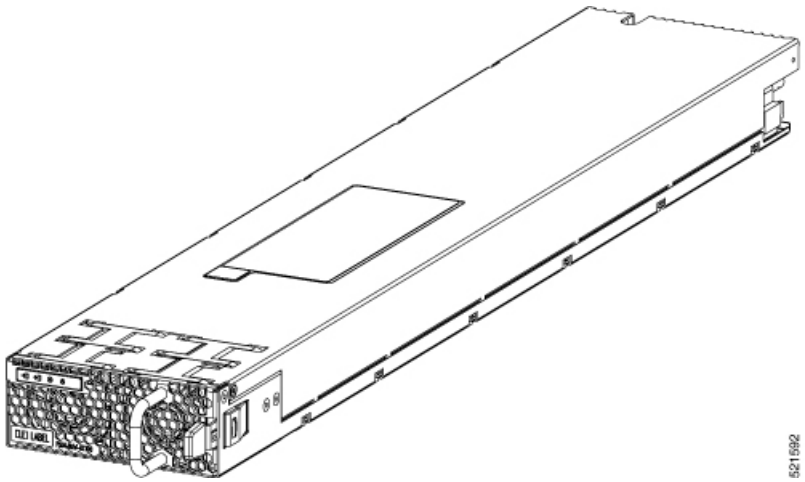
  Each 4.4 KW, 60A power module can supply up to 4.4 KW to the power tray when it's supplied by two feeds (A and B). It can supply up to 2.2 KW with only one feed.

  Figure 82: PWR-4.4KW-DC-V3

- PSU4.8KW-DC100: The 4.8KW power supply accepts a nominal input voltage of 48V 100A DC, with an operational tolerance range of 40 to 75 VDC.

Figure 83: PSU4.8KW-DC100




The PSU4.8KW-DC100 power module can also be configured to accept voltage of 48V 60A. By default, the power module accepts 100A. To change the power mode to 60A, a power mode switch is provided in the power tray. The power mode switch is located in the left-hand side on the power tray.

Note The power mode switch must be in the same position for all power trays installed in the chassis, either 60A or 100A mode.

When the power mode switch is configured for 100A mode, each power module can supply up to 4.8 KW to the power tray when it's supplied by two feeds (A and B). In 100A mode, it can supply up to 3.5 KW with only one feed.

When the power mode switch is configured for 60A mode, each power module can supply up to 4.4 KW to the power tray when it's supplied by two feeds (A and B). In 60A mode, it can supply up to 2.2 KW with only one feed.

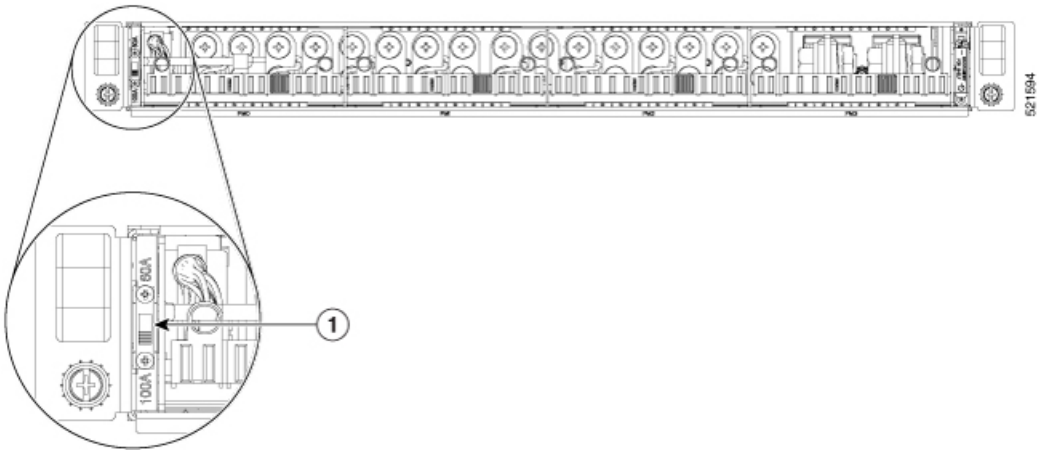
Figure 84: Power Mode Switch on the Power Tray



1	Power mode switch.

A plug cover is also provided to block the access to the power mode switch as shown in the below figure:

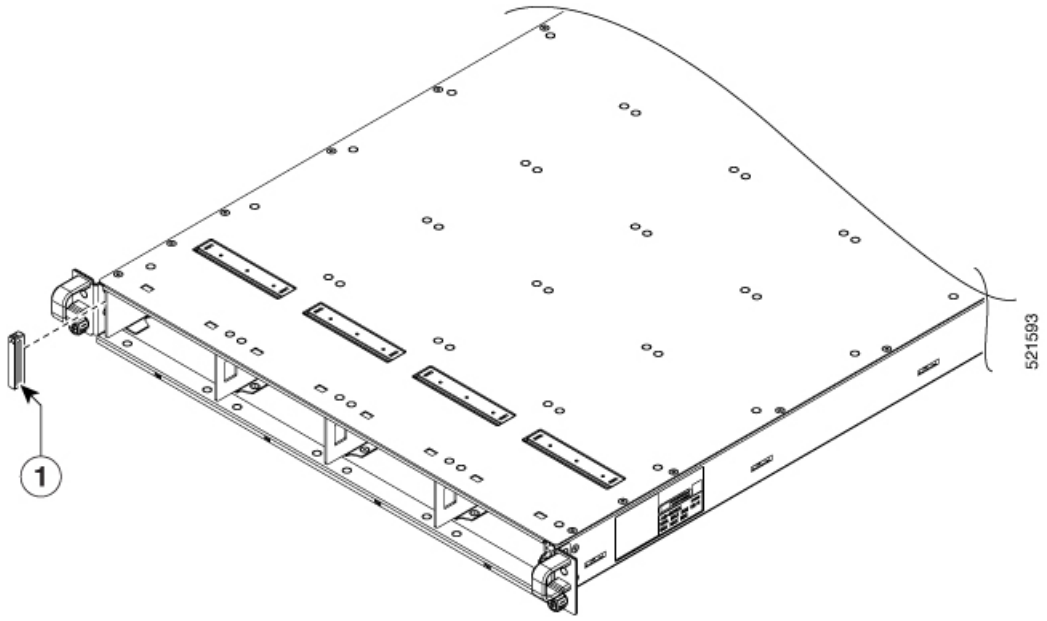Figure 85: Power Mode Switch Cover



1	Power mode switch cover.

Connect DC Power Supply to Power Source

This section contains the procedures to connect the DC source power cables to a DC-powered router.

For DC power cables, we recommend that you use 60A-rated, high-strand-count copper wire cables (#6 AWG or #4 AWG), or 100A-rated high-strand-count copper wire cables (#2 AWG) . The length of the cables depends on your router location from the source power. DC power cables are not available from Cisco, but they are available from any commercial cable vendor.

You must terminate DC power cables using cable lugs at the power tray end. Ensure that the lugs are right-angle dual-hole and that they fit over to allow quarter inch screws at 0.625-inch (15.88-mm) centers. For #4 AWG cable, use Panduit part number LCD4-14AF-L or equivalent; for #6 AWG, use Panduit part number LCD6-14AF-L or equivalent; for #2 AWG cables, use Panduit part number LCD2-14AF-Q or equivalent.


If you are not using power redundancy or are using n+1 power redundancy, you can connect all the power supplies in the chassis to the same power grid on the rear end of each power tray. If you are using n+n power redundancy, connect one redundant grid to one of the power supply inputs and the other redundant grid to the other power supply input on the back of the power tray as shown for each power supply.

The color coding of source DC power cable leads depends on the color coding of the site DC power source. Ensure that power source cables are connected to the power module with the proper positive (+) and negative (–) polarity:

- After powering on the router, you should see an LED (for each input) light up green on each power shelf. If LEDs light up red that indicates that the polarity is incorrect.

This figure shows the lug type required for DC input cable connections.

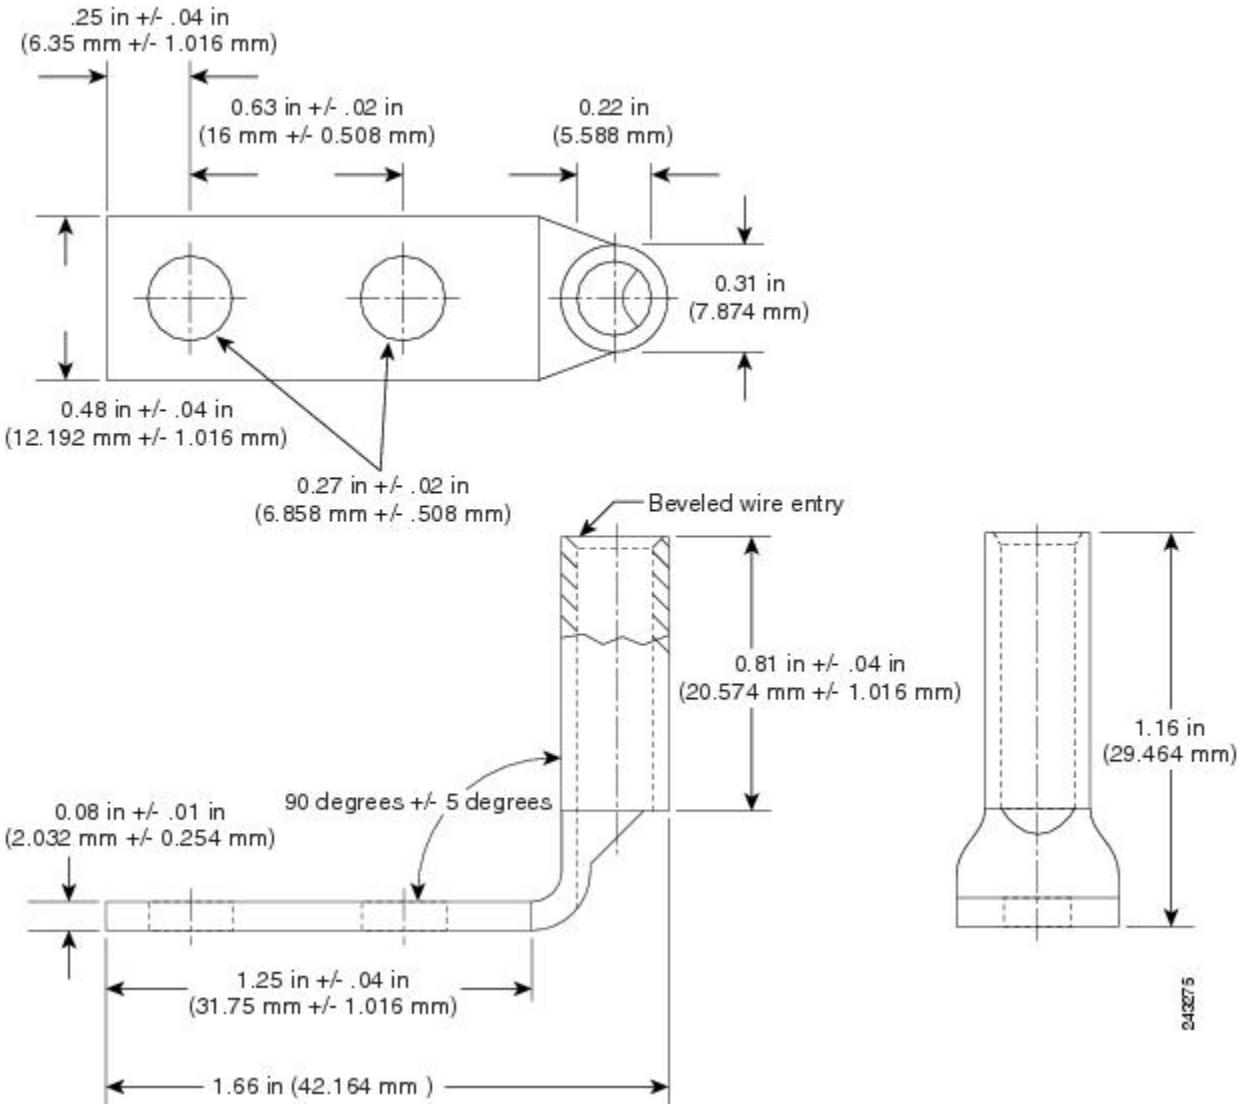Figure 86: Typical DC Power Cable Lug



Caution DC power modules contain circuitry to create a fault condition on the power module if the power module detects a reverse polarity condition. No damage should occur from reverse polarity, but ensure to correct a reverse-polarity condition immediately.

Note The length of the cables depends on the location of your router in relation to the source of DC power. These cables and the cable lugs that are used to attach the cables to the router chassis are not available from Cisco Systems. They are available from any commercial cable vendor.


Caution To ensure that power remains off while you are performing this procedure, lock-out/tag-out the DC circuit breaker switch in the off (0) position until you are ready to turn it on.

Follow these steps to connect the DC source power cables to a DC power tray:

Procedure

Step 1 Verify that the power tray switch is set to the STANDBY (0) position.

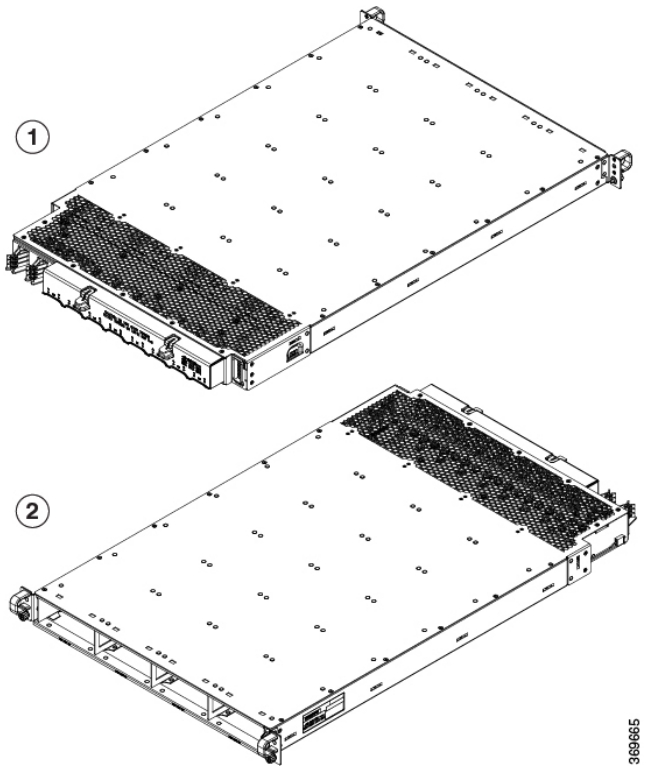Figure 87: DC Power Tray




1	Rear	2	Front

Step 2 Remove the clear plastic safety covers that fit over the DC power connection terminal studs.

Note
Each DC power tray provides 16 rear DC input terminal-stud connections. Each of the four DC power modules uses four connections: positive and negative terminals for input feed A, and positive and negative terminals for input feed B.

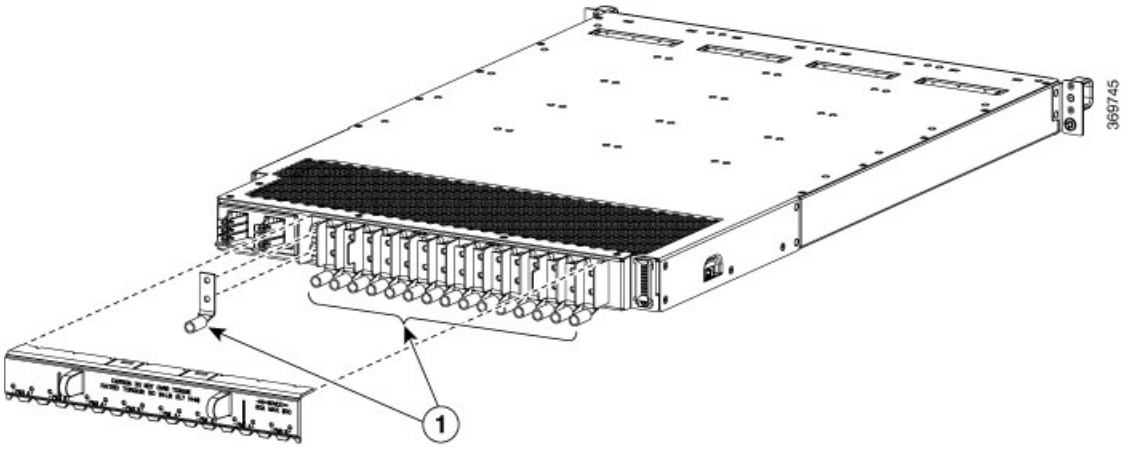Figure 88: DC Power Connection



1	16 DC-input terminal connections

Step 3 Connect the DC power cables in the following order.

a) Positive cables first.

b) Negative cables last.

Step 4 Repeat Step 3 for the other power modules installed in the tray.

Caution

To prevent injury and damage to the equipment, always attach the ground and source DC power cable lugs to power tray terminals in the following order: (1) positive (+) to positive (+), (2) negative (–) to negative (–).

Caution

Do not overtighten the nuts that secure the DC power cables to the power tray terminals. Using the 7/16 hex socket and torque wrench the nuts should be tightened to a torque of 45–50 in-lb.

Step 5 Replace the clear plastic safety covers over the connection terminal studs.

Step 6 Turn on the switch of the power shelf to turn on the system.

Connect HVAC/HVDC Power Supply to Power Source

The HVAC/HVDC power supply has 2 redundant input power lines. It can provide a power output of 6.3 kW from each input power line with 2 inputs operating, or provide 4.8 kW (30A) or 3.15 kW (20A) output from either input with one input operating. The HVAC/HVDC power supply provides *n*+*n* or *n*+*x* line redundancy mode in a single power supply for the Cisco 8800 Series Routers.

The HVAC/HVDC power supply accepts a maximum of 305VAC or 400VDC input power.

If you are not using power redundancy or are using *n*+1 power redundancy, you can connect all the power supplies in the chassis to the same power grid on the rear end of each power tray. If you are using *n*+*n* power redundancy, connect one redundant grid to one of the power supply inputs and the other redundant grid to the other power supply input on the back of the power tray as shown for each power supply.

Before you begin


- Turn off the power source at its circuit breaker.
- Check that the power switch is set to the STANDBY (0) position on the power tray.
- PSU6.3KW-HV: The HVAC or HVDC power sources are rated for 30A maximum input current.
- PSU6.3KW-20A-HV: The HVAC or HVDC power sources are rated for 20A maximum input current.

Procedure

Step 1 Choose your power supply (HVAC or HVDC) and use a Saf-D-Grid power cable to connect to the power supply tray.


Step 2 For HVAC input, connect a Saf-D-Grid AC power cable to the Saf-D-Grid receptacle.

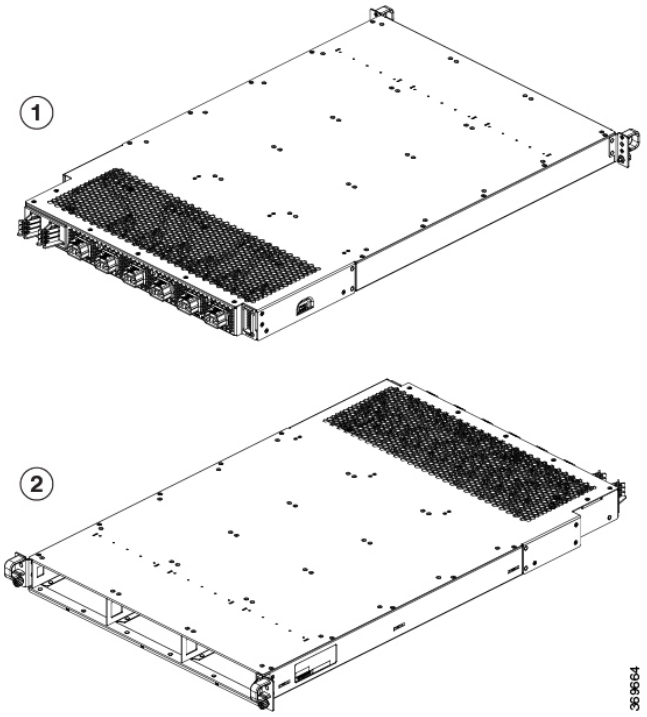Figure 89: HV Power Tray



1	Rear	2	Front

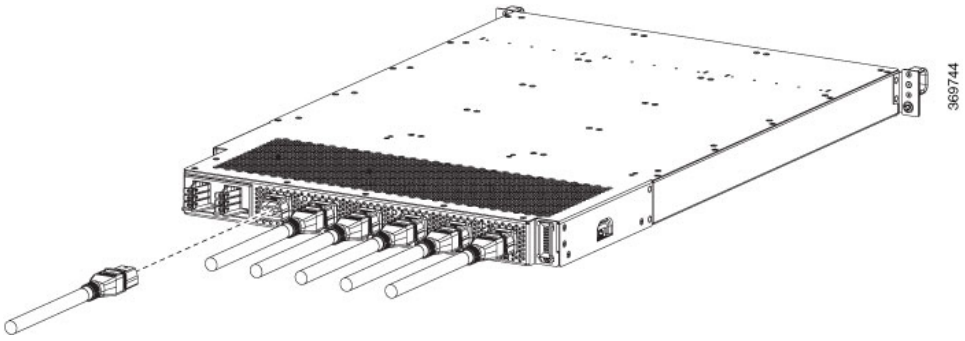Figure 90: HVAC Power Connection



Step 3 For HVDC input, connect a Saf-D-Grid DC cable to a Saf-D-Grid receptacle, otherwise:

a) Connect the ground terminal ring on the power cable to the ground terminal on the DC power source and secure it in place with a nut tightened to the appropriate torque setting for the terminal post.
b) Connect the negative terminal ring on the power cable to the negative (-) terminal on the DC power source and secure it in place with a nut tightened to the appropriate torque setting for the terminal post.
c) Connect the positive terminal ring on the power cable to the negative (+) terminal on the DC power source and secure it in place with a nut tightened to the appropriate torque setting for the terminal post.

Step 4 Verify that the Saf-D-Grid plug is plugged in completely to secure the built-in retaining latch.

Step 5 Turn on the circuit breaker for the HVAC or HVDC power source circuit.

Note
If you use both inputs, the IN LED of the power supply is green. If you use only one input, the IN LED is blinking green.

Step 6 Turn on the switch of the power shelf to turn on the system.

What to do next

Use the **power-mgmt redundancy-num-pms** *number* command in config mode to convert the power module redundancy from *n*+1 to *n*+*x*, specifying the number of redundant power modules that the you want to configure. The total number of functioning power modules in the system is at least *x* number more than the number of power modules that are needed to support the power required for all the cards in the system. The range is 0–11; 0 means that no power redundancy is required.

```
RP/0/RP0/CPU0:ios# config
RP/0/RP0/CPU0:ios(config)# power-mgmt redundancy-num-pms 2
RP/0/RP0/CPU0:ios(config)# commit
Tue Sep 24 09:03:22.889 UTC
Commit complete.
```

Use the **hw-module attention-led location0/PM** *number* command in config mode to enable and use the **no** form of the command to disable the ID LED on the specified power supply.

```
RP/0/RP0/CPU0:ios# config
RP/0/RP0/CPU0:ios(config)# hw-module attention-led location 0/PT0-PM0
RP/0/RP0/CPU0:ios(config)# commit
RP/0/RP0/CPU0:ios(config)# end
```

```
RP/0/RP0/CPU0:ios# show led location 0/PT0-PM0
================================================================================
Location      Led Name      Mode             Color
================================================================================
0/PT0-PM0
            Attention     OPERATIONAL      BLINKING BLUE
            Fault         OPERATIONAL      OFF
            Input         OPERATIONAL      GREEN
            Output        OPERATIONAL      GREEN
```

Power Supply Power Cord Specifications

Note Always use the Saf-D-Grid connector toward the router.

Table 20: 30A HVAC/HVDC Cables for PSU6.3KW-HV

Locale	Part Number	Cisco Part Number (CPN)	Power Cord Set Rating	Connector Part Number	Power Cord Illustration
AUSTRALIA/NEW ZEALAND	CAB-AC-32A-ANZ	37-101007-01	32A, 250VAC	Saf-D-Grid 3-5958P4 to Hubbell C332P6S Plug	Refer the figure in 30A HVAC/HVDC Cable Illustrations
SWITZERLAND	CAB-AC-32A-CHE	37-101007-01	32A, 250VAC	Saf-D-Grid 3-5958P4 to Hubbell C332P6S Plug	Refer the figure in 30A HVAC/HVDC Cable Illustrations
ITALY	CAB-AC-32A-ITA	37-101007-01	32A, 250VAC	Saf-D-Grid 3-5958P4 to Hubbell C332P6S Plug	Refer the figure in 30A HVAC/HVDC Cable Illustrations
SOUTH AFRICA	CAB-AC-32A-ZAF	37-101007-01	32A, 250VAC	Saf-D-Grid 3-5958P4 to Hubbell C332P6S Plug	Refer the figure in 30A HVAC/HVDC Cable Illustrations
BRAZIL	CAB-AC-32A-BRZ	37-101007-01	32A, 250VAC	Saf-D-Grid 3-5958P4 to Hubbell C332P6S Plug	Refer the figure in 30A HVAC/HVDC Cable Illustrations
ISRAEL	CAB-AC-32A-ISR	37-101007-01	32A, 250VAC	Saf-D-Grid 3-5958P4 to Hubbell C332P6S Plug	Refer the figure in 30A HVAC/HVDC Cable Illustrations
ARGENTINA	CAB-AC-32A-ARG	37-101007-01	32A, 250VAC	Saf-D-Grid 3-5958P4 to Hubbell C332P6S Plug	Refer the figure in 30A HVAC/HVDC Cable Illustrations
INDIA	CAB-AC-32A-IND	37-101007-01	32A, 250VAC	Saf-D-Grid 3-5958P4 to Hubbell C332P6S Plug	Refer the figure in 30A HVAC/HVDC Cable Illustrations

Locale	Part Number	Cisco Part Number (CPN)	Power Cord Set Rating	Connector Part Number	Power Cord Illustration
NORTH AMERICA	CAB-AC-30A-US1	37-101008-01	30A, 250VAC	Saf-D-Grid 3-5958P4 to VOLEX 174606	Refer the figure in 30A HVAC/HVDC Cable Illustrations
NORTH AMERICA	CAB-AC-30A-US2	37-101009-01	30A, 250VAC	Saf-D-Grid 3-5958P4 to VOLEX 174606	Refer the figure in 30A HVAC/HVDC Cable Illustrations
NORTH AMERICA	CAB-DC-30A-US1	37-101014-01	30A, 400VDC	Saf-D-Grid 3-5958P4 to Saf-D-Grid 3-5958P4	Refer the figure in 30A HVAC/HVDC Cable Illustrations
NORTH AMERICA	CAB-DC-30A-US2	37-101016-01	30A, 400VDC	Saf-D-Grid 3-5958P4 to Saf-D-Grid 3-5958P4	Refer the figure in 30A HVAC/HVDC Cable Illustrations
NORTH AMERICA	CAB-AC-30A-US3	37-101013-01	30A, 277VAC	Saf-D-Grid 3-5958P4 to HBL2631	Refer the figure in 30A HVAC/HVDC Cable Illustrations
NORTH AMERICA	CAB-AC-30A-US4	37-101018-01	30A, 300VAC	Saf-D-Grid 3-5958P4 to Saf-D-Grid 3-6074P30	Refer the figure in 30A HVAC/HVDC Cable Illustrations
IEC/EU	CAB-AC-32A-EU	37-101019-01	32A, 300VAC	Saf-D-Grid 3-5958P4 to Saf-D-Grid 3-6074P30	Refer the figure in 30A HVAC/HVDC Cable Illustrations
IEC/EU	CAB-DC-32A-EU1	37-101015-01	32A, 400VDC	Saf-D-Grid 3-5958P4 to Saf-D-Grid 3-5958P4	Refer the figure in 30A HVAC/HVDC Cable Illustrations
IEC/EU	CAB-DC-32A-EU2	37-101017-01	32A, 400VDC	Saf-D-Grid 3-5958P4 to Saf-D-Grid 3-5958P4	Refer the figure in 30A HVAC/HVDC Cable Illustrations
CHINA	CAB-AC-32A-CHN	37-101010-01	32A, 250VAC	-	Refer the figure in 30A HVAC/HVDC Cable Illustrations
KOREA	CAB-AC-32A-KOR	37-101012-01	32A, 250VAC	-	Refer the figure in 30A HVAC/HVDC Cable Illustrations

30A HVAC/HVDC Cable Illustrations

Figure 91: CAB-AC-32A-ANZ, CAB-AC-32A-CHE, CAB-AC-32A-ITA, CAB-AC-32A-BRZ, CAB-AC-32A-ZAF, CAB-AC-32A-ISR, CAB-AC-32A-IND, CAB-AC-32A-ARG Power Cord and Plugs for Standard AC Power Supply

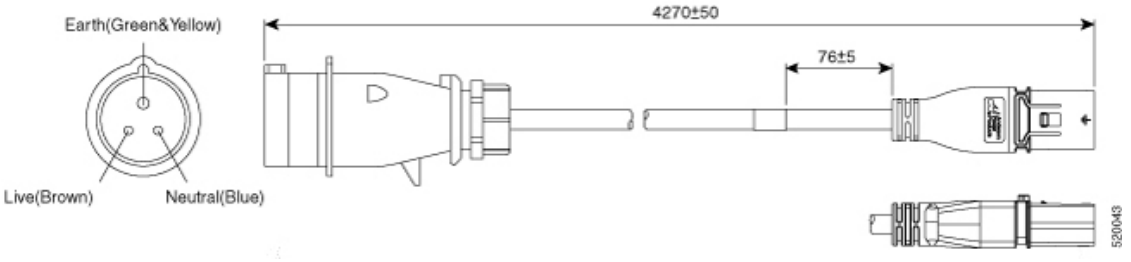


Figure 92: CAB-AC-30A-US1 Power Cord and Plugs for Standard AC Power Supply

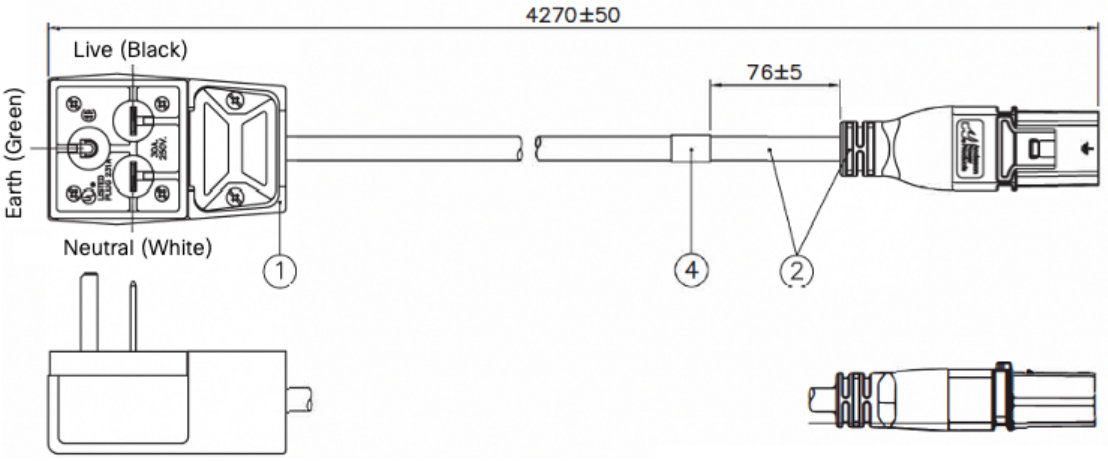


Figure 93: CAB-AC-30A-US2 Power Cord and Plugs for Standard AC Power Supply

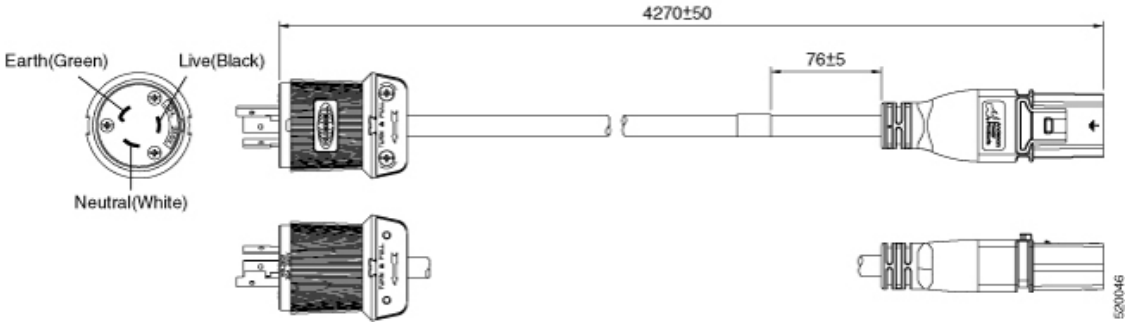


Figure 94: CAB-DC-30A-US1 Power Cord and Plugs for HVDC Power Supply

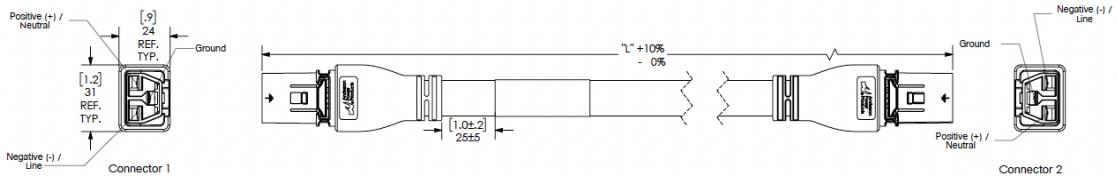


Figure 95: CAB-DC-30A-US2 Power Cord and Plugs for HVDC Power Supply

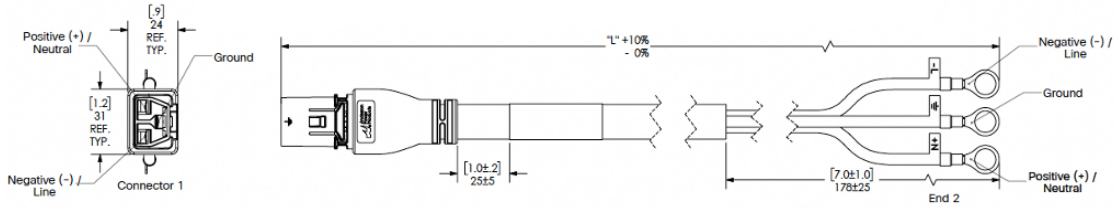


Figure 96: CAB-AC-30A-US3 Power Cord and Plugs for Standard AC Power Supply

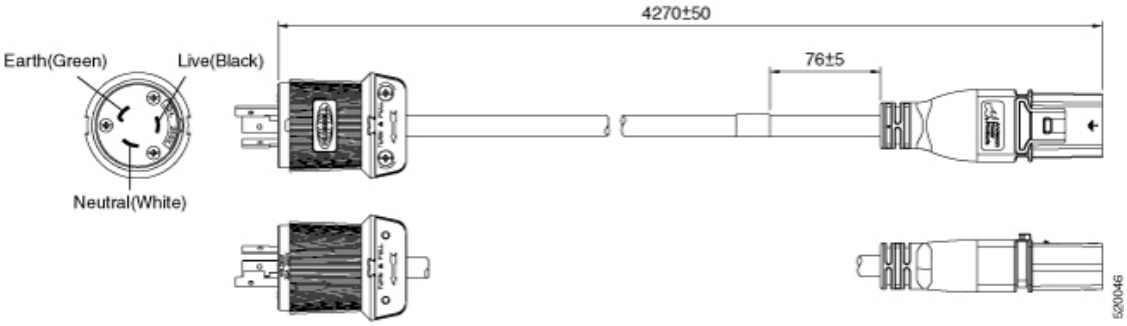


Figure 97: CAB-AC-30A-US4 Power Cord and Plugs for Standard AC Power Supply

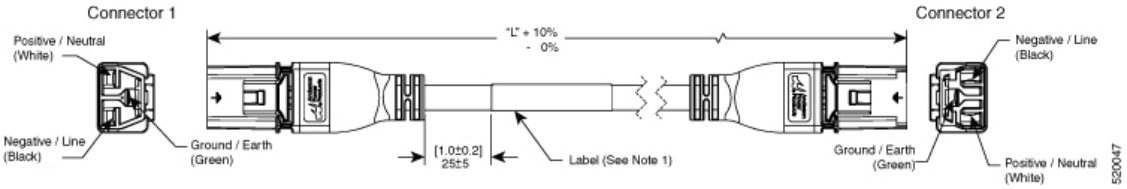


Figure 98: CAB-AC-32A-EU Power Cord and Plugs for Standard AC Power Supply

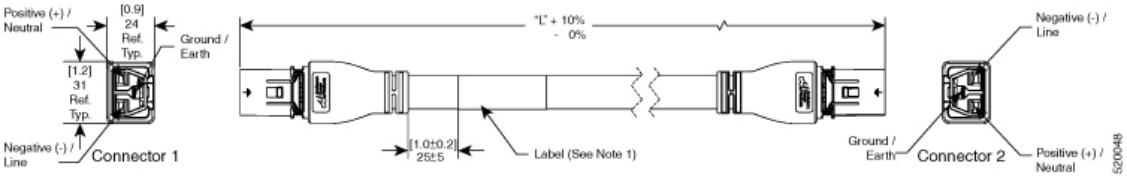


Figure 99: CAB-DC-32A-EU1 Power Cord and Plugs for HVDC Power Supply

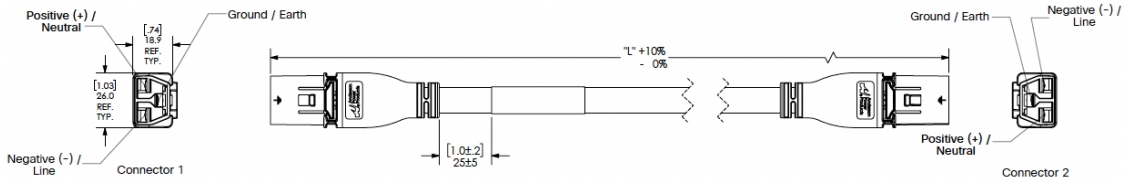


Figure 100: CAB-DC-32A-EU2 Power Cord and Plugs for HVDC Power Supply

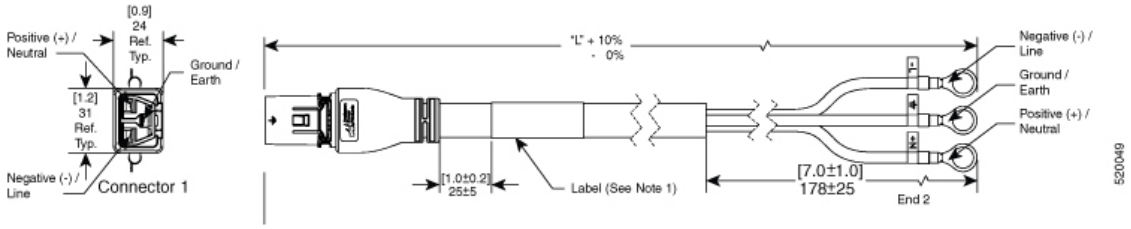


Figure 101: CAB-AC-32A-CHN Power Cord and Plugs for Standard AC Power Supply

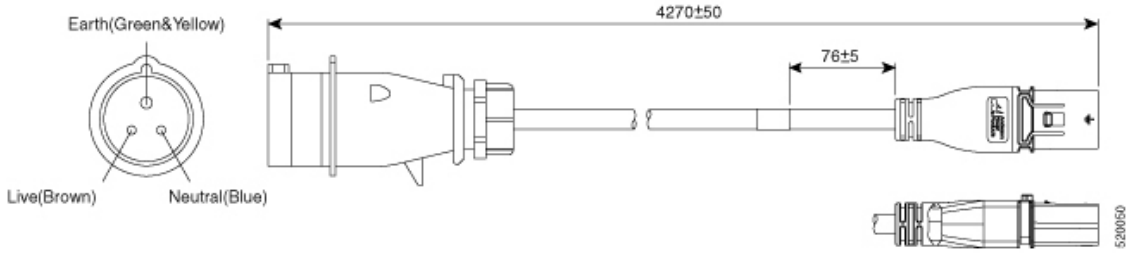


Figure 102: CAB-AC-32A-KOR Power Cord and Plugs for Standard AC Power Supply

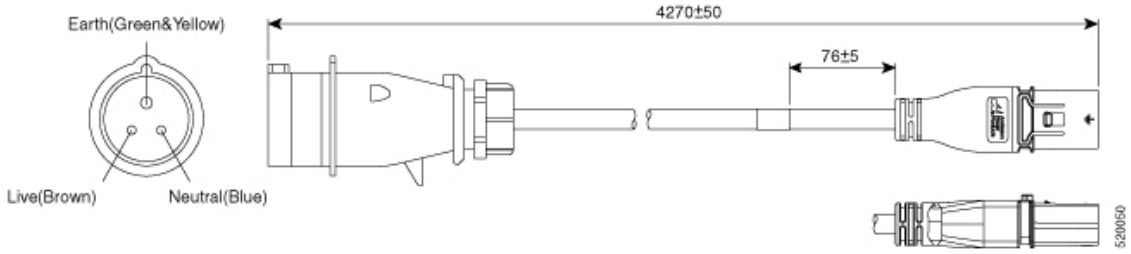


Table 21: 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV

Locale	Part Number	Cisco Part Number (CPN)	Length	Power Cord Rating	Connectors	Power Cord Illustration
Argentina	CAB-AC-16A-SG-AR	37-1649-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
Australia	CAB-AC-16A-SG-AZ	37-1661-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
Brazil	CAB-AC-16A-SG-BR	37-1650-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
China	CAB-AC-16A-SG-CH	37-1655-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV

Locale	Part Number	Cisco Part Number (CPN)	Length	Power Cord Rating	Connectors	Power Cord Illustration
China	CAB-AC-16A-CN	37-1655-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
Europe	CAB-AC-16A-SG-EU	37-1660-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
India	CAB-AC-16A-SG-IND	37-1863-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
International/UK	CAB-AC-16A-SG-IN	37-1659-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
Israel	CAB-AC-16A-SG-IS	37-1658-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
Italy	CAB-AC-16A-SG-IT	37-1651-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
Japan	CAB-AC-16A-SG-JPN	37-1656-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
South Africa	CAB-AC-16A-SG-SA	37-1647-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
Switzerland	CAB-AC-16A-SG-SW	37-1654-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
South Korea	CAB-AC-16A-SG-SK	37-1646-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
UK	CAB-AC-16A-SG-UK	37-1864-01	14 ft (4.26 m)	16A, 250 VAC	–	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
North America (locking) 200-240 VAC operation	CAB-AC-20A-SG-US3	37-1656-01	14 ft (4.26 m)	20A, 250 VAC	Saf-D-Grid to L6-20	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV

Locale	Part Number	Cisco Part Number (CPN)	Length	Power Cord Rating	Connectors	Power Cord Illustration
North America 277 VAC operation	CAB-AC-20A-SG-US4	37-1645-01	14 ft (4.26 m)	20A, 277 VAC	Saf-D-Grid to L7-20	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
North America Cabinet Jumper Power Distribution unit (PDU)	CAB-AC-20A-SG-C20	37-1653-01	14 ft (4.26 m)	20A, 250 VAC	Saf-D-Grid to C20	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
North America, Ring Terminal source plug	CAB-HV-25A-SG-US2	37-1641-01	14 ft (4.26 m)	20A, 300 VAC/500 VDC	Saf-D-Grid to 3 ring terminal	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
International IEC/EU, Ring Terminal source plug	CAB-HV-25A-SG-IN2	37-1640-01	14 ft (4.26 m)	20A, 300 VAC/500 VDC	Saf-D-Grid to 3 ring terminal	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV
US, IEC/EU, CANADA, MEXICO, BRAZIL, NETHERLANDS, IRELAND, FRANCE, UK, GERMANY, SWITZERLAND, NORWAY, SPAIN, ITALY, SINGAPORE, CHINA	CAB-AC-20A-NA	37-2126-01	6.6 ft (2m)	20A, 250VAC	Saf-D-Grid 3-5958P2 to IEC 60320 C20	Refer the figure in 20A HVAC/HVDC Cables for PSU6.3KW-20A-HV

20A HVAC/HVDC Cable Illustrations

Figure 103: CAB-AC-16A-SG-AR Power Cord

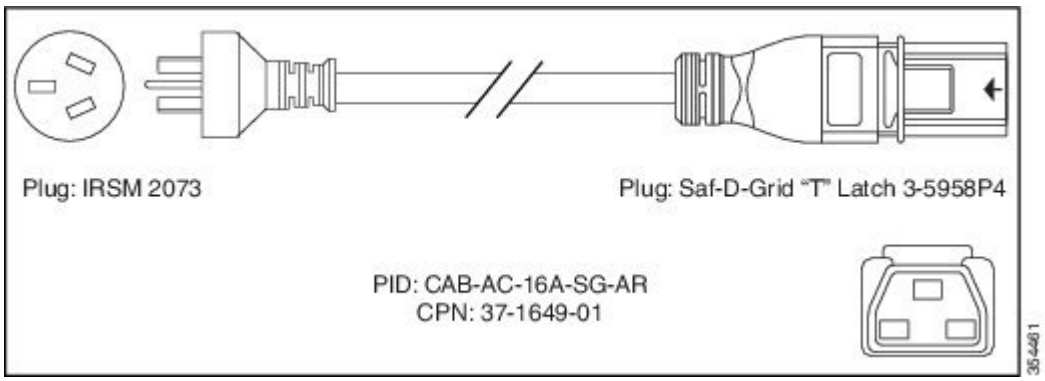


Figure 104: CAB-AC-16A-SG-AZ Power Cord

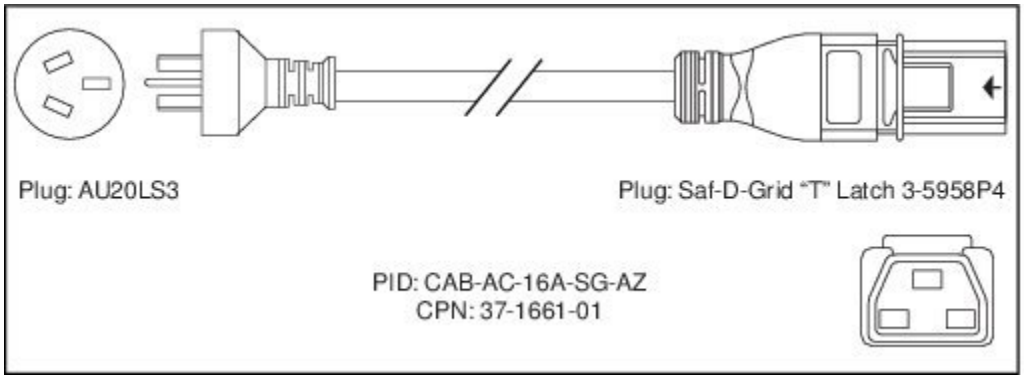


Figure 105: CAB-AC-16A-SG-BR Power Cord

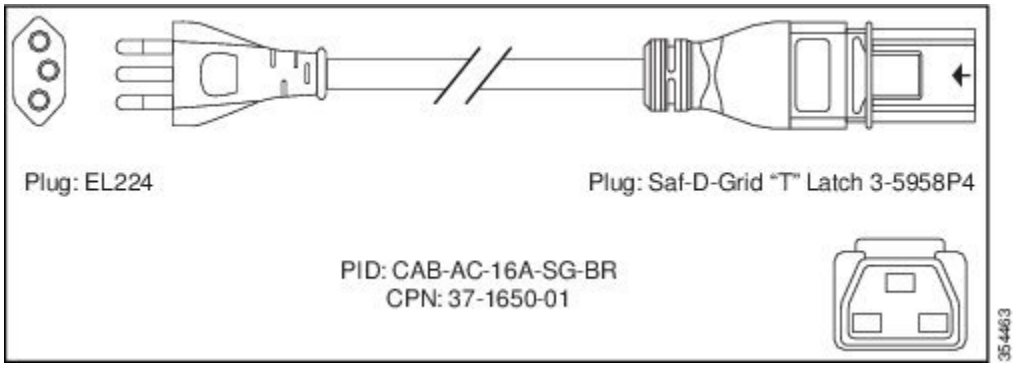


Figure 106: CAB-AC-16A-SG-CH Power Cord

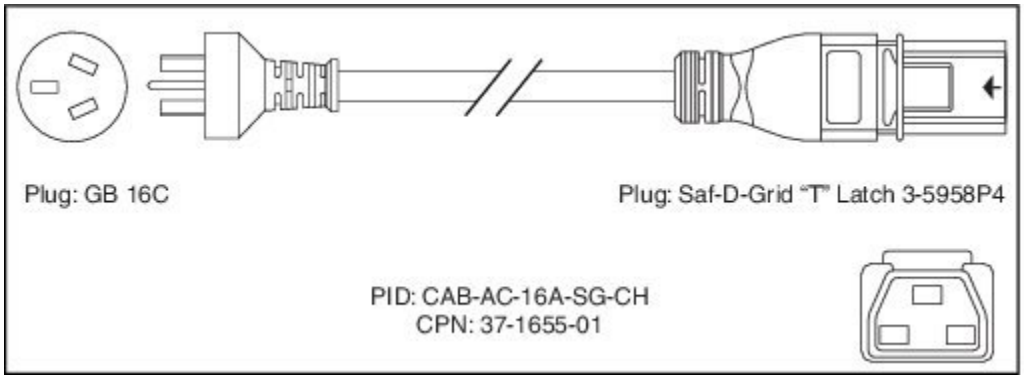


Figure 107: CAB-AC-16A-SG-EU Power Cord

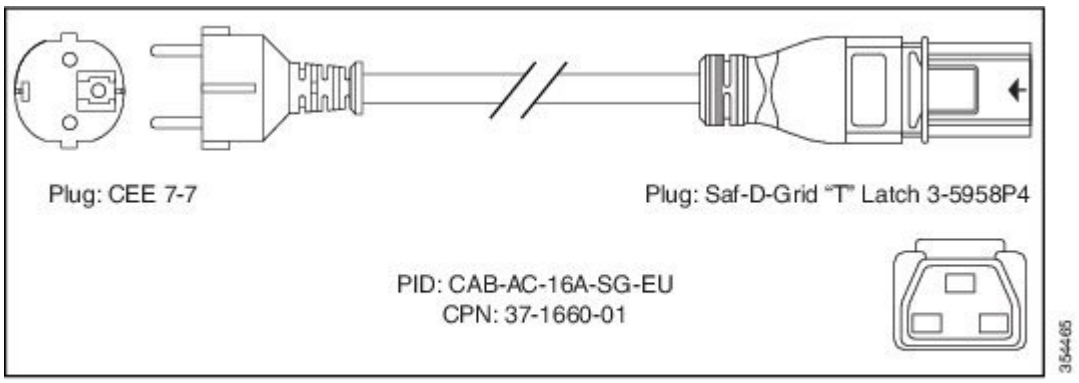


Figure 108: CAB-AC-16A-SG-IND Power Cord

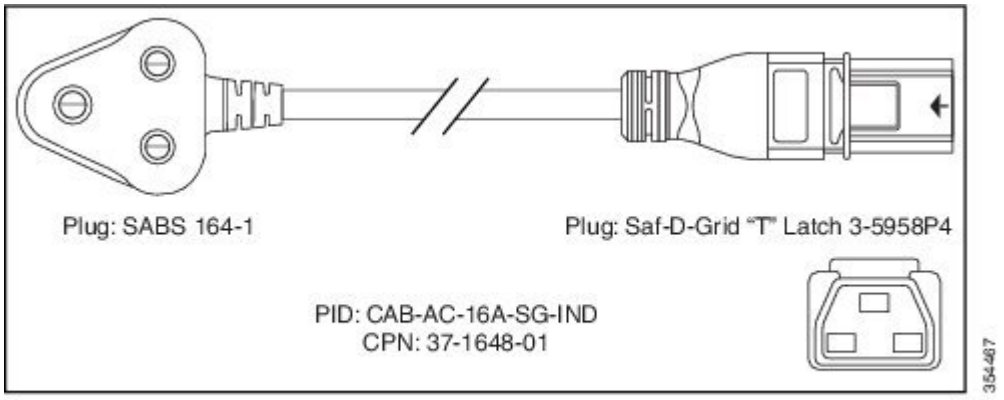


Figure 109: CAB-AC-16A-SG-IN Power Cord

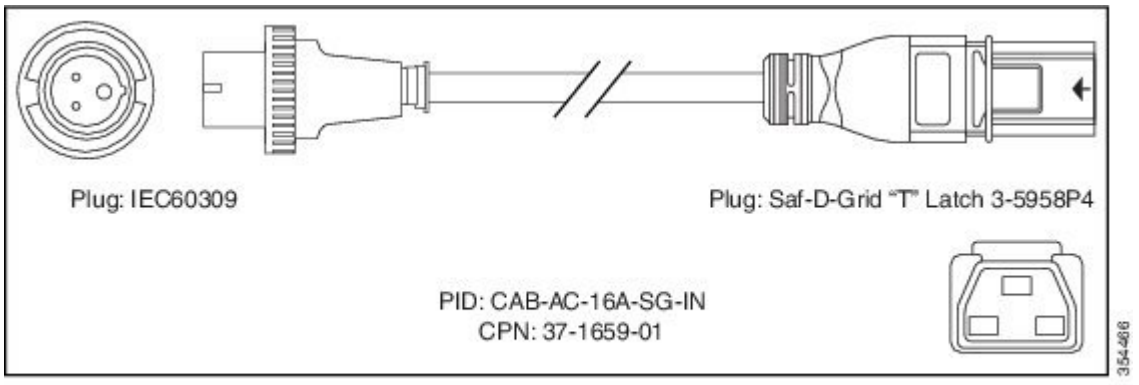


Figure 110: CAB-AC-16A-SG-IS Power Cord

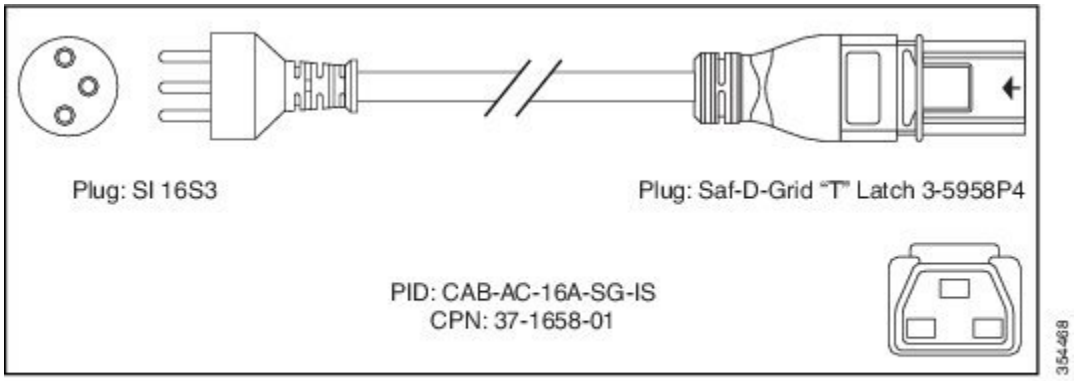


Figure 111: CAB-AC-16A-SG-IT Power Cord

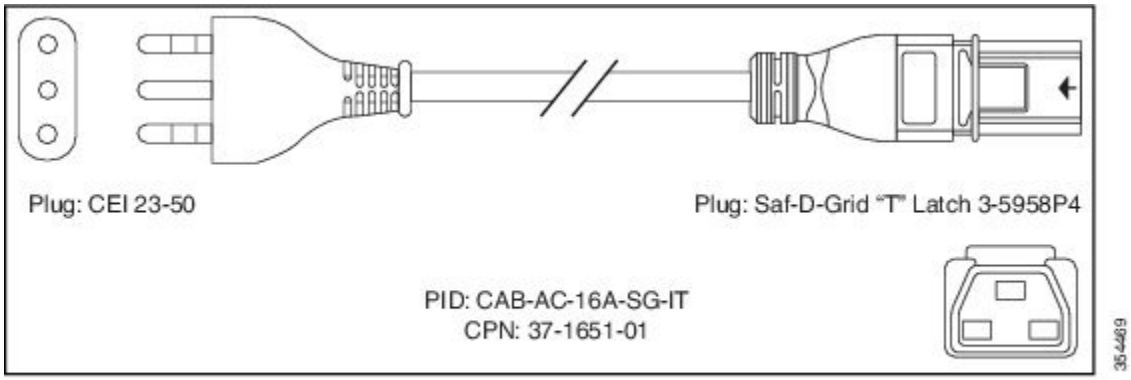


Figure 112: CAB-AC-16A-SG-JPN Power Cord

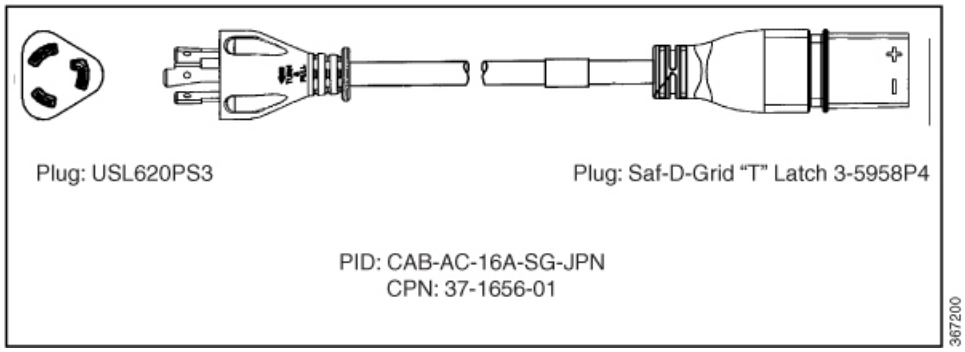


Figure 113: CAB-AC-16A-SG-SA Power Cord

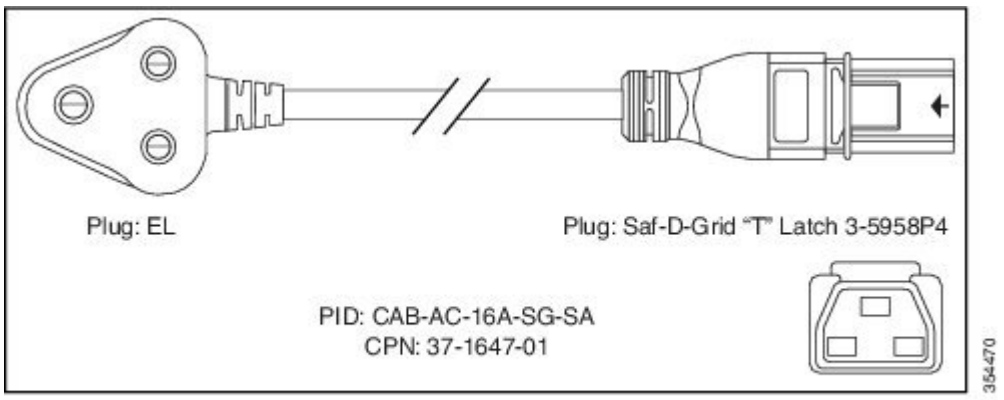


Figure 114: CAB-AC-16A-SG-SW Power Cord

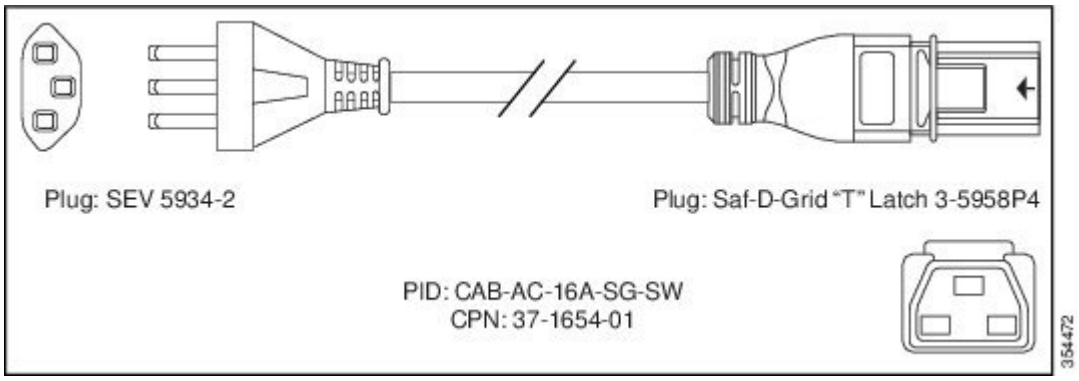


Figure 115: CAB-AC-16A-SG-UK Power Cord

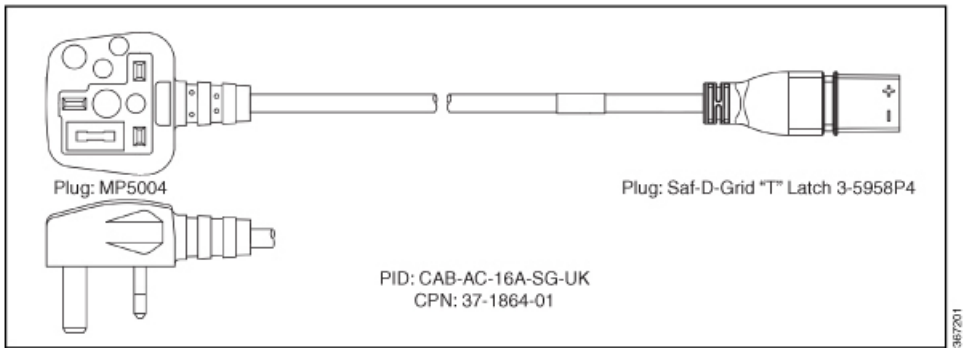


Figure 116: CAB-AC-20A-SG-US Power Cord

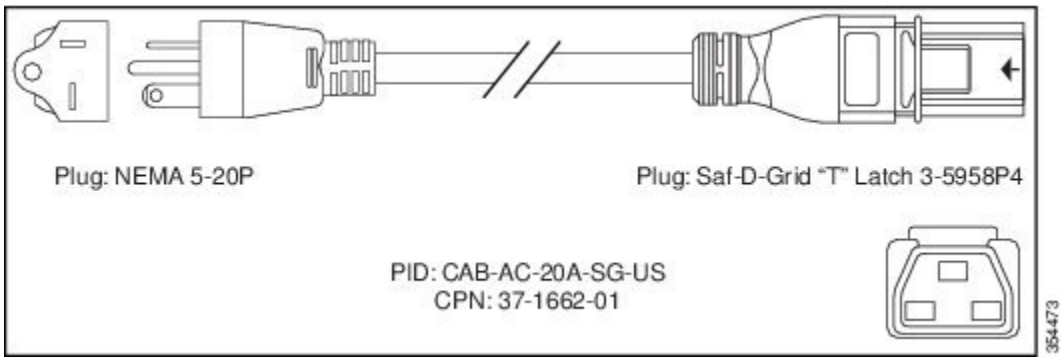


Figure 117: CAB-AC-20A-SG-US1 Power Cord

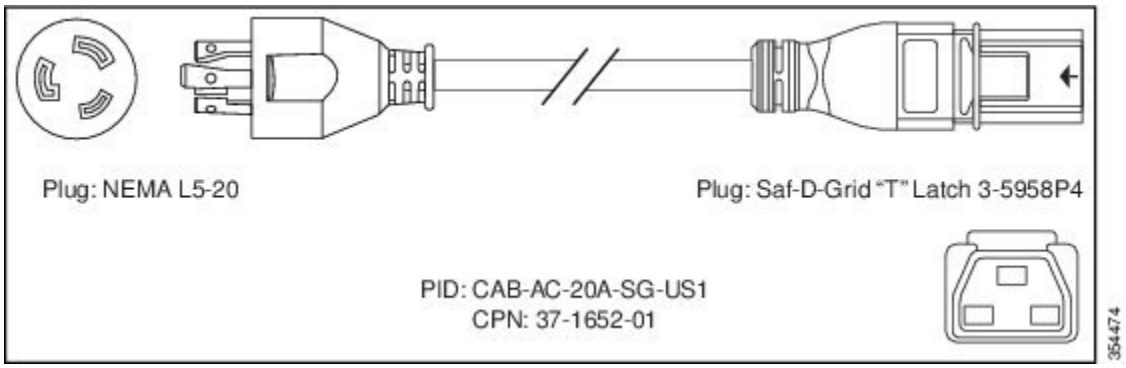


Figure 118: CAB-AC-20A-SG-US2 Power Cord

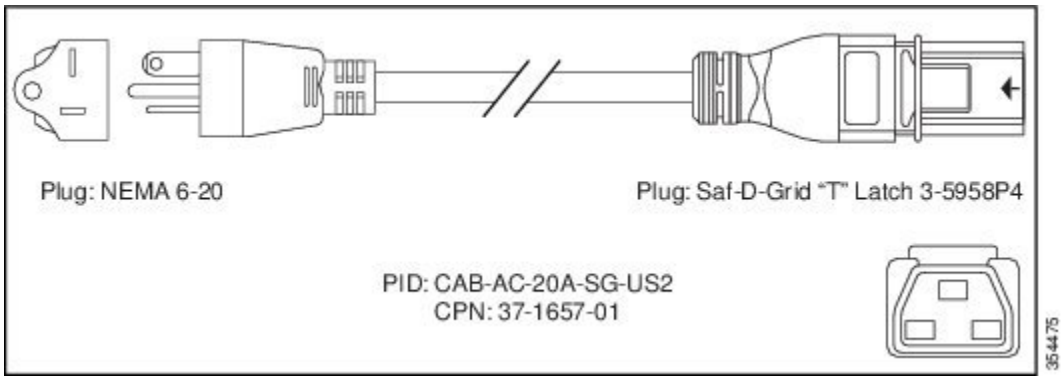


Figure 119: CAB-AC-20A-SG-US3 Power Cord

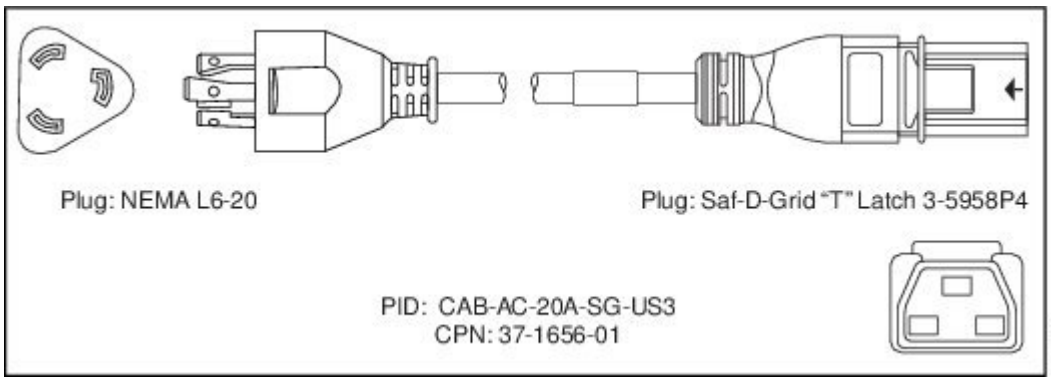


Figure 120: CAB-AC-20A-SG-US4 Power Cord

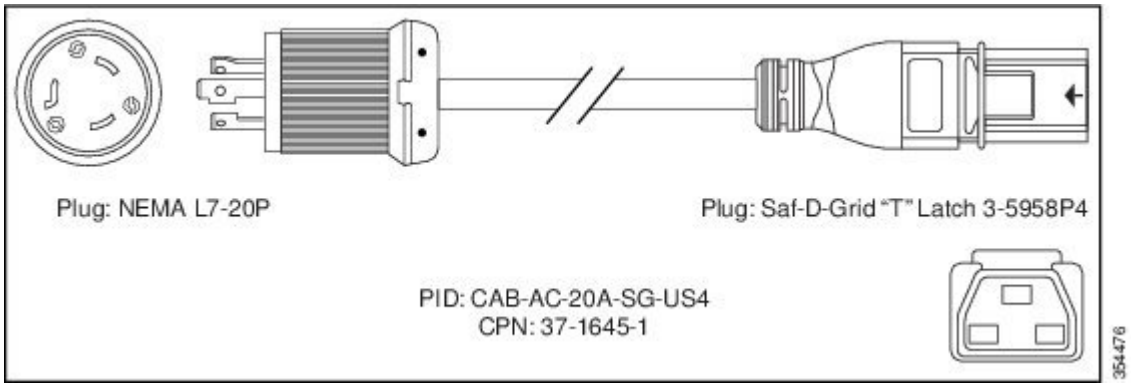


Figure 121: CAB-AC-20A-SG-C20 Power Cord

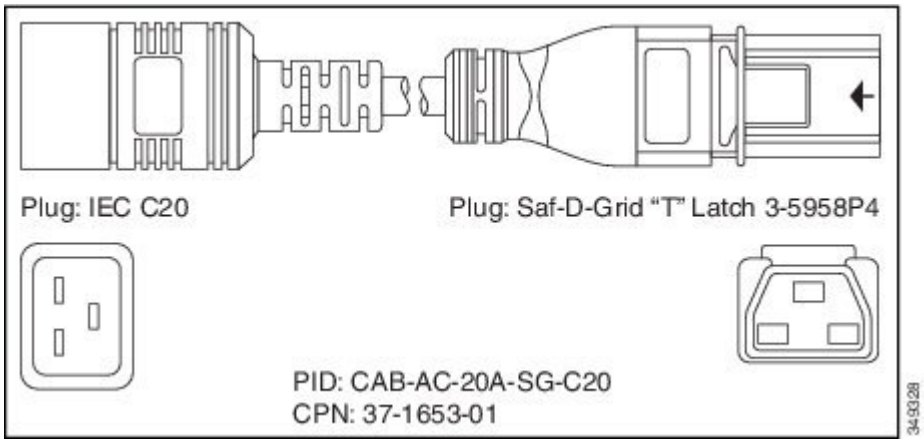


Figure 122: CAB-HV-25A-SG-US2 Power Cord

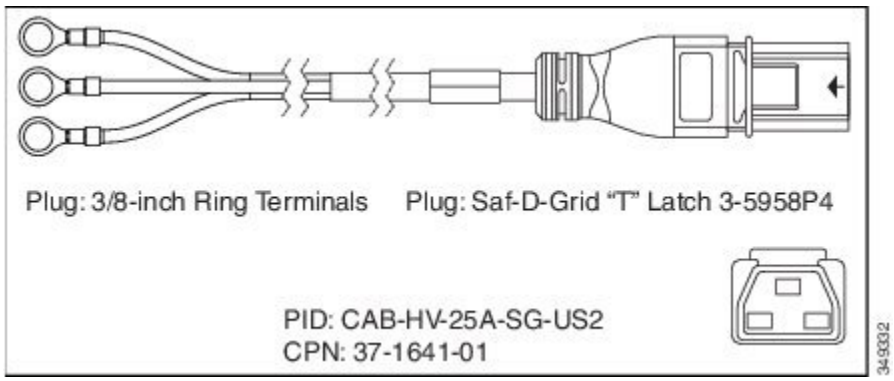


Figure 123: CAB-HV-25A-SG-IN2 Power Cord

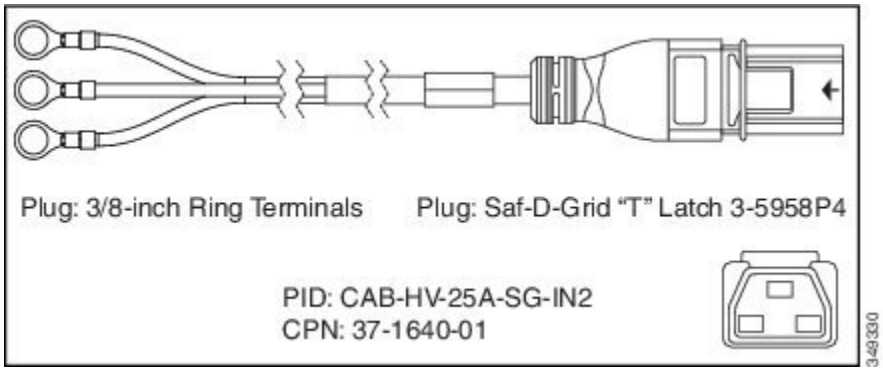


Figure 124: CAB-HV-25A-SG-IN3 Power Cord



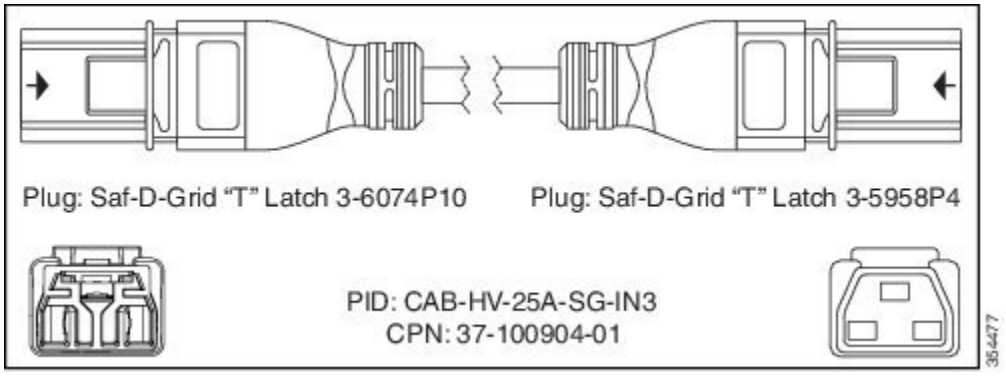


Figure 125: CAB-AC-20A-NA Power Cord

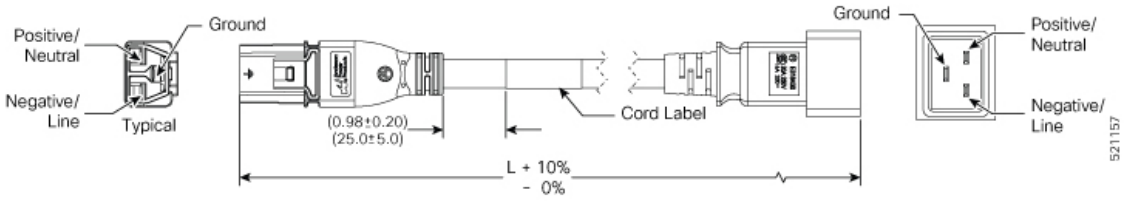

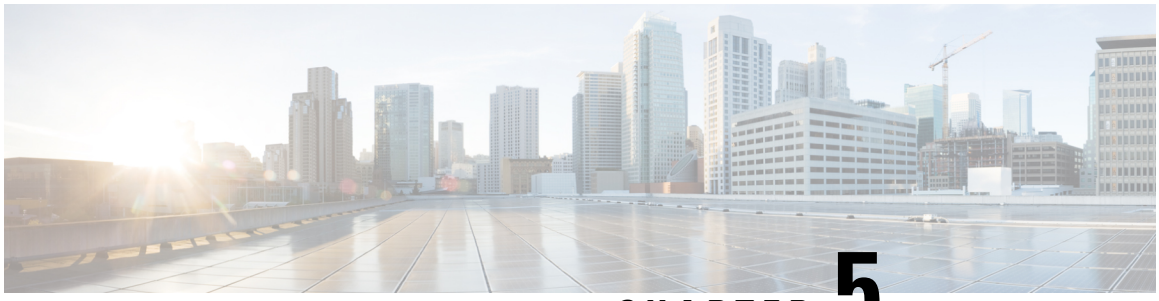

CHAPTER 5

Connect Router to the Network

Note The images in this chapter are only for representation purposes, unless specified otherwise. The chassis' actual appearance and size may vary.

- Connecting a Console to the Switch, on page 129
- Connect the Management Interface, on page 130
- Transceivers, Connectors, and Cables, on page 131
- Install and Remove SFP28 and SFP+ Modules, on page 132
- Install and Remove QSFP Transceiver Modules, on page 139
- Connect Interface Ports, on page 147
- Maintain Transceivers and Optical Cables, on page 148
- Create the Initial Router Configuration, on page 148
- Set Fabric Bandwidth Threshold, on page 161

Connecting a Console to the Switch

Before you create a network management connection for the switch or connect the switch to the network, you must create a local management connection through a console terminal and configure an IP address for the switch. The switch can be accessed using remote management protocols, such as SSH and Telnet. By default, SSH is included in the software image. But telnet is not part of the software image. You must manually install the telnet optional package to use it.

You also can use the console to perform the following functions, each of which can be performed through the management interface after you make that connection:

- configure the switch using the command-line interface (CLI)
- monitor network statistics and errors
- configure Simple Network Management Protocol (SNMP) agent parameters
- initiate software download updates via console

You make this local management connection between the asynchronous serial port on a Route Processor card and a console device capable of asynchronous transmission. Typically, you can use a computer terminal as the console device. On the Route Processor cards, you use the console serial port.

Note Before you can connect the console port to a computer terminal, make sure that the computer terminal supports VT100 terminal emulation. The terminal emulation software makes communication between the switch and computer possible during setup and configuration.

Before you begin

- The switch must be fully installed in its rack. The switch must be connected to a power source and grounded.
- The necessary cabling for the console, management, and network connections must be available.
  - An RJ45 rollover cable and a DB9F/RJ45 adapter.
  - Network cabling should already be routed to the location of the installed switch.

Procedure

Step 1 Configure the console device to match the following default port characteristics:

- 115200 baud
- 8 data bits
- 2 stop bit
- No parity

Step 2 Connect and RJ45 rollover cable to a terminal, PC terminal emulator, or terminal server.

The RJ45 rollover cable is not part of the accessory kit.

Step 3 Route the RJ45 rollover cable as appropriate and connect the cable to the console port on the chassis.

If the console or modem cannot use an RJ45 connection, use the DB9F/RJ45F PC terminal adapter. Alternatively, you can use an RJ45/DSUB F/F or RJ45/DSUB R/P adapter, but you must provide those adapters.

What to do next

You are ready to create the initial switch configuration.

Connect the Management Interface

The Route Processor management port (MGMT ETH) provides out-of-band management, which lets you to use the command-line interface (CLI) to manage the router by its IP address. This port uses a 10/100/1000 Ethernet connection with an RJ-45 interface.

Note In a dual Route Processor router, you can ensure that the active Route Processor card is always connected to the network by connecting the management interface on both Route Processor cards to the network. That is, you can perform this task for each Route Processor card. When the Route Processor card is active, the router automatically has a management interface that is running and accessible from the network.

Caution To prevent an IP address conflict, do not connect the MGMT 100/1000 Ethernet port until the initial configuration is complete.

Before you begin

You must have completed the initial router configuration.

Procedure

Step 1 Connect a modular, RJ-45, UTP cable to the MGMT ETH port on the Route Processor card.

Step 2 Route the cable through the central slot in the cable management system.

Step 3 Connect the other end of the cable to a 100/1000 Ethernet port on a network device.

What to do next

You are ready to connect the interface ports on each of the line cards to the network.

Transceivers, Connectors, and Cables

Transceiver and Cable Specifications

To determine which transceivers and cables are supported by this router, see Cisco Transceiver Modules Compatibility Information.

To see the transceiver specifications and installation information, see Cisco Transceiver Modules Install and Upgrade Guides.

RJ-45 Connectors

The RJ-45 connector connects Category 3, Category 5, Category 5e, Category 6, or Category 6A foil twisted-pair or unshielded twisted-pair cable from the external network to the following module interface connectors:


- Router chassis
  - CONSOLE port

- MGMT ETH port

Caution To comply with GR-1089 intrabuilding, lightning immunity requirements, you must use a foil twisted-pair (FTP) cable that is properly grounded at both ends.

The following figure shows the RJ-45 connector.

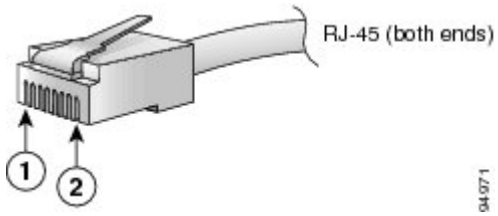Figure 126: RJ-45 Connector



1	Pin 1	2	Pin 8

Install and Remove SFP28 and SFP+ Modules


Before you remove or install an SFP28 and SFP+ module, read the installation information in this section.

Warning **Statement 1051—**Laser Radiation

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.

Caution Protect the line card by inserting a clean SFP28/SFP+ module cage cover, which is shown in the figure below, into the optical module cage when there is no SFP28/SFP+ module installed.

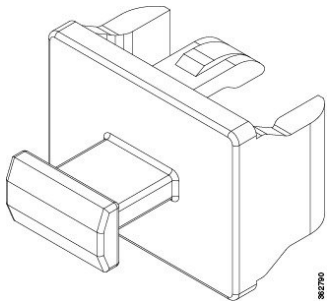Figure 127: SFP28/SFP+ Module Cage Cover



Caution Protect the SFP28 or SFP+ modules by inserting clean dust covers into them after the cables are removed. Be sure to clean the optic surfaces of the fiber cables before you plug them back into the optical ports of another module. Avoid getting dust and other contaminants into the optical ports of your SFP or SFP+ modules, because the optics do not work correctly when obstructed by dust.

Caution We strongly recommended that you do not install or remove the SFP28 or SFP+ module with fiber-optic cables that are attached to it because of the potential of damaging the cable, the cable connector, or the optical interfaces in the module. Disconnect all cables before removing or installing an SFP28 or SFP+ module. Removing and inserting a module can shorten its useful life, so you should not remove and insert modules any more than is absolutely necessary.


Note When installing an SFP28 or SFP+ module, you should hear a click as the triangular pin on the bottom of the module snaps into the hole in the receptacle. The click indicates that the module is correctly seated and secured in the receptacle. Verify that the modules are seated and secured in their assigned receptacles on the line card by firmly pushing on each SFP28 or SFP+ module.

Note For wait time guidelines on the Online Insertion and Removal (OIR) of optics on Cisco 88-LC1-48Y8H-EM line card, refer to the Online Insertion and Removal for optical modules.

Bale Clasp SFP28 or SFP+ Module

The bale clasp SFP28 or SFP+ module has a clasp that you use to remove or install the module (see the figure below).

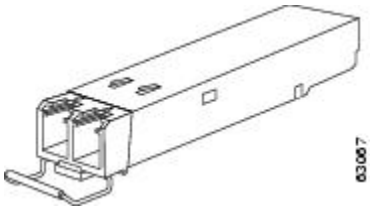Figure 128: Bale Clasp SFP28 or SFP+ Module



Install a Bale Clasp SFP28 or SFP+ Module

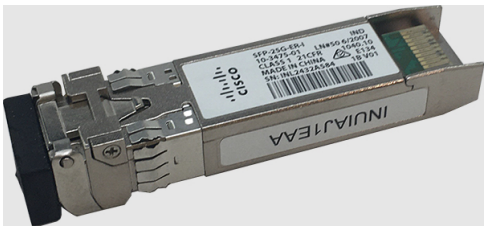
To install this type of SFP28 or SFP+ module, follow these steps:

Procedure

Step 1 Attach an ESD-preventive wrist or ankle strap and follow its instructions for use.

Step 2 Close the bale clasp before inserting the SFP28 or SFP+ module.


Note
88-LC1-52Y8H-EM: For the top and middle rows of SFP28 or SFP+ ports, you must install transceivers right-side up (Cisco transceiver label facing down). For the bottom row of SFP28 or SFP+ ports, you must install transceivers upside down (Cisco transceiver label facing up, see illustration below).



Step 3 Line up the SFP28 or SFP+ module with the port and slide it into the port (see the figure below).

Note
To minimize the chance of damaging transceivers when installing them, slide them gently into their port. Never force transceivers all the way into the port. If the transceiver stops part way into the slot, it might be in the wrong orientation. Remove the transceiver before turning it over and reinstalling it. If positioned correctly, the transceiver slides all the way into the port and clicks when fully installed.

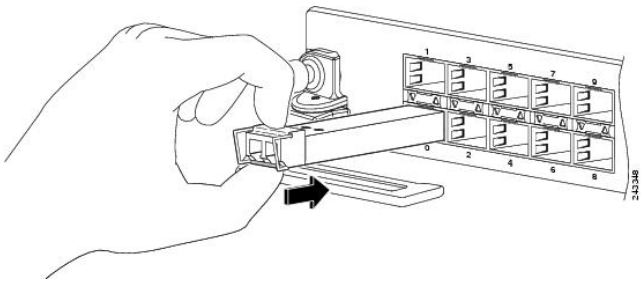Figure 129: Installing a Bale Clasp SFP28 or SFP+ Module into a Port



Note
When installing an SFP28 or SFP+ module, you should hear a click as the triangular pin on the bottom of the SFP28 or SFP+ module snaps into the hole in the receptacle. This click indicates that the module is correctly seated and secured in the receptacle. Verify that the SFP28 or SFP+ modules are seated and secured in their assigned receptacles on the line card by firmly pushing on each SFP28 or SFP+ module.

Remove a Bale Clasp SFP28 or SFP+ Module

To remove this type of SFP28 or SFP+ module, follow these steps:

Procedure

Step 1 Attach an ESD-preventive wrist or ankle strap and follow its instructions for use.

Step 2 Disconnect and remove all interface cables from the ports; note the current connections of the cables to the ports on the line card.


Step 3 Open the bale clasp on the SFP28/SFP+ module with your index finger, as shown in the figure below.

Note
If the bale clasp is obstructed and you cannot use your index finger to open it, use the Optical Transceiver Extraction Tool, a small flat-blade screwdriver, or other long, narrow instrument to open the bale clasp. See Using the Optical Transceiver Extraction Tool, on page 136.

Step 4 Grasp the SFP module between your thumb and index finger and carefully remove it from the port, as shown in the figure below.

Note
This action must be performed during your first instance. After adjacent ports are populated, you may need to use the Optical Transceiver Extraction Tool.

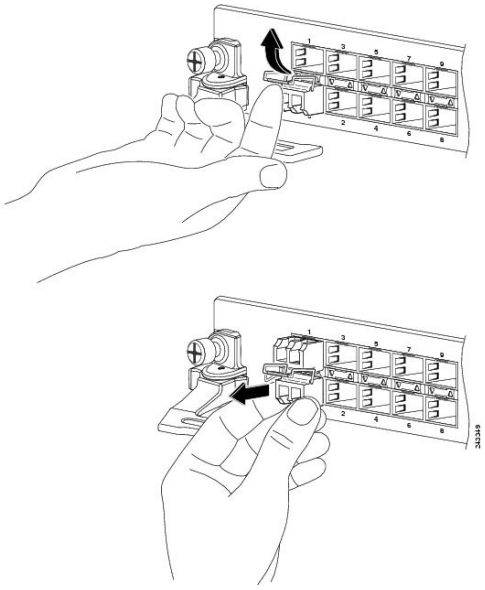Figure 130: Removing a Bale Clasp SFP or SFP+ Module



Step 5 Place the removed SFP module on an antistatic mat, or immediately place it in a static shielding bag if you plan to return it to the factory.


Step 6 Protect your line card by inserting a clean SFP module cage covers into the optical module cage when there is no SFP module installed.

Using the Optical Transceiver Extraction Tool

In a fully loaded 88-LC1-52Y8H-EM line card, the bale clasps of the SFP28 optics can be difficult to access. You can use the Optical Transceiver Extraction Tool to remove the network cable, open the bale clasp, and remove the transceiver.

Note SFP28 optics with pull tabs do not require the tool.

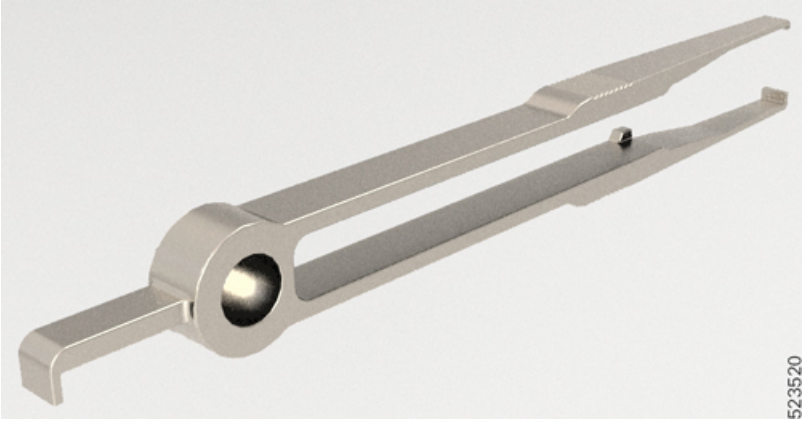Figure 131: Optical Transceiver Extraction Tool




To use the Optical Transceiver Extraction Tool to remove an SFP28 or SFP+ module, follow these steps:

Procedure

Step 1 Remove the optical cable from the transceiver:

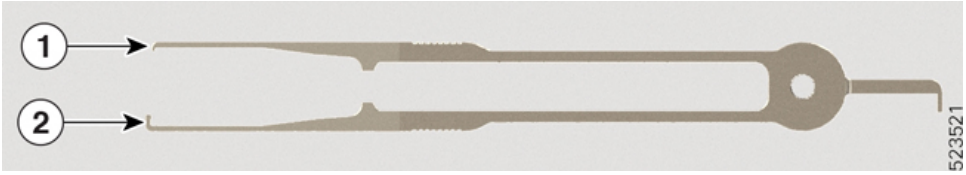
a) Hold the tool with the small hook at the top, as shown in the illustration.



1	Small hook: • Press down on cable connector • Grasp bale clasp
2	Large hook: • Grab the open bale clasp • Remove the transceiver from the port

b) Place the opening of the extraction tool over the optical cable connector.

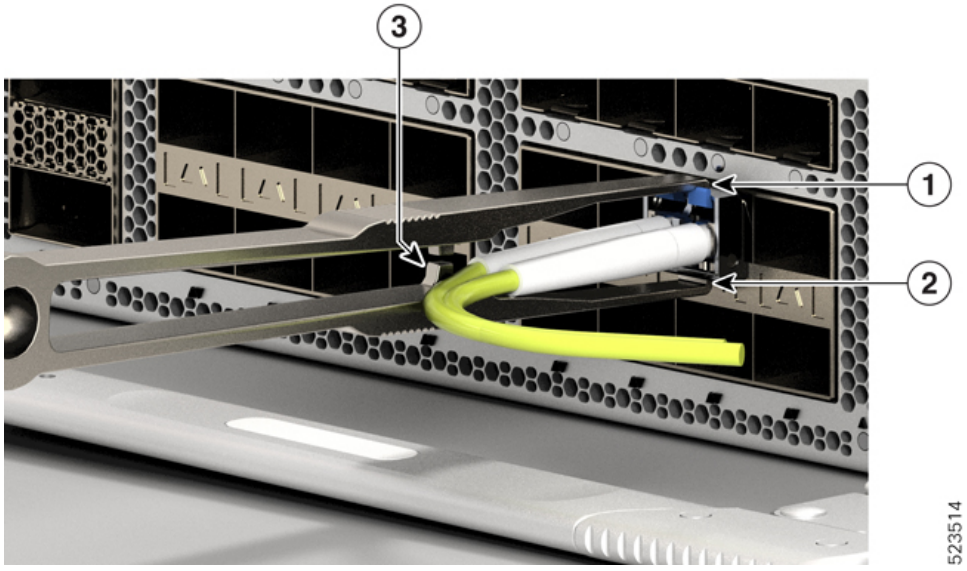Note
The large hook should be in contact with the transceiver so that the small hook can squeeze the cable connector.



1	Small hook
2	Large hook, in contact with transceiver
3	Do not pinch optical cable

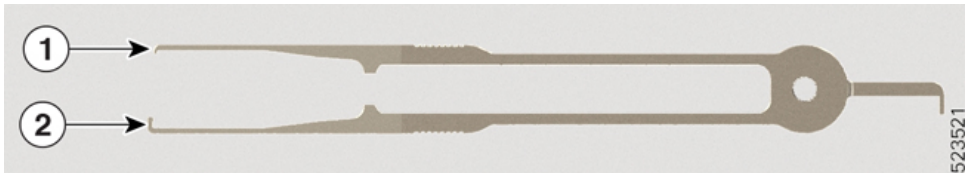
c) Squeeze the tool to press down on the optical cable connector latch.

Note
Make sure that the tool does not pinch the optical cable.

d) Pull the cable from the transceiver.

Step 2 Remove the transceiver from the port:


a) Hold the tool with the small hook at the top, as shown in the illustration.



1	Small hook: • Press down on cable connector • Grasp bale clasp


2	Large hook: • Grab the open bale clasp • Remove the transceiver from the port

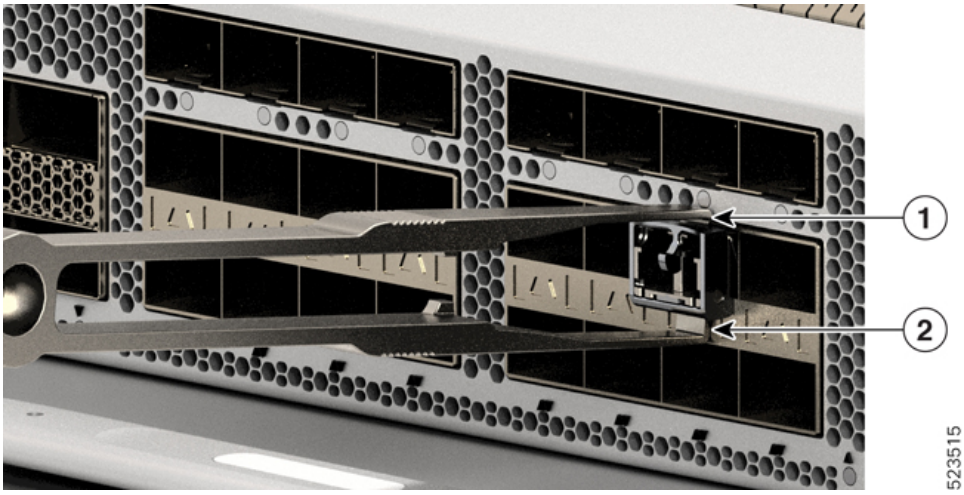b) Use the small hook on the top to grasp the bale clasp.




1	Small hook
2	Large hook

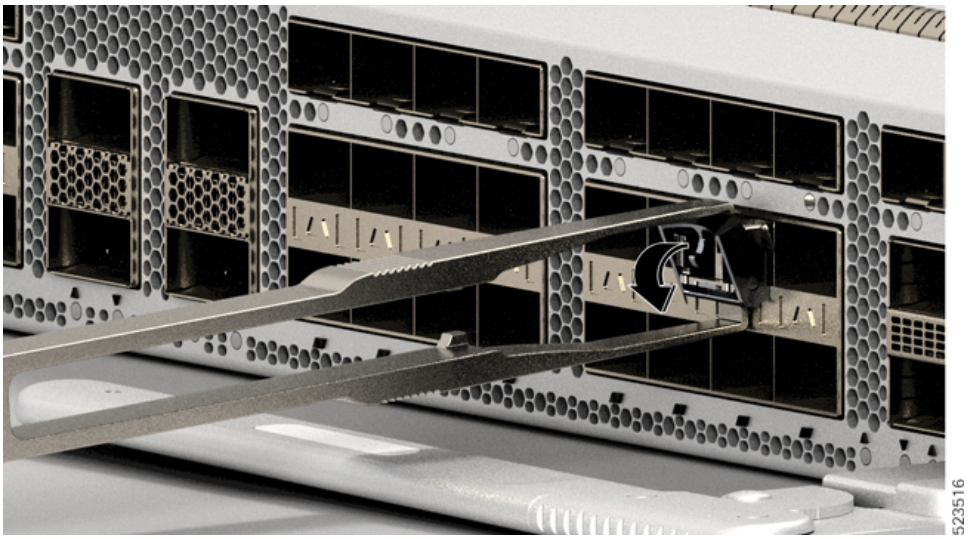c) Open the bale clasp latch.




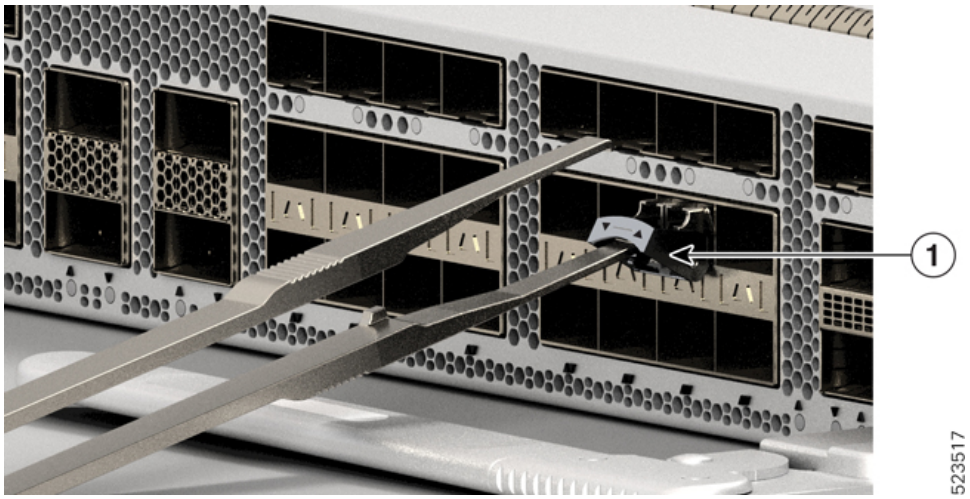d) Use the larger hook on the bottom to grab the open bale clasp.



1	Large hook

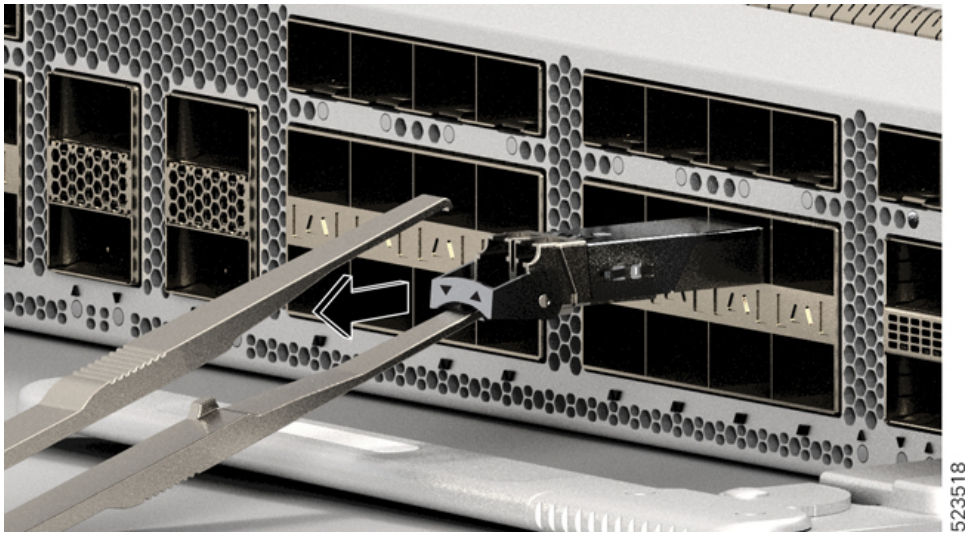e) Remove the transceiver from the port.



f) Place the removed SFP28 module on an antistatic mat, or immediately place it in a static shielding bag if you plan to return it to the factory.

g) Protect your line card by inserting a clean SFP28 module cage cover into the optical module cage when there is no SFP28 module installed.


Install and Remove QSFP Transceiver Modules

This section provides the installation, cabling, and removal instructions for the Quad Small Form-Factor Pluggable transceiver modules. Refer to the *Cisco Optical Transceiver Handling Guide* for additional details on optical transceivers.

Caution When inserting optical transceiver modules into host ports, handle them carefully. Ensure that the applied force does not exceed 20 lbs (9.1kg).

The following figure shows a 400-Gigabit QSFP-DD optical transceiver.

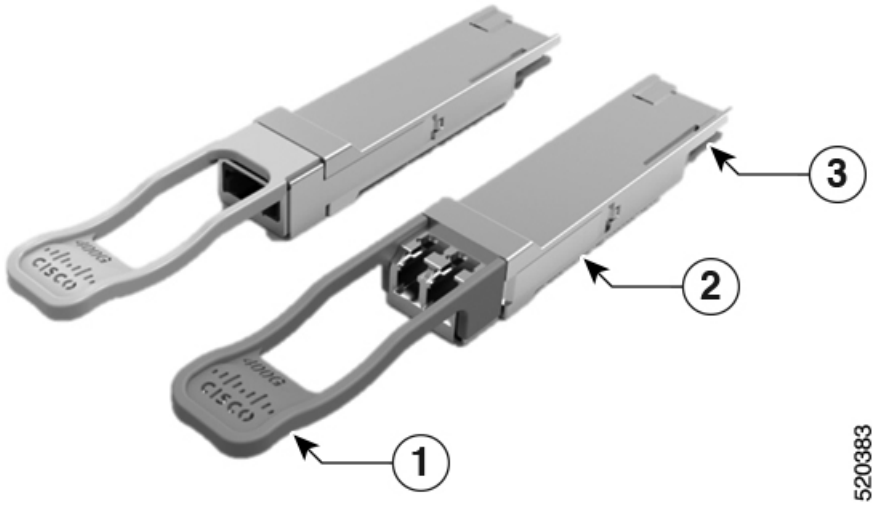Figure 132: 400-Gigabit QSFP-DD Transceiver Module



1	Pull-tab	2	QSFP-DD transceiver body
3	Electrical connection to the module circuitry		

Required Tools and Equipment

You need these tools to install the transceiver modules:

- Wrist strap or other personal grounding device to prevent ESD occurrences.
- Antistatic mat or antistatic foam to set the transceiver on.
- Fiber-optic end-face cleaning tools and inspection equipment.

Installing the Transceiver Module

Warning **Statement 1079—**Hot Surface

This icon is a hot surface warning. To avoid personal injury, do not touch without proper protection.



Caution The transceiver module is a static-sensitive device. Always use an ESD wrist strap or similar individual grounding device when handling transceiver modules or coming into contact with system modules.

Caution Protect the transceiver ports by inserting clean dust caps (8000-QSFP-DCAP) into any ports not in use and do not have optical modules plugged in. If optical modules are plugged in but not in use, the dust caps that were supplied with the optical modules, should be used to protect the TX and RX surfaces of the optical module.

Be sure to clean the optic surfaces of the fiber cables before you plug them back into the optical ports of another module.

The router ships with dust caps plugged in. We highly recommend you to keep the dust caps plugged in until you are ready to plug an optic.

The dust caps protect the ports from possible EMI interference and also avoid contamination due to dust collection. To meet the EMI interference requirements, you must use the metal dust caps when the ports are not in use by optical modules.

The following table provides the supported port details and operating temperature of the QDD-400G-ZR-S and QDD-400G-ZRP-S optical modules when port side exhaust or port side intake fans and power supplies are used.

Table 22: Supported Ports and Operating Temperature of QDD-400G-ZR-S, QDD-400G-ZRP-S, and DP04QSDD-HE0 Optical Modules

Line Cards	Port Side Intake Fans and Power Supplies	Port Side Exhaust Fans and Power Supplies	Port Side Intake Operating Temperature

8800-LC-36FH	• QDD-400G-ZR-S – supported on all 400G ports, maximum of 36 ports. • QDD-400G-ZRP-S – supported on even-numbered 400G ports, maximum of 18 ports. • DP04QSDD-HE0 – supported on even-numbered 400G ports, maximum of 18 ports.	NA	40° C at sea level or 35° C at 1500 meter
88-LC0-36FH-M	• QDD-400G-ZR-S – supported on all 400G ports, maximum of 36 ports. • QDD-400G-ZRP-S – supported on even-numbered 400G ports, maximum of 18 ports. • DP04QSDD-HE0 – supported on even-numbered 400G ports, maximum of 18 ports.	NA	40° C at sea level or 35° C at 1500 meter
88-LC0-36FH	• QDD-400G-ZR-S – supported on all 400G ports, maximum of 36 ports. • QDD-400G-ZRP-S – supported on even-numbered 400G ports, maximum of 18 ports. • DP04QSDD-HE0 – supported on all 400G ports, maximum of 36 ports.	NA	40° C at sea level or 35° C at 1500 meter

88-LC0-34H14FH	• QDD-400G-ZR-S – supported on all 400G ports, maximum of 14 ports. • QDD-400G-ZRP-S and DP04QSDD-HE0 are not supported on Cisco 8804 Router. • QDD-400G-ZRP-S and DP04QSDD-HE0 are supported on Cisco 8808 Router only in slot 3 and slot 4 • QDD-400G-ZRP-S and DP04QSDD-HE0 are supported on Cisco 8812 Router and Cisco 8818 Router.	NA	40° C at sea level or 35° C at 1500 meter

The QSFP transceiver module has a pull-tab latch. To install a transceiver module, follow these steps:

Procedure

Step 1 Attach an ESD wrist strap to yourself and a properly grounded point on the chassis or the rack.


Step 2 Remove the transceiver module from its protective packaging.

Step 3 Check the label on the transceiver module body to verify that you have the correct model for your network. Do not remove the dust plug until you're ready to attach the network interface cable. Dust plug is not shown in the images.

Step 4 Hold the transceiver by the pull-tab so that the identifier label is on the top.

Step 5 Align the transceiver module in front of the module's transceiver socket opening and carefully slide the transceiver into the socket until the transceiver contact with the socket electrical connector.

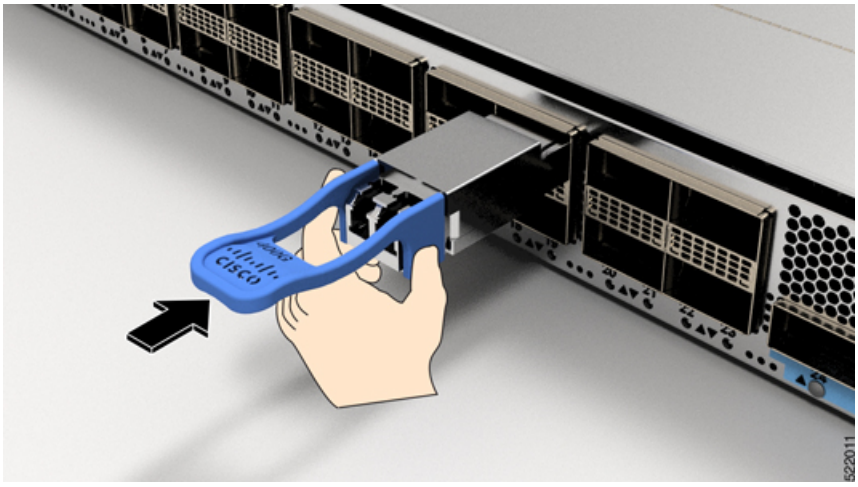
Figure 133: Installing the QSFP Transceiver Module



Step 6 Press firmly on the front of the transceiver module with your thumb to fully seat the transceiver in the module's transceiver socket (see the below figure).

Caution
If the latch isn't fully engaged, you might accidentally disconnect the transceiver module.

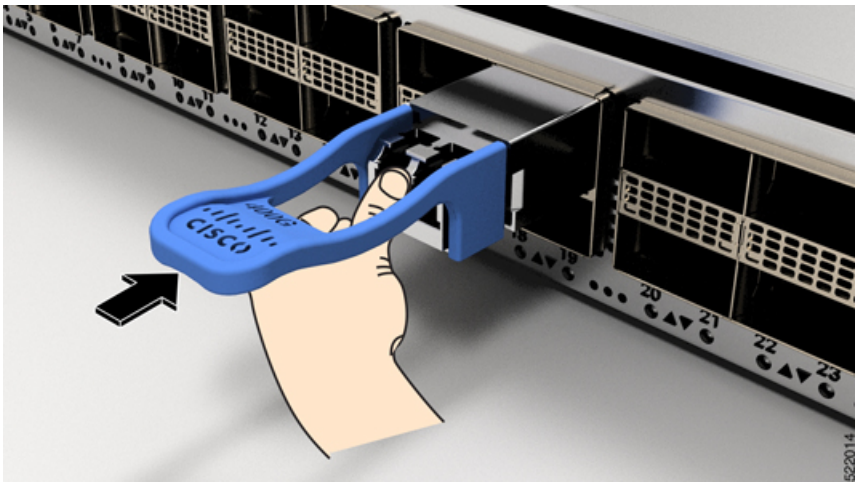Figure 134: Seating the QSFP Transceiver Module



Attach the Optical Network Cable

Before you begin

Before you remove the dust plugs and make any optical connections, follow these guidelines:

- Keep the protective dust plugs installed in the unplugged fiber-optic cable connectors and in the transceiver optical bores until you are ready to make a connection.

- Inspect and clean the optical connector end faces just before you make any connections.
- Grasp the optical connector only by the housing to plug or unplug a fiber-optic cable.

Note The transceiver modules and fiber connectors are keyed to prevent incorrect insertion.

Note The multiple-fiber push-on (MPO) connectors on the optical transceivers support network interface cables with either physical contact (PC) or ultra-physical contact (UPC) flat polished face types. The MPO connectors on the optical transceivers do not support network interface cables with an angle-polished contact (APC) face type.


Note Inspect the MPO connector for the correct cable type, cleanliness, and any damage. For complete information on inspecting and cleaning fiber-optic connections, see the *Inspection and Cleaning Procedures for Fiber-Optic Connections* document.

Procedure

Step 1 Remove the dust plugs from the optical network interface cable MPO connectors and from the transceiver module optical bores. Save the dust plugs for future use.

Step 2 Attach the network interface cable MPO connectors immediately to the transceiver module.

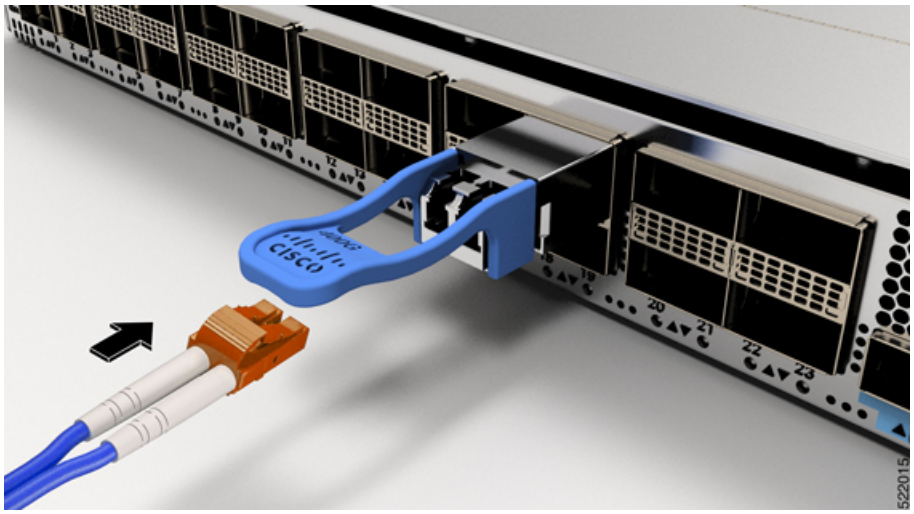Figure 135: Cabling a Transceiver Module



Removing the Transceiver Module

Caution The transceiver module is a static-sensitive device. Always use an ESD wrist strap or similar individual grounding device when handling transceiver modules or coming into contact with modules.

To remove a transceiver module, follow these steps:

Procedure

Step 1 Disconnect the network interface cable from the transceiver connector.

Step 2 Install the dust plug immediately into the transceiver's optical bore.

Step 3 Grasp the pull-tab and gently pull to release the transceiver from the socket.

Figure 136: Removing the QSFP Transceiver Module


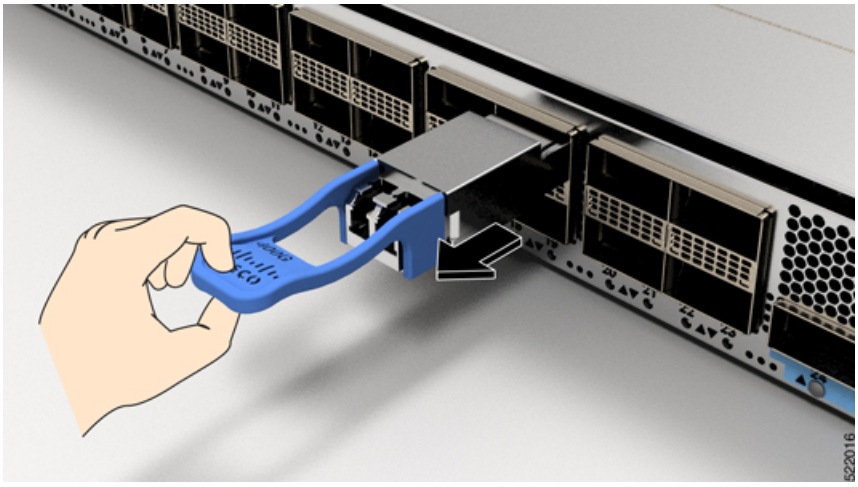


Figure 137: Removing the QSFP Transceiver Module from Cisco 8202-32FH-M Router

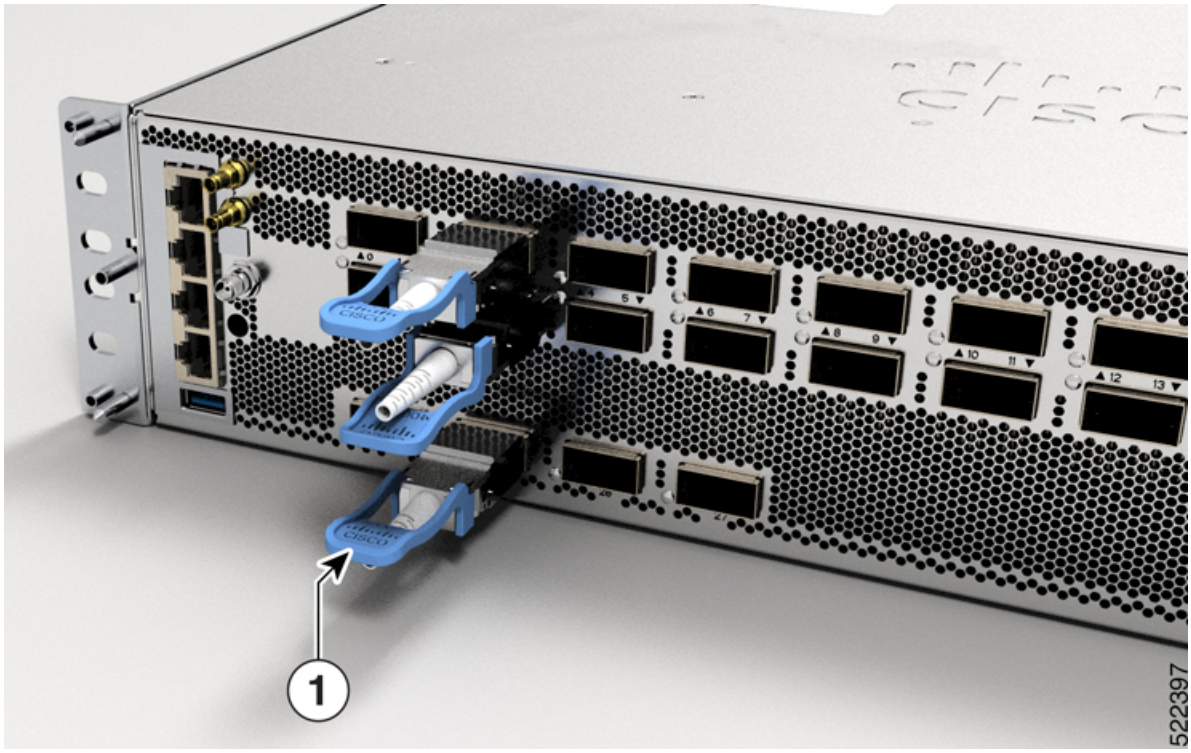

1	Grasp the pull-tab and gently pull to release the transceiver from the socket.

Step 4 Slide the transceiver out of the socket.

Step 5 Place the transceiver module into an antistatic bag.

Connect Interface Ports

You can connect optical interface ports on line cards with other devices for network connectivity.

Connect a Fiber-Optic Port to the Network

Depending on which line card model that you are using, you can use either QSFP+ or QSFP28 transceivers. Some transceivers work with fiber-optic cables that you attach to the transceivers and other transceivers work with pre-attached copper cables. You must install a transceiver in the port before installing the fiber-optic cable in the transceiver.

Caution Removing and installing a transceiver can shorten its useful life. Do not remove and insert transceivers any more than is absolutely necessary. We recommend that you disconnect cables before installing or removing transceivers to prevent damage to the cable or transceiver.

Disconnect Optical Ports from the Network

When you need to remove fiber-optic transceivers, you must first remove the fiber-optic cables from the transceiver before you remove the transceiver from the port.

Maintain Transceivers and Optical Cables

Refer to Inspection and Cleaning Procedures for Fiber-Optic Connections document for inspection and cleaning processes for fiber optic connections.

Create the Initial Router Configuration

Assign an IP address to the router management interface to connect the router to the network.

When you initially power up the router, it boots up and displays a series of configuration-related questions. You can use the default choices for each configuration except for the IP address, which you must provide.

Note These routers are designed to boot up in less than 30 mins, provided the neighboring devices are in full-operational state.

When the system is powered on and the console port is connected to the terminal, the RP CPU messages are seen. You can toggle between BMC CPU messages and RP CPU messages by pressing the hot-key sequence Ctrl-O.

To configure IP address for Ethernet port on BMC and other additional information that is related to BMC, please see the *System Setup Guide for Cisco 8000 Series Routers.*

Before you begin

- A console device must be connected with the router.
- The router must be connected to a power source.
- Determine the IP address and netmask that is needed for the Management interfaces: `MgmtEth0/RP0/CPU0/0` and `MgmtEth0/RP1/CPU0/0:`

Procedure

Step 1 Power up the router.

The LEDs on each power supply light up (green) when the power supply units are sending power to the router, and the software asks you to specify a password to use with the router.

Step 2 When the system boots up for the first time, the system prompts you to create a new username and password. The following prompt appears:

```
!!!!!!!!!!!!!!!!!!! NO root-system username is configured. Need to configure root-system
username. !!!!!!!!!!!!!!!!!!!

--- Administrative User Dialog ---


Enter root-system username:
% Entry must not be null.

Enter root-system username: cisco
Enter secret:
Use the 'configure' command to modify this configuration.
User Access Verification

Username: cisco
Password:


RP/0/RP0/CPU0:ios#
```

Step 3 Enter a new password to use for this router.

The software checks the security strength of your password and rejects your password if the system does not consider it as a strong password. To increase the security strength of your password, make sure that it adheres to the following guidelines:

- At least eight characters
- Minimizes or avoids the use of consecutive characters (such as "abcd")
- Minimizes or avoids repeating characters (such as "AAA")
- Does not contain recognizable words in the dictionary
- Does not contain proper names
- Contains both uppercase and lowercase characters
- Contains numbers and letters

Note
Cleartext passwords cannot include the dollar sign ($) special character.

Tip
If a password is trivial (such as a short, easy-to-decipher password), the software rejects that password. Passwords are case-sensitive.

When you enter a strong password, the software asks you to confirm the password.

Step 4 Reenter the password.

When you enter the same password, the software accepts the password.

Step 5 Enter the configuration mode.

Step 6 Enter the IP address for the management interface. If using dual RPs, enter the IP address on both management interfaces.

Step 7 Enter a network mask for the management interface.

Step 8 The software asks whether you want to edit the configuration.

- **no** - select this option if you don't want to edit your configuration.
- **yes** - select this option if you want to edit your configuration.

Note
We recommend that you configure the system location altitude for fan control. This configuration allows you to specify the chassis altitude, so the router can adjust the fan speed to compensate for lower cooling capability at higher altitudes. For more details, see the **environment altitude** command.

Verify Chassis Installation

After installing the chassis, use the following **show** commands to verify the installation and configuration in the EXEC mode. Any issue if detected, take corrective action before making further configurations.

Command	Description
show platform	Displays the state information of each card.
show redundancy	Displays the status of route processor redundancy.
show led	Displays LED information for the router, or for a specific LED location.
show hw-module fpd	Displays field-programmable device (FPD) compatibility for all modules or a specific module.
show alarms brief system active	Displays all existing alarms in the router.
show media	Displays the current state of the disk storage media.
show inventory	Displays information about the field replaceable units (FRUs), including product IDs, serial numbers, and version IDs.
show environment	Displays all the environment-related router information.

Command	Description

show environment temperature	Displays temperature readings for card temperature sensors. Each Route Processor, line card, and fabric cards have temperature sensors with two thresholds:
	• Minor temperature threshold – When a minor threshold is exceeded, minor alarm occurs and the following actions occur for all four sensors:
	  • Displays system messages
	  • Sends SNMP notifications (if configured)
	  • Log environmental alarm event that can be reviewed by running the show alarm command.
	• Major temperature threshold – When a major threshold is exceeded, a major alarm occurs and the following actions occur:
	  • For sensors 1, 3, and 4 (outlet and on board sensors), the following actions occur:
	  • Displays system messages.
	  • Sends SNMP notifications (if configured).
	  • Logs environmental alarm event that can be reviewed by running the show alarm command.
	  • For sensor 2 (intake sensor), the following actions occur:
	  • If the threshold is exceeded in a switching card, only that card is shut down.
	  • If the threshold exceeds an active Route Processor card with HA-standby or standby present, only that Route Processor card is shut down and the standby Route Processor card takes over.
	  • If you do not have a standby Route Processor card in your router, you have up to 2 minutes to decrease the temperature. During this interval, the software monitors the temperature every 5 seconds and continuously sends system messages as configured.
	Note
	• Cisco recommends that you install dual Route Processor cards.
	• For some card temperature sensors, the temperature thresholds for both minor and major might display 'NA'. This is an expected behaviour and indicates that there are no alarms for those corresponding thresholds.

show environment power	Displays the power usage information for the entire router.
show environment voltage	Displays the voltage for the entire router.
show environment current	Displays the current environment status.

Command	Description
show environment fan	Displays the status of the fan trays.

The following example shows sample output from the **show environment** command:

```
==============================================================================================================
Location  TEMPERATURE                          Value     Crit    Major    Minor    Minor
  Major    Crit
          Sensor                             (deg C)     (Lo)     (Lo)     (Lo)     (Hi)
   (Hi)    (Hi)
--------------------------------------------------------------------------------------------------------------
0/RP0/CPU0
          Inlet_Temp                           30      -10       -5        0       46
    50       52
          X86_CORE_5_T                         72      -10       -5        0       NA
   100      105
          DIMM_TEMP1                           44      -10       -5        0       NA
    95      100
          DIMM_TEMP2                           43      -10       -5        0       NA
    95      100
          SSD_Temp                             48      -10       -5        0       NA
    80       83
          T1_2PLUS1_TEMP                       45      -10       -5        0      125
   130      135
          T1_1PLUS1_TEMP                       44      -10       -5        0      125
   130      135
          Outlet_Temp                          44       NA       NA       NA       NA
    NA      140
          Hot_Spot_Temp                        44       NA       NA       NA       NA
    NA      140
          X86_PKG_TEMP                         72      -10       -5        0       NA
   100      105
          X86_CORE_0_T                         73      -10       -5        0       NA
   100      105
          X86_CORE_1_T                         72      -10       -5        0       NA
   100      105
          X86_CORE_2_T                         73      -10       -5        0       NA
   100      105
          X86_CORE_3_T                         73      -10       -5        0       NA
   100      105
          X86_CORE_4_T                         73      -10       -5        0       NA
   100      105

==============================================================================================================
Location  VOLTAGE                              Value    Crit      Minor     Minor
Crit
          Sensor                               (mV)     (Lo)      (Lo)      (Hi)
(Hi)
--------------------------------------------------------------------------------------------------------------
0/RP0/CPU0
          IBV                                  10288    8928      9312      11536
11984
          VP1P8_OCXO                           1806     1638      1710      1890
1962
          P1_8V                                1816     1638      1710      1890
1962
          P1_0V_ALDRIN_SD                      1006     910       950       1050
1090
          P1_0V_ALDRIN_CRE                     985      930       970       1030
```

```
1070
          P1V                                       1006       910       950       1050
1090
          P0_9V                                     911        819       855       945
981

==============================================================================================

Location  CURRENT                                   Value
          Sensor                                    (mA)
----------------------------------------------------------------------------------------------
0/RP0/CPU0
          MB_VP54P0V_curr                           1448

==============================================================================================


                                                 Fan speed (rpm)
Location      FRU Type                          FAN_0    FAN_1   FAN_2   FAN_3   FAN_4   FAN_5

----------------------------------------------------------------------------------------------
0/FT0         8812-FAN                           8130     8100    8160    8160    8160    8100

0/FT1         8812-FAN                           8190     8160    8250    8190    8160    8160

0/FT2         8812-FAN                           8130     8160    8190    8190    8220    8190

0/FT3         8812-FAN                           8460     8400    8460    8400    8400    8370

0/PT0-PM0     PSU6.3KW-HV                          7010    7290
0/PT0-PM1     PSU6.3KW-HV                          7204    7677
0/PT0-PM2     PSU6.3KW-HV                          8559    8709
================================================================================
CHASSIS LEVEL POWER INFO: 0
================================================================================
   Total output power capacity (N + 1)             :   17400W +        0W
   Total output power required                     :   15280W
   Total power input                               :    8571W
   Total power output                              :    8185W

================================================================================
   Power       Supply         -------Input--------   -----Output---     Status
   Module      Type            Volts A/B   Amps A/B   Volts     Amps
================================================================================
   0/PT0-PM0   PSU6.3KW-HV     205.0/205.3 7.4/7.6    54.0      54.4     OK
   0/PT0-PM1   PSU6.3KW-HV     205.0/205.0 7.5/7.9    54.3      56.0     OK
   0/PT0-PM2   PSU6.3KW-HV     0.0  /205.0 0.0/11.4   53.7      41.1     OK

Total of Power Modules:      10307W/46.0A              9691W/176.0A

================================================================================
   Location     Card Type               Power       Power        Status
                                        Allocated   Used
                                        Watts       Watts
================================================================================
   0/RP0/CPU0   8800-RP                 249         80           ON
   0/RP1/CPU0   8800-RP                 249         73           ON
   0/0/CPU0     -                       25          -            RESERVED
   0/1/CPU0     8800-LC-48H             1365        499          ON
   0/2/CPU0     8800-LC-48H             1365        499          ON
   0/3/CPU0     8800-LC-48H             1365        509          ON
   0/4/CPU0     8800-LC-48H             1365        503          ON
   0/5/CPU0     8800-LC-48H             1365        511          ON
   0/6/CPU0     8800-LC-48H             1365        664          ON
   0/7/CPU0     8800-LC-48H             1365        501          ON
   0/8/CPU0     8800-LC-48H             1365        499          ON
```

```
  0/9/CPU0     8800-LC-48H            1365        501          ON
  0/10/CPU0    8800-LC-48H            1365        495          ON
  0/11/CPU0    8800-LC-48H            1365        506          ON
  0/FC0        -                      1040        -            RESERVED
  0/FC1        8812-FC                1040        524          ON
  0/FC2        8812-FC                1040        528          ON
  0/FC3        8812-FC                1040        523          ON
  0/FC4        8812-FC                1040        529          ON
  0/FC5        8812-FC                1040        531          ON
  0/FC6        -                      1040        -            RESERVED
  0/FC7        -                      1040        -            RESERVED
  0/FT0        8812-FAN               762         370          ON
  0/FT1        8812-FAN               762         364          ON
  0/FT2        8812-FAN               762         362          ON
  0/FT3        8812-FAN               762         371          ON
```

The following example displays the temperature readings for each of the powered-up cards using the **show environment temperatures** command:

```
==============================================================================================================
Location  TEMPERATURE                          Value   Crit   Major   Minor   Minor
 Major   Crit
          Sensor                              (deg C)   (Lo)   (Lo)    (Lo)    (Hi)
 (Hi)    (Hi)
--------------------------------------------------------------------------------------------------------------
0/RP0/CPU0
          Inlet_Temp                           28      -10    -5      0       60
 65      70
          Pwr_Brick_Temp2                      33      -10    -5      0       120
 125     130
          Mosfet_54v_Temp1                     27      -10    -5      0       120
 125     130
          Mosfet_54v_Temp2                     27      -10    -5      0       120
 125     130
          SSD_Temp                             26      -10    -5      0       65
 72      80
          Outlet_Temp                          29      -10    -5      0       80
 85      90
          Hot_Spot_1_Temp                      31      -10    -5      0       80
 85      90
          Hot_Spot_2_Temp                      31      -10    -5      0       80
 85      90
          TMP421_Temp                          30      -10    -5      0       95
 100     105
          PEX8725_Temp                         39      -10    -5      0       95
 100     105
          X86_PKG_TEMP                         39      -10    -5      0       93
 97      102
          Pwr_Brick_Temp1                      34      -10    -5      0       120
 125     130
          ALDRIN_TEMP_0                        36      -5     0       5       95
 100     110
          Control_Sensor                       28      -10    -5      0       60
 65      70

0/FT0
          Hotswap_Temp                         29      -10    -5      0       65
 75      85
          Low_vol_Temp                         31      -10    -5      0       65
 75      85
0/FT1
          Hotswap_Temp                         30      -10    -5      0       65
```

```
 75      85
          Low_vol_Temp                          32      -10     -5      0       65
 75      85
0/FT2
          Hotswap_Temp                          31      -10     -5      0       65
 75      85
          Low_vol_Temp                          32      -10     -5      0       65
 75      85
0/FT3
          Hotswap_Temp                          31      -10     -5      0       65
 75      85
          Low_vol_Temp                          32      -10     -5      0       65
 75      85
0/PT0-PM0
        ! PFC_B_Temp                            10245   -10     -5      0       125
 127     130
          Inlet_Temp                            28      -10     -5      0       65
 67      70
          HSNK_Temp                             100     -10     -5      0       125
 127     130
          Outlet_Temp                           87      -10     -5      0       105
 108     110
        ! LLC_B_Temp                            10245   -10     -5      0       125
 127     130
        ! SR_B_Temp                             10245   -10     -5      0       125
 127     130
        ! ORING_B_Temp                          10245   -10     -5      0       125
 127     130
        ! PFC_A_Temp                            10245   -10     -5      0       125
 127     130
        ! LLC_A_Temp                            10245   -10     -5      0       125
 127     130
        ! SR_A_Temp                             10245   -10     -5      0       125
 127     130
        ! ORING_A_Temp                          10245   -10     -5      0       125
 127     130
0/PT0-PM1
        ! PFC_B_Temp                            10245   -10     -5      0       125
 127     130
          Inlet_Temp                            28      -10     -5      0       65
 67      70
          HSNK_Temp                             99      -10     -5      0       125
 127     130
          Outlet_Temp                           87      -10     -5      0       105
 108     110
        ! LLC_B_Temp                            10245   -10     -5      0       125
 127     130
        ! SR_B_Temp                             10245   -10     -5      0       125
 127     130
        ! ORING_B_Temp                          10245   -10     -5      0       125
 127     130
        ! PFC_A_Temp                            10245   -10     -5      0       125
 127     130
        ! LLC_A_Temp                            10245   -10     -5      0       125
 127     130
        ! SR_A_Temp                             10245   -10     -5      0       125
 127     130
        ! ORING_A_Temp                          10245   -10     -5      0       125
 127     130
0/PT0-PM2
          PFC_B_Temp                            72      -10     -5      0       125
 127     130
          Inlet_Temp                            25      -10     -5      0       65
 67      70
```

```
          HSNK_Temp                                72      -10     -5      0       125
 127      130
          Outlet_Temp                              61      -10     -5      0       105
 108      110
          LLC_B_Temp                               69      -10     -5      0       125
 127      130
          SR_B_Temp                                58      -10     -5      0       125
 127      130
          ORING_B_Temp                             64      -10     -5      0       125
 127      130
         ! PFC_A_Temp                              0       -10     -5      0       125
 127      130
         ! LLC_A_Temp                              0       -10     -5      0       125
 127      130
         ! SR_A_Temp                               0       -10     -5      0       125
 127      130
         ! ORING_A_Temp                            0       -10     -5      0       125
 127      130
```

Caution Please be careful while increasing the Altitude setting, as it leads to a rise in control sensor values and consequently the Chassis could shut down immediately if the control sensor crosses the critical threshold.

The following example shows sample output from the **show environment power** command:

```
================================================================================
CHASSIS LEVEL POWER INFO: 0
================================================================================
   Total output power capacity (N + 1)             :  107100W +     6300W
   Total output power required                     :   25015W
   Total power input                               :    6019W
   Total power output                              :    4636W

================================================================================
   Power       Supply         -------Input--------   -----Output---     Status
   Module      Type            Volts A/B   Amps A/B   Volts     Amps
================================================================================
   0/PT0-PM0   PSU6.3KW-HV     402.3/401.5 0.5/0.4    55.6      4.9      OK
   0/PT0-PM1   PSU6.3KW-HV     400.6/400.9 0.5/0.5    55.6      6.0      OK
   0/PT0-PM2   PSU6.3KW-HV     400.6/400.6 0.5/0.4    55.5      5.0      OK
   0/PT1-PM0   PSU6.3KW-HV     400.0/400.0 0.5/0.3    55.4      4.4      OK
   0/PT1-PM1   PSU6.3KW-HV     401.8/401.8 0.4/0.3    55.6      3.7      OK
   0/PT1-PM2   PSU6.3KW-HV     400.0/400.0 0.4/0.3    55.4      3.6      OK
   0/PT2-PM0   PSU6.3KW-HV     401.5/401.5 0.5/0.4    55.6      4.8      OK
   0/PT2-PM1   PSU6.3KW-HV     400.0/400.0 0.4/0.4    55.4      4.4      OK
   0/PT2-PM2   PSU6.3KW-HV     401.2/401.5 0.5/0.4    55.6      5.0      OK
   0/PT3-PM0   PSU6.3KW-HV     300.6/300.9 0.6/0.5    55.5      4.4      OK
   0/PT3-PM1   PSU6.3KW-HV     299.7/299.7 0.6/0.4    55.5      4.4      OK
   0/PT3-PM2   PSU6.3KW-HV     300.6/300.9 0.5/0.6    55.3      4.4      OK
   0/PT4-PM0   PSU6.3KW-HV     299.7/299.7 0.5/0.6    55.2      4.4      OK
   0/PT4-PM1   PSU6.3KW-HV     300.6/300.9 0.6/0.5    55.4      4.7      OK
   0/PT4-PM2   PSU6.3KW-HV     299.7/299.7 0.5/0.6    55.2      4.4      OK
   0/PT5-PM0   PSU6.3KW-HV     300.6/300.9 0.7/0.6    55.6      6.0      OK
   0/PT5-PM1   PSU6.3KW-HV     299.7/299.7 0.5/0.5    55.4      4.0      OK
   0/PT5-PM2   PSU6.3KW-HV     300.6/300.9 0.5/0.6    55.4      5.1      OK

Total of Power Modules:       6019W/17.5A              4636W/83.6A

================================================================================
```

```
   Location     Card Type              Power       Power       Status
                                       Allocated   Used
                                       Watts       Watts
==============================================================================
   0/RP0/CPU0   8800-RP                95          70          ON
   0/RP1/CPU0   8800-RP                95          69          ON
   0/0/CPU0     -                      60          -           RESERVED
   0/1/CPU0     -                      60          -           RESERVED
   0/2/CPU0     -                      60          -           RESERVED
   0/3/CPU0     -                      60          -           RESERVED
   0/4/CPU0     -                      60          -           RESERVED
   0/5/CPU0     8800-LC-48H            1065        489         ON
   0/6/CPU0     -                      60          -           RESERVED
   0/7/CPU0     -                      60          -           RESERVED
   0/8/CPU0     -                      60          -           RESERVED
   0/9/CPU0     -                      60          -           RESERVED
   0/10/CPU0    -                      60          -           RESERVED
   0/11/CPU0    -                      60          -           RESERVED
   0/12/CPU0    -                      60          -           RESERVED
   0/13/CPU0    -                      60          -           RESERVED
   0/14/CPU0    -                      60          -           RESERVED
   0/15/CPU0    -                      60          -           RESERVED
   0/16/CPU0    -                      60          -           RESERVED
   0/17/CPU0    8800-LC-36FH           1896        679         ON
   0/FC0        -                      1713        -           RESERVED
   0/FC1        -                      1713        -           RESERVED
   0/FC2        -                      1713        -           RESERVED
   0/FC3        -                      1713        -           RESERVED
   0/FC4        8818-FC                1713        429         ON
   0/FC5        8818-FC                1713        435         ON
   0/FC6        -                      1713        -           RESERVED
   0/FC7        -                      1713        -           RESERVED
   0/FT0        8818-FAN               1800        574         ON
   0/FT1        8818-FAN               1800        587         ON
   0/FT2        8818-FAN               1800        569         ON
   0/FT3        8818-FAN               1800        578         ON
```

Router Verification Checks

Perform Pre-check Procedures on the Router

To ensure the fabric cards on the router are operational, you must perform the pre-check commands. These commands help identify any issues in the router setup.

Follow these steps to perform the pre-check procedures on a router to verify its status:

Procedure

Step 1 Execute the following set of commands on the router in XR EXEC mode or System Admin EXEC mode.

Example:

```
!
term length 0
!
show version
!
show platform
```

```
!
show controller fabric fsdb-pla rack 0
!
show controller fabric link port s1 rx down
!
show controller fabric link port fia rx down
!
show controllers npu link-info rx 0 255 topo instance all location all | ex "EN/UP" | ex
"NC              NC"
!
show controllers npu stats link all instance all location all | exc "0        0        0"
!
show controller fabric health
!
show inventory
!
show ip interface brief
!
show interface brief | i down | ex admin
!
show alarms brief system active
!
```

Step 2 Verify that the Route Processors (RPs) and line cards (LCs) are in the **IOS XR RUN** and **OPERATIONAL** state.

Example:

```
Router:Cisco-8818#show platform
Thu Jan 18 03:10:58.392 UTC
Node              Type                       State                     Config state
--------------------------------------------------------------------------------
0/RP0/CPU0        8800-RP(Active)            IOS XR RUN                NSHUT
0/RP0/BMC0        8800-RP                    OPERATIONAL               NSHUT
0/0/CPU0          88-LC0-36FH-M              IOS XR RUN                NSHUT
0/1/CPU0          88-LC0-36FH-M              IOS XR RUN                NSHUT
0/2/CPU0          8800-LC-48H                IOS XR RUN                NSHUT
0/3/CPU0          88-LC0-36FH-M              IOS XR RUN                NSHUT
0/4/CPU0          88-LC0-36FH-M              IOS XR RUN                NSHUT
0/5/CPU0          88-LC0-36FH-M              IOS XR RUN                NSHUT
0/6/CPU0          88-LC0-36FH-M              IOS XR RUN                NSHUT
0/16/CPU0         88-LC0-36FH-M              IOS XR RUN                NSHUT
0/17/CPU0         88-LC0-36FH-M              IOS XR RUN                NSHUT
0/FC0             8818-FC0                   OPERATIONAL               NSHUT
0/FC1             8818-FC0                   OPERATIONAL               NSHUT
0/FC2             8818-FC0                   OPERATIONAL               NSHUT
0/FC3             8818-FC0                   OPERATIONAL               NSHUT
0/FC4             8818-FC0                   OPERATIONAL               NSHUT
0/FC5             8818-FC0                   OPERATIONAL               NSHUT
0/FC6             8818-FC0                   OPERATIONAL               NSHUT
0/FC7             8818-FC0                   OPERATIONAL               NSHUT
```

Step 3 Capture the router output to a text file. Name the text file using the convention: **`hostname-pre-check-date.txt`**.

Example:

`router1-pre-check-april-15-2024.txt`

What to do next

Perform Fabric Link Status Checks

Perform Fabric Link Status Checks

Perform these steps to verify that the fabric cards and line cards are operational.

Procedure

Execute the **show controller fabric fsdb-pla rack** command in the Admin EXEC mode.

Example:

```
Router:Cisco-8818#show controller fabric fsdb-pla rack 0
Fri Jan 19 17:33:43.519 UTC
Description:
   planes       : p0-p7
   plane mask   : Asic #0-3
   Asic value  1: destination reachable via asic
               .: destination unreachable via asic
               x: asic not connected to LC (for S3)
               -: plane not configured (for S2) or asic missing
Rack: 0, Stage: s123
============================
Destination   p0     p1     p2     p3     p4     p5     p6     p7     Reach-mask  Oper Up
Address       mask   mask   mask   mask   mask   mask   mask   mask   links/asic  links/asic

Fapid(R/S/A)  0123   0123   0123   0123   0123   0123   0123   0123   Mn/Mx Total Mn/Mx
Total
-------------------------------------------------------------------------------------------

0(0/0/0)      1111   1111   1111   1111   1111   1111   1111   1111    4/4   128 100/100
3200
1(0/0/1)      1111   1111   1111   1111   1111   1111   1111   1111    4/4   128 100/100
3200
2(0/0/2)      1111   1111   1111   1111   1111   1111   1111   1111    4/4   128 100/100
3200
4(0/1/0)      1111   1111   1111   1111   1111   1111   1111   1111    4/4   128 100/100
3200
5(0/1/1)      1111   1111   1111   1111   1111   1111   1111   1111    4/4   128 100/100
3200
6(0/1/2)      1111   1111   1111   1111   1111   1111   1111   1111    4/4   128 100/100
3200
8(0/2/0)      1111   1111   1111   1111   1111   1111   1111   1111    2/2    64 100/100
3200
9(0/2/1)      1111   1111   1111   1111   1111   1111   1111   1111    2/2    64 100/100
3200
12(0/3/0)     1111   1111   1111   1111   1111   1111   1111   1111    4/4   128 100/100
3200
13(0/3/1)     1111   1111   1111   1111   1111   1111   1111   1111    4/4   128 100/100
3200
14(0/3/2)     1111   1111   1111   1111   1111   1111   1111   1111    4/4   128 100/100
3200
       <snip>
```

In this output:

- p0 through p7 indicates fabric cards, where p0 signifies FC1, p1 signifies FC0, and so on.
- On the Cisco 8818 router, the **Reach-mask Total** column is 128 for all 36x400G line cards and 64 for all 48x100G line cards indicating that all fabric links are in good condition.

From this output, you must verify the following details:

- All the fabric links are in an operational state.
- A **1111** value for the fabric cards on a given destination signifies that the fabric links are operational. If the router displays **….**, it signifies that the link between the fabric card and line card is not functional. In such cases, check for any damage on the fabric card and line card.
- On the Cisco 8818 router, if the **Reach-mask Total** column value is not 128 for 36x400G cards and not 64 for 48x100G cards, it indicates that those line cards do not have good connection established with the fabric cards. Check for any damage on those line cards and fabric cards.

What to do next

Perform post-check procedures on the router.

Perform Post-Check Procedures on the Router

After the router is powered on or after you perform any hardware replacements, perform these post-check commands:

Procedure

Step 1 Execute the first set of post-check commands.

Example:

```
!
term length 0
!
show version
!
show platform
!
show controller fabric fsdb-pla rack 0
!
show controller fabric link port s1 rx down
!
show controller fabric link port fia rx down
!
show controllers npu link-info rx 0 255 topo instance all location all | ex "EN/UP" | ex
"NC              NC"
!
show controllers npu stats link all instance all location all | exc "0        0        0"
!
show controller fabric health
!
show inventory
!
show ip int brief
!
show int brief | i down | ex admin
!
show alarms brief system active
!
```

Step 2 Capture the results to a file, save it with a file naming ,convention, such as **`hostname-post-check1-date.txt`**.

Step 3 Power the router OFF and then ON by toggling the power button located on the front-side of the router.

Wait for the router to power up completely.

Step 4 Verify that all the line card LEDs are green and fan tray LEDs for each fan is green.

Step 5 Wait for 30 minutes, then execute the second set of post-check commands, capture the results to a file, and save it.

Step 6 Repeat step-1 through step-5 twice.

Step 7 Ensure that you save your results of the checks that you ran for three times for any future reference.

Set Fabric Bandwidth Threshold

Fabric bandwidth refers to the bandwidth requirements for communication and traffic flow between the line card and fabric card. The following table provides explanation of terminologies that are associated with fabric bandwidth.

Table 23: Fabric Bandwidth

Fabric Bandwidth	Definition	Significance
Total fabric bandwidth	Maximum bandwidth that is supported between a line card NPU and all fabric cards.	It is a constant value that is defined by the hardware capacity.
Available bandwidth	Total fabric bandwidth available for traffic.	It is a variable denoting real-time bandwidth consumption.
Bandwidth threshold	A percentage value denoting a limit for bandwidth consumption. Being a system level setting, the threshold applies to all the line card NPUs in the chassis.	It is a user configurable limit; default value is 5%.
Total required bandwidth	Total Fabric Bandwidth x Bandwidth Threshold.	If is a calculated value as a function of user-defined threshold. Network interfaces on line card are active only when “Available bandwidth” is more than “Total required bandwidth”.

Fabric Bandwidth	Definition	Significance
Lower required bandwidth	Total fabric bandwidth x (Bandwidth Threshold - 10%) This computation is applicable only for bandwidth threshold values 20% or higher. For bandwidth threshold values of below 20%, the "Lower required bandwidth" is equal to "Total required bandwidth".	If is also a calculated value as a function of user-defined threshold and denotes a lower cut-off for disabling network interfaces on line card. Disabling happens when "Available bandwidth" falls below the "Lower required bandwidth".

The Bandwidth Threshold acts a check point to ensure substantial bandwidth availability to carry traffic to the fabric cards. To configure the bandwidth threshold, use the following commands:


```
Router# configure
Router (config)# hw-module profile bw-threshold <value>
Router (config)# commit
```

User can set the threshold value starting with 10 and in increments of 10.

For example, consider that the bandwidth threshold is set to 20%. If the available bandwidth goes below 10%, then the network interfaces of the line card are shut. If the available bandwidth goes above 20%, then the network interfaces of the line card are unshut. The following table provides threshold references.

Table 24: Threshold Reference

Threshold	Percentage								
Bandwidth threshold	5	10	20	30	40	50	60	70	80
Total required bandwidth	5	10	20	30	40	50	60	70	80
Lower required bandwidth	5	10	10	20	30	40	50	60	70

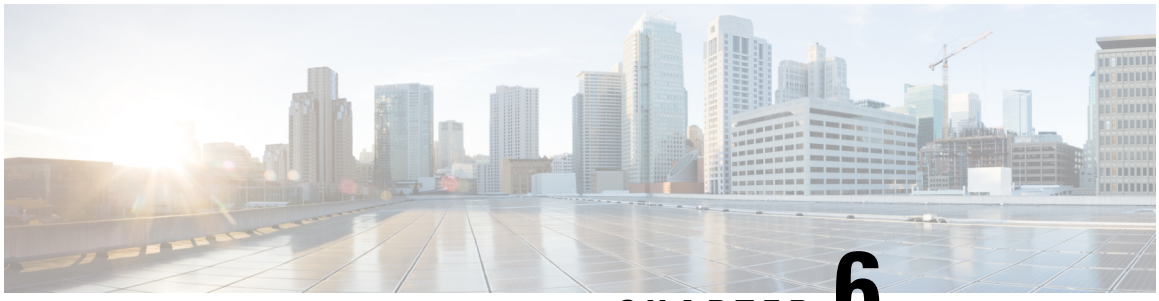

CHAPTER 6

Replace Chassis Components

Note The images in this chapter are only for representation purposes, unless specified otherwise. The chassis' actual appearance and size may vary.

Caution Whenever you replace any card, you must always ensure to secure the ejector thumbscrews properly.

- Replace Chassis Door Foam Air Filters, on page 163
- Provision of Grace Period Before Route Processor Shutdown from Ejector Lever, on page 165
- Replace a Route Processor Card, on page 166
- Replace a Line Card, on page 184
- Replace a Fan Tray, on page 198
- Replace Fabric Card, on page 202
- Replace Power Supply Components, on page 212

Replace Chassis Door Foam Air Filters


Note In general, we recommend that you inspect the air filter every 3 months and replace. Air filters are consumable items and must be ordered separately by customers. Customers may contact TAC for assistance in identifying the correct air filter PID to order. We recommend having spare air filters in stock.

The front doors come with pre-installed air filters (8818-FILTER, 8812-FILTER, 8808-FILTER, or 8804-FILTER). If air filters need a replacement, follow this procedure.

Procedure

Step 1 Remove the two quarter turn fasteners from the front door as shown.

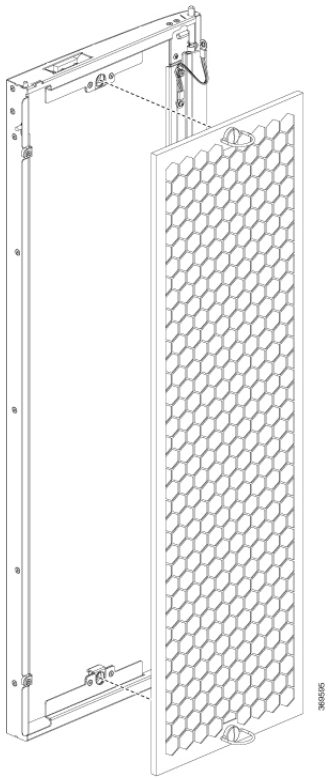Figure 138: Replace Air Filter



Step 2 Install the new door filters on both the front doors.

Step 3 Tighten the two quarter turn fasteners back on the doors.

Provision of Grace Period Before Route Processor Shutdown from Ejector Lever

Table 25: Feature History Table

Feature Name	Release Information	Feature Description
Provision of Grace Period Before Route Processor Shutdown from Ejector Lever	Release 7.3.1	Unlatching the ejector lever of any card that is in operational state, triggers a graceful shutdown of that card. With this release, the active RP card is enabled with a grace period of 15 seconds before it shuts down. In the event the ejector lever is unlatched, or for any other reason, you have 15 seconds to relatch the ejector lever and return the active RP back to its operational state. The **hw-module ejector close wait** command is introduced for this feature.

Earlier, unlatching the ejector lever from the latch lock immediately would trigger a graceful shutdown of the Route Processor if the card is in the operational state. However, after enabling this feature, the active RP card has a grace period of 15 seconds before shutdown.

If the ejector lever is latched back within this grace period, then the card returns to the operational state. This feature, therefore, provides the option of closing the ejector lever without triggering a shutdown. This feature is especially useful when an ejector lever is accidentally unlatched.

This feature is supported only on a route processor card.

If the ejector is unlatched when card is in a status other than operational state then the grace period feature will not be supported.



Caution When you enable this feature, *do not* remove the RP during the 15-second grace period. Remove the RP *only* in either of the following two ways:

- Allow the RP to shut down after the 15-second grace period, then remove the RP.
- Close the ejector lever within the 15-second grace period, then remove the RP gracefully (shutdown the RP first) or ungracefully.

LED Status

The RP status LED blinks twice with one second gap until the grace period is over.

Enabling Grace Period Before Shutting down a RP Card

This task explains how to enable grace period before shutting down a RP card:

```
Router(config)# hw-module ejector close wait
Router(config)# commit
Router(config)# end
```

The configuration is applied only on the active RP.

Use the **no** form of the command to remove the grace period configuration.

```
Router(config)# no hw-module ejector close wait
```

Replace a Route Processor Card

The Cisco 8818, Cisco 8812, Cisco 8808, and Cisco 8804 Routers support OIR of Route Processor (RP) cards.

The router supports up to two redundant Route Processor cards (8800-RP). When two Route Processor cards are installed in the router, one acts as an active card and the other as the standby card. When the active Route Processor card is removed, the router automatically makes the standby Route Processor card active. If the router has only one Route Processor card that is installed, a new Route Processor can be installed in the empty Route Processor slot during operation.

Warning **Statement 1029—**Blank Faceplates and Cover Panels

Blank faceplates and cover panels serve three important functions: they reduce the risk of electric shock and fire, they contain electromagnetic interference (EMI) that might disrupt other equipment, and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place.


Note Opening the ejector levers of an installed RP card causes the RP card to shut down even when the captive screws are screwed in. To reboot the RP card, users must do one of the following:

- Remove and reinsert the RP card and close the ejector levers.
- Close the ejector levers and reload the card using the **reload location** <*rack*>/<*{RP0 | RP1}*> **force** command.

Replace the 8800-RP Card

The following figure describes the components used in the Route Processor installation procedure.

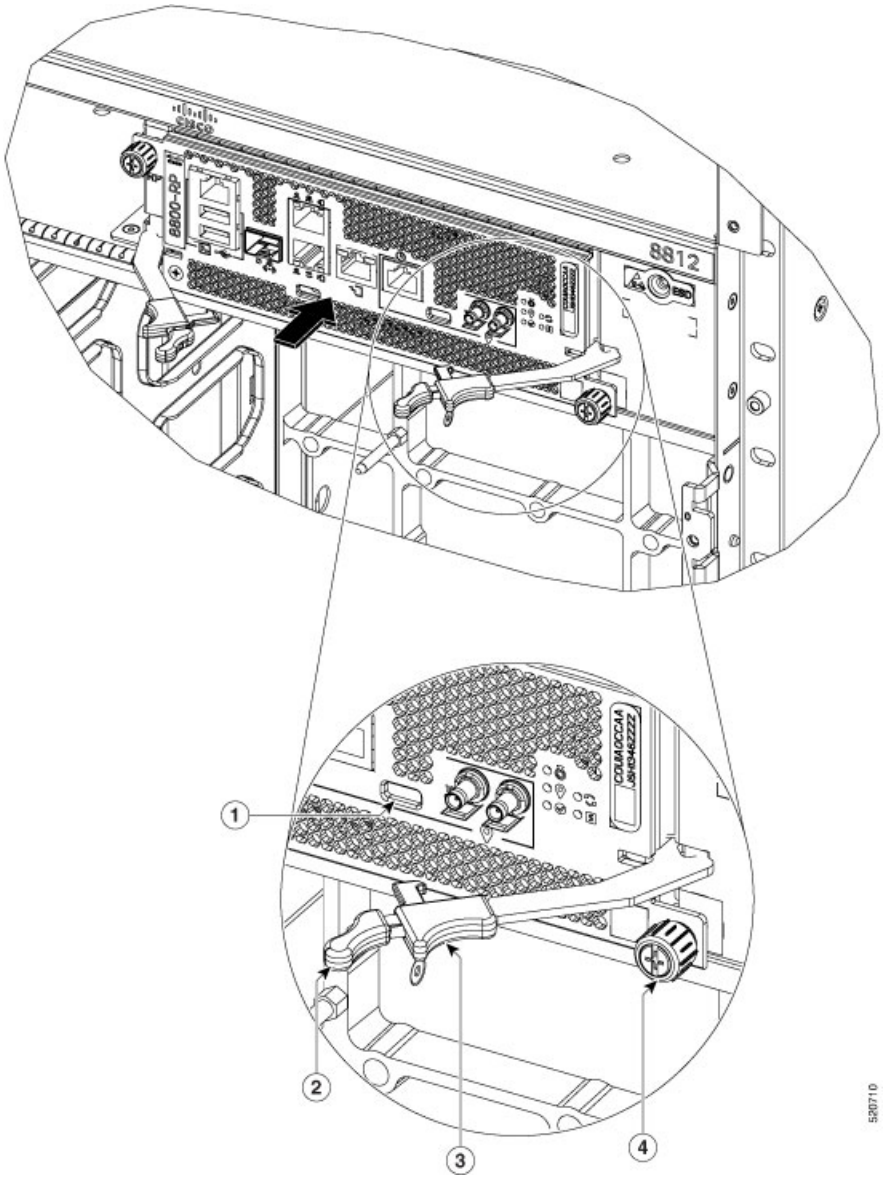Figure 139: Route Processor Card Components



1	Latch Lock	**3**	Latching Mechanism
2	Ejector Lever Handle	**4**	Captive Screw

Caution Unlatching the right ejector lever, so that it disengages from the latch lock (Callout 1 in the previous figure) triggers graceful shutdown of the Route Processor (RP) if the card is up. If the card shuts down, then wait for the RP LED to turn off before proceeding.

Moving the latch to the side doesn't disengage the latch from the lock. This is a safeguard mechanism if an operator-initiated shutdown of the route processor hasn't been performed before opening the levers. The ejector open will be logged.


1. Open the packaging for the new RP card. Inspect the card for damage, and verify that the card is the same type as the other RP card installed in the chassis. Carefully inspect the backplane connector of the chassis and RP.

Note If the card is damaged, alert the Technical Assistance Center (TAC).

2. If you're installing the card in an empty slot, remove the blank card that is already in that slot by unscrewing its captive screw and pulling it out of the slot.
3. If you're replacing a card that is currently in the chassis, remove the existing card from the chassis by following these steps:
   a. Run the **shutdown location 0/** {**RP0** | **RP1**} command in EXEC mode, which gracefully shuts down the Route Processor module to prevent any of the file systems from being corrupted.
   b. Verify that the Route Processor Status LED for the slot that you specified turns to Amber. Also, you can use the **show platform** command to verify that the status of the card is SHUT DOWN.
   c. Disconnect the cables from the card.
   d. If there are any external drives attached to the card through its USB ports, detach those drives.
   e. Loosen the two captive screws (one on each side of the RP) until the screws are no longer in contact with the chassis.
   f. Slide the latch on each of the ejector levers outwards from the lever center (see Callout 1 in the following figure).

Attention This action disengages the ejector levers from the faceplate.

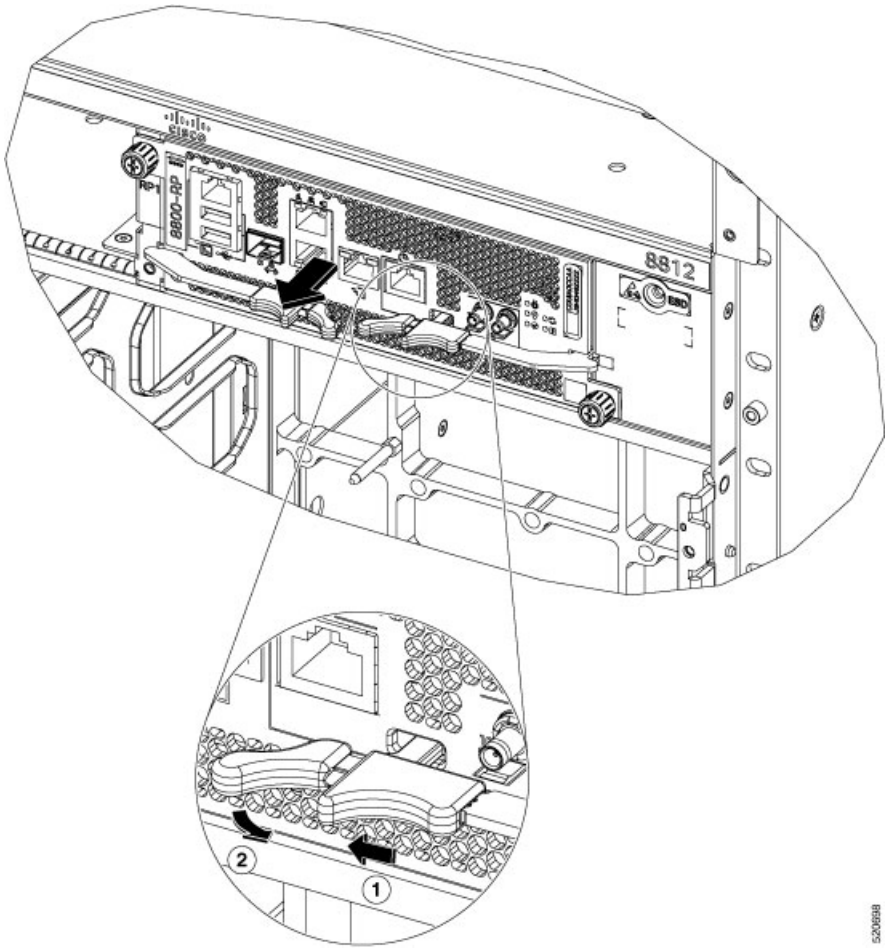Figure 140: Remove Route Processor Card from Chassis



g. Pull to rotate the levers away from the front of the card (see Callout 2 in the previous figure).

The card unseats its connectors from the midplane and moves slightly out of the chassis.

h. Use one hand to hold the front of the card. Place your other hand under the card to support its weight. Pull the card out of the chassis, and set it on an antistatic surface or inside an antistatic bag.

Note While performing OIR of the card, wait for 30 seconds before inserting the same or new card in the same slot. This allows the card to boot properly and reach an operational state.

Install a New 8800-RP Card

To install a new card, follow these steps:

1. If any of the ejector levers are in closed position, slide the latch on the ejector lever outwards from the lever center. Then, pull to rotate the lever away from the front of the card.

This action opens the lever so that the card can be fully inserted into the slot.

2. Hold the front of the card with one hand and place your other hand under the card to support its weight.

Note Ensure that you hold the route processor card parallel to the chassis while inserting it. Inserting the route processor card at an angle may damage the card's PCB.

3. Align the back of the card to the guides in the open Route Processor slot and slide the card all the way into the slot.


   The card stops when its front is about 0.25 inches (0.6 cm) outside the front of the chassis.

4. Rotate the levers firmly all the way to the front of the chassis. Then firmly push the tip of the lever towards the faceplate until the latch hook locks in place behind the faceplate. You may hear a click or see the latch engage. (See Callout 1 in the following figure.)

   Ensure that the other end of both levers engages behind the latching slot on the faceplate so that the card fully seats onto the connectors on the midplane.

Note To confirm that the card is installed properly, pull the black tip of each ejector lever lightly, and ensure that the lever doesn't pop out.

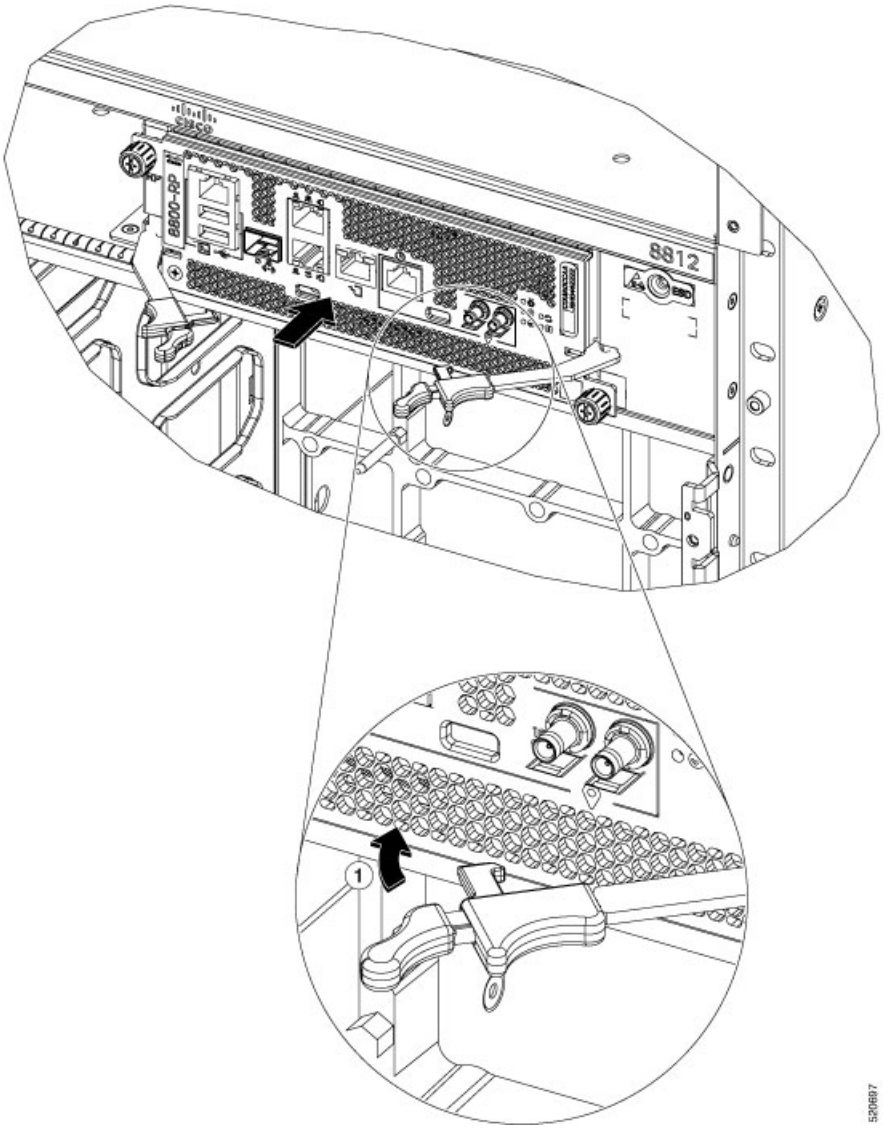Figure 141: Install Route Processor Card into Chassis




5. Screw in the two captive screws to secure the card to the chassis. Tighten the screws to 8 in-lb (0.9 N·m) of torque.
6. Attach the cables to the card.
7. Verify that the Route Processor card status LEDs turn on and appear green.

Replace the 8800-RP2 Card

The following figure describes the components used in the Route Processor (8800-RP2) installation procedure.

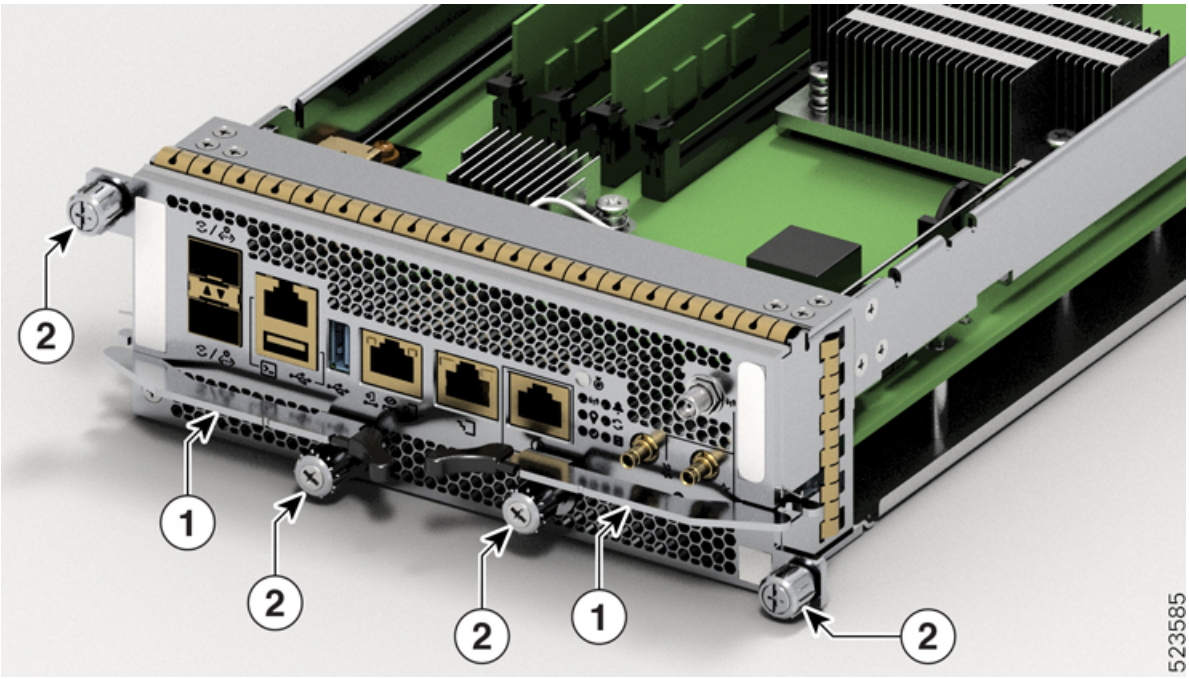Figure 142: Route Processor Card (8800-RP2) Components



1	Ejector Lever Handles
2	Captive Screws

Caution Unlatching the right ejector lever handle, so that it disengages from the latch lock (Callout 1 in above figure) triggers graceful shutdown of the Route Processor if the card is up. If the card shuts down, then wait for the Route Processor status LED to turn off before proceeding.

Unscrewing the captive screw doesn't disengage the latch from the lock. This is a safeguard mechanism if an operator-initiated shutdown of the route processor hasn't been performed before opening the levers. The ejector open will be logged.

1. Open the packaging for the new Route Processor card, inspect the card for damage, and verify that the card is the same type as the other Route Processor card installed in the chassis.

   If the card is damaged, alert the Technical Assistance Center (TAC). For more information, see More Hardware Components, on page 35.

2. If you're installing the card in an empty slot, remove the blank card that is already in that slot by unscrewing its captive screws and pulling it out of the slot.

3. If you're replacing a card that is currently in the chassis, remove the existing card from the chassis by following these steps:

   a. Run the **shutdown location 0/** {**RP0** | **RP1**} command in EXEC mode, which gracefully shuts down the Route Processor module to prevent any of the file systems from being corrupted.

b. Verify that the Route Processor Status LED for the slot that you specified turns to Amber. Also, you can use the **show platform** command to verify that the status of the card is SHUT DOWN.

c. Disconnect the cables from the card.


d. If there are any external drives attached to the card through its USB ports, detach those drives.

e. Loosen the two captive screws (one on each side of the RP) until the screws are no longer in contact with the chassis.

f. Unscrew the captive screws on each of the ejector levers (see Callout 1 in the following figure).

This action disengages the ejector levers from the faceplate.

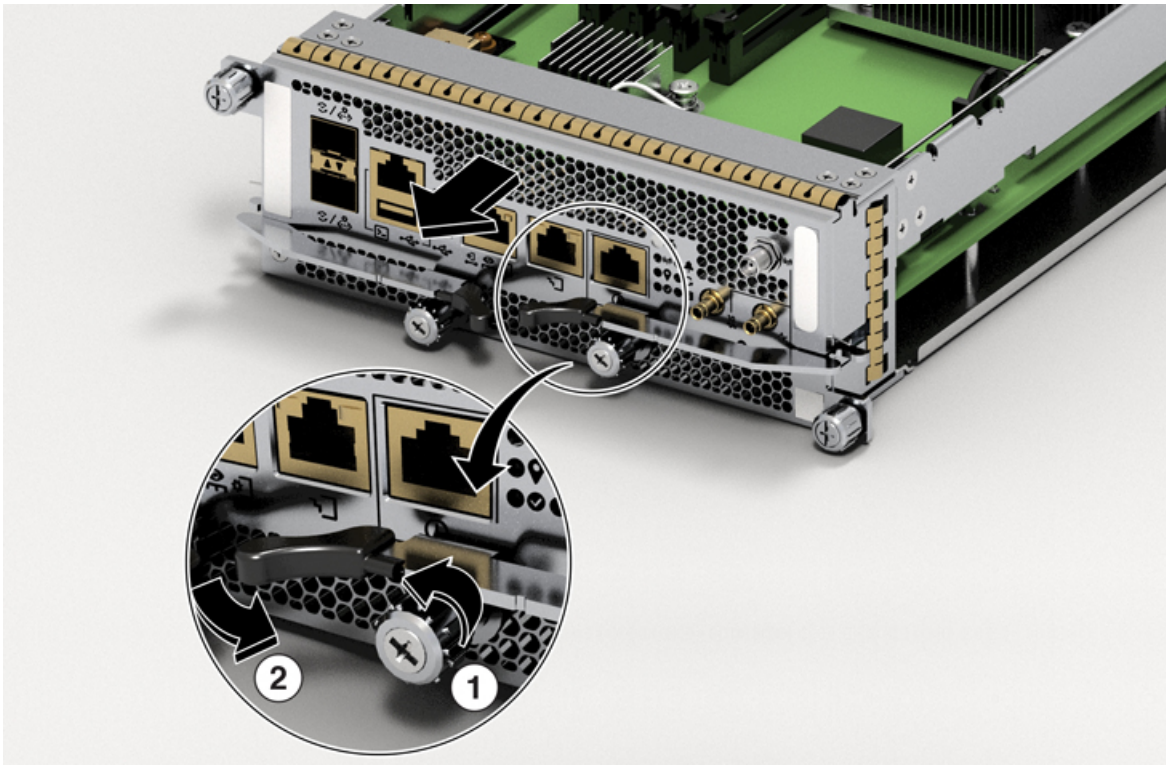Figure 143: Remove Route Processor Card (8800-RP2) from Chassis



1	Rotate the captive screws
2	Pull to rotate the levers away from the card

g. Pull to rotate the levers away from the front of the card (see Callout 2 in the previous figure).

The card unseats its connectors from the midplane and moves slightly out of the chassis.

h. Use one hand to hold the front of the card, place your other hand under the card to support its weight, pull the card out of the chassis, and set it on an antistatic surface or inside an antistatic bag.

Note While performing OIR of the card, wait for 30 seconds before inserting the same or new card in the same slot. This allows the card to boot properly and reach an operational state.

Install an 8800-RP2 Card

To install a new card, follow these steps:


1. If any of the ejector levers are in closed position, slide the latch on the ejector lever outwards from the lever center and pull to rotate the lever away from the front of the card.

   If the ejector levers are in closed position, unscrew the captive screw that's holding the ejector levers closed.

2. Hold the front of the card with one hand and place your other hand under the card to support its weight.

Note Ensure that you hold the route processor card parallel to the chassis while inserting it. Inserting the route processor card at an angle may damage the card's PCB.

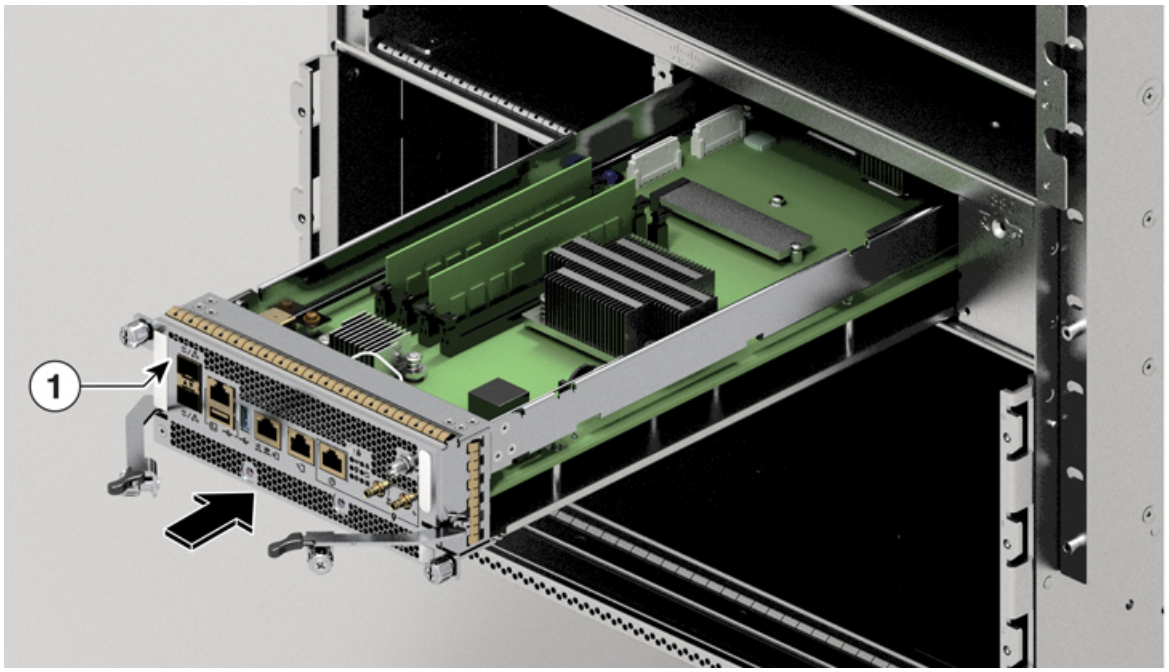Figure 144: Hold RP Card Parallel to Chassis



1	Route processor card (8800-RP2)


3. Align the back of the card to the guide pin in the open Route Processor slot and slide the card all the way into the slot.

4. Rotate the levers firmly all the way to the front of the chassis. Then firmly push the tip of the lever towards the faceplate until the latch hook locks in place behind the faceplate. (See Callout 1 in the following figure.)

   Ensure that the other end of both levers engages behind the latching slot on the faceplate. So that the card fully seats onto the connectors on the midplane of the chassis.

Note To confirm that the card is installed properly, pull the black tip of each ejector lever lightly, and ensure that the lever doesn't pop out.

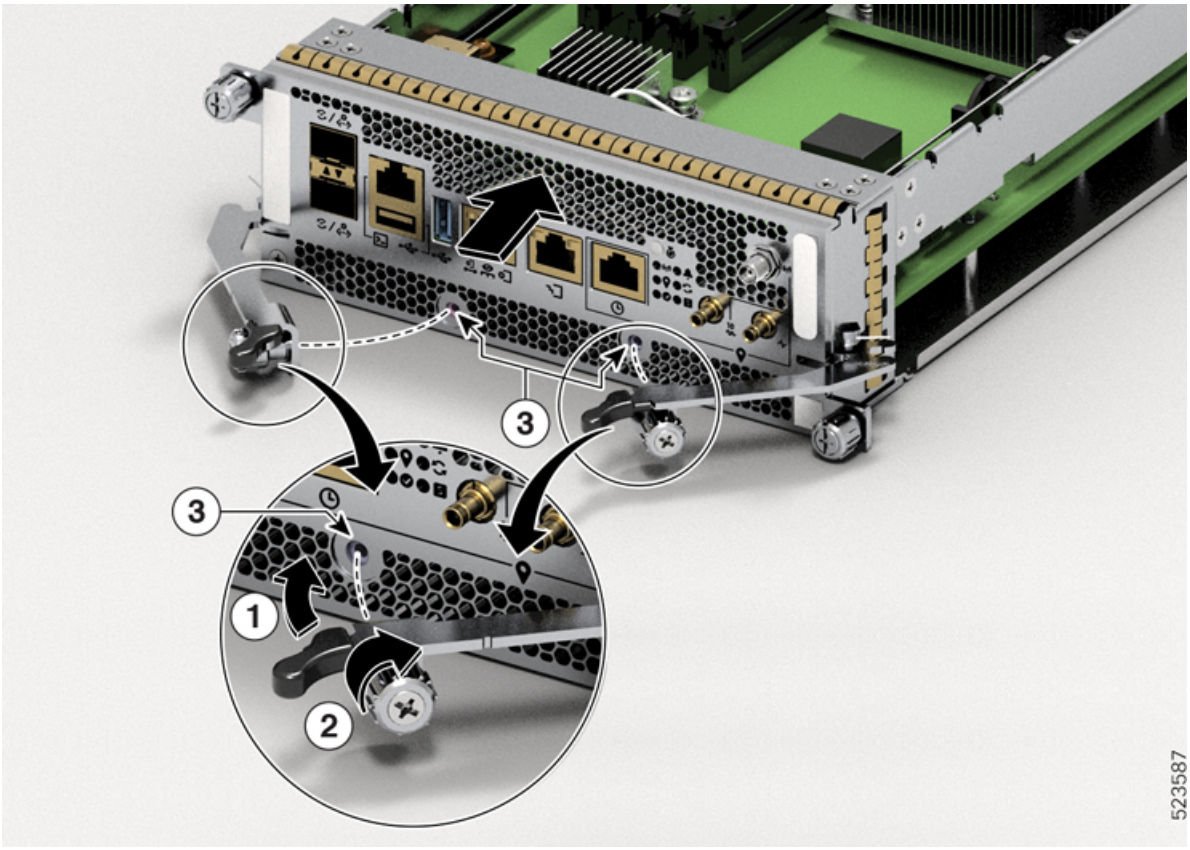
Figure 145: Install Route Processor Card (8800-RP2) into Chassis



1	Push the ejector lever towards the latch lock
2	After the ejector lever locks in place, rotate the captive screws
3	Latch lock

5. Screw in the two captive screws to secure the card to the chassis. Tighten the screws as shown in the following figure and apply the torque as mentioned in the Torque recommendation section:

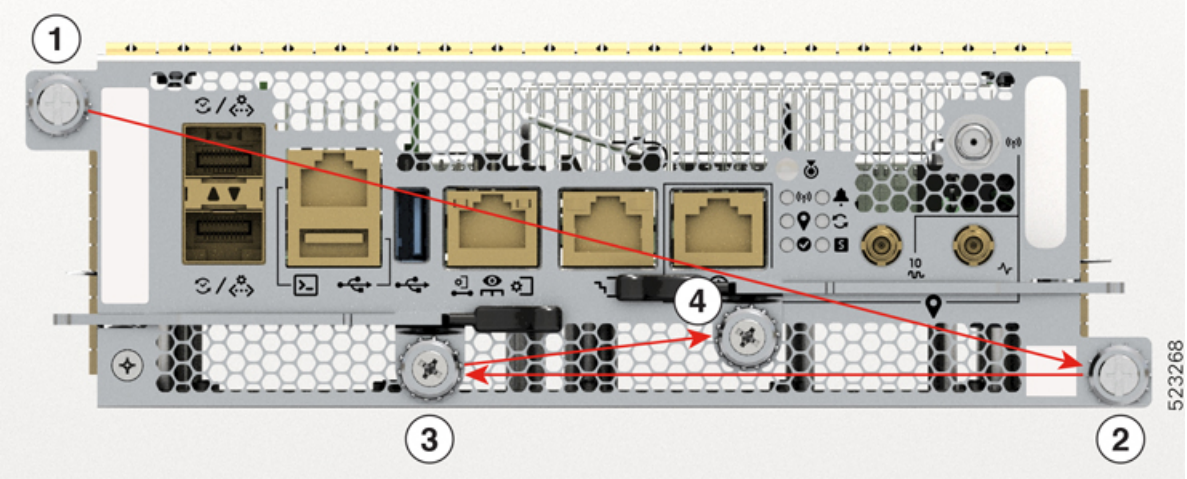Figure 146: Tighten the Screws in Order



Torque recommendation:

- Hand-tighten all the four captive screws.
- Torque all the four screws to 4 in-lbs (0.45 N·m) in the sequence as shown in the figure.
- Torque another 4 in-lbs (0.45 N·m) to the captive screws such that the total torque applied becomes 8 in-lbs (0.9 N·m). Follow the same sequence as shown in the figure.


Important The total torque must not be more than 8 in-lbs.

6. Attach the cables to the card.
7. Verify that the Route Processor card status LEDs turn on and appear green.

Replace the 8800-RP2-S Card

The following figure describes the components used in the Route Processor (8800-RP2-S) installation procedure.

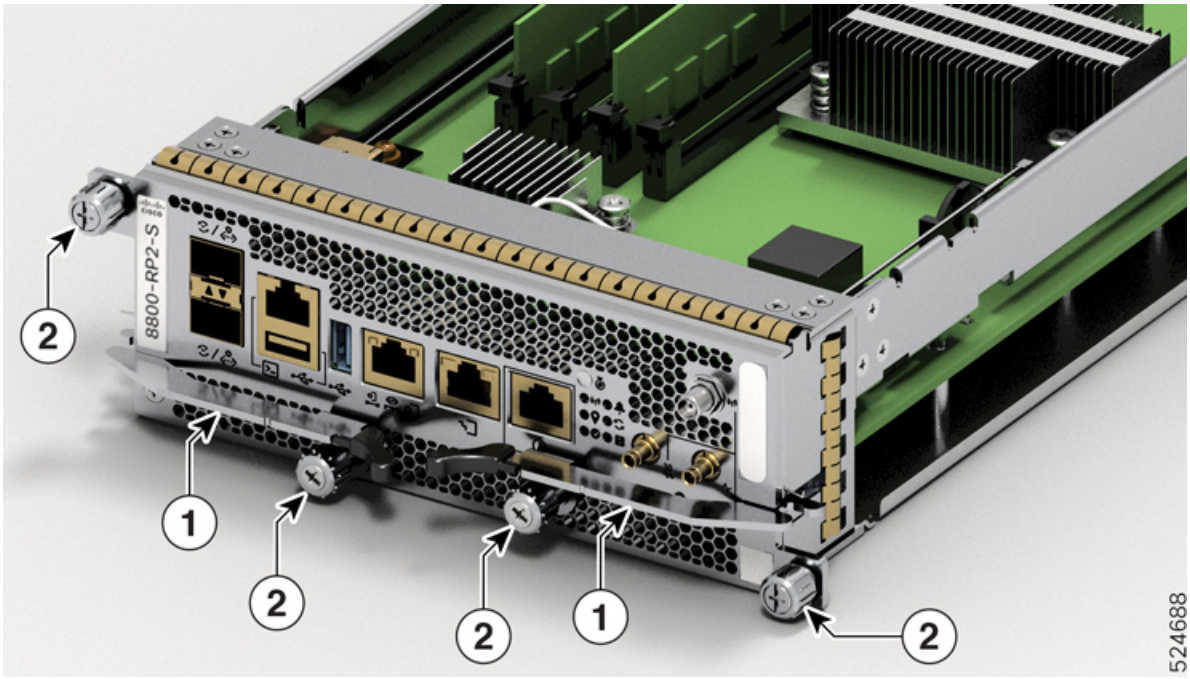Figure 147: Route Processor Card (8800-RP2-S) Components



1	Ejector Lever Handles
2	Captive Screws

Caution Unlatching the right ejector lever handle, so that it disengages from the latch lock (Callout 1 in above figure) triggers graceful shutdown of the Route Processor if the card is up. If the card shuts down, then wait for the Route Processor status LED to turn off before proceeding.

Unscrewing the captive screw doesn't disengage the latch from the lock. This is a safeguard mechanism if an operator-initiated shutdown of the route processor hasn't been performed before opening the levers. The ejector open will be logged.

1. Open the packaging for the new Route Processor card, inspect the card for damage, and verify that the card is the same type as the other Route Processor card installed in the chassis.

   If the card is damaged, alert the Technical Assistance Center (TAC). For more information, see More Hardware Components, on page 35.

2. If you're installing the card in an empty slot, remove the blank card that is already in that slot by unscrewing its captive screws and pulling it out of the slot.

3. If you're replacing a card that is currently in the chassis, remove the existing card from the chassis by following these steps:

   a. Run the **shutdown location 0/** {**RP0** | **RP1**} command in EXEC mode, which gracefully shuts down the Route Processor module to prevent any of the file systems from being corrupted.

b. Verify that the Route Processor Status LED for the slot that you specified turns to Amber. Also, you can use the **show platform** command to verify that the status of the card is SHUT DOWN.

c. Disconnect the cables from the card.


d. If there are any external drives attached to the card through its USB ports, detach those drives.

e. Loosen the two captive screws (one on each side of the RP) until the screws are no longer in contact with the chassis.

f. Unscrew the captive screws on each of the ejector levers (see Callout 1 in the following figure).

This action disengages the ejector levers from the faceplate.

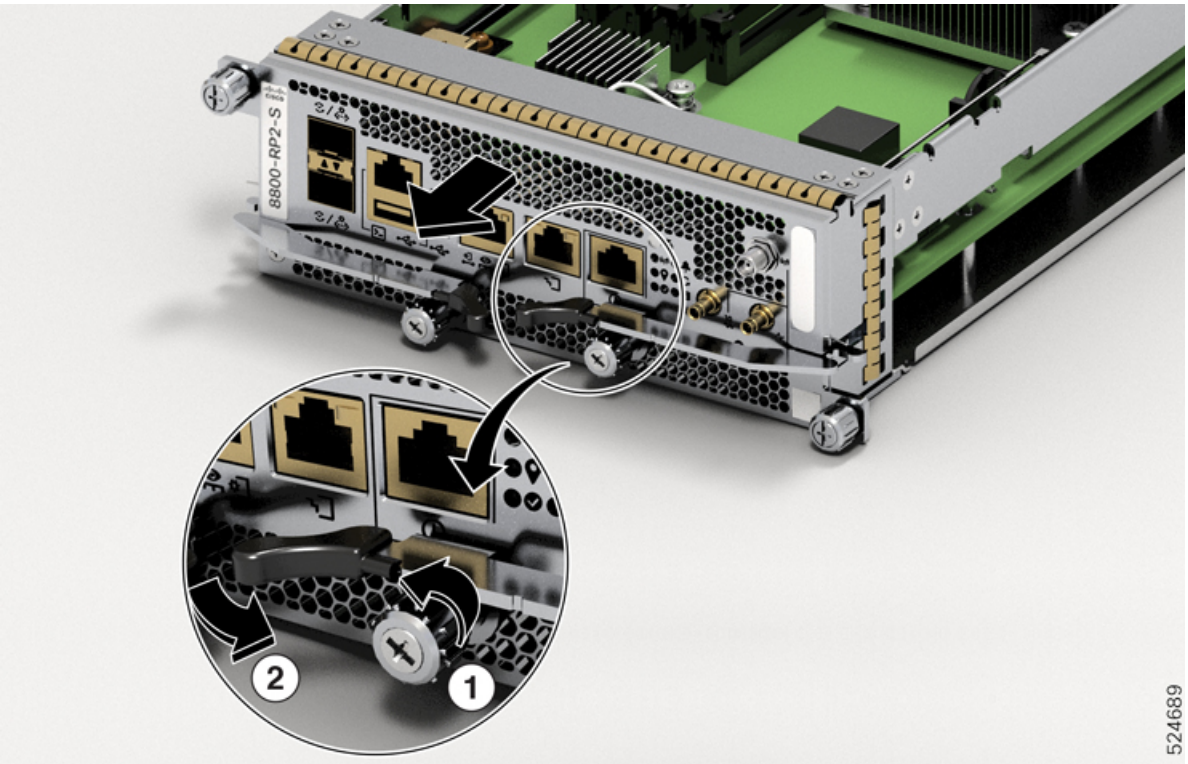Figure 148: Remove Route Processor Card (8800-RP2-S) from Chassis



1	Rotate the captive screws
2	Pull to rotate the levers away from the card

g. Pull to rotate the levers away from the front of the card (see Callout 2 in the previous figure).

The card unseats its connectors from the midplane and moves slightly out of the chassis.

h. Use one hand to hold the front of the card, place your other hand under the card to support its weight, pull the card out of the chassis, and set it on an antistatic surface or inside an antistatic bag.

Note While performing OIR of the card, wait for 30 seconds before inserting the same or new card in the same slot. This allows the card to boot properly and reach an operational state.

Install an 8800-RP2-S Card

To install a new card, follow these steps:


1. If any of the ejector levers are in closed position, slide the latch on the ejector lever outwards from the lever center and pull to rotate the lever away from the front of the card.

   If the ejector levers are in closed position, unscrew the captive screw that's holding the ejector levers closed.

2. Hold the front of the card with one hand and place your other hand under the card to support its weight.

Note Ensure that you hold the route processor card parallel to the chassis while inserting it. Inserting the route processor card at an angle may damage the card's PCB.

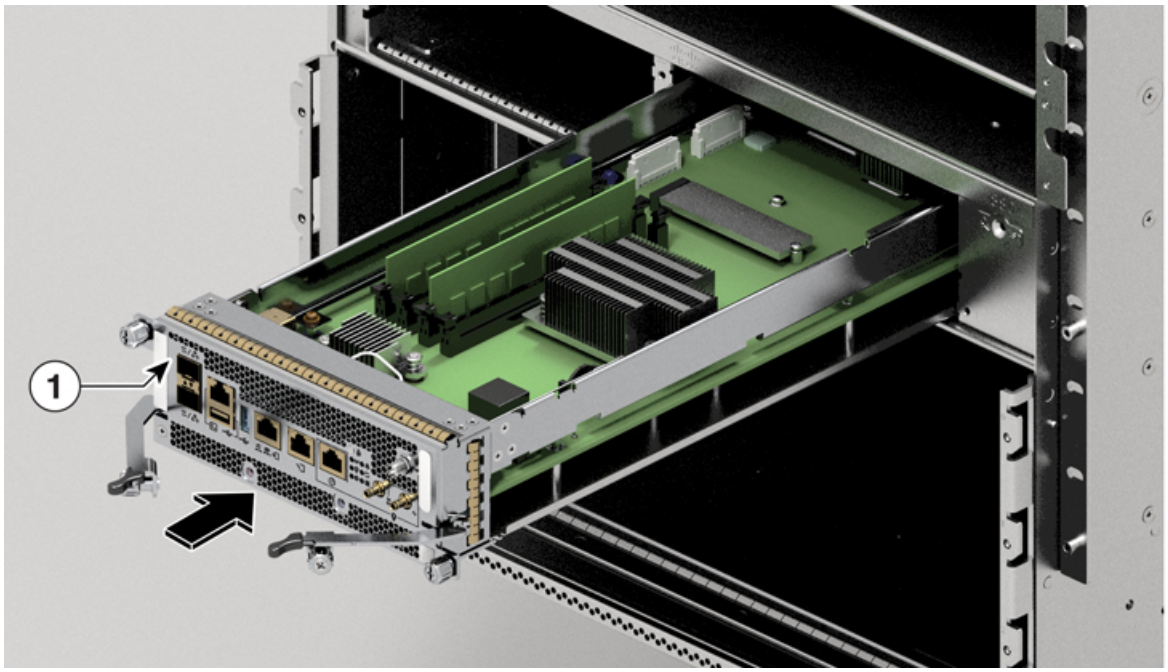Figure 149: Hold RP Card Parallel to Chassis



1	Route processor card (8800-RP2-S)


3. Align the back of the card to the guide pin in the open Route Processor slot and slide the card all the way into the slot.

4. Rotate the levers firmly all the way to the front of the chassis. Then firmly push the tip of the lever towards the faceplate until the latch hook locks in place behind the faceplate. (See Callout 1 in the following figure.)

   Ensure that the other end of both levers engages behind the latching slot on the faceplate. So that the card fully seats onto the connectors on the midplane of the chassis.

Note To confirm that the card is installed properly, pull the black tip of each ejector lever lightly, and ensure that the lever doesn't pop out.

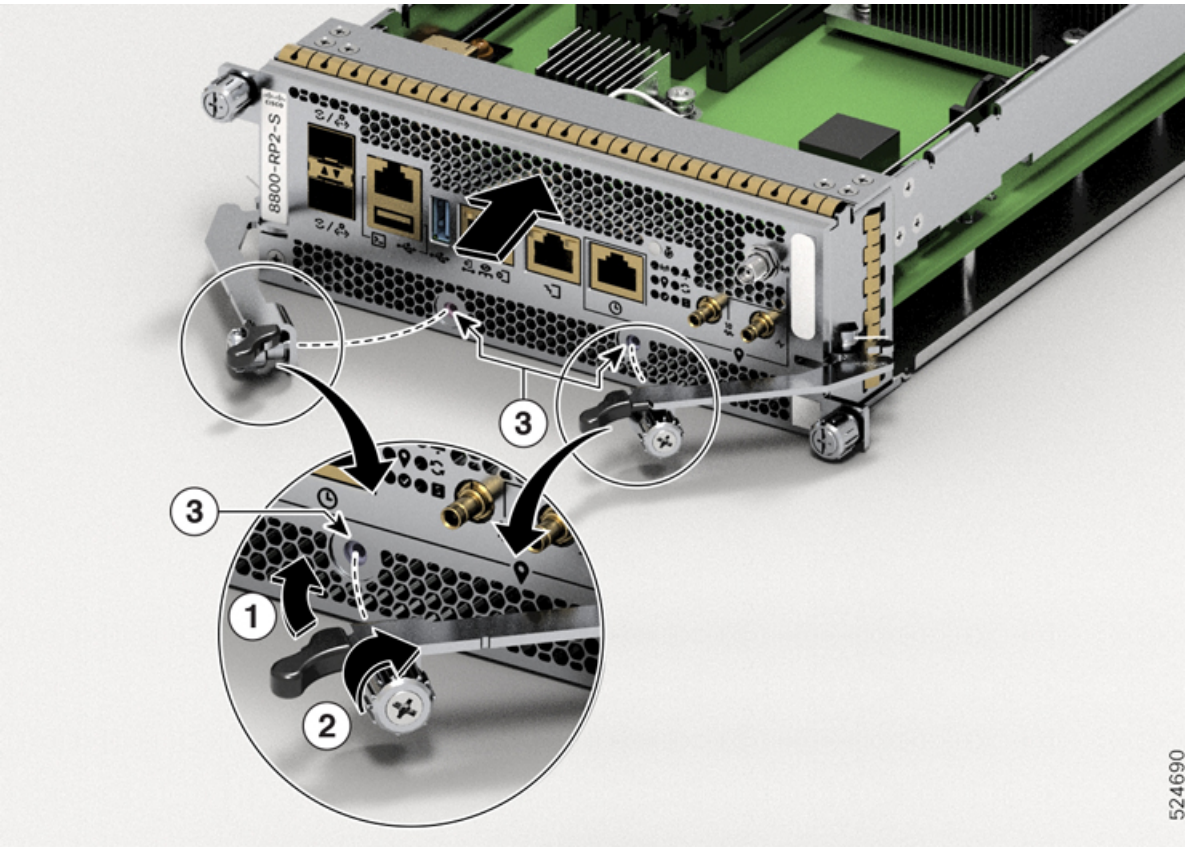
Figure 150: Install Route Processor Card (8800-RP2-S) into Chassis



1	Push the ejector lever towards the latch lock
2	After the ejector lever locks in place, rotate the captive screws
3	Latch lock

5. Screw in the two captive screws to secure the card to the chassis. Tighten the screws as shown in the following figure and apply the torque as mentioned in the Torque recommendation section:

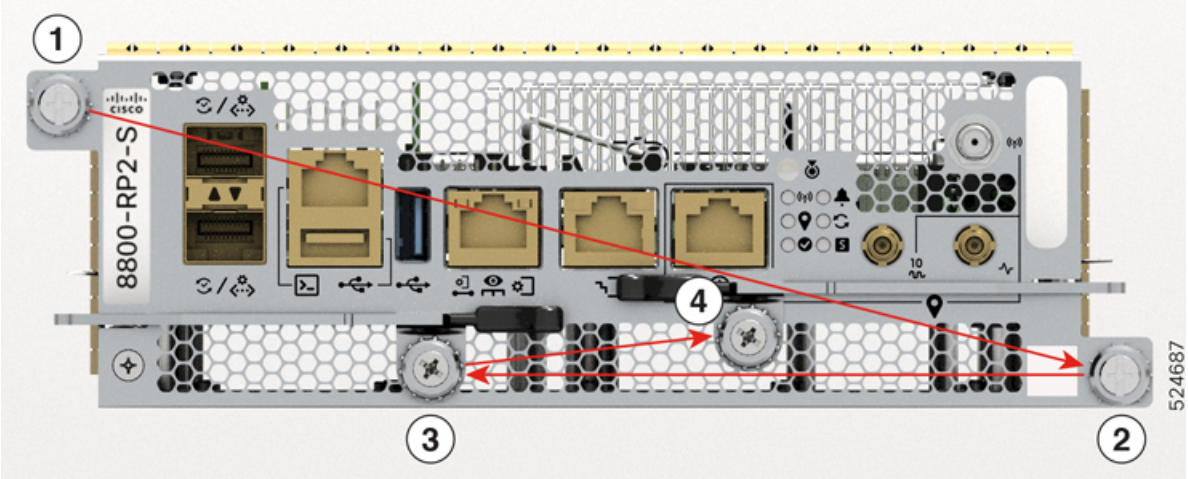Figure 151: Tighten the Screws in Order



Torque recommendation:

- Hand-tighten all the four captive screws.
- Torque all the four screws to 4 in-lbs (0.45 N·m) in the sequence as shown in the figure.
- Torque another 4 in-lbs (0.45 N·m) to the captive screws such that the total torque applied becomes 8 in-lbs (0.9 N·m). Follow the same sequence as shown in the figure.

Important The total torque must not be more than 8 in-lbs.

6. Attach the cables to the card.
7. Verify that the Route Processor card status LEDs turn on and appear green.

Note The router doesn't support migration from the 8800-RP2 to 8800-RP2-S card.

Migrating from 8800-RP to 8800-RP2 Card

Before you begin:

- You must have console access to the router.
- The router must be running Cisco IOS XR software release 7.11.1 or later version.
- The router must have two Route Processors (RP) cards, active and standby, up and running.

Procedure

Step 1 Use the **show platform** command to verify that all the router nodes are up and running.

Step 2 Use the **show redundancy summary** command to verify that the active RP and standby RP are in the NSR-ready State.

Example:

```
Router# show redundancy summary
Wed Jun 17 11:18:51.391 PST
Active/Primary Standby/Backup
-------------- --------------
0/RP0/CPU0(A)  0/RP1/CPU0(S) (Node Ready, NSR: Ready)
0/RP0/CPU0(P)  0/RP1/CPU0(B) (Proc Group Ready, NSR: Ready)

Router# show redundancy

Wed Jun 17 11:20:19.086 PST
Redundancy information for node 0/RP1/CPU0:
==========================================
Node 0/RP1/CPU0 is in ACTIVE role
Node Redundancy Partner (0/RP0/CPU0) is in STANDBY role
Standby node in 0/RP0/CPU0 is ready
Standby node in 0/RP0/CPU0 is NSR-ready
Node 0/RP1/CPU0 is in process group PRIMARY role
Process Redundancy Partner (0/RP0/CPU0) is in BACKUP role
Backup node in 0/RP0/CPU0 is ready
Backup node in 0/RP0/CPU0 is NSR-ready

Group              Primary     Backup    Status
---------          ---------   --------- ---------
v6-routing         0/RP1/CPU0  0/RP0/CPU0  Ready
mcast-routing      0/RP1/CPU0  0/RP0/CPU0  Ready
netmgmt            0/RP1/CPU0  0/RP0/CPU0  Ready
v4-routing         0/RP1/CPU0  0/RP0/CPU0  Ready
central-services   0/RP1/CPU0  0/RP0/CPU0  Ready
dlrsc              0/RP1/CPU0  0/RP0/CPU0  Ready
dsc                0/RP1/CPU0  0/RP0/CPU0  Ready

Active node reload "Cause: Initiating switch-over."
Standby node reload "Cause: Initiating switch-over."
```

Step 3 Remove the standby RP (8800-RP) card from slot1. Follow the procedure explained in the topic Replace a Route Processor Card, on page 166.

Step 4 Insert RP2 (8800-RP2) card in slot1. Follow the procedure explained in the topic Install an 8800-RP2 Card.

Step 5 Wait until the standby RP card reach NSR-ready state and status of ALL the groups is Ready state. Use **show redundancy** command to verify the same.

Step 6 Reload the active RP by using the **reload location***0/RP0/CPU0* command. Executing the command makes the 8800-RP2 card in slot1 the active card.

Step 7 Verify that the active RP is 8800-RP2 and that it is in the NSR-ready state. Verify that 8800-RP2 has the running configuration from 8800-RP.

Example:

```
Router# show redundancy summary
```

```
Router# show running config
```

Step 8 Remove the standby RP (8800-RP) from slot0. Follow the procedure explained in step-3.

Step 9 Insert the RP (8800-RP2) in slot0. Follow the procedure explained in step-4.

Step 10 Verify that the active RP card reach NSR-ready state and status of ALL the groups is Ready state. Use **show redundancy** command to verify the same.

Note
If you want to migrate to 8800-RP from 8800-RP2, follow the same steps as mentioned in this procedure, *Migrating from 8800-RP to 8800-RP2 Card*.

Migrating from 8800-RP to 8800-RP2-S Card

Before you begin:

- You must have console access to the router.
- The router must be running Cisco IOS XR software release 24.4.1 or later version.
- The router must have two RP1 cards (active and standby) up and running.

Procedure

Step 1 Use the **show platform** command to verify that all the router nodes are up and running.

Step 2 Use the **show redundancy summary** command to verify that the active RP and standby RP are in the NSR-ready State.

Example:

```
Router# show redundancy summary
Wed Jun 17 11:18:51.391 PST
Active/Primary Standby/Backup
-------------- --------------
0/RP0/CPU0(A)  0/RP1/CPU0(S) (Node Ready, NSR: Ready)
0/RP0/CPU0(P)  0/RP1/CPU0(B) (Proc Group Ready, NSR: Ready)

Router# show redundancy

Wed Jun 17 11:20:19.086 PST
Redundancy information for node 0/RP1/CPU0:
==========================================
Node 0/RP1/CPU0 is in ACTIVE role
Node Redundancy Partner (0/RP0/CPU0) is in STANDBY role
Standby node in 0/RP0/CPU0 is ready
Standby node in 0/RP0/CPU0 is NSR-ready
Node 0/RP1/CPU0 is in process group PRIMARY role
Process Redundancy Partner (0/RP0/CPU0) is in BACKUP role
Backup node in 0/RP0/CPU0 is ready
Backup node in 0/RP0/CPU0 is NSR-ready

Group             Primary     Backup    Status
```

```
---------          ---------   --------- ---------
v6-routing         0/RP1/CPU0  0/RP0/CPU0  Ready
mcast-routing      0/RP1/CPU0  0/RP0/CPU0  Ready
netmgmt            0/RP1/CPU0  0/RP0/CPU0  Ready
v4-routing         0/RP1/CPU0  0/RP0/CPU0  Ready
central-services   0/RP1/CPU0  0/RP0/CPU0  Ready
dlrsc              0/RP1/CPU0  0/RP0/CPU0  Ready
dsc                0/RP1/CPU0  0/RP0/CPU0  Ready

Active node reload "Cause: Initiating switch-over."
Standby node reload "Cause: Initiating switch-over."
```

Step 3 Remove the standby RP (8800-RP) card from slot1. Follow the procedure explained in the topic Replace a Route Processor Card, on page 166.

Step 4 Insert 8800-RP2-S card in slot1. Follow the procedure explained in the topic Install an 8800-RP2-S Card.

Step 5 Wait until the standby RP card reach NSR-ready state and status of ALL the groups is Ready state. Use **show redundancy** command to verify the same.

Step 6 Reload the active RP by using the **reload location***0/RP0/CPU0* command. Executing the command makes the 8800-RP2-S card in slot1 the active card.

Step 7 Verify that the active RP is 8800-RP2-S and that it is in the NSR-ready state. Verify that 8800-RP2-S has the running configuration from 8800-RP.

Example:

```
Router# show redundancy summary
Router# show running config
```

Step 8 Remove the standby RP, 8800-RP, from slot0. Follow the procedure explained in step-3.

Step 9 Insert the 8800-RP2-S in slot0. Follow the procedure explained in step-4.

Step 10 Verify that the active RP card reach NSR-ready state and status of ALL the groups is Ready state. Use **show redundancy** command to verify the same.

Note
If you want to migrate to 8800-RP from 8800-RP2-S, follow the same steps as mentioned in this procedure, *Migrating from 8800-RP to 8800-RP2-S Card*.

Replace a Line Card

The Cisco 8800 series routers can operate with one or more line cards. If there is at least one line card that is installed and operating in the chassis, you can replace another line card or install a new line card in an empty line card slot.

The Cisco 8800 series routers support OIR of line cards.

Note You must install at least one route processor card when you power on the router.

Cisco 8800 series line cards use either buttons or latches to lock the ejector levers.

- Replace or Install a Line Card - Ejector Levers with Buttons, on page 185
- Replace or Install a Line Card - Ejector Levers with Latches, on page 192

Watch Replace a Line Card (Video).

Replace or Install a Line Card - Ejector Levers with Buttons

Warning **Statement 1029—**Blank Faceplates and Cover Panels

Blank faceplates and cover panels serve three important functions: they reduce the risk of electric shock and fire, they contain electromagnetic interference (EMI) that might disrupt other equipment, and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place.

Warning **Statement 1051—**Laser Radiation

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.

Caution

- Line cards have two ejector levers to release the card from the router. Use these levers to remove the line card and to seat the line card firmly in the router when you are installing the line card. The ejector levers align and seat the card connectors in the router. To avoid damaging card mechanical components, never carry a line card by the captive installation screws or ejector levers. Doing so can damage these components and cause card insertion problems.
- Ensure that all the line card screws are fully tightened. Failure to properly tighten the line card screws may result in fabric links not coming up.
- Rotate the ejector levers toward the faceplate past parallel until it stops. This ensures that the line card fully inserts when you install the line card.

Note Opening the ejector levers of an installed line card causes the line card to shut down even when the captive screws are screwed in. To reboot the line card, you must do one of the following:

- Remove and reinsert the line card and close the ejector levers.
- Close the ejector levers and reload the card using the **reload location** *<rack>/<line-card-slot>* **force** command.

Procedure

Step 1 Open the packaging for the new line card and inspect the line card for damage. Carefully inspect the fabric connectors for damage.

If the line card is damaged, contact the Technical Assistance Center (TAC).

Step 2 If you are replacing a line card that is currently in the chassis, remove the existing line card from the chassis by following these steps:

a) Run the **shutdown location 0/** *location*/**CPU0** command, which gracefully shuts down the line card.


b) Verify that the Line Card LED for the slot that you specified turns off. Also, you can use the **show platform** command to verify that the status of the card is SHUT DOWN.

c) Disconnect and label each of the interface cables from the line card.

d) Loosen the two captive screws.

e) Press the ejector buttons and the two ejector levers open in the direction as shown in the image below.

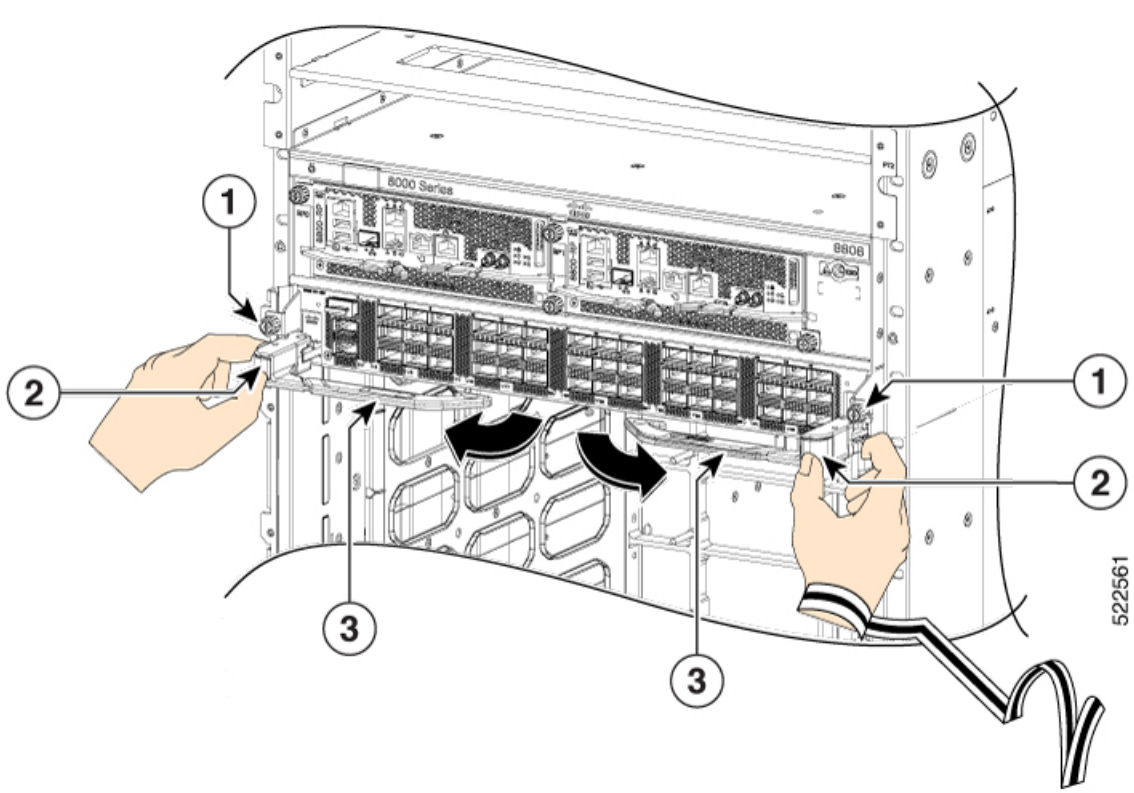
Figure 152: Press the Ejector Buttons



1	Captive screws	3	Ejector levers
2	Ejector buttons		

f) Use the ejector levers to pull the line card a couple of inches (about 5 cm) from the chassis.

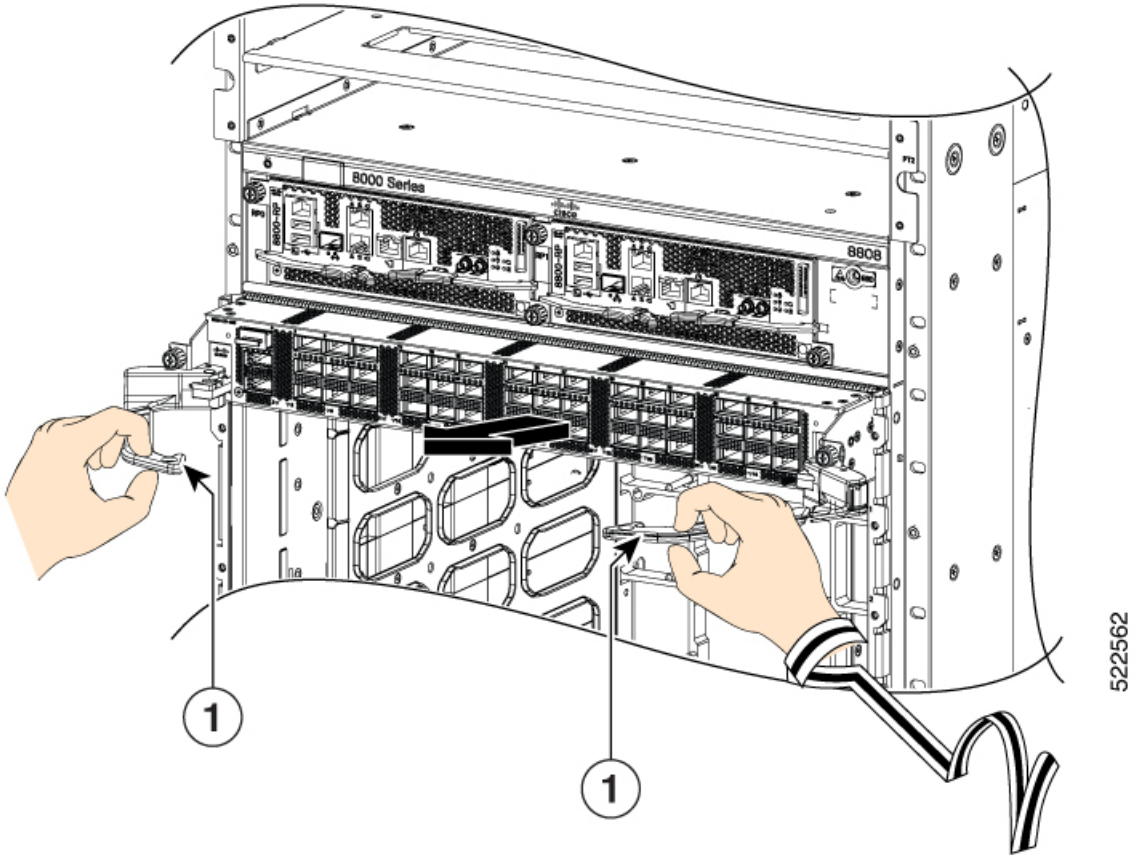
Figure 153: Pull the Line Card from the Chassis



1	Ejector levers

g) Close the ejector levers in the direction as shown in the image below. Use one hand to hold the front of the line card, place your other hand under the line card to support its weight, pull it out of the chassis, and set it on an antistatic surface or inside an antistatic bag. Or, place your hands on the sides of the line card, pull it out of the chassis, and set it on an antistatic surface or inside an antistatic bag.

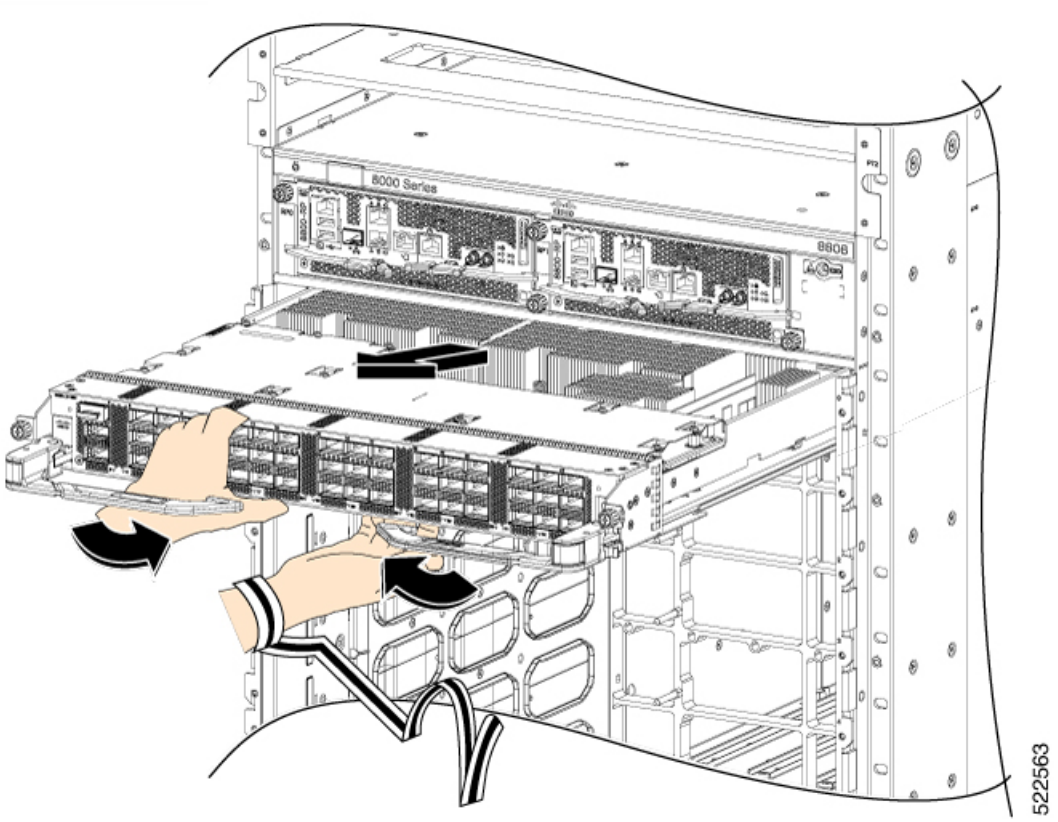Figure 154: Remove the line card from the chassis




Step 3 To install the line card, follow these steps:

a) Hold the front of the line card with one hand and place your other hand under the line card to support its weight. Or, place your hands on the sides of the line card, pull it out of the chassis, and set it on an antistatic surface or inside an antistatic bag.

b) Align the back of the line card to the guides in the open line card slot and slide the line card all the way into the slot (see the following figure).

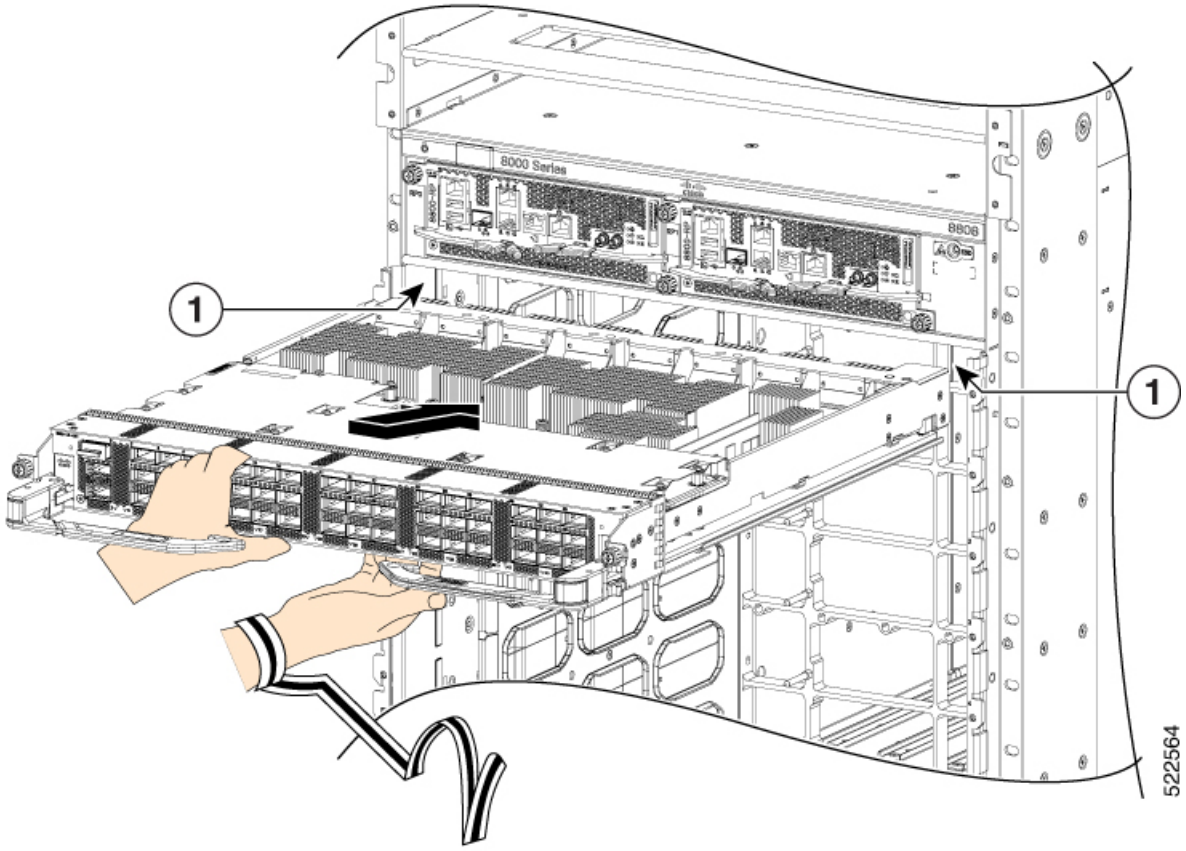
Figure 155: Insert a Line Card into the Chassis



1	Guides (line card slot)

The line card stops when its front is about 0.25 inches (0.6 cm) outside the front of the chassis. Press the ejector buttons, and the two levers move partway from the center of the line card in the direction as shown in the image.

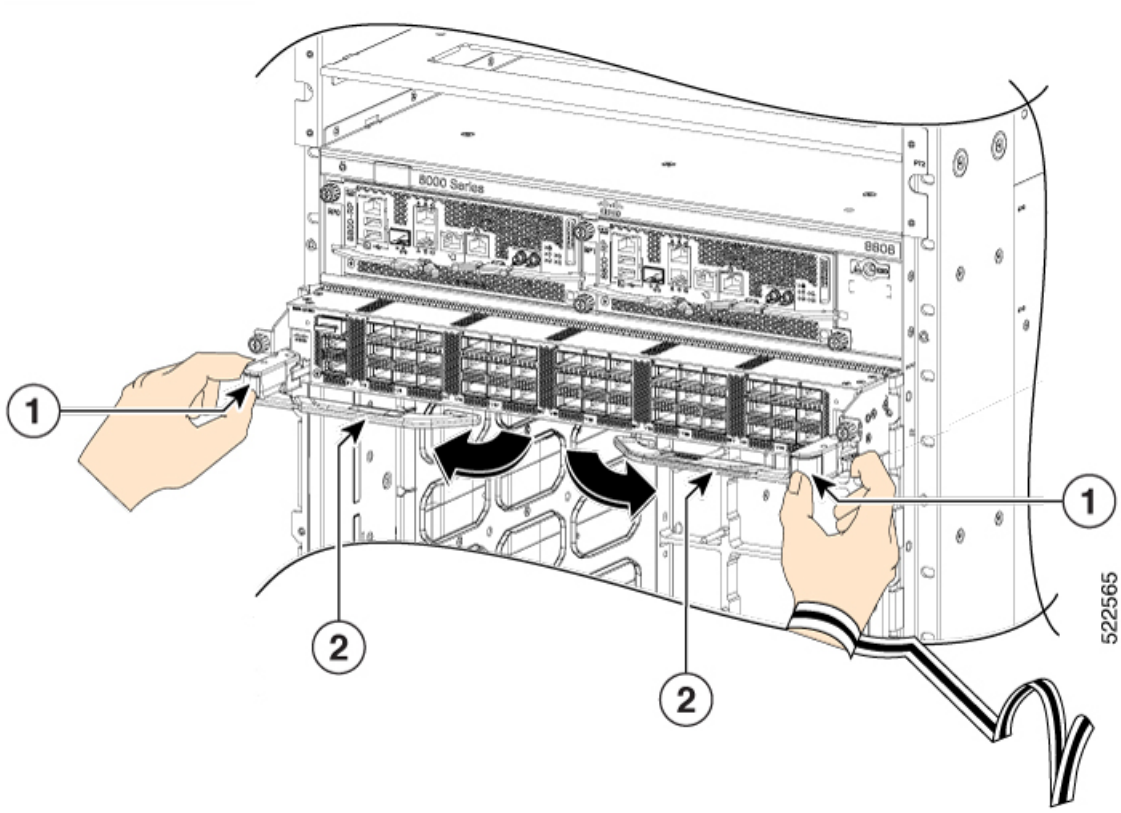
Figure 156: Press the Ejector Buttons



1	Ejector buttons	2	Ejector levers

c) Close the ejectors by rotating the ends of the two levers toward the faceplate past parallel until it stops. This ensures that the line card fully inserts when you install it.

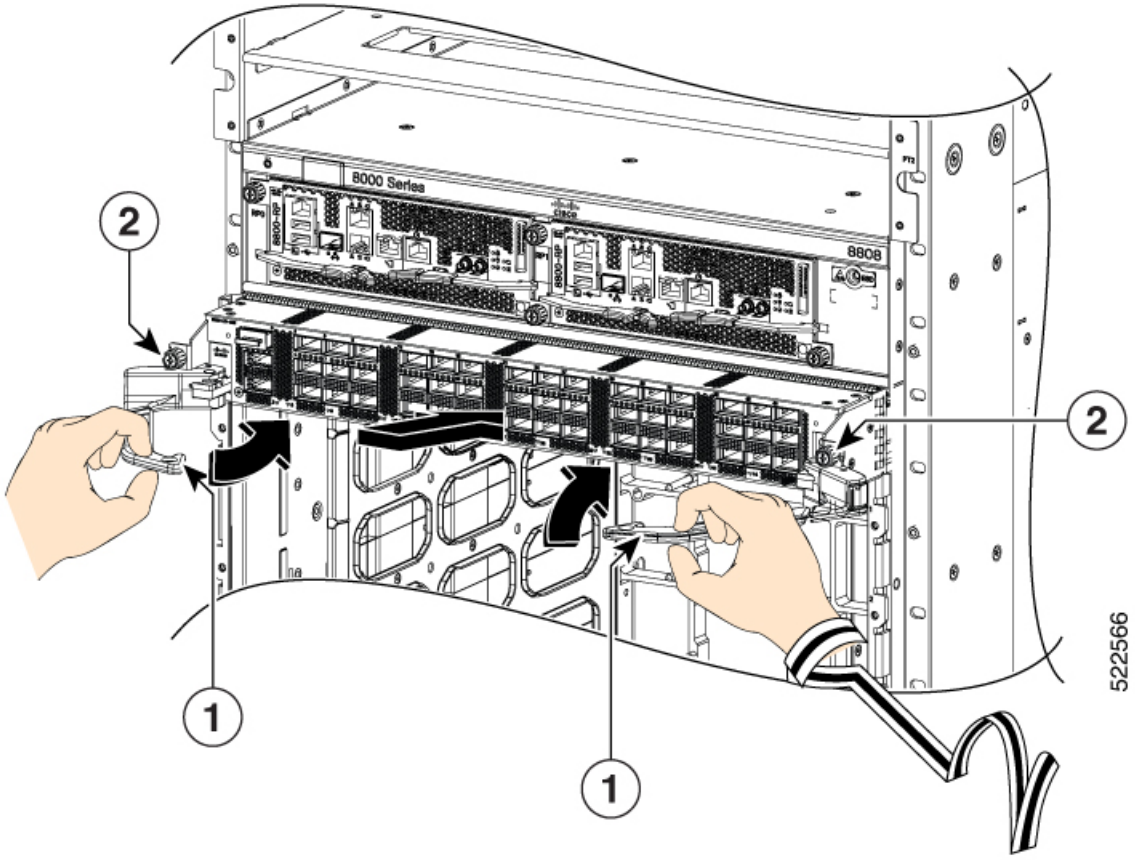Figure 157: Close the Ejector Levers



1	Ejector levers	2	Captive screws

Note
As you rotate the levers, the front of the line card moves all the way to the front of the chassis and the line card fully seats on the chassis.

d) Tighten the two captive screws to 8 in-lb (0.9 Nm) torque.

Note
When installing a line card, fully tighten both captive installation screws to ensure that the card is correctly seated in the router. A card that is only partially seated in the router might not operate properly, even if it boots.

e) Attach each interface cable to the appropriate port on the line card. Use the label on each cable to determine which port each cable attaches to.
f) Verify that the line card LEDs turn on and appear green.

Replace or Install a Line Card - Ejector Levers with Latches

Warning **Statement 1029—**Blank Faceplates and Cover Panels

Blank faceplates and cover panels serve three important functions: they reduce the risk of electric shock and fire, they contain electromagnetic interference (EMI) that might disrupt other equipment, and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place.

Warning **Statement 1051—**Laser Radiation

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.

Caution

- Line cards have two ejector levers to release the card from the router. Use these levers to remove the line card and to seat the line card firmly in the router when you are installing the line card. The ejector levers align and seat the card connectors in the router. To avoid damaging card mechanical components, never carry a line card by the captive installation screws or ejector levers. Doing so can damage these components and cause card insertion problems.
- Ensure that all the line card screws are fully tightened. Failure to properly tighten the line card screws may result in fabric links not coming up.
- Rotate the ejector levers towards the faceplate past parallel until it stops. This ensures that the line card fully inserts when you install the line card.

Note Opening the ejector levers of an installed line card causes the line card to shut down even when the captive screws are screwed in. To reboot the line card, users must do one of the following:

- Remove and reinsert the line card and close the ejector levers.
- Close the ejector levers and reload the card using the **reload location** *rack line-card-slot i* **force** command.

Procedure

Step 1 Open the packaging for the new line card and inspect the line card for damage.

If the line card is damaged, contact the Technical Assistance Center (TAC).


Step 2 If you are replacing a line card that is currently in the chassis, remove the existing line card from the chassis by following these steps:

a) Run the **shutdown location 0/** *location*/**CPU0** command, which gracefully shuts down the line card.
b) Verify that the Line Card LED for the slot that you specified turns off. Also, you can use the **show platform** command to verify that the status of the card is SHUT DOWN.
c) Disconnect and label each of the interface cables from the line card.
d) Loosen the two captive screws.

Note
You must loosen the two captive screws completely before using the ejector levers to remove the line card. Failure to loosen the captive screws can cause damage to the ejector levers.

e) Slide the ejector lever latches outward and pull the two ejector levers in the direction as shown in the image below.

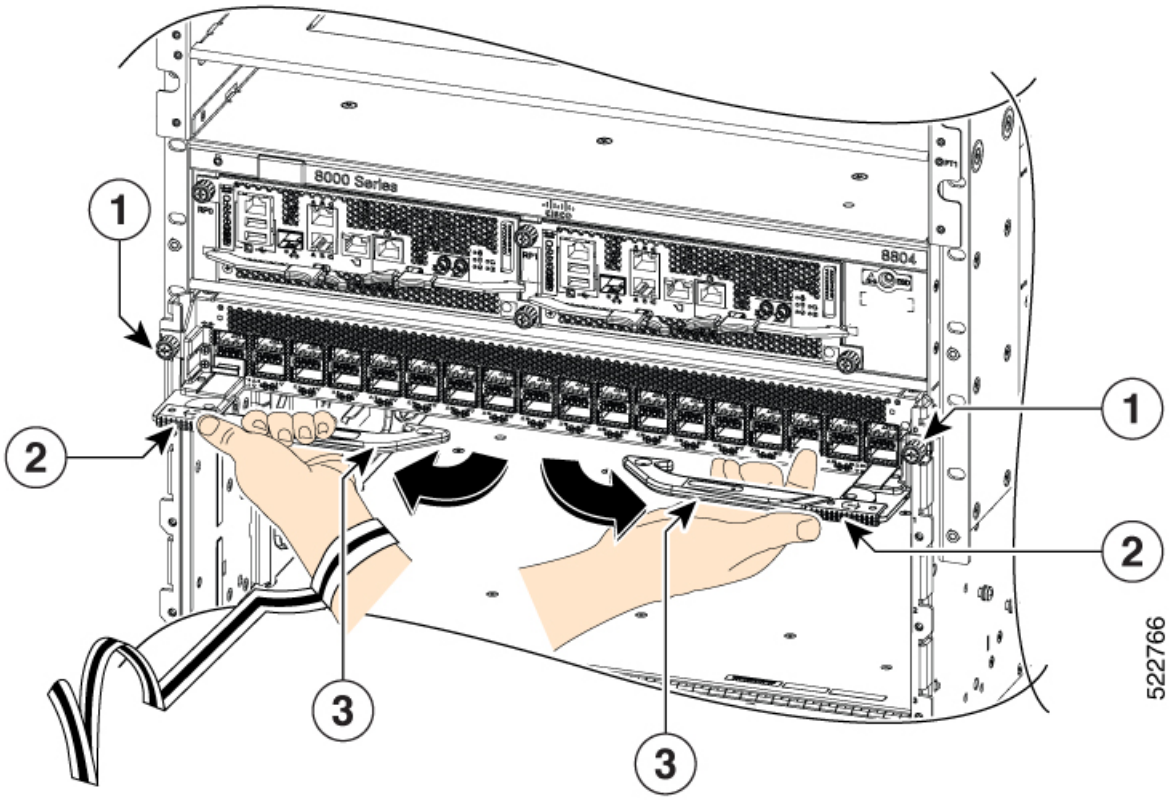
Figure 158: Slide the Ejector Lever Latches



1	Captive screws	3	Ejector levers
2	Ejector lever latches		

f) Use the ejector levers to pull the line card a couple of inches (about 5 cm) from the chassis.

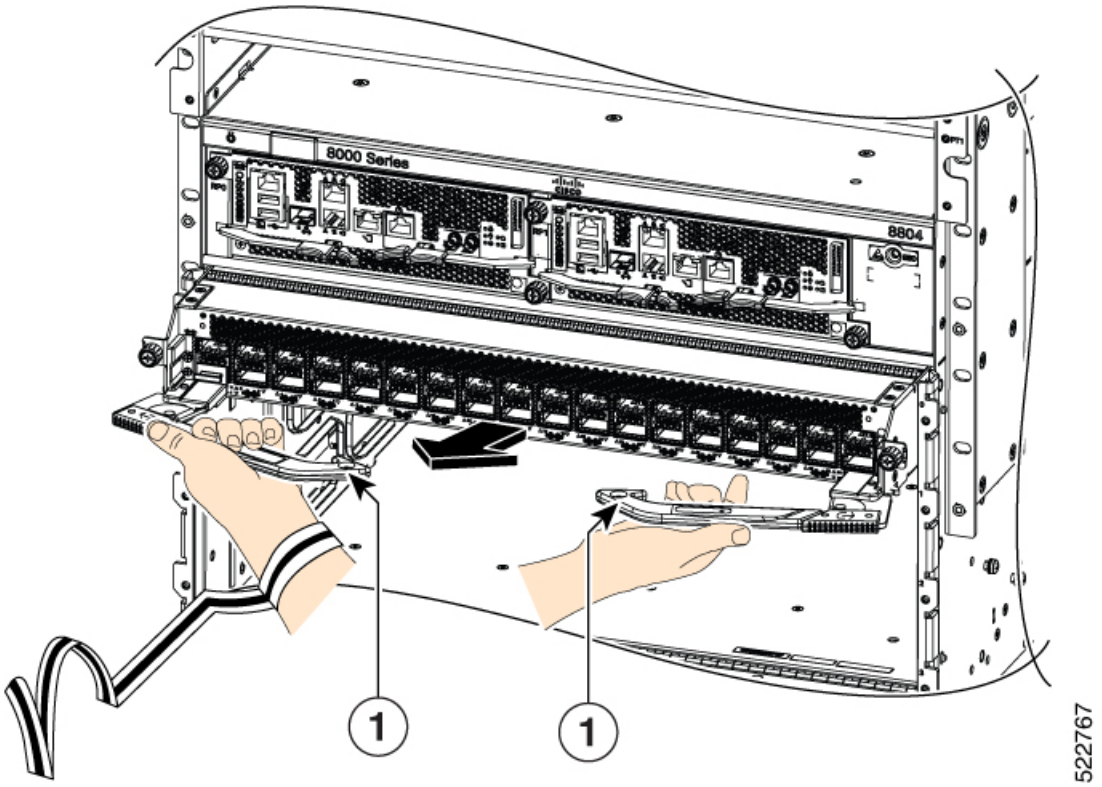
Figure 159: Pull the Line Card from the Chassis



1	Ejector levers

g) Close the ejector levers. The ejector lever latches will lock the ejector levers closed.
h) Place your hands on the sides of the line card, pull it out of the chassis, and set it on an antistatic surface or inside an antistatic bag.

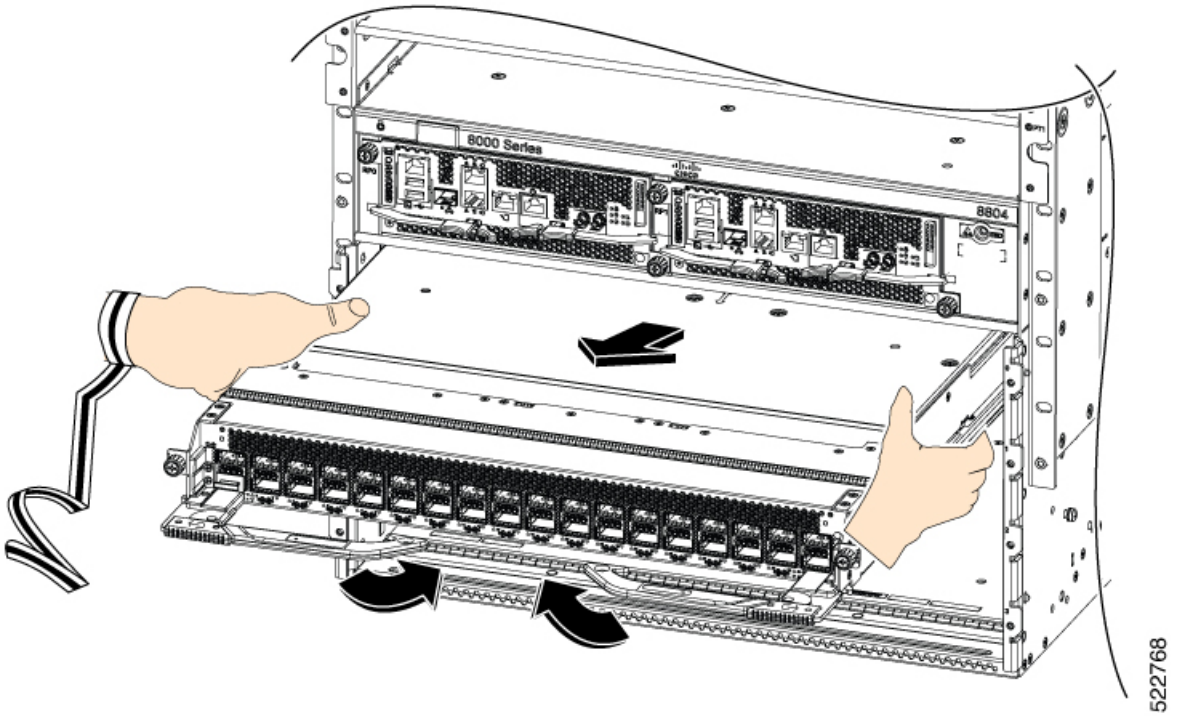Figure 160: Remove the Line Card from the Chassis




Step 3 To install the line card, follow these steps:

a) Hold the sides of the line card with both hands to support its weight.

b) Align the back of the line card to the guides in the open line card slot and slide the line card all the way into the slot (see the following figure).

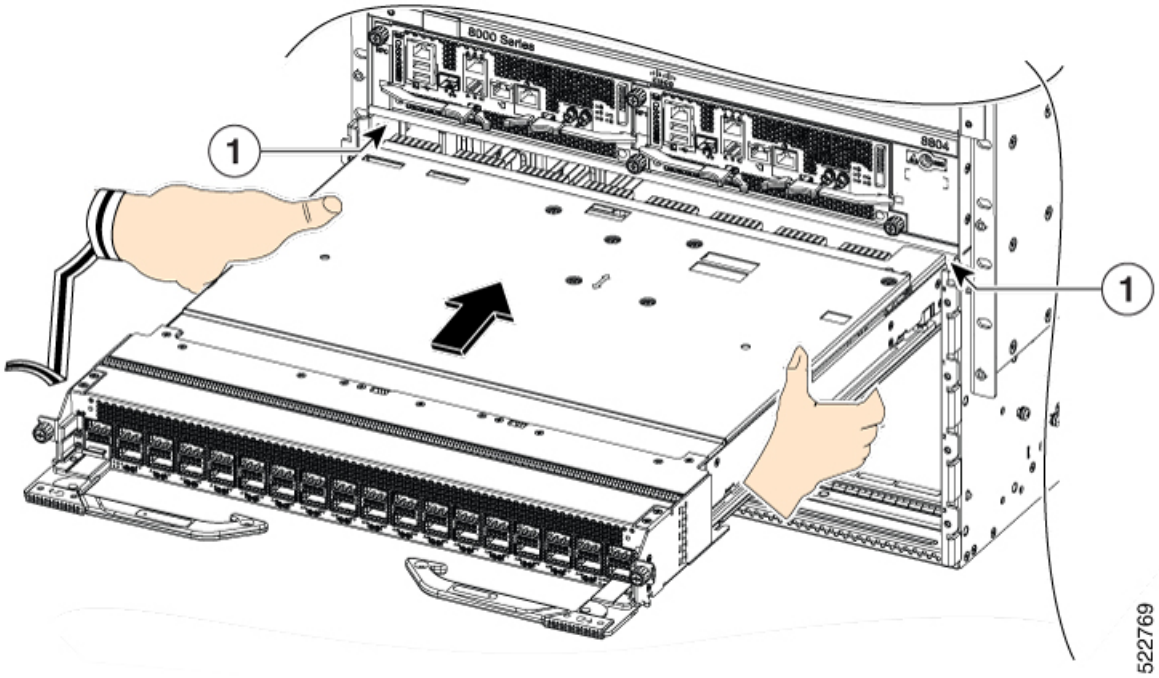Figure 161: Insert a Line Card into the Chassis




1	Guides (line card slot)

The line card stops when its front is about 0.25 inches (0.6 cm) outside the front of the chassis.

c) Slide the ejector lever latches to unlock the ejector levers and open the ejector levers outward as shown in the image.

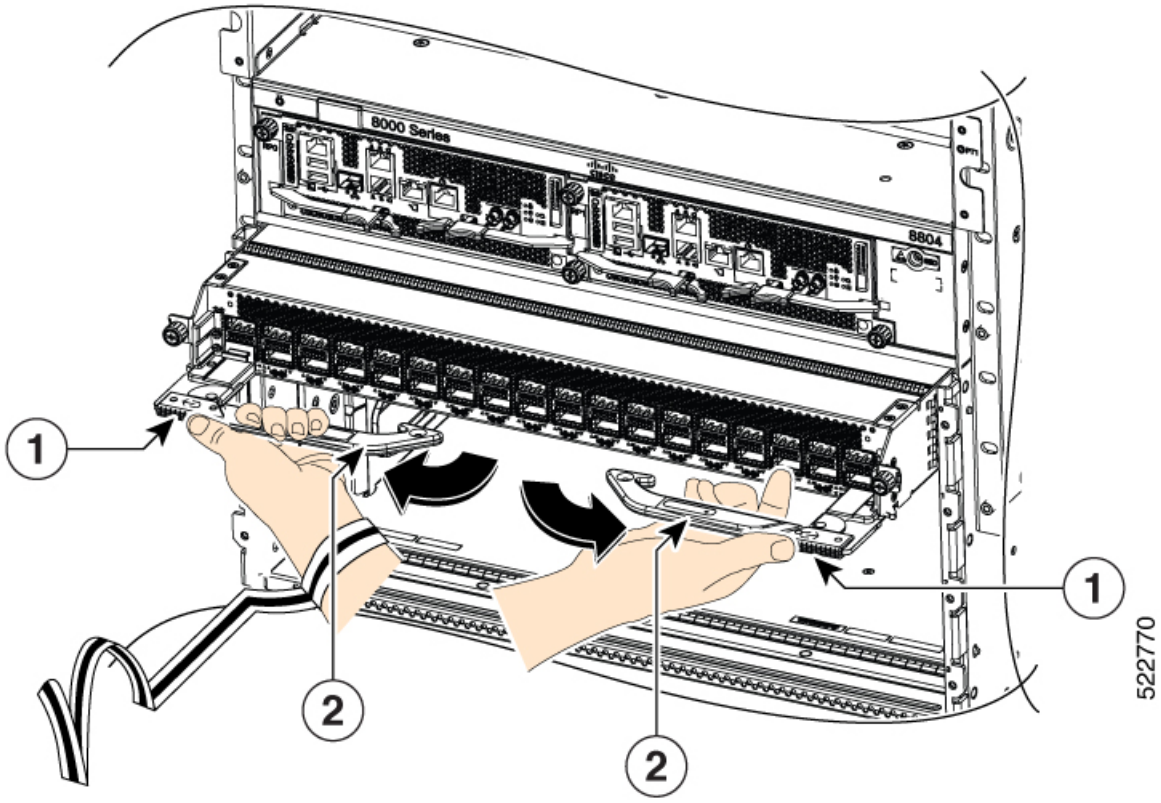Figure 162: Unlock the Ejector Levers




1	Ejector lever latches	2	Ejector levers

d) While holding the elector levers in the open position, slide the line card further into the slot until the ejector levers engage with the sides of the line card slot.

e) To fully seat the line card, close the ejectors by rotating the ends of the two levers toward the faceplate past parallel until it stops. This ensures that the line card fully inserts when you install it.

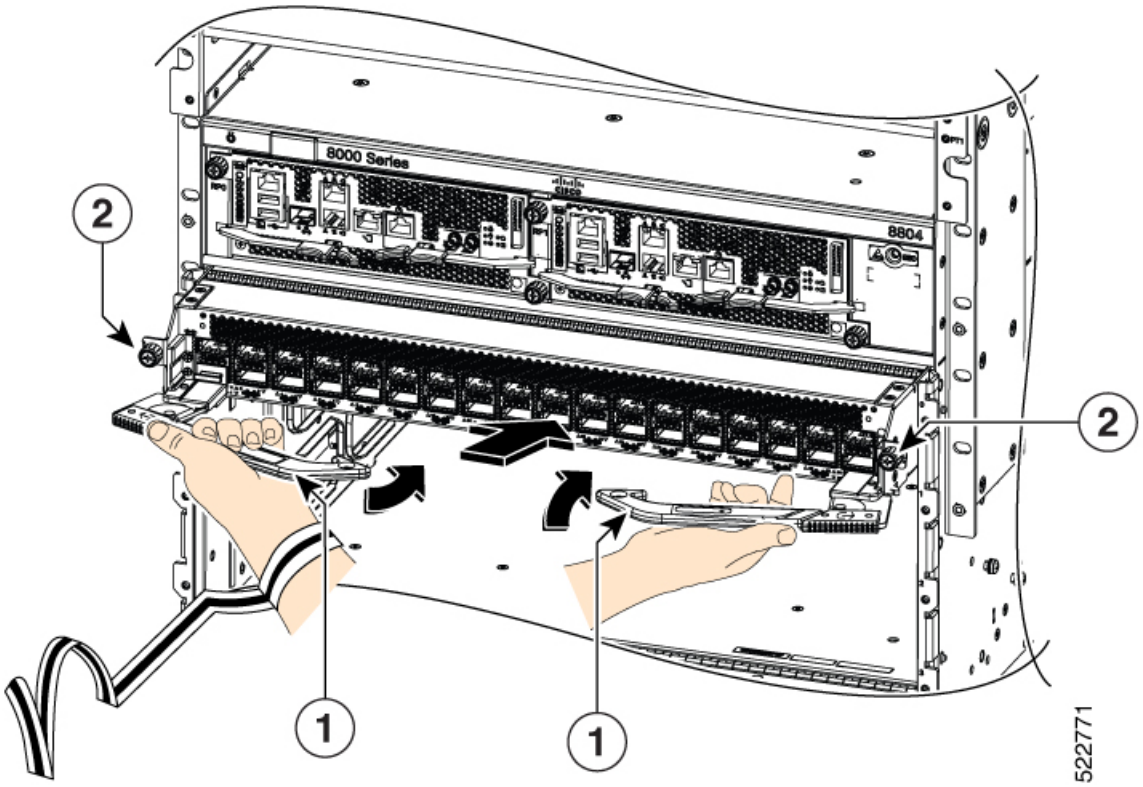Figure 163: Close the Ejector Levers



1	Ejector levers	2	Captive screws

Note
As you rotate the levers, the front of the line card moves all the way to the front of the chassis and the line card fully seats on the chassis.

f) Tighten the two captive screws to 8 in-lb (0.9 Nm) torque.

Note
When installing a line card, fully tighten both captive installation screws to ensure that the card is correctly seated in the router. A card that is only partially seated in the router might not operate properly, even if it boots.

g) Attach each interface cable to the appropriate port on the line card. Use the label on each cable to determine which port each cable attaches to.

h) Verify that the line card LEDs turn on and appear green.

Replace a Fan Tray

You can remove a fan tray (8818-FAN, 8812-FAN, 8808-FAN, 8804-FAN or 8804-FAN-V2, 8808-FAN-V2, 8818-FAN-V2) to either replace it with another fan tray or to replace a fabric card located behind it.

The router uses four fan trays but it can operate with three fan trays while you replace one or remove one to replace one of the fabric cards behind the fan tray. When you remove one fan tray, the other fan trays speed up their fans to maintain the designed airflow.

To maintain optimal cooling, the 8804-FAN-V2, 8808-FAN-V2, and 8818-FAN-V2 high-performance fan trays must be installed if the router is configured with:

- P200-based line cards
- P100-based line cards with 800G-ZR/ZRP coherent optics
- Q200-based 88-LC0-34H14FH line card with 400G-ZRP coherent optics

To maintain optimal cooling, the 8812-FAN-V2 high-performance fan tray must be installed in the Cisco 8812 router.

Cisco IOS XR software does not support mixed V1 and V2 fan tray configurations.

Guidelines for Replacing Fan Trays with Same Versions (V1 to V1 or V2 to V2)

- You may replace one fan tray at a time while the system is powered on.
- Never remove more than one fan tray simultaneously. Removing two or more trays at the same time will trigger a system shutdown within 120 seconds.
- If you are replacing all fan trays, you must power down the chassis completely. Ensure all replacement trays are of the same version (all V1 or all V2).

Guidelines for Replacing Fan Trays with Different Versions (V1 to V2 or V2 to V1)

- Power down the chassis completely. Replace all fan trays with the new, identical version (all V1 or all V2).
- Verify that no mix of V1 and V2 trays is installed before powering on the system.
- If the chassis is powered on with a combination of different fan tray versions, it will automatically shut down within 120 seconds.



Note Fan trays marked with a blue dot have no impact on installation steps or airflow direction.



Note To ensure adequate airflow and prevent overheating, do not operate the router with three fan trays for more than 10 minutes.



Caution Never remove two fan trays at a time during operation, the router allows up to two minutes of operations before shutting down unless you replace the missing fan tray within that time. If the router senses an over temperature condition when multiple fan trays are removed, the shutdown can occur in less than two minutes.

To replace a fan tray, you must perform the following functions:

1. Remove the fan tray.
2. Install a fan tray.

Watch Replace a Fan Tray (Video).

Remove Fan Tray

Remove only one fan tray at a time during router operations. If you remove more than one fan tray at a time, the router shuts down within two minutes unless you replace the extra fan trays that you removed within that time.

Procedure

Step 1 Unscrew the four captive screws on the front of the fan tray until each screw is free of the chassis.

Step 2 Hold both handles on the front of the fan tray with both of your hands and pull the fan tray out of the slot.

Step 3 Set the fan tray on antistatic material or inside an antistatic bag.

Install Fan Tray


Before you begin

- Fan tray slot is open in the chassis.
- If you are replacing a fabric card behind the open fan tray slot, ensure that the fabric card replacement operation is completed.

Procedure

Step 1 Use both of your hands to hold the two handles on the front of the fan tray that you are installing.

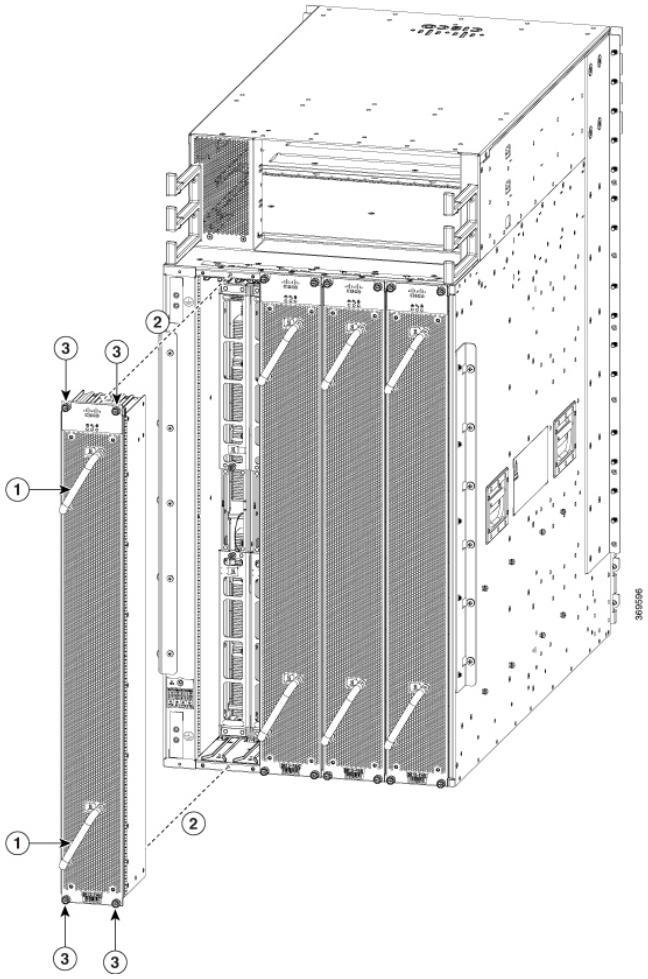Figure 164: Remove Fan Tray from the Chassis



1	Handle	3	Captive screws
2	Align fan tray in position		

Step 2 Position the fan tray with its rear (the side with the electrical connectors) at the opening for the fan tray slot in the chassis.

Step 3 Align the two tracks on the top of the fan tray with the two sets of rails at the top of the open fan tray slot in the chassis.

Step 4 Slide the fan tray all the way into the slot until the front of the fan tray touches the chassis.

Make sure that the four captive screws on the front of the fan tray align with the four screw holes in the chassis.

Step 5 Screw in the four captive screws to secure the fan tray to the chassis. Tighten the screws to 8 in-lb (0.9 N·m) of torque.

Step 6 Verify that the fan tray STATUS LED turns on and becomes green, approximately within 20 seconds.

Replace Fabric Card

Warning **Statement 1079**—Hot Surface

This icon is a hot surface warning. To avoid personal injury, do not touch without proper protection.



Note The fabric card surfaces may reach temperatures exceeding 80°C (176°F). Removal and installation of the fabric card must be performed by a skilled individual. To avoid potential burns or injuries, always wear appropriate Personal Protective Equipment (PPE), such as heat-resistant gloves rated for a minimum of 100°C (212°F), when handling the fabric card.

Note The Cisco 8800 series routers support Online Insertion and Removal (OIR) of fabric cards only when replacing a card with the same type and speed— for example, swapping 88xx-FC with 88xx-FC or 88xx-FC0 with 88xx-FC0. If it is necessary to replace a fabric card with a different type or speed (for example, from 88xx-FC to 88xx-FC0 or vice versa), the router must be powered down prior to the replacement. Mixing different types of fabric cards in an active system is not supported and may result in system functionality issues.

The router uses either a minimum of four or a maximum of eight fabric cards but you can replace a fabric card while others are operating. To replace a fabric card with the same type, you must do each of the following:

,

- Shut down the fabric card being replaced.
- Remove the fan tray covering the fabric card in the chassis.

Note To ensure adequate airflow and prevent overheating, do not operate the router with three fan trays for more than 10 minutes.

- Remove the fabric card.
- Install the new fabric card.

Note We recommend that you insert the fabric cards in the sequence starting with FC0, FC1, and so on (from left to right). Use the adjacent card as a guide to retain the cards in vertical position.

- Reinstall the fan tray over the fabric card.
- Activate the fabric card.

The Cisco 8800 series routers support OIR of fabric card.

To maintain the designed airflow while you remove the fan tray, the fans in the other fan trays increase their speed. During operations, it is required that you remove only one fan tray at a time and reinstall that fan tray within 10 minutes to avoid the possibility of having the router overheat and shut down. If you remove more than one fan tray at a time, the router shuts down if you do not reinstall the extra missing fan trays within two minutes (the shutdown can occur earlier if the router over heats).

Note If the router is using only five fabric cards (5fc mode), the fabric cards must be inserted in FC slots 1, 2, 3, 4, and 5.

Note Opening the ejector levers of an installed fabric card causes the fabric card to shut down even when the captive screws are screwed in. To reboot the fabric card, users must do one of the following:

- Remove and reinsert the fabric card and close the ejector levers.
- Close the ejector levers and reload the fabric card using the **reload location** <*rack*>/<*fabric card location*> **force** command.

Watch Replace a Fabric Card (Video).

Remove a Fabric Card

Before you begin

- You must wear an electrostatic discharge (ESD) wrist strap or other ESD protective device while handling modules.
- Prepare an antistatic surface or packing materials for each module that you remove from the chassis.

Procedure

Step 1 If you are replacing a fabric card, open the packaging for the new module and inspect it for damage.

If the module is damaged, alert the Technical Assistance Center (TAC) and stop this replacement process until you have an undamaged module to install.

Step 2 To prevent loss of packets during operations, shut down the fabric card as follows:

a) Shut the fabric control plane using the **controller fabric plane <*plane-id*> shutdown** command.

There are eight planes and the value of the <*plane-id*> is between 0–7.

When you are replacing the card, shut down the corresponding fabric plane of the card. For example, when you are replacing the card in slot 0 (0/FC0), shut down fabric plane 0.

b) Run the **shutdown location 0/FC** *location* command.

c) Verify that the Fabric LED for the slot that you specified turns off. Also, you can use the **show platform** command to verify that the status of the card is SHUT DOWN.

Step 3 Remove the fan tray covering the fabric card in the chassis.

Refer the fan tray removal procedure:Replace a Fan Tray, on page 198

Step 4 Remove the fabric card that you are replacing by following these steps:

a) Unscrew the two captive screws on the center of each of the two handles on the fabric card (see Callout 1 in the following figure).

b) Rotate the handles outwards until they stop (see Callout 2 in the following figure).

c) With each of the two handles in your two hands, pull the module a couple of inches (about 5 cm) out of the slot (see the following figure).

Figure 165: Removing a Fabric Card from the Chassis


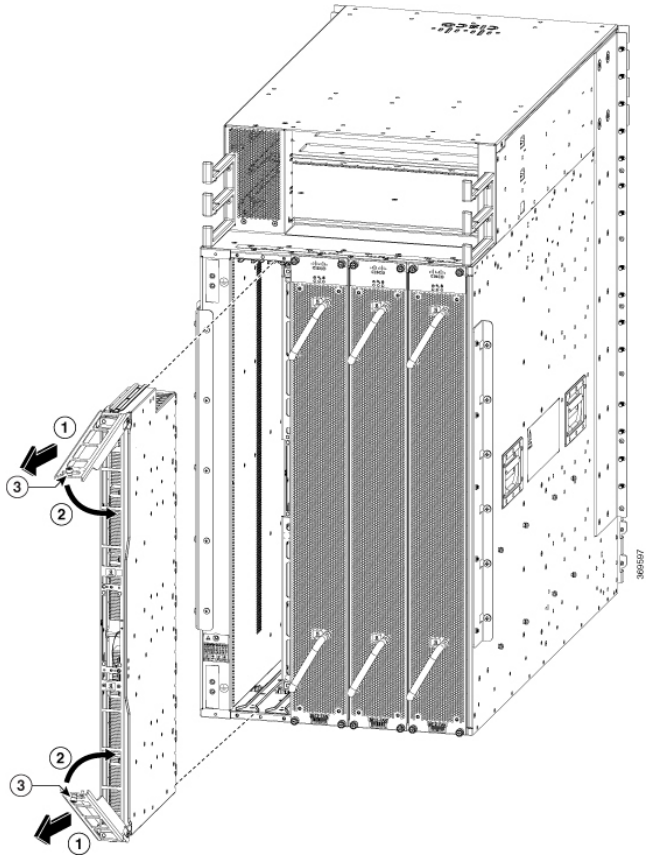


Figure 166: Removing a Fabric Card from the Chassis - 8808-FC1

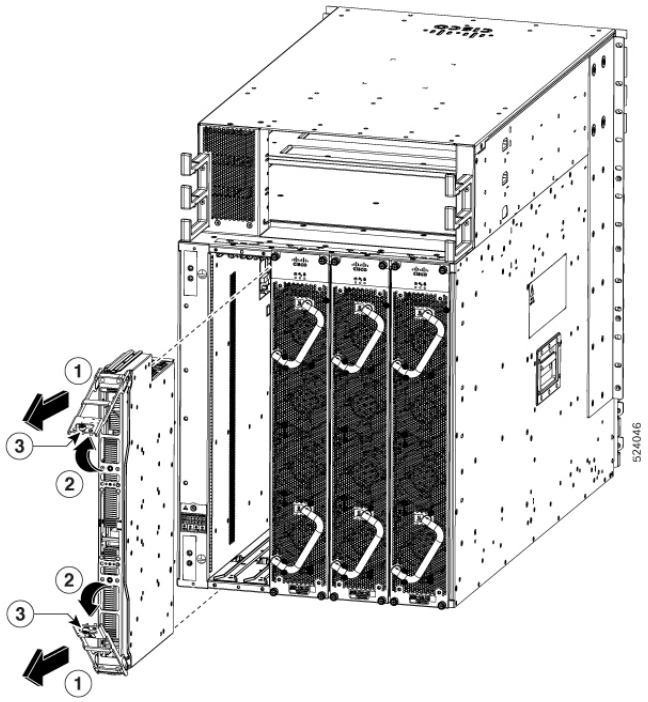

1	Pull on both handles to partially remove the fabric card from the chassis	3	Two captive screws (one on each handle)
2	Rotate both ejector handles to the front of the module		

d) Place one hand under the fabric card to support its weight, place your other hand on the front of the module, and slide the module out of the slot.
e) Rotate both handles back to the front of the module until they are in place. Fasten each handle to the module using the captive screw on the back of the handle. Hand tighten the handle screws to keep them in place for carrying the card.
f) Rotate the module 90 degrees and lay it flat on an antistatic surface or in an antistatic bag.

Install a Fabric Card

Procedure

Step 1 Unscrew the two captive screws (one on each ejector handle) and rotate the ejector handles at least 30 degrees. Ensure that the locking posts on the top and bottom of the chassis rotate into the module so that the module can slide fully into the slot.

Step 2 Place one hand on the front of the module and turn the module 90 degrees so that the electrical connectors are on the bottom.

Step 3 Align the guide bar on the bottom of the fabric card into the guide slot at the bottom of the fabric card slot, and make sure that the guide rails on the top of the fabric card align with the track on the top of the slot.

Note
The lower guide rail extends to the back of the chassis. The upper guide rail does not connect until the card is halfway into the chassis.

Figure 167: Install Fabric Card


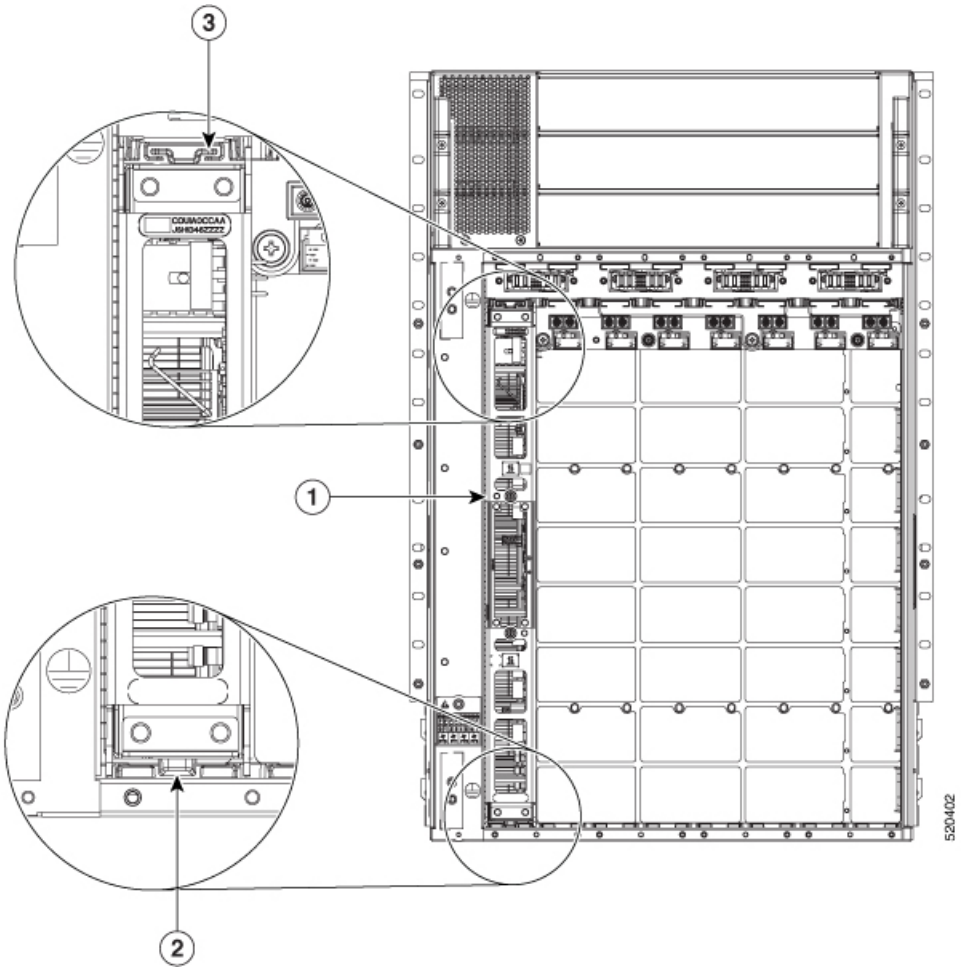


Figure 168: Install Fabric Card - 8808-FC1

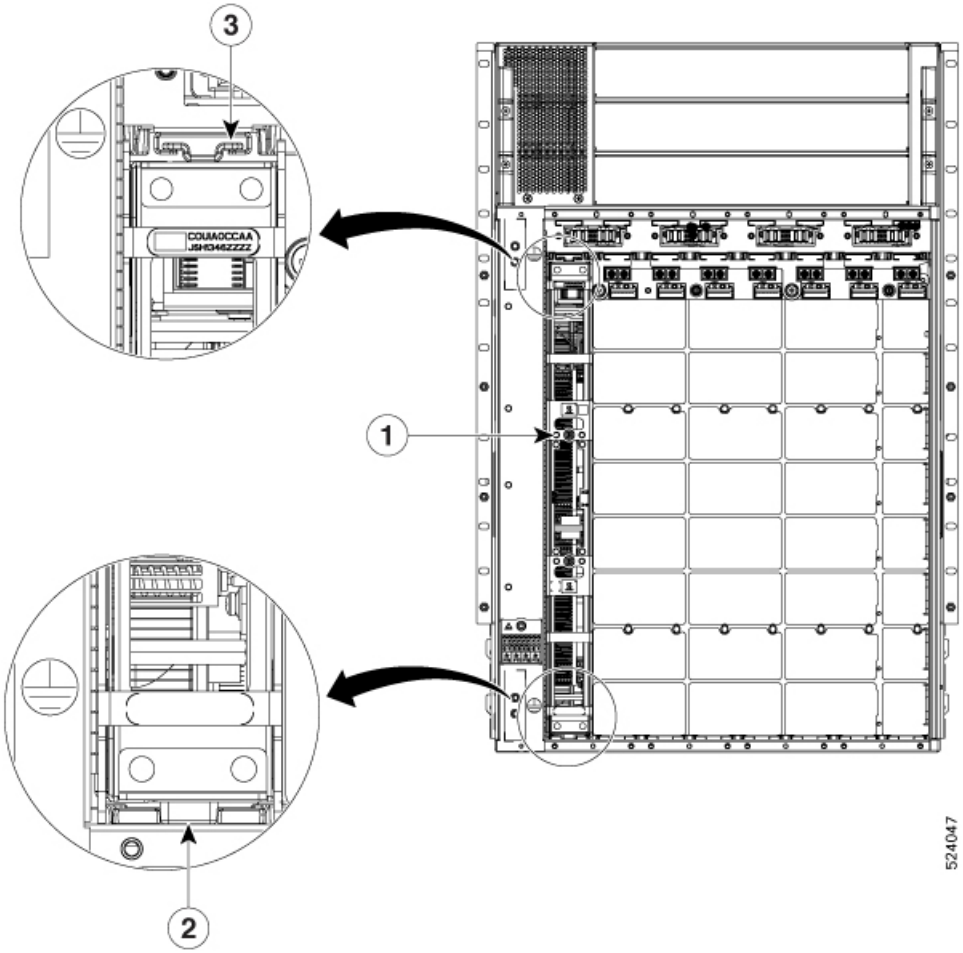

1	Always install the fabric card in a vertical position
2	Guide bar and guide slot
3	Guide rail and track

Figure 169: Installing a Fabric Card


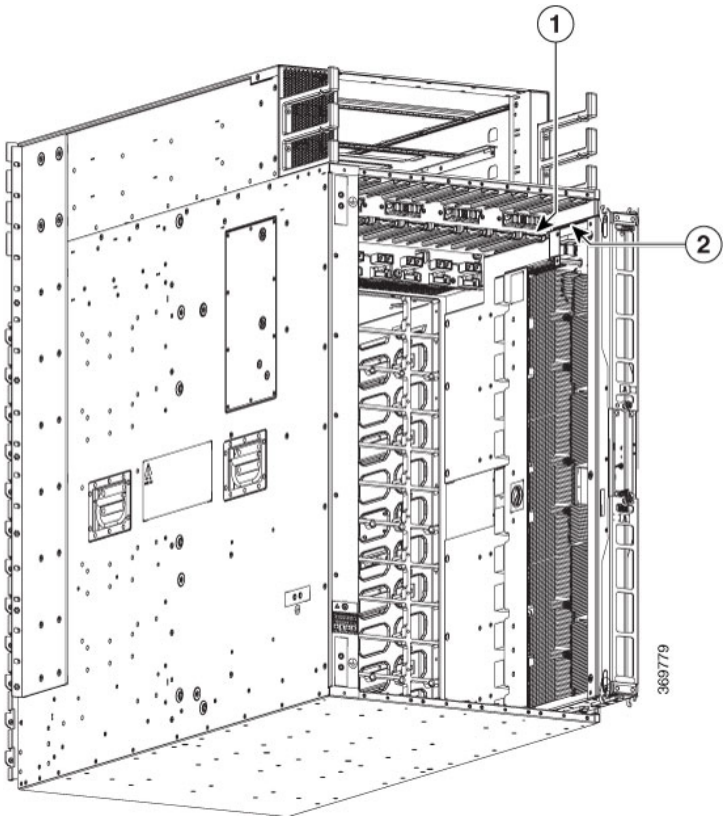


Figure 170: Installing a Fabric Card - 8808-FC1

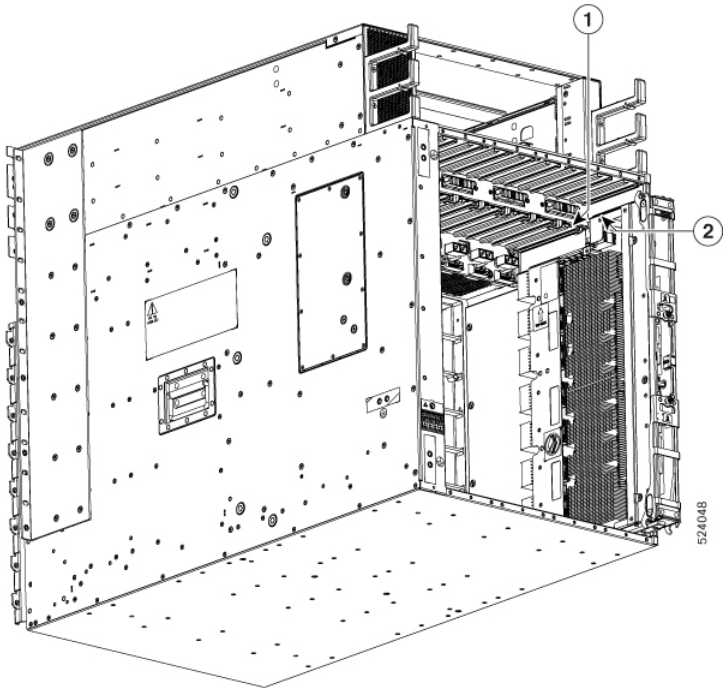

1	Chassis top fabric card guide rail.	2	Insert fabric card top guide rail into chassis to guide rail.

Figure 171: Fabric Card Installed in a Chassis


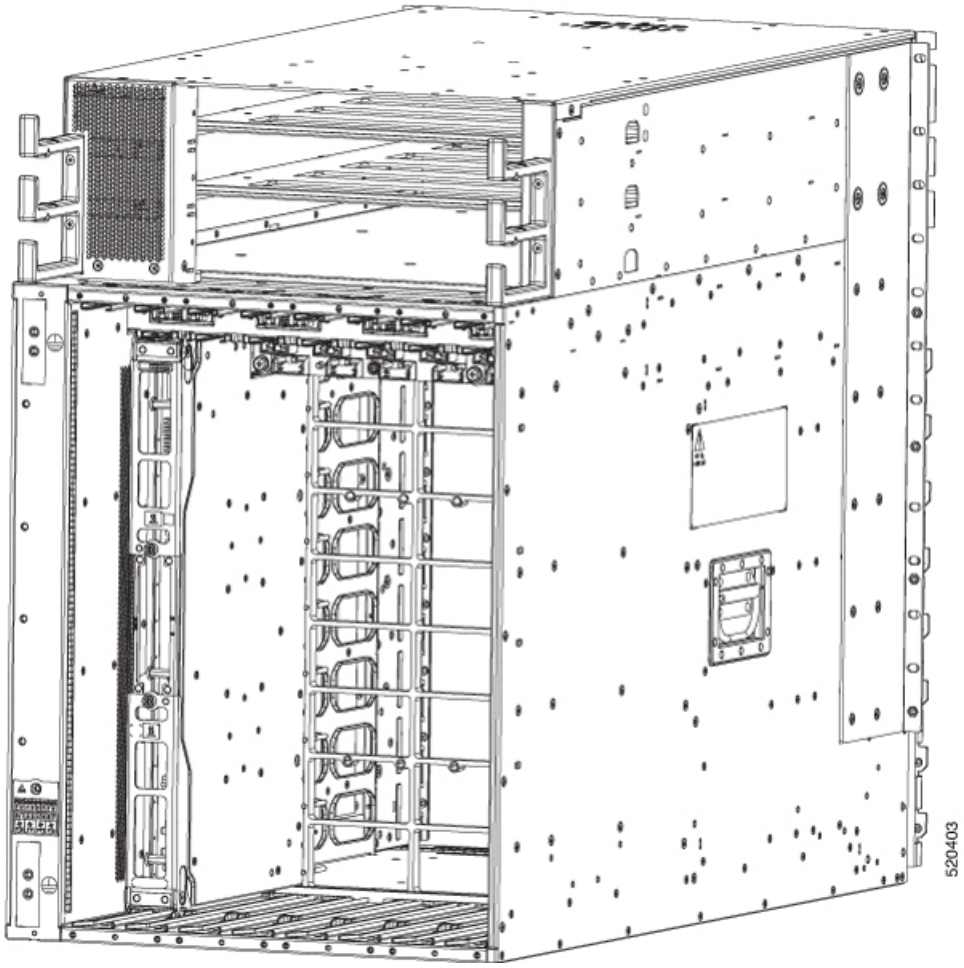


Figure 172: Fabric Card Installed in a Chassis - 8808-FC1

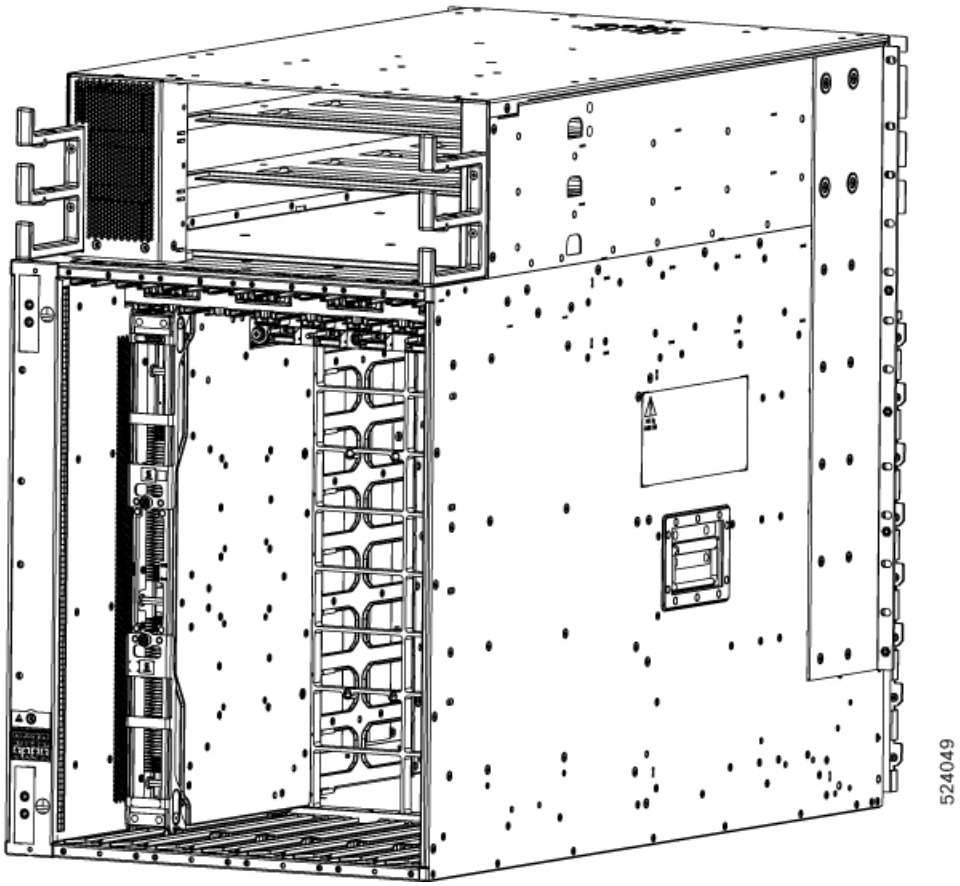

Step 4 Slide the module all the way into the slot.

Step 5 Rotate both ejector levers to 90 degrees to the front of the chassis and be sure that the module is locked to the top and bottom of the slot.

Step 6 Tighten the captive screw on each of the two levers to 8 in-lb (0.9 N-m) of torque, so that each lever is locked in place on the module.

Step 7 Verify the fabric card LEDs become green.

Step 8 Reinstall the fan tray over the fabric card.

Refer the installing the fan tray procedure: Install Fan Tray, on page 200

Step 9 Run the **reload location 0**/*location*/**CPU0** command.

Step 10 Wait for the fabric card to become operational. Use the **show platform | inc FC** command to verify the status.

Note
The fabric card must be operational before resetting the fabric plane.

Step 11 Reset the fabric control plane using the **no controller fabric plane <*plane-id*> shutdown** command

Step 12 Verify that the Fabric LED for the slot that you specified turns on. Also, you can verify that the card is in power on state by running the **show platform** command to verify the status of the card to be POWERED_ON.

Since the Fan trays are blocking the view, Fabric card LEDs might not be visible. Therefore, you can verify the Fabric card LEDs status using **show led location 0/FC***location* command.

Replace Power Supply Components

The Cisco 8800 series routers support OIR of power modules. If you are replacing a redundant power module, you can replace the power module while the system remains powered on without any electrical hazard or damage to the system. This feature enables you to replace a power module while the system maintains all routing information and ensures session preservation.

However, to maintain operational redundancy and proper cooling, and to meet EMI compliance standards, you must have at least one working redundant power module that is installed. When you remove a failed power module with the router in operation, perform the replacement as quickly as possible. Make sure you have the replacement power module ready before beginning the removal and installation procedure.

Note For the RP to communicate properly to a power module in a power tray, input power to at least one of the power modules in the power tray should be present.

This section contains procedures on how to replace the power modules.

Caution Do not turn off the switch on the power tray to remove individual power modules. Power modules support OIR, so they can be removed and replaced with the power on and the system operating.

Install Power Shelf Bezel

Follow these steps to install a power shelf bezel on a chassis:

Procedure

Place the power supply bezel as shown in the below figure and secure it with the provided jackscrews.

Figure 173: Power Supply Bezel for 8818 Chassis

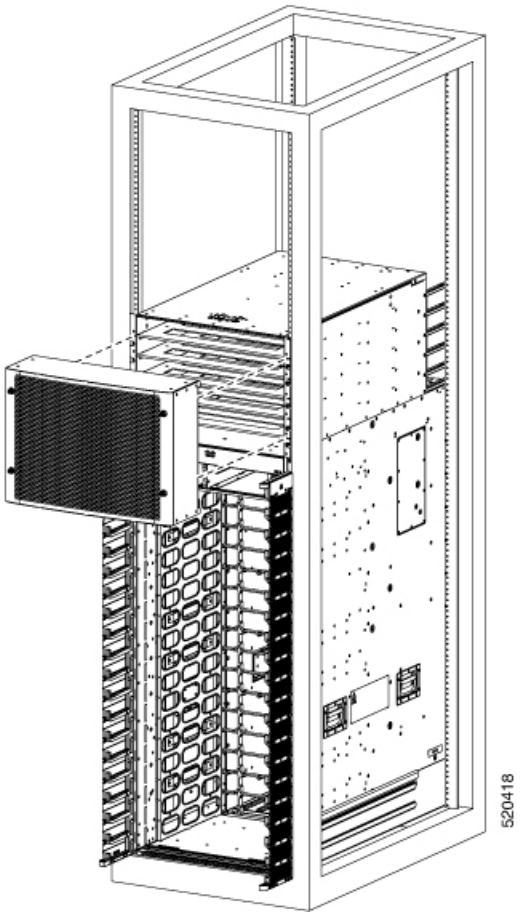


Figure 174: Power Supply Bezel for 8812 Chassis

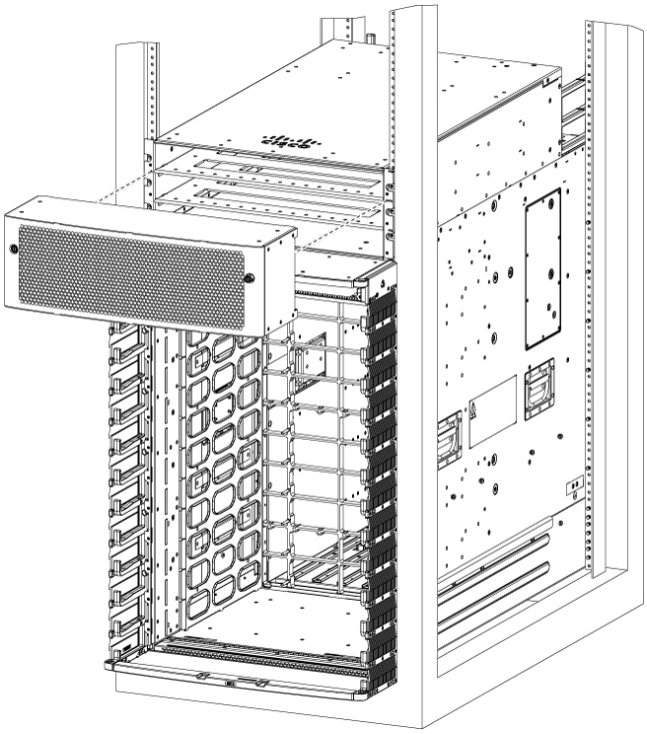


Figure 175: Power Supply Bezel for 8808 Chassis


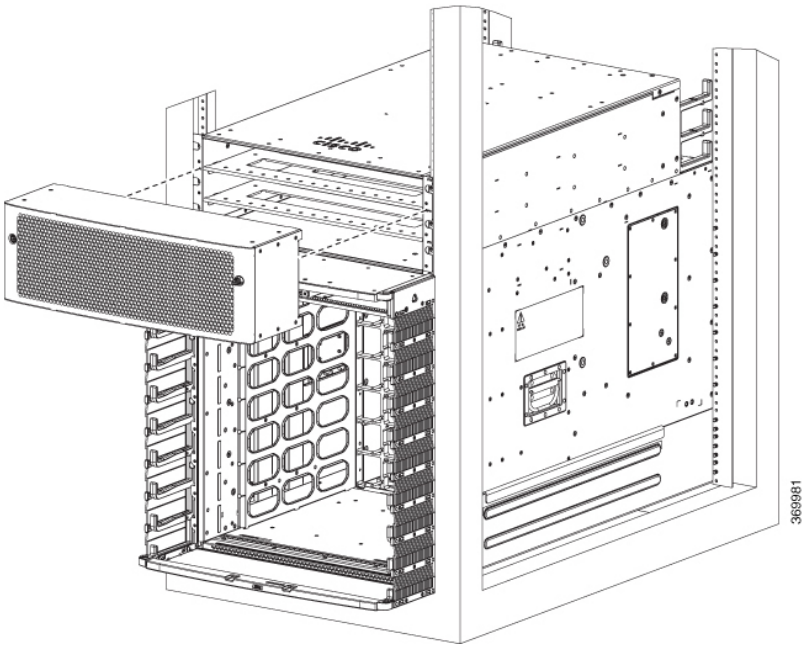


Figure 176: Power Supply Bezel for 8804 Chassis

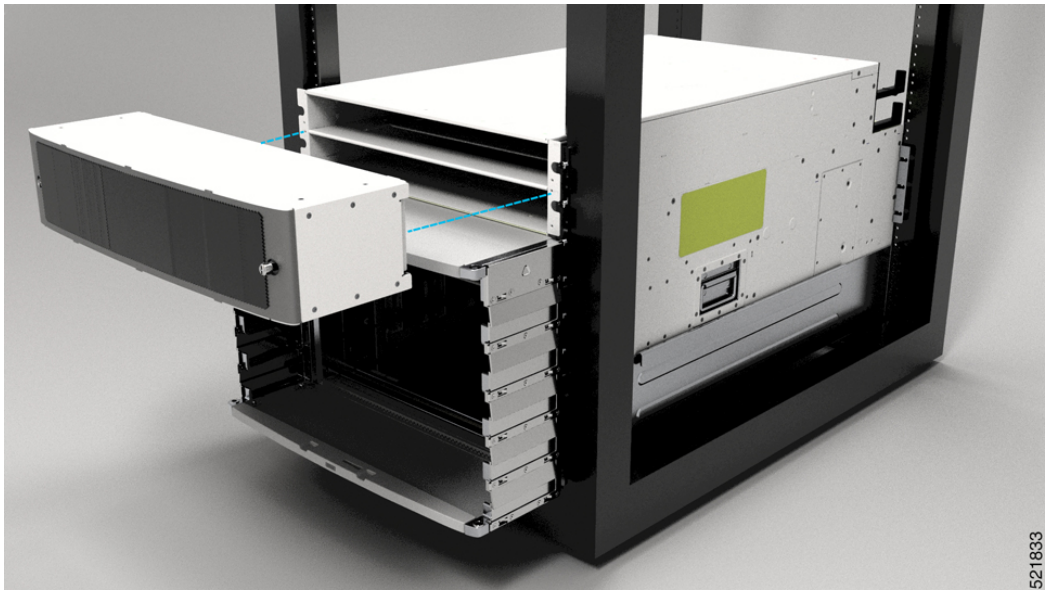

Replace DC Power Module

Follow these steps to remove a DC power module from the chassis.


Procedure

Step 1 Pull the handle down.

Step 2 Unscrew the screw that secures the power module using a Phillips screw driver.

Step 3 Slide the power module out of its bay while supporting it with your other hand to remove it.

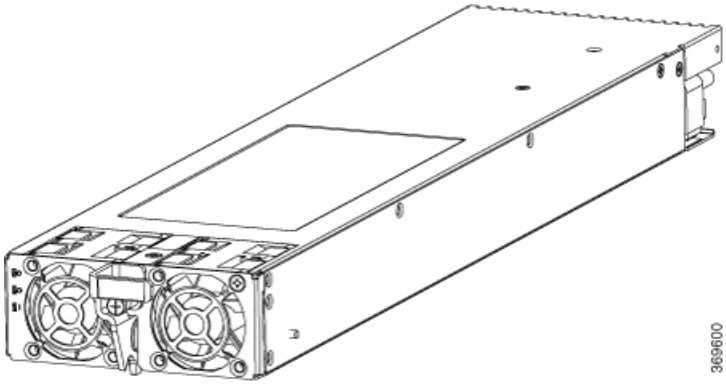Figure 177: DC Power Module



Step 4 Slide the new power module into the bay until it mates with its backplane connector.

Step 5 Move the handle up.

Step 6 Tighten the screw that secures the power module using a Phillips screw driver.

Caution
To prevent damage to the power tray backplane connector, do not use excessive force when inserting the power module into the power tray.

Step 7 Verify that the (green) Power Input indicator on the front of the power module goes on.

Disconnect DC Power

Procedure

Step 1 Power off the circuit breaker assigned to the DC power source you are disconnecting.

Caution
To ensure that power remains off while you are performing this procedure, lock-out/tag-out the circuit breaker switch in the STANDBY (0) position until you are ready to turn it on.

Step 2 Remove the clear plastic safety covers that fit over the DC power connection terminal studs.

Caution
To prevent injury and damage to the equipment, always remove the source DC power cables and ground from the power tray terminals *in the following order* : (1) negative (–), (2) positive (+).

Step 3 Disconnect the DC power cables from their terminals in the following order and note the color of each cable.

a) Negative (PWR) cables first.
b) Positive (RTN) cables last.

Step 4 Repeat Step 1 through Step 3 for the other power tray, if installed.

Caution
It is not necessary to disconnect all power from the router to replace components, including power modules.

Reconnect DC Power

Follow these steps to reconnect DC power to a DC power tray:

Procedure

Step 1 Set the power switch to the OFF (0) position.

Step 2 Check that the circuit breaker assigned to the DC power source you are reconnecting is powered OFF (0).

Step 3 Reconnect the DC power cables in the following order.

a) Positive (RTN) cables first.
b) Negative (PWR) cable last.
c) Repeat Step 1 through Step 3 for the other power trays.

Caution
To prevent injury and damage to the equipment, always attach the ground and source DC power cable lugs to the power tray terminals in the following order: (1) positive (+) to positive (+), (2) negative (–) to negative (–).

Caution
Do not overtighten the nuts that secure the DC power cables to the power tray terminals. The nuts should be tightened using the 7/16 hex socket and torque wrench to a torque of 45–50 in-lb.

Step 4 Replace the clear plastic safety covers over the DC power connection terminal studs and tighten the screws.

Step 5 Set the DC power source circuit breaker to ON (1).

Step 6 Set the power tray switch to ON (1).

Caution
Use this procedure only when reconnecting power to all power modules in a system that is powered down completely.


Replace HVAC and HVDC Power Module

Follow these steps to remove HVAC and HVDC power modules from the chassis.

Procedure


Step 1 Do not Power OFF (0) the standby mode switch.

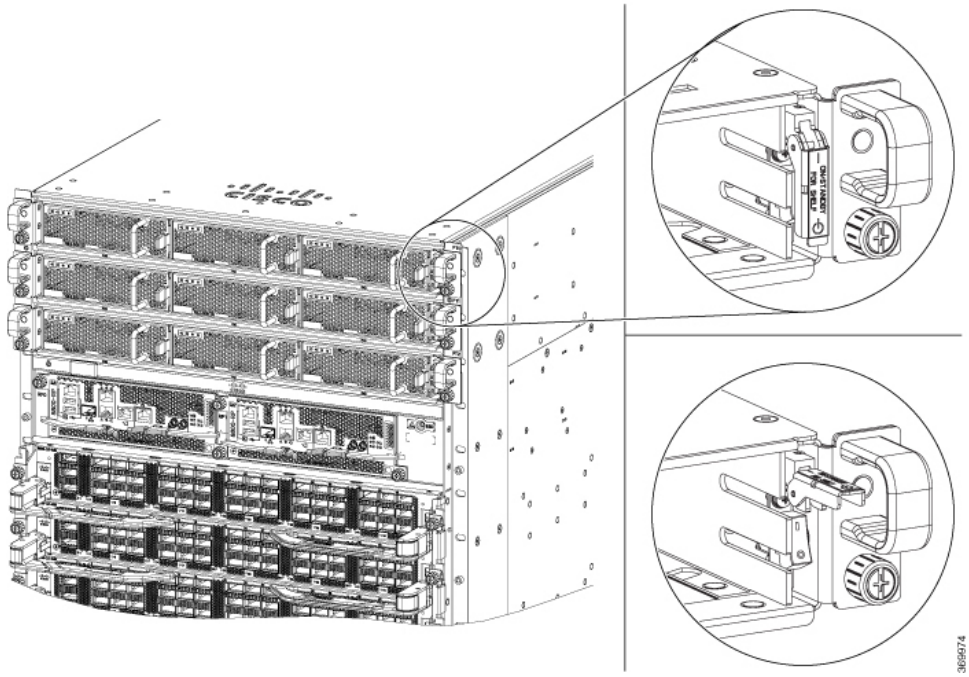Figure 178: HV Power Tray Standby Mode Switch



Step 2 Slide the power module out of its bay while supporting it with your other hand to remove it.

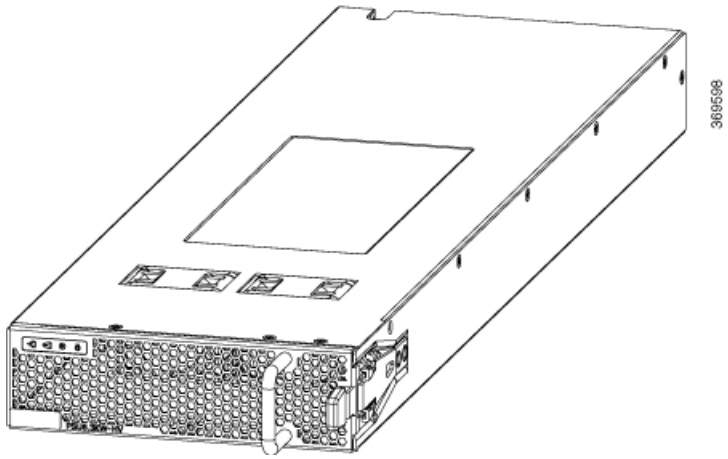Figure 179: HV Power Supply



Step 3 Slide the new power module into the bay until it mates with its connector.

Figure 180: HV Power Supply on Tray


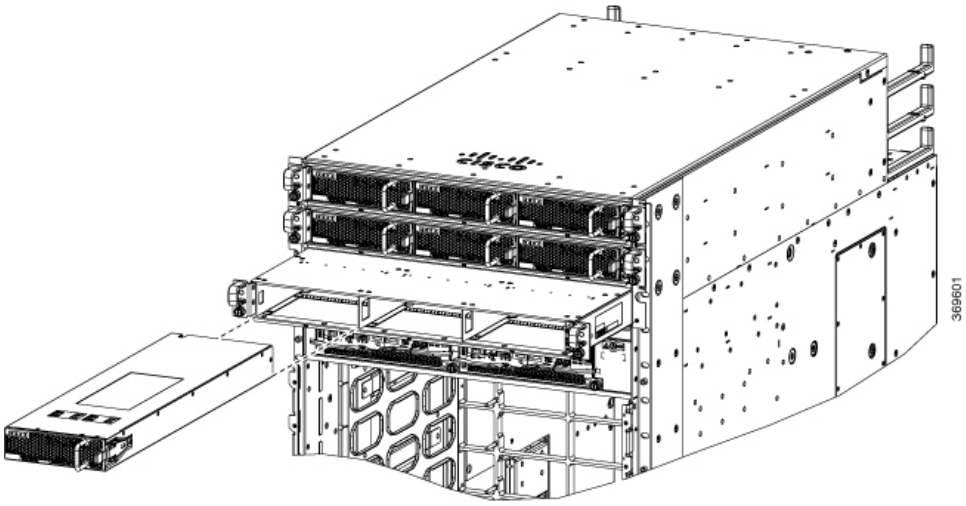



Figure 181: HV Power Supply Trays

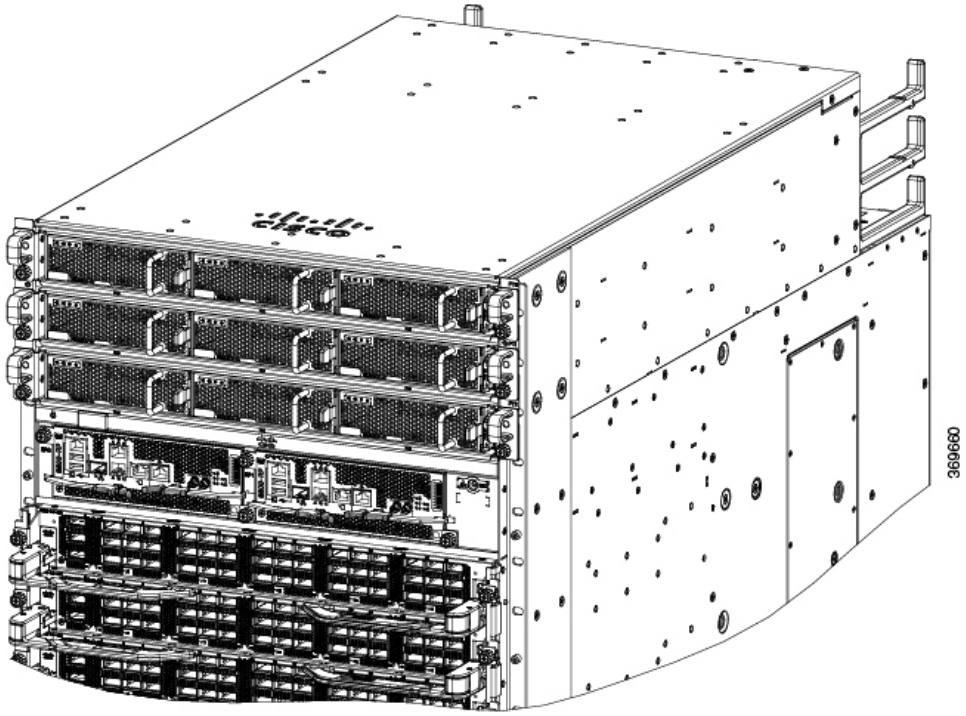


Step 4 Verify that the Saf-D-Grid plug is plugged in completely to secure the built-in retaining latch.

Note
Saf-D-Grid plug has a retaining latch that must be depressed and gently pulled to release the plug from the receptacle.

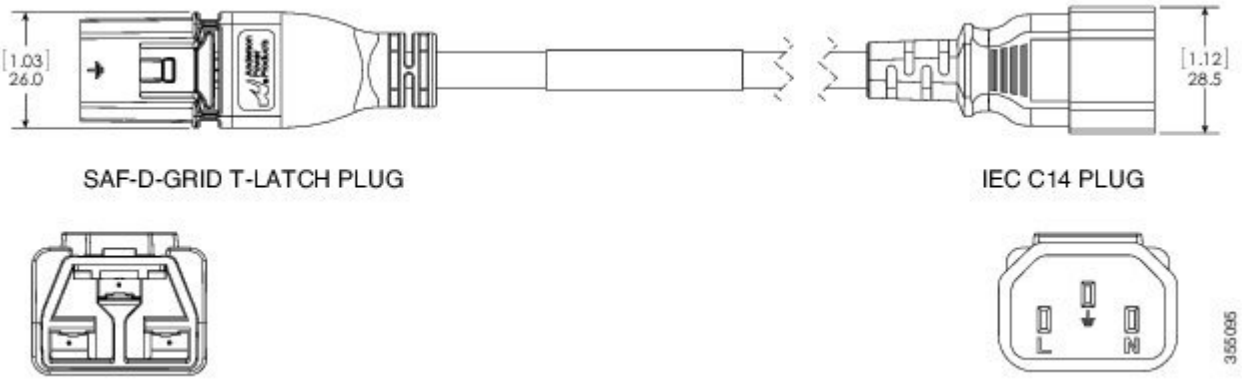Figure 182: SAF-D-Grid Plug



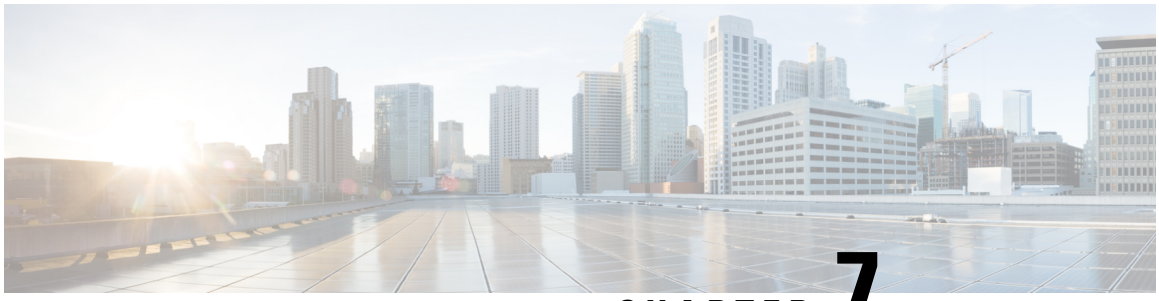Step 5 Verify that the (green) power indicator on the front of the power module goes on.



CHAPTER 7

LEDs

You can perform the following check on LEDs that assist you with the troubleshooting process:

- Chassis LED, on page 221
- Port Status LEDs, on page 221
- Power Supply LEDs, on page 222
- Fan Tray LEDs, on page 223
- Route Processor Card LEDs, on page 225
- Fabric Card LEDs, on page 229
- Line Card LEDs, on page 230

Chassis LED

The LEDs indicate whether each type of module (Route Processor, line cards, fabric cards, fan trays, and power supplies) is fully functional or have a fault condition.

Table 26: Chassis LED Descriptions

LED	Color	Status
ATTN (Attention) 	Blue	The operator has activated this LED to identify this chassis.
	Off	The chassis is not functional.

Port Status LEDs

Note The 8800-LC-48H does not have port LEDs.

Each port on the 8800-LC-36FH has an LED. The following table describes port status LEDs.


Table 27: Port Status LEDs (One Per Port)

LED Color	Description
Off	Port is administratively shut down.
Green	Port is administratively enabled and the link is up.
Amber	Port is administratively enabled and the link is down.
Flashing Amber	Port is faulty and disabled.

Power Supply LEDs

The power supply LEDs are located on the front portion of the module.

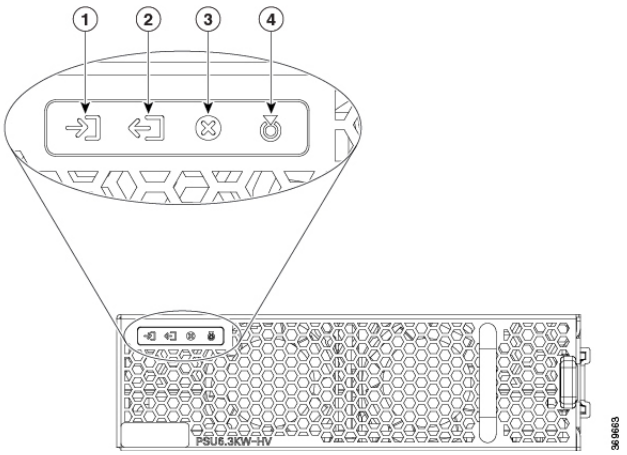Figure 183: Power Supply LEDs



1	Input OK	3	Fault
2	Output OK	4	ATTN (Attention)

Table 28: Power Supply LED Descriptions

LED	Color	Status
Input OK	Green	Both input voltages are present.
	Flashing Green	Only one input power is present.
	Off	No input power is present.


LED	Color	Status
Output OK	Green	Output power is enabled.
	Flashing Green	Output power in power limit, or in overcurrent condition, or is in the sleep-mode.[1]
	Off	Output disabled, or no inputs present, or firmware upgrade in-progress.
Fault	Red	Output voltage is out of the specified range, or a fan has failed, or internal fault.
	Flashing red	Firmware upgrade in-progress.
ATTN (Attention) 	Flashing blue	User configured action *config hw-module attention-led location 0/PTx/PMy*.
	Off	No user configuration is set.

[1] Sleep mode is not applicable for DC-60 power module.

Fan Tray LEDs

The fan tray LEDs are located on the top portion of the module.

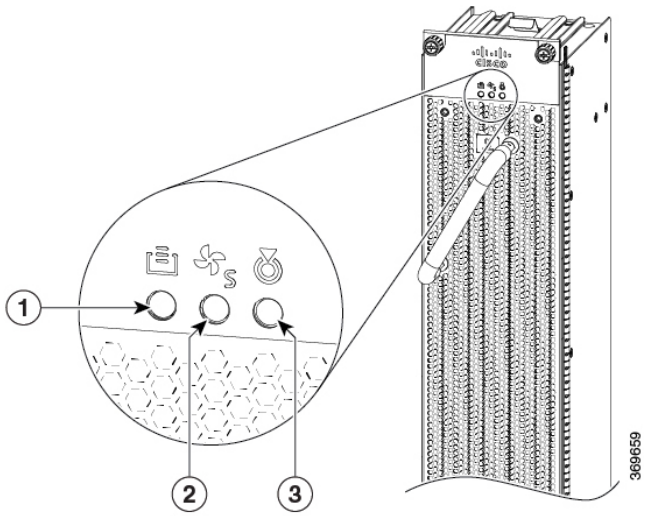Figure 184: Fan Tray LEDs



1	FC STS (Status)	3	ATTN (Attention)
2	FT STS (Status)		


Table 29: Fan Tray LED Descriptions

LED	Color	Status
ATTN (Attention) 	Flashing Blue	The operator has activated this LED to identify the fan tray in the chassis.
	Off	The operator had not activated the LED to identify the fan tray in the chassis.
FT STS	Amber	The fan tray is powered on.
	Green	The fan tray is operational.
	Flashing amber	The module has minor alarm.
	Flashing red	The module has active major or critical alarms.
	Flashing green	FPD upgrade in-progress.
	Off	No power to the fan tray.
FC STS	Amber	The fabric cards are powered on and is in one of the following states: • Either one or more fabric cards behind this fan tray is not operational. • Either one or more fabric cards behind this fan tray have minor, major or critical alarm.
	Green	• One of the fabric modules is operational and other one not present. • Both fabric cards behind this fan tray are operational.
	Off	If both the fabric modules behind this fan tray are plugged out (or not present).

Temperature Warning Label

Every fan tray has a temperature warning label beside its handle. The temperature warning label is temperature sensitive. At normal operating temperatures (less than 55°C), the warning label has a black background with black edges. At temperatures above 55°C, the background color changes to white and the edges' color changes to red.

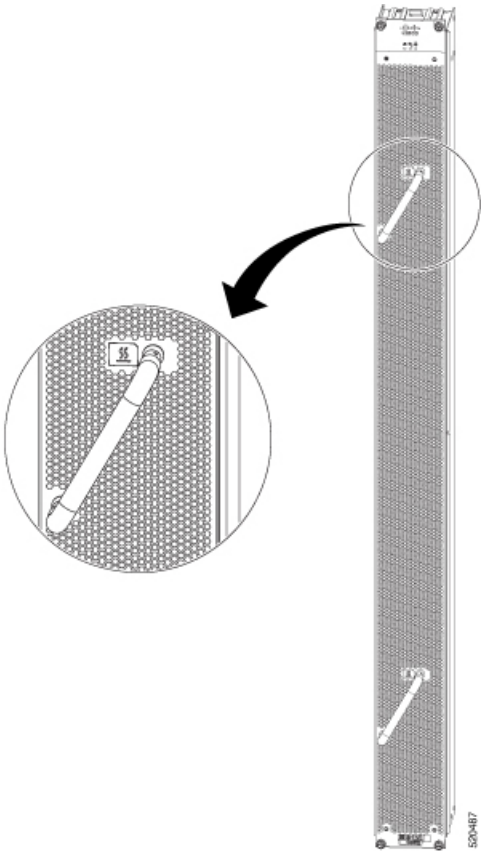
Figure 185: Temperature Warning Label



Route Processor Card LEDs


The Route Processor LEDs are located on the front of the module.

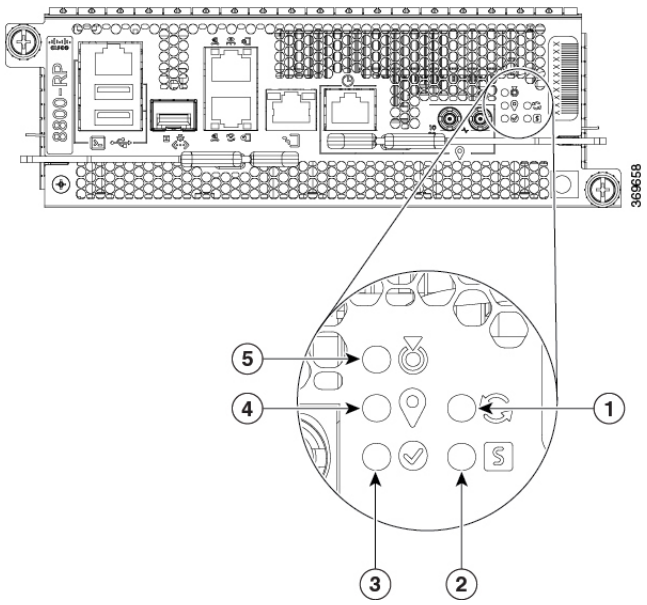Figure 186: Route Processor LEDs - 8800-RP



1	Sync	4	GPS
2	Status	5	Attention
3	Active		

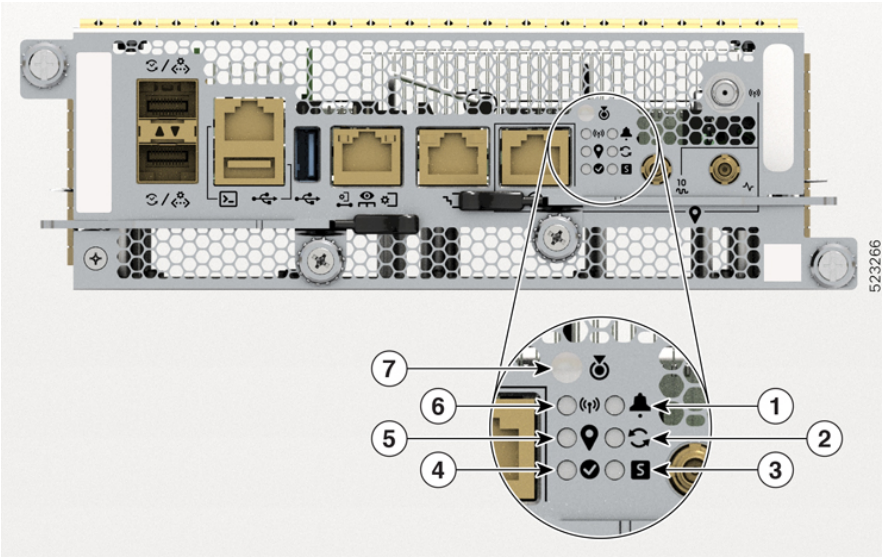
Figure 187: Route Processor LEDs - 8800-RP2



1	Alarm	5	GPS
2	Sync	6	GNSS

3	Status	7	Attention
4	Active		

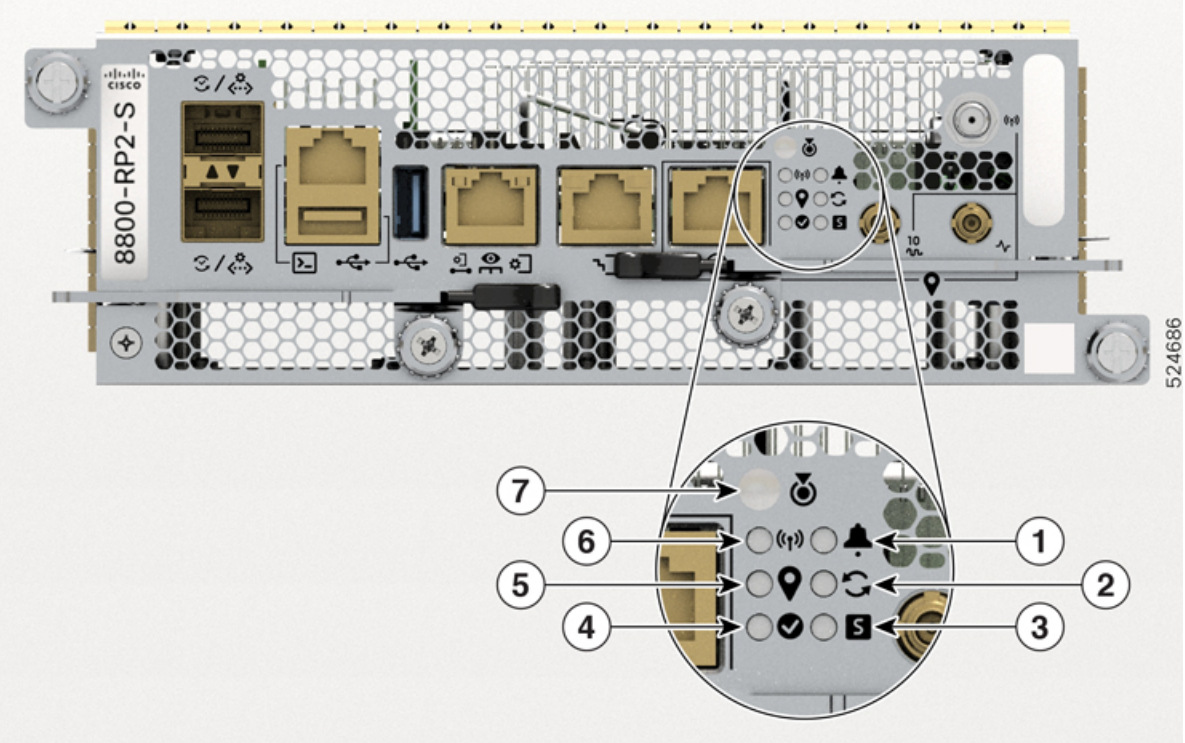Figure 188: Route Processor LEDs - 8800-RP2-S



1	Alarm	5	GPS
2	Sync	6	GNSS
3	Status	7	Attention
4	Active		

Table 30: Route Processor Card LED Descriptions

LED	Color	Status
Attention	Flashing blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not being identified.

LED	Color	Status
Status 	Green	This router processor is operational with no issues.
	Flashing green	The auto or manual FPD upgrade in-progress.
	Flashing amber	The module has minor alarm.
	Flashing red	The module has active major or critical alarms.
	Amber	The module is in one of the following states: • Power cycle • Reload or reimage • Shutdown
	Red	For 8800-RP: • BIOS boot failure. Also, the Attention LED remains blue. For 8800-RP2: • BIOS boot failure. • Card power-up failure. Also, the Attention LED remains Off. This allows you to distinguish the status between BIOS boot failure and card power-up failure.
	Off	The module is not enabled.
Active	Green	The RP/RSP is in the Active state.
	Off	The RP/RSP is in the Standby state.
GPS 	Green	The GPS interface is provisioned and frequency, time of day and phase inputs are all operating correctly.
	Off	The GPS interface is not provisioned, or the GPS inputs are not working correctly.
Sync 	Green	The frequency, time, and phase are synchronized to an external interface. The external interface could be: • BITS • GPS • Recovered RX Clock
	Amber	The system is running in holdover or free-run mode and it is not synchronized to an external interface.
	Off	The centralized frequency or time and phase distribution is not enabled.

LED	Color	Status
GNSS 	Green	GNSS receiver interface is up.
	Off	GNSS receiver interface could be: • not provisioned • shutdown
Alarm 	Flashing Red	Chassis-wide Critical Alarm (on active RP)
	Flashing Amber	Chassis-wide Major Alarm (on active RP)
	Solid Amber	Chassis-wide Minor Alarm (on active RP)
	Off	No Alarm (on active RP) Not applicable (on standby RP)

Fabric Card LEDs

The fabric cards are located behind the fan trays.

Note The fabric cards are located behind the fan tray. Therefore, the fabric card LEDs are seen when the fan tray is removed.

Table 31: Fabric Card LED Descriptions

LED	Color	Status
ATTN (Attention) 	Flashing blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not being identified.

LED	Color	Status
STS 	Green	The fabric card is operational with no issues.
	Flashing green	Auto or manual FPD upgrade in-progress.
	Amber	The module is in one of the following states: • Power cycle • Reload or reimage • Shutdown
	Flashing red	The fabric card has major or critical alarms.
	Flashing amber	The module has minor alarm.
	Off	No power is going to the fabric card.

Line Card LEDs

The line card has LEDs located on the right of the front panel.

Table 32: Line Card LED Descriptions

LED	Color	Status
ATTN (Attention) 	Flashing blue	The operator has activated this LED to identify this module in the chassis.
	Off	The line card is not enabled.

LED	Color	Status
STS (Status) 	Amber	The module is in one of the following states: • Power cycle • Reload or reimage • Shutdown
	Green	This module is operational with no issues.
	Flashing green	The auto or manual FPD upgrade in-progress.
	Flashing amber	The module has a minor alarm.
	Flashing red	The module has active major or critical alarms.
	Red	BIOS boot failure. Also, the ATTN LED remains blue.
	Off	The module is not enabled.