

Cisco Optical Network Planner Configuration Guide, Release 24.3.1

First Published: 2024-09-24

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

© 2024 Cisco Systems, Inc. All rights reserved.



CONTENTS

CHAPTER 1 **Get Started with Cisco Optical Network Planner** 1

Cisco Optical Network Planner 1

Supported platforms 2

Supported topologies 3

Supported protection schemes 4

Supported services 5

Supported DWDM channel interfaces 6

Supported fiber types 6

Register a new user 7

Log in to the Cisco ONP web interface 7

Cisco ONP home page 8

Change password 8

Reset your password 9

Sign out from Cisco ONP 9

CSDL compliance enhancements in Cisco ONP 9

CHAPTER 2 **Manage Users and Roles** 13

User roles in Cisco ONP 13

Assign a role to a user group 14

Remove access to a user 15

Delete a user 15

Create a new user group 16

Assign a user to a user group 17

Set password expiration for individual user 17

Set password expiration for all users 18

Lock and unlock an individual user account 18

Expire the password set by an individual user 19
Create a new role 19
Assign a role to a user group 20
Manage password through Dictionary 20
Retrieve system logs 21
Retrieve component logs 22

CHAPTER 3 **Design and Analyze Networks** 25
Design a network using Cisco ONP 26
Manually design a network using Cisco ONP 26
Create shared risk link group 30
Import a network using an Excel sheet 30
Tabs available in the Excel sheet template 33
Network imports from Cisco Transport Planner 33
Supported hardware for CTP network import 33
Import an mpz design file from Cisco Transport Planner 33
Export the CPZ file 34
Import the CPZ file 35
Live Network Import 36
Perform live network import 36
Ports Used in LNI 40
Supported Hardware and Software for LNI 41
Limitations of LNI 43
Optical subnets and their role in networks 44
Create optical subnet 44
Convert NCS 2000 network to NCS 1010 network 47
Share a network 48
Access a shared network 48
Unshare a network 48
Analyze the network 49
Bottom-up flow and network creation 50
How bottom-up flows work 50
Idle timeout in the Analyze mode 51
Idle timeout settings and session restoration behavior 51

Upgrade the analyzed network 51
Upgrade LNI network 53
Media channel unlocking scenarios 54
Possible error scenarios and the workarounds 55
Upgrade the software release of a network 56
Supported upgrade paths for network system releases 57
Plan mode 58
59
Create a failure set 60
Failure report 61
Automatic suggestion for regeneration sites in Plan mode 61
How automatic regeneration site suggestion works 62
Apply the suggested regen sites 63
Feasibility report 64
Export the feasibility report 64
Line Rate Tuner mode 65
Optimize optical sources using Line Rate Tuner mode 65
Create a custom optical source using tuner analysis 66
Import optical sources 70
Create an optical source from an Excel template 71
Optical Parameters Available in the Excel Sheet for Optical Sources Creation 72
Find Optical Sources Faster 74
Download optical sources 75
Delete optical sources 76
Layout template for NCS 2000 network 76
Export layout template 77
Import layout template for NCS 2000 network into Cisco ONP database 78
Download a layout template for NCS 2000 network 78
Delete Layout Template for NCS 2000 Network 78
Apply NCS 2000 layout template into a site 79
Import layout templates into NCS1K-2K and NCS4K-1K-2K sites 79
Layout visualization 80
View network layout 80
Edit the layout manually 81

Manually edit the layout for NCS 1010 networks 83
View layout details using tooltip 84
View internal node connections in the NCS 1010 network 85
Copy configurations from one node to another 86
Export the IPC report 86
Export port usage of an LNI network 87
Define multilayer connections for an SSON network 88
MLC details 90
Add new pluggables, alarm cables and 100G client bandwidth licenses to BoM 91
Spectrum utilization and path finder capabilities 92
Find a custom path 93
Select path manually 95
View spectrum utilization and find available spectrum 95
Designing networks with SVO card 97
SVO associations 98
Associate OLA or DGE sites with SVO cards 99
Export device NETCONF XML file 99
Upload NETCONF XML files on SVO web interface 102
Export device NETCONF XML Files for individual sites 102
Upload NETCONF files to NCS 1010 device 103
Export Cisco Optical Site Manager NETCONF XML file 103
Upload Cisco Optical Site Manager NETCONF XML to NCS 1010 Device via Cisco Optical Site Manager Web Interface 105
Export NCS 1010 network planning data for Cisco Optical Network Controller 105
Upload planning data into Cisco ONC 106

CHAPTER 4 **Modify Network Properties** 107
Modify network properties 108
General properties of a network 113
System release properties 118
Network application configuration properties 119
Optical algorithm and traffic algorithm options properties 120
Core operations properties 122
Advanced Optical Settings properties 123

Modify site properties 128
General site properties 129
C-Band properties 134
Layout properties 139
Cisco NMS properties 148
Third party NMS properties 151
Map properties 152
Bill of materials properties 153
Enhanced face plate properties 156
SVO properties 156
Add contentionless side to a site 157
Contentionless sides for Layer-1 SMR 158
Contentionless sides for extended Layer-2 SMR 159
Modify the number of contentionless side ports at a site 159
Modify contentionless side to a site in upgrade mode 160
Add L-Band side to a site 161
Add omni-directional sides to a site 163
Modify fiber properties 164
General fiber properties 165
Factors properties of fiber 170
Extended and totals properties of a fiber 171
Physical and Raman amplification properties of fiber 172
Modify fiber couple properties 174
General properties of a fiber couple 174
Physical and factors properties of a fiber couple 175
Totals properties of a fiber couple 176
Modify service properties 177
General service properties 178
Primary and secondary paths forcing properties 179
NCS1K domain properties 181
Modify service properties for NCS 1010 182
General service properties for NCS 1010 network 183
Primary path service properties for NCS 1010 network 184
Primary channel service properties for NCS 1010 network 186

Services aggregation 189
Create a new service group 189
Modify service group properties 190
Service group properties 190
Rules for aggregating services 192
Associate a service with the newly created group 193
Export aggregation reports 193
Modify wave properties 194
Wave properties 195
Modify media channel properties 196
Media channel properties 197
Modify circuit properties 198
Circuit properties 199
Modify trail properties 200
General trail properties 201
OTN trail properties 204
Source and destination trail properties 204
Modify section properties 213
Modify side properties 213
General side properties 214
Bill of materials and layout properties for sides 221
Enhanced face plate properties for sides 222
Modify C-band amplifier properties 223
General properties of a C-band amplifier 224
C-band amplifier and attenuator options 228
Raman amplification properties of a C-band amplifier 232
Modify L-Band Amplifier Properties 234
L-band properties 235
Modify Add/Drop multiplexer properties 236
General Add/Drop multiplexer properties 237
MPO connector properties 240
LC connector properties 241
Modify L-Band Add/Drop multiplexer properties 244
L-band Add/Drop multiplexer properties 244

Modify client properties 249
Client properties 250
Sort the Network Elements 251
Regeneration support 252
Create a regeneration site 253
Multidegree ROADM 254
Design a multidegree ROADM site using cascaded SMR 254

CHAPTER 5 Configure a Network 255
Configure an NCS 2000 network for contentionless functionality 255
Configure an NCS 2000 network for colorless functionality 256
Colorless ports for SSON and Non-SSON networks 256
Configure an NCS 2000 network for colored functionality 257
Configure a network with mixed Add/Drop multiplexers and demultiplexers 258
Supported and unsupported mixed configurations 259
Configure an NCS 1010 network for colorless functionality 262
Colorless ports for NCS 1010 networks 263
Configure an NCS 1010 network for colored functionality 263
Configure an NCS 1010 network with mixed add/drop multiplexers and demultiplexers 264
Configure an NCS 1010 C+L-Band network with mixed Add/Drop multiplexers and demultiplexers 265
Configure an NCS 1014 Network for Colored Functionality 265

CHAPTER 6 View Network Reports 267
Network reports 271
View reports in the Dashboard tab 272
View reports in the Elements tab 272
View details of the BOM report 274
Licensed PIDs available in the BOM report 275
View details of layout and internal connections 279
Export Internal connections 279
View end-to-end OCH connections 280
Export end-to-end OCH connections 281
View power consumption and unit weight report 282
Export power consumption and unit weight report 284

View the results of analyzed network 284
Compare installation parameters of two networks 286
Compare the optical reports of two networks 287
Optical Report 287
Installation parameters 290
Traffic reports 291
Cabling report 292
Confidential banner in exported reports 293

CHAPTER 7 **Backup and Restore Cisco ONP Database** 295
Backup Database 295
Setup Backup 295
Perform manual backup 296
Schedule a backup 296
Schedule a backup using script 297
Schedule a backup with Crontab 297
Restore the database manually 298
Restore database using script 299
Syntax to schedule the backup using Crontab 300

APPENDIX A **Cisco ONP UI Reference** 301
Menu bar 302
File 303
Network 304
Export 304
Import 306
Manage 306
Logs 306
Job Monitor 308
Control Panel 309
Preferences 309
Help 309
Network Tree 310
Design Palette 312

Entity Editor 314


APPENDIX B **Supported ROADMs, Add/Drop Cards, and Modules 317**
Supported ROADMs, Add/Drop Cards, and Modules 317

APPENDIX C **Supported Cards and Pluggables 323**
Supported Transponder Cards and Pluggables 323

APPENDIX D **Supported Optical Sources 337**
Supported Optical Sources 337

APPENDIX E **Supported Amplifiers 343**
Supported Amplifiers 343

APPENDIX F **Troubleshoot 345**
Troubleshooting Tasks 345

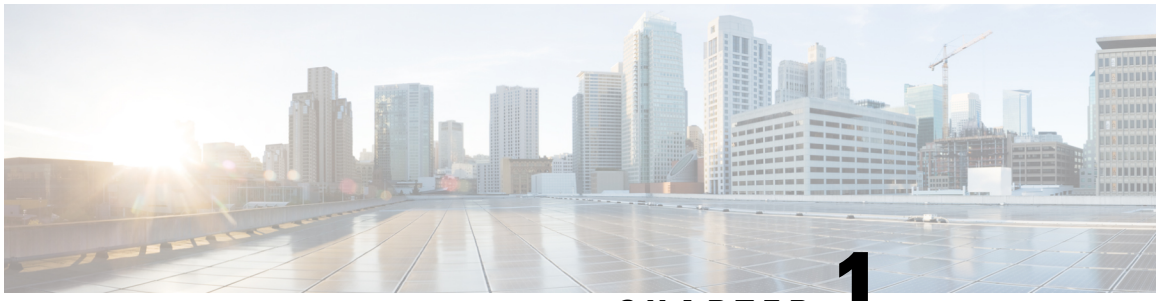

CHAPTER 1

Get Started with Cisco Optical Network Planner

- Cisco Optical Network Planner, on page 1
- Supported platforms, on page 2
- Supported topologies , on page 3
- Supported protection schemes , on page 4
- Supported services, on page 5
- Supported DWDM channel interfaces, on page 6
- Supported fiber types, on page 6
- Register a new user, on page 7
- Log in to the Cisco ONP web interface, on page 7
- Cisco ONP home page, on page 8
- Change password, on page 8
- Reset your password, on page 9
- Sign out from Cisco ONP, on page 9
- CSDL compliance enhancements in Cisco ONP, on page 9

Cisco Optical Network Planner

Cisco Optical Network Planner is a web application that

- models and tests Optical Transport Networks (OTN) and Dense Wavelength Division Multiplexing (DWDM) networks,
- provides a graphical environment for network design and validation, and
- supports creating and comparing multiple network instances.

Cisco ONP enables you to visualize their network designs. It allows you to generate bills of materials and access detailed reports for network planning and validation.

Purpose

The primary purpose of Cisco ONP is to design and validate networks for the NCS 1001, NCS 1004, NCS 1010, NCS 2000, and NCS 4000 series.

With Cisco ONP, you can create multiple instances of a network, modify various parameters for each instance, and perform comparisons. The tool generates a rack view of all the sites deployed in the network, highlights the differences between instances, and provides a complete Bill of Materials (BoM).

Detailed network information

Cisco ONP models the network and generates the BoM. You can view detailed reports, including:

- Cabling report
- Optical report
- Device Configuration file
- Traffic matrix

Features and compliance

You can use the features of Cisco ONP, including protection scenarios, topology and service support, to support protection scenarios, topology and service support, and compliance with the Cisco Secure Development Lifecycle (CSDL). You can also set up the graphical display.

Additional resources

For more detailed information about Cisco ONP, see the data sheet.

Supported platforms

Table 1: Feature History

Feature Name	Release Information	Feature Description
Support for NCS 1001 Network Creation	Cisco ONP Release 24.3.1	This release supports the design of C-band NCS 1001 networks. The NCS 1001 is a 1RU, DWDM line system optimized for data center environments. It includes support for amplifiers, PSM modules, and various colored add/drop modules such as MD-32-EVEN, FLD-4, MD-48-ODD, MD-48-EVEN, and MD-64. Cisco ONP supports unprotected, terminal section, and terminal path protection over the NCS 1001 network. Also, the NCS 1001 network is compatible with optical sources such as NCS 1004, CIM8, Bright ZR, QDD, and CFP2.

Feature Name	Release Information	Feature Description
Addition of new NCS 1020 Chassis for NCS 1010 Networks	Cisco ONP Release 24.3.1	NCS 1020 is a 10RU optical line system that supports the OLTs and NCS1K14-CCMD-16-C card in the NCS 1010 networks. The NCS 1020 chassis optimizes the NCS 1010 networks design, extending the reach of NCS 1010 networks. With OLTs and NCS1K14-CCMD-16-C, the NCS 1020 chassis provides a wide range of configuration options to NCS 1010 networks.

Cisco ONP supports these platforms:

Table 2: Supported platforms and releases

Platforms	Recommended and Supported Releases
NCS 1001	7.10.1
NCS 1004	7.11.1
NCS 1014	7.11.1, 24.3.1
NCS 1010	7.7.1, 7.9.1, 7.10.1, 7.11.1, 24.3.1
NCS 2000	11.0.0, 11.1.0, 12.1.0, 12.2.0, 12.3.1
NCS 4000	6.5.33

Supported topologies

Cisco ONP supports several network topologies, each offering different configurations and benefits.

Cisco ONP supports these platforms.

- Linear topology: In a linear topology, the nodes are arranged in a line and are connected to two adjacent nodes. However, the first and last nodes are not connected to each other.
- Mesh topology: In a mesh topology, each node is connected to one or more nodes. This configuration provides maximum redundancy to the network.
- Ring topology: In a ring topology, each node is connected to exactly two other nodes, forming a circular configuration. It requires at least three nodes to form a ring.

Supported protection schemes


Cisco ONP offers a variety of protection schemes to enhance network reliability and resilience.

Table 3: Feature History

Feature Name	Release Information	Feature Description
Protection Types Supported	Cisco ONP Release 4.1	The following protection schemes are supported: • 1+R: For each service, Cisco ONP automatically finds one working path. You can define the restoration path. • 1+1+R: For each service, Cisco ONP finds one working path, and one protected path. You can define the restoration path. • 1+1+R+R: For each service, Cisco ONP finds one working path and one protected path. You can define the restoration paths.

Cisco ONP offers a variety of protection schemes to enhance network reliability and resilience.


Figure 1: Protection schemes

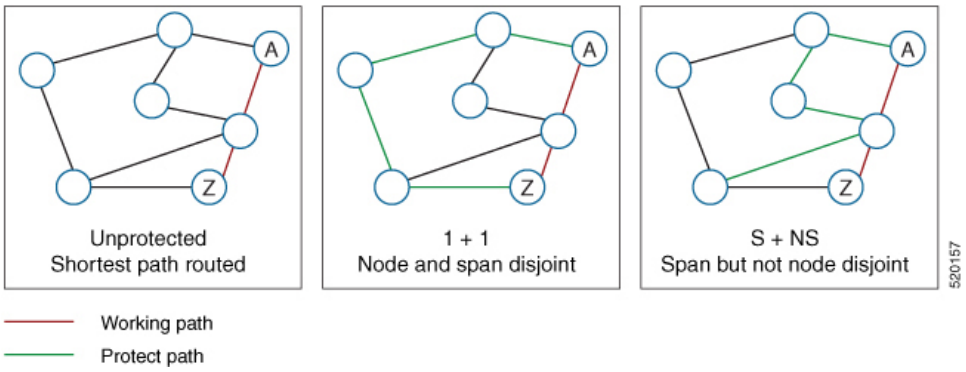

Supported protection schemes include:

- Unprotected: In unprotected mode, the tool routes the service on the shortest path without any backup.
- 1+1: In this scheme, two client signals are transmitted to separate line cards or transponder cards, rather than using a Y-cable to split one client signal into two. Client 1+1 protection allows the client system to control failure events and to manage the switchover.

Figure 2: 1+1 protection

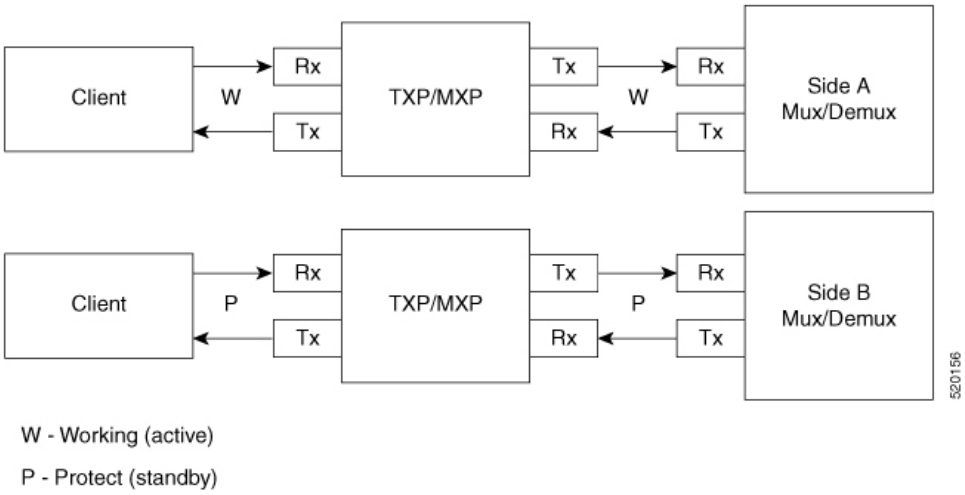

W - Working (active)

P - Protect (standby)

- 1+R: Supported on SSON networks, this scheme allows Cisco ONP to automatically find one working path for each service. You can define the restoration path.
- 1+1+R: Also supported on SSON networks, this scheme involves Cisco ONP finding one working path and one protected path for each service, and users can define the restoration path.
- 1+1+R+R: Supported on SSON networks, this scheme involves Cisco ONP finding one working path and one protected path. You can define additional restoration paths.
- S+NS: Supported on both SSON and non-SSON NCS 4000 and NCS 2000 networks, Cisco ONP uses the shortest path for the working service and the next shortest path for protection. The paths are span-disjoint but not node-disjoint
- Unprotected disjoint: Supported on both SSON and non-SSON NCS 4000-NCS 2000 network, this scheme provides two cards following two completely disjoint paths in the network to reach their destination.
- PSM-Channel protection: This protection scheme is supported on NCS 2000 non-SSON networks.

Supported services

Cisco ONP supports these OTN, Ethernet, and STS services.

Cisco ONP supports these OTN demands and services.

- ODU demands:
  - ODU-1
  - ODU-2
  - ODU-3, and
  - ODU-4
- Ethernet services:

- GE
- 10GE
- 100GE
- 400GE

  The 400GE service is supported on the NCS 1010 networks.

- Synchronous Transport Signal (STS) services:
  - STS-3
  - STS-12
  - STS-48
  - STS-192
- Virtual Container (VC) services:
  - VC-4-4
  - VC-4-16
  - VC-4-64
- Synchronous Transport Module services such as STM-64.

Supported DWDM channel interfaces

Cisco ONP supports several DWDM channel interfaces that provide high-capacity optical transport and are compatible with industry-standard wavelengths. For more information about the DWDM channel interfaces supported by Cisco ONP, seeSupported Cards and Pluggables, on page 323 and Supported Optical Sources, on page 337.

Supported fiber types

Cisco ONP supports these fiber types.

- Standard single-mode fibers:
  - G652-SMF
  - G652-SMF-28E
  - SMF-28 ULL (only NCS 1010)
  - SMF28-Ultra (only NCS 1010)
- True Wave fiber series:
  - True Wave Reach

- True Wave RS
- True-Wave Plus
- True-Wave Minus
- True-Wave Classic

- Other type of fibers:
  - Free-Light
  - Tera-Light
  - Metro-Core
  - ELEAF
  - NDSF (only NCS 1010)
  - ALLWave (only NCS 1010)

Register a new user

Use this procedure to register a new account on Cisco ONP. This enables you to create a username and password to gain access to the system.

Procedure

Step 1 In the browser URL field, enter the IP address or hostname of the Cisco ONP instance.

Step 2 Click **Sign Up** in the Login page.

Step 3 Enter the **Username**, **Email**, **Password**, and **Confirm Password**, and click **Submit**.

Step 4 If you want a system-generated password, click **Generate**, and click **Submit**. The system fills the **Password**and **Confirm Password** fields with the generated password.

Step 5 Click **Ok** in the **Success** dialog box.

Log in to the Cisco ONP web interface

Use this task to log into the Cisco ONP web interface.

Procedure

Step 1 In the browser URL field, enter the IP address or hostname of the Cisco ONP instance.

If you are a new user, sign up. See Register a new user, on page 7.

Note
If the Google Chrome browser blocks your access to Cisco ONP due to self-signed certificate security, type **thisisunsafe** to proceed to the Login page.

Step 2 Enter the username and password in the **Username** and **Password** text boxes, and click **Login**.

Cisco ONP home page

This topic helps you understand the layout, key navigation elements, user and network information displayed in the Cisco ONP home page.

After you log in, the Cisco ONP home page displays several key elements that help users navigate and utilize the tool effectively.

- Menu bar: The menu bar includes several options: File, Network, Export, Import, Manage, Logs, Job Monitor, Control Panel, and Help. See Menu bar, on page 302.
- Last login: Displays the last date and time of user login to Cisco ONP.
- Last login IP: Shows the IP address from which the user previously logged into Cisco ONP.
- User name: Your user name appears here, for example, ADMIN.
- Reports tabs: Use these tabs to access different reports. The availability of reports depend on whether a network has been analyzed. You can also access reports in site properties after network analysis.
- Network tree: Displays the network name and its elements, such as Sites, Fibers, Waves or Media Channels, SRLGs, and Subnets. See Network Tree, on page 310.

Tip To expand the Cisco ONP workable area, click the horizontal and vertical arrows on the home page.

If you see an empty grey window, update your browser to the latest version. For detailed hardware and software requirements, refer to the Cisco ONP Installation Guide.

Change password

Follow these steps to change your password.

Procedure

Step 1 Click the Login icon in the home page, then select **Change Password**.

Step 2 In the **Change Password** dialog box, enter the **Old Password**, **New Password**, **Repeat New Password**, then click **Update**.

Reset your password

Use this procedure to reset your password for the Cisco ONP.

Procedure

Step 1 In the browser URL field, enter the IP address or hostname of the Cisco ONP instance.

Step 2 Click **Forgot Password?** on the Cisco ONP Login page.
The **Forgot Password** page appears.

Step 3 Enter your registered email address in the **Forgot Password** page, then click **Continue**.

A verification code is generated and sent to the registered email address.

Step 4 Enter the verification code, new password, and confirmation of your new password, then click **Continue**.

Sign out from Cisco ONP

Use this procedure to sign out of Cisco ONP.

Procedure

Click the Login icon in the top-right corner of the home page, and choose **Sign Out** to log out of the Cisco ONP tool.

CSDL compliance enhancements in Cisco ONP

The Cisco Secure Development Lifecycle (CSDL) compliance enhancements in Cisco ONP are security features that:

- display the last login IP address of the client,
- allow setting a passphrase for encrypting credentials during the installation of the LNI application and database, and
- incorporate several CSDL compliance measures to improve security and user management.

Table 4: Feature History

Feature Name	Release Information	Feature Description
CSDL Compliance Enhancements	Cisco ONP Release 4.1	The following CSDL compliance enhancements are supported: • Displays the last login IP address of the client. • Allows you to set a passphrase for encryption of credentials during the installation of LNI application and database.

Cisco ONP incorporates these CSDL compliances to enhance security and user management.

Passphrase security

Passphrase security features are security measures that:

- ensure new passphrases do not exist in a dictionary of common passwords.
- provide pop-up messages to alert users about upcoming passphrase expiration, and
- enable admin users or those with CONFIGURATION_MANAGEMENT permission to set the passphrase lifetime and grace period via the system configuration tab.

To create a valid passphrase, ensure it is between 8 and 127 characters and includes at least one lowercase letter, one uppercase letter, one number, and one special character.

Passphrase management

Passphrase management features are administrative controls that:

- prompt the admin to change the passphrase upon first login,
- allow setting a passphrase or key to encrypt credentials during the installation of the Live Network Import (LNI) application (the default key is used if unspecified), and
- let users set a passphrase between 8 and 64 characters during Cisco ONP and LNI database installation.

User login information

User login information features are user management tools that:

- display the last login date,
- display the last login time, and
- display the last login IP address in the Cisco ONP user interface.


Additional security features

Additional security features are user-facing enhancements that:

- provide an option for users to generate a password using the Generate Password feature,
- display the strength of the password set by the user, and
- offer improved feedback on password creation.

Port details

The LNI application provides details of all ports used, enabling administrators to reference port usage information for enhanced network configuration and troubleshooting. See Ports Used in LNI, on page 40.

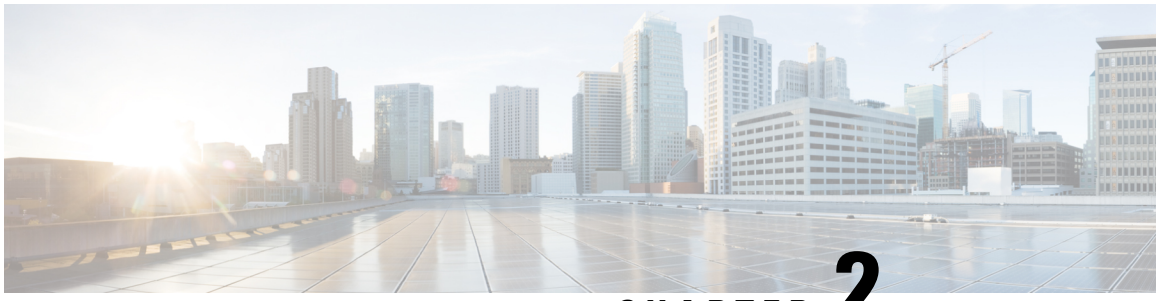

CHAPTER 2

Manage Users and Roles

- User roles in Cisco ONP, on page 13
- Assign a role to a user group, on page 14
- Remove access to a user, on page 15
- Delete a user, on page 15
- Create a new user group, on page 16
- Assign a user to a user group, on page 17
- Set password expiration for individual user, on page 17
- Set password expiration for all users, on page 18
- Lock and unlock an individual user account, on page 18
- Expire the password set by an individual user, on page 19
- Create a new role, on page 19
- Assign a role to a user group, on page 20
- Manage password through Dictionary, on page 20
- Retrieve system logs , on page 21
- Retrieve component logs , on page 22

User roles in Cisco ONP

Cisco ONP provides a structured approach to access control management through various user roles. Here's an overview of the default roles and their capabilities:

Administrator

As an administrator, you have these roles and responsibilities:

- **User activation**: Admin or users with admin access grant access by activating new users, who are then notified by email.
- **Group management**: Some user groups are predefined. These groups cannot be edited or deleted.
- **Role assignment**: Admins assign roles to groups, defining the actions a group can perform.

Designer

As a designer, you have these roles and responsibilities:

- **Network design**: Designers can create network topologies using either manual design or import design methods.
- **Capabilities**: They can design networks with various topologies (linear, ring, mesh) and assign fibers between sites, including Traffic, OLA, ROADM, and Passthrough sites.
- **Limitations**: Designers cannot analyze networks but can view reports shared by others after analysis.

Planner

As a planner, you have these roles and responsibilities:

- **Design and analysis**: Planners can both design and analyze networks. They evaluate network performance after creating sites, fiber spans, and service demands.

Reader

As a reader, you have these roles and responsibilities:

- **View-only access**: Readers can view users, user groups, roles, permissions, network topology, layout, connections, and the Bill of Materials (BOM).

  By default, users are assigned to the READ_ONLY_GROUP with the role called READER_ROLE.

To create a new role, see #unique_23.

Under **Control Panel** > **Roles** and **Control Panel** > **Permissions**, you can view the permissions applicable for each role and the actions that can be performed for each permission.

Assign a role to a user group

All users with the admin role receive an email notification about new user registration.

Follow these steps to assign a role to a user group:

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with Admin role.

Procedure

Step 1 Click **Control Panel**.

The **Access Control Management** page appears.

Step 2 You can change the state of a user from INACTIVE to ACTIVE in either of two ways.

- From the **State** field, click **INACTIVE** in the respective user row.
- Select a user row or multiple user rows and click **Update**.
  - In the **Update User** dialog box, select the **Group** and **State** from the respective drop-down lists.
  - Click **Save**.

Step 3 Click **OK** in the **Success** dialog box.

Note

- After your access is granted by the admin, you receive an email notification at your registered email address. ou can log in after you get this email.
- The admin assigns a Role and Group to a newly created user. These assignments determine what actions the user can perform.

Remove access to a user

This section helps you to securely revoke a user's access for security, compliance, or resource management reasons.

Follow these steps to remove Cisco ONP access to a user.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with Admin role.

Procedure

Step 1 Click **Control Panel**.

The **Access Control Management** page appears.

Step 2 Change the state of a user from ACTIVE to INACTIVE in either of two ways:

- In the **State** field, click **ACTIVE** in the user's row.
- Select a user row or multiple user rows, and click **Update**.
  - In the **Update User** dialog box, select the **Group** and **State** from the drop-down lists.
  - Click **Save**.

Step 3 In the **Success** dialog box, click **OK**.

Delete a user

Follow these steps to delete a user or multiple users.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with admin role.

Procedure

Step 1 Click **Control panel**.

The **Access Control Management** page appears.

Step 2 Delete a user:

a) Select the user or multiple users to be deleted under the **USERS** tab, and click **Delete**.

b) Click **Yes** in the **Warning** dialog box.

The message **User deleted successfully** appears.

Create a new user group

Follow these steps to create a new user group.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with Admin role.

Procedure

Step 1 Click **Control Panel**.

The **Access Control Management** page appears.

Step 2 Click the **USER GROUPS** tab.

Step 3 Click **Create**.

a) In the **Create Group** dialog box, enter the **Group Name**.

b) Choose the appropriate role from the **Role** drop-down list. The available default roles are:

- ADMIN
- PLANNER
- DESIGNER
- READER

The **Role** drop-down list may also have user-defined roles listed under it.

c) Click **Save** to create the user group.

Step 4 In the **Success**dialog box, click **OK**.

Assign a user to a user group

This task guides an administrator to assign a user to a specific user group within the system. Organizing users into groups with defined roles and permissions streamlines access management and enhances security controls.

Follow these steps to assign a user to a user group.

Before you begin

Log in to the Cisco ONP web interface, on page 7 with Admin permission.

Procedure

Step 1 Click **Control panel**.

The **Access Control Management** page appears.

Step 2 Under the **USERS** tab, select the user or users who are to be assigned to the new group, and click **Update**.

In the **Update User** dialog box:

a) From the **Group** drop-down list, select the appropriate group.
b) From the **State** drop-down list, select **Active** to activate the user in the group, or **Inactive** to deactivate the user in the group.
c) Click **Save**.

Step 3 In the **Success** dialog box, click **OK**.

Note

a. A user can belong to only one group.

b. Only one role can be assigned to any group.

c. All users in a group have the group's role.

d. By default, a new user is assigned to the Read_Only_Group.

Set password expiration for individual user

This section explains how to set password expiration to help maintain user account security.

Follow these steps to set the expiration of the password set by the user.

Before you begin

Log in to the Cisco ONP web interface, on page 7 with Admin or Configuration_Management permission.

Procedure

Step 1 Click **Control Panel**.

The **Access Control Management** page appears.

Step 2 Select the user under the **USERS** tab., and click **Update**.

In the **Update User** dialog box:

a) Click the **PASSWORD EXPIRY** tab.
b) Enter values for the **Lifetime**, **Warning** and **Grace** fields.
c) Click **Save**.

Note
The password expiry settings like lifetime, warning and grace time, take effect after the existing password is changed by the user.

Step 3 In the **Success** dialog box, click **OK**.

Set password expiration for all users

This section explains how to set password expiration to help maintain user account security.

Follow these steps to set the password expiration for all users.

Before you begin

Log in to the Cisco ONP web interface, on page 7 with Admin or Configuration_Management permission.

Procedure

Step 1 Click **Control Panel**.
The **Access Control Management** page appears.

Step 2 Click the **System Configuration** tab.

a) Enter values for the **Lifetime**, **Warning**, and **Grace** fields.
b) Click **Update**.

Note
The password expiry settings such as lifetime, warning, and grace time, take effect after the user changes their existing password.

Lock and unlock an individual user account

This procedure enables administrators to ensure that only authorized users can access the system.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Procedure

Step 1 Click **Control Panel**.

The **Access Control Management** page appears.

Step 2 Click the **USERS** tab.

a) Select the user whose account you want to lock or unlock.

b) Click **Lock** to lock the user account, or click **Unlock** to unlock the account.

If your account is locked, contact your administrator to unlock your account.

Expire the password set by an individual user

This task allows an administrator to manually expire the password of a specific user to enhance security by ensuring compromised or outdated credentials are not used.

Follow these steps to expire the password set by an individual user.

Before you begin

Log in to the Cisco ONP web interface, on page 7 with Admin permission.

Procedure

Step 1 Click **Control Panel**.

The **Access Control Management** page appears.

Step 2 Click the **USERS** tab.

a) Select the user whose password you want to expire.

b) Click **Expire**.

Create a new role

This procedure guides an administrator in defining a new role, assigning appropriate permissions, and making the role available for users.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Procedure

Step 1 Click **Control Panel**.

The **Access Control Management** page appears.

Step 2 Click the **ROLES** tab. Then click **Create**.

a) In the **Create Role** dialog box, enter the **Role Name**, select the **Permissions** for the role, and click **Save**.

Note
You can select more than one permission.

b) In the **Success** dialog box, click **OK**.

Assign a role to a user group

This procedure helps the administrator to assign or update a role for a user group in Cisco ONP, ensuring the group has appropriate access permissions within the system.

Follow these steps to assign a role to a user group.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the Admin role.

Procedure

Step 1 Click **Control Panel**.

The **Access Control Management** page appears.

Step 2 Click the **USER GROUPS** tab.

a) Select the user group you want to update, and click **Update**.
b) In the **Update Group** dialog box, select the desired role from the **Role** drop-down list, and click **Save**.
c) In the **Success** dialog box, click **OK**.

Manage password through Dictionary

The dictionary rejects any new password that exists in the predefined list of passwords under the **Content** column in the **DICTIONARY** tab.

The system performs this password verification check against the dictionary during these events:

- New user sign-up

- Password change
- Password reset using forgot password option

Use this task to verify whether the new password set by the user exists in the list of predefined passwords:

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Procedure

Step 1 Click **Control Panel**.

The **Access Control Management** page appears.

Step 2 Click the **DICTIONARY** tab.

a) Enable the **Rejection Mode** toggle button to verify the password against the dictionary.

By default, this toggle button remains disabled.

b) Enter the password in the **Enter Passphrase** text box.

c) To specify the maximum number of matching passphrases, enter the limit in the **Enter Limit** text box.

d) Click **Search**.

The system displays the matching passphrases.

Note
If you enter a limit, the system displays only that number of matching search results. If you do not enter a limit, the system displays all matching passphrases.

Retrieve system logs

This task guides administrators or authorized users through the steps to retrieve, filter, and manage system logs for a specified time interval on the **System Logs** page. For more information, see Logs , on page 306.

Follow these steps to retrieve the system logs.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as an admin, or a user with User Management and Network Management permissions.

Procedure

Step 1 Click **Logs**.

a) Click **Select Start Date**, and choose the start date. Similarly, click **Select End Date**, and choose the end date.

b) Choose the **Logs Category**.

c) Click **FILTER** to retrieve the logs.

Step 2 Perform the required actions in the **Logs** page.

If you want to.....	then...
export the system logs to an Excel sheet	click the **Export as CSV** icon.
export the system logs as a zip file	click the **Export Archive** icon.
import the zip file	click the **Import Archive** icon.
refresh the system logs page	click the **Refresh** icon.
delete the existing logs	click the **Clear Logs** icon.

Retrieve component logs

This task guides administrators or users with the appropriate permissions through the process of efficiently retrieving, viewing, searching, and exporting critical logs related to specific system components from the Component Logs page.

Follow these steps to retrieve the critical logs for each event from the **Component Logs** page. See Logs , on page 306.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as an admin, or a user with User Management and Network Management permissions.

Procedure

Step 1 Choose **Logs** > **Component Logs**.

Step 2 From the **Component** drop-down list, choose a component.


The logs for the chosen component appear. The available components are:

- BE
- GENE
- ODE, and
- PCE

Step 3 In the **Search** field, enter the event to locate the event logs.

Step 4 Perform the required actions in the **Component Logs** page.

If you want to…...	then…...
export the component logs as a text file	click the **Export** icon.
see the file path of the chosen component	hover the **Information** icon.

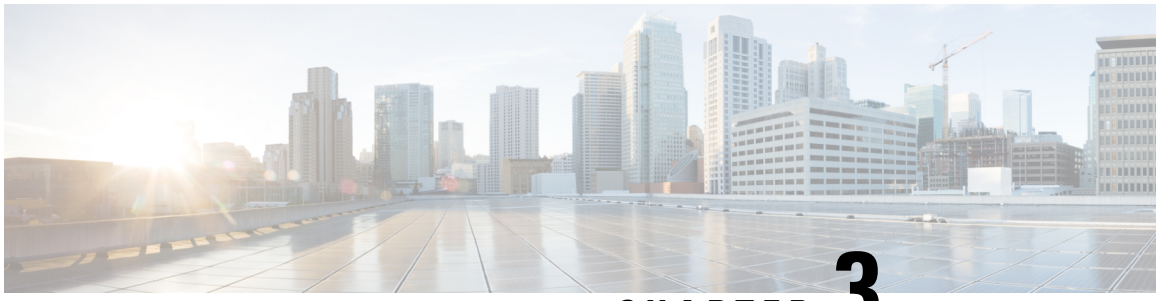

CHAPTER 3

Design and Analyze Networks

- Design a network using Cisco ONP, on page 26
- Optical subnets and their role in networks, on page 44
- Create optical subnet, on page 44
- Convert NCS 2000 network to NCS 1010 network, on page 47
- Share a network, on page 48
- Analyze the network, on page 49
- Upgrade the analyzed network, on page 51
- Upgrade LNI network, on page 53
- Upgrade the software release of a network , on page 56
- Plan mode, on page 58
- Automatic suggestion for regeneration sites in Plan mode, on page 61
- Line Rate Tuner mode, on page 65
- Import optical sources, on page 70
- Find Optical Sources Faster, on page 74
- Download optical sources, on page 75
- Delete optical sources, on page 76
- Layout template for NCS 2000 network, on page 76
- Layout visualization, on page 80
- Add new pluggables, alarm cables and 100G client bandwidth licenses to BoM, on page 91
- Spectrum utilization and path finder capabilities, on page 92
- Designing networks with SVO card, on page 97
- SVO associations, on page 98
- Export device NETCONF XML file, on page 99
- Upload NETCONF XML files on SVO web interface, on page 102
- Export device NETCONF XML Files for individual sites, on page 102
- Upload NETCONF files to NCS 1010 device, on page 103
- Export Cisco Optical Site Manager NETCONF XML file, on page 103
- Upload Cisco Optical Site Manager NETCONF XML to NCS 1010 Device via Cisco Optical Site Manager Web Interface, on page 105
- Export NCS 1010 network planning data for Cisco Optical Network Controller, on page 105
- Upload planning data into Cisco ONC, on page 106

Design a network using Cisco ONP

A network design using Cisco ONP is a network architecture planning process that

- allows users to create a new design manually or import an existing design,
- supports integration with various sources and tools, and
- provides flexibility in how network models are created and managed.

You can design a network in one of these ways:

- Manual design: Create a network design using the design palette.
- Import design: Import a network design from an Excel sheet, live network import, Cisco Transport Planner, or another instance of Cisco ONP.

Manually design a network using Cisco ONP

Table 5: Feature History

Feature Name	Release Information	Feature Description
Database Operations Optimization	Cisco ONP Release 5.2	Cisco ONP now provides an option to run some operations in the background involving database interaction, such as **Save As**, **Import CPZ**, and **Export CPZ**. You can continue to use the Cisco ONP interface for other operations when these operations are running in the background.

Table 6: Feature History

Feature Name	Release Information	Feature Description
4K-2K SSON Network Creation Support	Cisco ONP Release 5.2	Now you can include the 4K-2K nodes in both SSON and non-SSON networks while designing the network. This helps you to validate 4K-2K nodes in the SSON design which has higher line rates.

Table 7: Feature History

Feature Name	Release Information	Feature Description
NCS 1010 C+L Network Design	Cisco ONP Release 5.1	Cisco ONP now supports the C+L-band networks that help you plan NCS 1010 networks using the OLT-L and ILA-L line cards to increase your network's bandwidth capacity. Enhanced with L-band related properties, the UI enables you to design a C+L-band network for your ever-increasing channel demands. These L-band types are introduced to suit your design needs: • **C+L**: This band type adds more channels to your network, increasing its traffic carrying capacity. • **C+L Futuristic**: This band type creates a network with C-band edges and future provisions for L-band edges that you can cost-effectively upgrade after exhausting the C-band capacity.

Table 8: Feature History

Feature Name	Release Information	Feature Description
Greenfield NCS 1010 Network Design	Cisco ONP Release 5.0	You can design and validate NCS1010 optical line system. This feature helps to create OLT-C, OLT-R-C, ILA-C, ILA-R-C, and ILA-2R-C based NCS 1010 networks using fixed grid add/drop MD-32-ODD, MD-32-EVEN and flex grid add/drop BRK-24, BRK-16, and BRK-8 passive modules.

Table 9: Feature History

Feature Name	Release Information	Feature Description
Multi-Layer Platform (MLP) Greenfield Design with NCS 4k-1k-2k	Cisco ONP Release 4.1	This feature allows you to: • Support NCS 4K-1K-2K multiplatforms • Visualize new layout for Txp and SVO for NCS 2000 node • Support different OTN service types with protection • Edit layout for NCS 4000 and NCS 1004 nodes

Use this procedure to create a network in the Cisco ONP.

You can create any of these network designs:

- Spectrum Switched Optical Network (SSON) that uses flexible spectrum allocation, where the required minimum spectral resources are allocated adaptively based on traffic demand and network conditions.
- Non-SSON network that allocates single spectrum (fixed spectrum) irrespective of the traffic demand and network conditions.
- NCS 1010 network
- NCS 1001 network
- NCS 1014 network

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Choose **File** > **New**.

Step 2 In the **Create New Network** dialog box, choose the required options to create a network.

a) From the **L0 Network Platform** drop-down list:

Choose	To create...
NCS 2000	a non-SSON network that contains NCS 2000 and NCS 4000 nodes, or an SSON network including NCS 2000, NCS 1004, and NCS 4000 nodes
NCS1010	a network that contains only NCS 1010 nodes
NCS1001	a network that contains only NCS 1001 nodes

a) If you want to create an SSON network, check the **SSON Network** check box. Otherwise, do not check the check box..

This option is not for the NCS 1010 network.

b) Choose **NCS (4K_1K_2K)** or **NCS (4K_2K)** from the **Traffic Type** drop-down list.

You can view the **Traffic Type** drop-down list, if you choose to create an SSON network in the previous step.

Note
Once the network is created, you cannot change the **Traffic type** from 4K_1K_2K to 4K_2K, or the reverse. Export the network to an Excel sheet, make the required modifications, and import it as a new network.

c) Choose the **System Release** for NCS 2K or NCS 1010 from the drop-down list.

You cannot change the system releases that are available for NCS 4K and NCS 1K.

The **Band Type** drop-down list appears for NCS 1010 networks from Release 7.9.1.

d) From the **Band Type** drop-down list for NCS 1010, choose:

- C-Band: Only C-band edges are created and ANS is generated based on C-band. For L-band upgrade, ANS unlock is required.
- C+L Futuristic: Only C-band edges are created and ANS is generated based on C-band and L-band. For L-band upgrade, ANS unlock is not required.
- C+L: Both C-band and L-band edges are created and ANS is generated based on C-band and L-band.

Note
After the creation of a NCS 1010 R7.9.1 network, if required, you can change the network band type under the **Network Application Configuration** section in the Network Properties.

e) Click **Create**.

The application displays a map and the design palette. For details, refer to Design Palette, on page 312.

Step 3 Click the **Drawing Tool** icon (pencil and ruler crossed), and add sites and other network elements.

a) Add sites to the map using the drawing tool.

Zoom in on the map to the desired level. Click any of the site icons (**ROADM**, **OLA**, or **Traffic**(4K-1K-2K)), and drag it to the sites on the map. Drag or click the map where a site has to be placed, when the cursor changes to the site icon.

Note
- SRLG is not supported in the SSON networks.

  Traffic node is not supported on the NCS 1010 network.

b) Click the **Fiber** icon and drag it to connect from one site to another site. Continue this for all sites.

Note
By default, the fiber length is set as 1 kilometer for all the fibers. To update the length automatically based on the x and y coordinates, enable the **Use Coordinates Distance** property in network properties.

c) Create services between the sites (only for SSON and non-SSON networks).

Cisco ONP provides only OTN service.

d) Click **OTN Service** (green) and add the service between the existing Traffic sites on the map.
e) Click **Circuit** (purple), **Media channel** (purple), or **Waves** (red), and add media channel, or waves between the existing sites on the map.

In the left pane, you can view a network tree panel with a default network name. The network elements added are displayed in the tree panel.

Step 4 Choose **File** > **Save As**.

a) In the **Give a Network Name** dialog box, enter a network name and click **Save**.
b) If you want this operation to run in the background, click the **Run in Background** check box.

A notification pops-up after the background operation is completed. Go to **Job Monitor** to view the progress of the operation running in the background.

Create shared risk link group

Use this procedure to create Shared Risk Link Group (SRLG) using the Cisco ONP GUI. The SRLG feature enables routing of protected services.

Note SRLG is supported only for non-SSON networks that include traffic nodes.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to create the SRLGs.
Step 2 Click the network tree panel.
Step 3 Expand **Fibers**, and check the check box next to each fiber that should be in the same SRLG.
Step 4 After selecting all fibers, right-click and choose **Create SRLG**.

Cisco ONP creates an SRLG with a unique name, which you can subsequently rename.

Import a network using an Excel sheet

Use this procedure to import a network into Cisco ONP, using an Excel sheet.

Table 10: Feature History

Feature Name	Release Information	Feature Description
CX Unified Planning Tool Network Import	Cisco ONP Release 5.0	The integration between CX Unified Planning Tool (UPT) and Cisco ONP enables you to import the networks created and analyzed in CX UPT into Cisco ONP. This helps you avoid recreating the networks that are already created in UPT. This feature allows you to import networks having NCS 1010 and NCS 2000 nodes into Cisco ONP.

Table 11: Feature History

Feature Name	Release Information	Feature Description
Export and Import of Network Topology in Excel Format	Cisco ONP Release 5.1	It is now possible to export the topology data of an existing network into an Excel file. You can easily modify the exported data in Excel and import it back into Cisco ONP to create a new network or modify an existing network. These are the supported Excel formats: • **xlsx**—Standard Excel with multiple sheets, each corresponding to a network element such as Network, Sites, Circuits, Spans, OTNdemands, and so on. • **xlsm**—Macros-enabled Excel file that can filter out and display only the applicable network element sheets based on the platform selected in the Network sheet. Cisco ONP has the built-in intelligence to automatically calculate the shortest path between a source and a destination, even if only a partial fiber path is mentioned in the imported Excel file.

Follow these steps to import a network into Cisco ONP, using an Excel sheet.

Note By default, the system release of the Excel-imported network is 11.0.

Note From Release 5.0, Cisco ONP supports import of networks created using UPT via Cisco ONP Import Excel option. UPT does not populate the *DWDMChannel Type* and *Add/Drop Type* values in the Excel sheet. If the values are not found in the Excel sheet, then Cisco ONP picks the default options. By default, **DWDMChannel Type** is *NCS1004_QPSK_SP_16QAM_200G_27%SDFEC_60GBd* and **Add/Drop Type** is *Colored*. We recommend you to check the *DWDMChannel Type* and *Add/Drop Type* values before importing the Excel sheet into Cisco ONP to avoid any discrepancies.

From Release 5.1, in addition to exporting the template, you can export the entire network design data of an existing network as an Excel sheet. Modify the network properties available in the Excel sheet and reimport.

The network can be exported in all modes and reimported on Design mode, Upgrade mode, and Release Upgrade mode.

Note Transponders are not supported as part of Export or Import Excel. When you export an existing network with transponder card forced, the exported Excel sheet will have the Traffic type set to Pluggable Card in DWDMChannels or MediaChannels tab. Edit the exported Excel sheet before you import it into Cisco ONP.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Choose **Export** > **Excel** .

a) Choose the **Network Type** as Template or Current Network.

b) Choose the **File Type** as xlsx or xlsm (Macros-enabled)

The Macros-enabled Excel sheet automatically customizes the tabs on the Excel sheet based on the platform that you choose. It provides functionalities such as selection of fibers in the path selection, wavelength count validation in case of regen selection.

c) Click **Download**.

The template has tabs and fields that you must fill in the Excel sheet. For details about these tabs and fields, refer to Tabs available in the Excel sheet template, on page 33.

Step 2 Fill the network details in the template file or edit the current network file, and save the file.

Step 3 Choose **Import** > **Excel** , and select the **Import Type** .

- New: Choose this option if you want to create a new network using the design data available in the Excel sheet.
- Existing: Choose this option if you want to update an existing network with the data available in the Excel sheet. Open the network before you import the Excel sheet. Ensure the network is in Design mode, Upgrade mode, or Release Upgrade mode.

You can view the data available in the Excel sheet before you import the network data. The **View Data** check box remains checked by default. Uncheck it if you do not want to view the imported data.

Step 4 Browse for the file, select it, and click **Import**.

During the import for the existing network, If the network is locked, Cisco ONP does not import the data. If the network is unlocked and in upgrade mode, Cisco ONP updates the parameter. If the state is New, Cisco ONP adds parameters from the Excel file as a new entry.

During a new network import, the system creates a new network design regardless of the state.

The selected network is imported.

If there are errors in the imported data, a pop-up error message is shown in case of new import, and the errors are available under the **Elements** > **Messages** tabs in case of updating the existing network.

Tabs available in the Excel sheet template

This table lists the various tabs available in the Excel sheet template used to import a network.

Table 12: Tabs available in the Excel sheet template

Tabs	Description
Network	Label (name of the network), Platform (NCS2000(NON SSON), NCS2000 (SSON), NCS1010, NCS 1001), Traffic Type, NCS1010 Line Card, NCS1010 Band Type, Chassis Type, and System Release
Sites	

Network imports from Cisco Transport Planner

The Cisco Transport Planner network import is a compatibility feature that

- allows you to import networks created and analyzed in Cisco Transport Planner into Cisco ONP, as `.mpz` files,
- prevents the need to recreate existing networks, and
- supports only networks from Release 11.0 or later for compatibility.

Supported hardware for CTP network import

Cisco ONP supports these hardware as part of CTP network import.

- Optical source files and transponders

  See Supported Optical Sources, on page 337, and Supported Cards and Pluggables, on page 323.
- Contentionless, colorless, and colored point-to-point demands
- Flex network
- Gain Equalizer

Note The Gain Equalizer node converts to a ROADM node when you unlock the site after a release upgrade.

- ROADM-SMR-9 and SMR-20
- All flex supported amplifiers, controller cards, and chassis types

Import an mpz design file from Cisco Transport Planner

Use this procedure to import an mpz file from Cisco Transport Planner to Cisco ONP.

Before you begin

- Log in to the Cisco ONP web interface, on page 7 as a user with network creation permission.

- Import the required optical source files and layout template using **Manage** > **Optical Source** and **Manage** > **Optical Source** options. For more information, refer to **Manage Alien**, and **Manage Layout** .
- Delete the unsupported parameters for Cisco ONP from the mpz file. For example, mpz networks with P-Ring and A2A demands are not supported for import. Delete these demands in Cisco Transport Planner, reanalyze the networks in Cisco Transport Planner, and import the mpz file into Cisco ONP.

The network must be in design-analyzed or upgrade-analyzed mode.

Procedure

Step 1 Choose **Import** > **MPZ**.

The **Import File (mpz)** dialog box appears.

a) Browse to the mpz file stored on your computer.
b) From the **Traffic Type** drop-down list, choose **4K_1K_2K** or **4K_2K**.

You can view this drop-down list only if you select an SSON MPZ file.

c) Click **Import**.

The mpz file is imported to Cisco ONP.

Note
If you view a blank screen when you click waves in the network tree, refresh the browser.

Step 2 Choose **Network** > **Upgrade** or **Network** > **Release Upgrade** to make any changes on the imported network.

Note
- You cannot go back to design mode on the imported mpz network.
- The wave label of imported mpz network in Cisco ONP is the service name present in the Cisco Transport Planner properties window.

Export the CPZ file

Cisco ONP saves the network design file as a .cpz file in its database. Use this process to export the design file to your computer.

The contents of the .cpz file depend on the network mode:

- In design mode, the .cpz file includes the design file, layout template, and optical source details.
- In analyze mode, the .cpz file contains several items: a design file, analyze file, ANS file, per-side ANS file, BOM, error messages, trace files, layout template, mpz, and report.
- For networks in upgraded mode, you can only export the last child in the parent-child hierarchy.

Note You can export only one network at a time.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network whose design file that you want to export.

The network opens.

Note
If a blank screen appears when you open a network, refresh the browser or log in to Cisco ONP again.

Step 2 Choose **Export** > **CPZ**.

Step 3 Inside the **Export .cpz file** dialog box:

a) Rename the file if necessary.

b) If you want this operation to run in background, click the **Run in Background** check box.

A notification appears after the background operation is completed. Go to **Job Monitor** to view the progression of the operation running in the background.

c) Click **Export**.

The design file is saved on your computer.

Import the CPZ file

Use this procedure to import the cpz network design files that are exported from another Cisco ONP instance.

Note You can import only the networks that are exported from the current release.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Choose **Import** > **CPZ**.

Step 2 In the **Import .cpz file** dialog box:

a) Click **Choose file**, and select a cpz network design file that you want to import into Cisco ONP, from your local system.

b) If you want this operation to run in background, click the **Run in Background** check box.

After the background operation completes, you receive a notification. You can view the progress in **Job Monitor**.

c) Click **Import**.

If the names of the optical source and layout template files in the database and the imported network file match, Cisco ONP prompts you to confirm whether you want to overwrite the existing file.

Note
The message **"Network already exists in the system with another user. New network will be created"**, you do not need to take any action. Cisco ONP automatically imports the network as a new network for you without changing the existing network.

d) If you want to overwrite the existing file, check the **Overwrite Network** check box.

If you do not check the box, Cisco ONP saves the imported network as a new network.

e) Choose the optical source files and layout template that you want to replace.

If you do not choose the optical source or the layout template file, the files will not be imported.

f) Click **Confirm**.

The imported network is saved in the Cisco ONP database.

Live Network Import

The Live Network Import (LNI) feature is a network import capability that:

- enables real-time import of deployed networks into Cisco ONP,
- supports networks with NCS 1004, NCS 2000, and NCS 4000 nodes , and
- allows you to view comprehensive deployed network details after import.

Table 13: Feature History

Feature Name	Release Information	Feature Description
Live Network Import	Cisco ONP Release 4.1	This feature allows you to import a live deployed network having NCS 1004, NCS 2000, and NCS 4000 nodes into Cisco ONP, using the LNI (Live Network Import) import template. This feature also allows you to view network topology, BOM, and layout report.

The Map displays the network topology, and you can check the node, fiber, OTN service, and media channel properties through the Network Tree and the Entity Editor.

Perform live network import

Use this procedure to perform live import of a network.

Before you begin

- Perform LNI only when the Cisco ONC is in a stable or running state. Do not perform LNI during the maintenance period for software upgrade.
- Configure all the mandatory parameters on the circuit.
- Make sure that the following Cisco IOS XR Software Maintenance Updates (SMUs) are loaded on the NCS 4000 devices on top of Cisco IOS XR Release 6.5.28:
  - ncs4k-6.5.28.CSCvu93045.tar
  - ncs4k-sysadmin-6.5.28.CSCvt67465.tar
  - ncs4k-6.5.28.CSCvv79518.tar
- Make sure that there is a provision for opening three TL1 sessions per NCS 2000 device for Live data collection. Avoid overloading NCS 2000 devices with TL1 sessions.
- Configure the fibers with the same channel numbers (Spectral Density, for example: 91.0/82.0) on both the source and destination ends.
- Check the card label set for these NCS 2000 cards and update it if they are not aligned.

PID	Card label
NCS2K-16-AD-CCOFS	AD-16-FS
NCS2K-20-SMRFS	SMR20-FS-CV
NCS2K-20-SMRFS-L	SMR20-FS
NCS2K-9-SMR17FS	SMR9-17-FS
NCS2K-9-SMR24FS	SMR9-24-FS
NCS2K-9-SMR34FS	SMR9-34-FS
NCS2K-9-SMR34FS-L	SMR9-34-FS
15454-M-RAMAN-COP=	OPT-RAMP-COP
15454-M-RAMAN-CTP=	OPT-RAMP-CTP
NCS2K-OPT-EDFA-35	OPT-EDFA-35

- To open the Cisco ONP application, install Microsoft Excel on the client machine where you launch the browser.
- Log in to the Cisco ONP web interface, on page 7

.

Procedure

Step 1 Choose **Export** > **Download LNI Import Template**, and download the template which is in the form of an Excel sheet.

Step 2 Fill the template with the details of all the nodes belonging to the network to be imported and save the file.

These fields are mandatory:

- Node IP
- User Name
- Password
- Connectivity Type—TL1 for NCS 2000 nodes and NETCONF for NCS 1004 and NCS 4000 nodes
- Connectivity port—830 for NCS 4000 and NCS 2000 nodes

Note
Enter a value in the range of 60 to 180 in the Connectivity Timeout field or leave the field empty.

Step 3 Choose **Import** > **Live Import**.

a) Browse and choose the saved file.
b) If you want to clean the existing LNI database of the nodes and perform a fresh import, check the **Fresh Import (Cleanup LNI Database)** check box.

Note
We recommend performing a fresh import of the live network.

Leave this check box unchecked to import the details for only a few nodes that had issues during the previous import.

Note
LNI import is not user-specific. When you perform a fresh import, Cisco ONP overwrites all the LNI data that are imported by the other users.

c) Click **Import**.
d) In the **Device Onboarding** dialog box, click **OK**.

Note
If you try to import a network of unsupported version, the device collection does not happen,. An error message "device collection failed" appears. See Supported Hardware and Software for LNI, on page 41.

Step 4 View the status of the LNI operation:

a) Click **Job Monitor**, and click **Check Progress** for the IMPORT_LIVE_NETWORK task, to view the status of the LNI operation in the **LNI Progress** dialog box. Click **Refresh** to see the updated status.

After LNI is completed, the job is removed from the **Job Monitor** page.

b) Click **Logs** to view the list of events that are related to the LNI operation, as logs.

Step 5 After the completion of the LNI operation, choose **File** > **Open**.

The format of the LNI imported network filename is LNI_<Date>_<Time>.

Step 6 Click the imported network name to view the network under the **Map** tab and its corresponding network tree in the left panel.

The aggregated node that includes NCS 1004, NCS 2000, and NCS 4000 appears in purple, and the aggregated node that includes NCS 1004 and NCS 2000 appears in orange in the network tree. You can view the tag **Imported from Network** in the interface.

Note

- Even if errors occur during the LNI operation, the operation is not canceled. In this case, when you open the imported network, a warning message appears.
- You can view the errors under the **Elements > Messages** tab.
  - Device collection failure is listed under critical messages.
  - The reason for failure is listed under noncritical messages.
- If both NCS and Non-NCS PIDS are present in the inventory, Cisco ONP enables the **Enable NCS** option. You can edit this option during upgrade after unlocking the site, if necessary.
- Service path for the restored circuits is displayed as:
  - Primary Path: Working path before restoration
  - Secondary path: Protected path
  - Restoration path: Current work path after restoration

  Note
  If the circuit is not in the restored state, the restoration path is not shown.
- SSON circuits carrying protected OTN services are merged as Client 1+1 protected Media Channel. Due to this, you may see difference in total number of SSON circuits between the imported network in Cisco ONP and the actual network.
- If LNI is not installed properly, you may encounter the errors such as LNI failure or LNI not able to purge the data. In such cases, we recommend starting and stopping the LNI services in the server where Cisco ONP and LNI are installed using these commands:
  - Stop the LNI services.

    ```
    root:~/$ONP_HOME# cd LNI
    root:~/$ONP_HOME/LNI# bash ciscolniinstaller.sh -o stop -t update -m offlinemode
    ```
  - Start the LNI services.

    ```
    root:~/$ONP_HOME/LNI# bash ciscolniinstaller.sh -o start -t update -m offlinemode
    ```

Note
Wait at least 5 minutes after starting the services for LNI services to resume before triggering a new live network import.

What to do next

Click the **BOM** tab to view the BOM details of the network.

Note The PIDs of prototype cards are shown as "NA" in the BOM details of the LNI network.

You can export the CPZ, import the CPZ, and share the imported network. Use the **Entity Editor** to view network properties.

Ports Used in LNI

LNI application uses the following ports. If any port is shut down due to any failure, then the service is restarted by the Docker system.

Port	Service	Usage
8761	Eureka Service	Registration and discovery service, which holds the information about all microservice applications
8080	API Gateway	Receives all the incoming requests, and then delegates the requests to internal microservices like LNI Broker
8080	Collector Service	Collects metrics and operation data from the devices
8080	Device Manager	Responsible for device onboarding process
8080	Inventory Service	Provides inventory data
9888	TL1 plug-in Service	South bound interface plug-ins for TL1 protocol-based NCS 2000 devices
8888	NCS 2K Inventory Adapter Service	Adapter module to transform NCS 2000 device response from collector to Cisco ONP NCMS schema-based POJO
8888	NCS 4K Inventory Adapter Service	Adapter module to transform NCS 4000 device response from collector to Cisco ONP NCMS schema-based POJO
8888	NCS 1K Inventory Adapter Service	Adapter module to transform NCS 1004 device response from collector to Cisco ONP NCMS schema-based POJO
9976	NETCONF plug-in Service	South bound interface plug-ins for NETCONF based 1K/4K devices
8888	LNI Broker Service	Provides interfaces for Cisco ONP BE service to trigger live network import
8085	Topology Service	Provides network topology data
8090	Circuit Service	Provides network circuit data
8024	NETCONF Adapter Service	Common adapter for Topology and Circuit services
8888	Model Aggregator Service	Aggregates inventory, topology, and circuit details under NCMS schema-based networks
8092	TL1 Adapter Service	Common adapter for Topology and Circuit Service

Port	Service	Usage
5601	Kibana	Data visualization and exploration tool that is used for log and time-series analytics, application monitoring, and operational intelligence use cases **Note** The default Edge browser on Windows OS is not supported for viewing the Kibana logs. Cisco recommends using Firefox or Chrome browser for viewing the Kibana logs.
2181	Zookeeper	Keeps track of status of the Kafka cluster nodes, and also keeps track of Kafka topics, partitions publish-subscribe messaging system that enables inter service communication
9092	Kafka	Publish-subscribe messaging system that enables inter-service communication
5432	Postgres	Database to persist services data

Supported Hardware and Software for LNI

The following table describes the software versions and hardware requirements of the network imported through LNI.

Table 14:

Property	Values
Network	
Network Type	SSON
Platform	ETSI
System Release	NCS 2000: R11.1, and R11.1.1.2 NCS 1004: XR 7.0.1 NCS 4000: XR 6.5.2.8
Site/Node	
Site Type	4K-1K-2K: ADD/DROP, 1K-2K;Regen, 2K:ROADM/OLA
ROADM	SMR-20, SMR-9-17FS, SMR-9-34FS, SMR-9-24FS
Amplifier	RAMAN-CTP, RAMAN-COP, EDFA35-24, EDFA35-35
Degree Mesh Type	DEG-5/UPG-4
Chassis Type	4K: NCS4016, 2K:NCS2006, 1K:NCS1004
Power Supply	4K-DC, 1K-DC, 2K-DC40

Property	Values
ECU	ECU-S
Controller Card	TNCS-2, TNCS-2O
Channel Rule	82
Line Cards	NCS1K4-1.2T-K9=, NCS4K-4H-OPW-QC2
Evolved Mesh	ON and OFF
Node Protection	2K: Separated shelves, 4K: Single shelf
Mpo16Lc	MPO-16LC Unit
Mpo16ToMpo08	MPO16TO2MPO8Cable
Cascaded SMR	Yes
Enable NCS	Yes
Use Payg	No
Connection Verification	Yes, No
MF Unit	MF-6RU, MF6-10RU, or MF-1RU
Structure	Line, Multidegree, Terminal
Scalable upto degree	4, 8, 12
Power redundancy	Yes
IP Address	IPv4
Fiber	
OSC Frame Type	Auto
DCN Extension	Yes
ENE/GNE	Yes
Length	Yes
Loss	Yes
Measurement Unit	KM
Length based Loss	No
Raman Amplified	Yes
Fiber Type	G652-SMF-28E
Connector Loss A	Yes

Property	Values
Connector Loss B	Yes
Cross OSC and Parallel OSC	Yes
Media Channel	
Traffic Type	NCS1004_SP_16QAM_16QAM_300G_27%SDFEC_60GBd
Protection	Unprotected, and 1+R
Path	Actual Path
Regen	Regen site
Multicarrier	No
Contentionless	Yes
Circuit State	Restored, Unrestored
Service	
Service Type	100GE, 10GE, STM-64
Protection	1+1, Unprotected, 1+R, 1+1+R, 1+1+R+R
Path	Actual Path
Client Type (1K)	OTU4
Interface Type (1K)	BH
Trunk Mode (1K)	200G, 300G
Baud Rate (1K)	60 and 69 GBd
Client Pluggable	ONS-QSFP28-LR4=, QSFP-100G-SR4-S=,ONS-QSFP-4X10-MLR=

Limitations of LNI

These are the limitations, unsupported features, and known constraints of LNI, and scenarios where LNI may not function as expected and the available workarounds.

- Simultaneous import of multiple live networks and scheduled import are not supported. LNI does not support importing Non-SSON networks, Non-Contentionless configurations, circuits with NCS 2000 Transponder or Muxponder cards, or NCS1001, NCS1004, and NCS4000 devices.
- The chassis position in the layout may not be accurate in the live imported network. NCS 2000, NCS 1004, and NCS 4000 chassis are placed in separate racks to provide a clearer layout view.

  Workaround: You can edit the layout after network upgrade and analysis.
- If X, Y coordinates are not configured in the devices, nodes are overlapped in the Cisco ONP map.

Workaround: Configure X, Y coordinates before importing the network for a better view of the topology in Cisco ONP map; otherwise, you can drag and drop the nodes in the Cisco ONP map and adjust the node position after importing.

- The Scalable upto degree parameter is not imported from the real device. Cisco ONP chooses the maximum scalable up to degree based on the number of line sides and contentionless sides present on the node.

  Workaround: Unlock the node after upgrading and change the scalable upto degree. After unlocking the site, use the layout template to rearrange the layout.

- Cisco ONP imports the proto-PID, if present in the inventory, and show as N/A PID in the Cisco ONP BOM. Duplicate media channel labels are not supported. If multiple media channels with the same label exist in the network, only one is imported; the rest are discarded.

- Fiber name, source, and destination names may not match between imports; source and destination site names may interchange for bidirectional fibers. Fibers may not associate with the correct optical subnet if channel numbers differ at source and destination, causing amplifier output power issues. Workaround: Correct channel numbers at both ends and re-import or associate fibers with the correct optical subnet after upgrade.

- If the regenerated demand is in restored state, the restored path is shown as working or protected path, and service protection is shown as 1+R in Cisco ONP. Restoration details will not be available. Service protection type is shown as 1+1+R or 1+1+R+R only if restoration path is available. Otherwise, it is shown as 1+1.

  Preprovisioned cards are not listed in the Cisco ONP BOM and are populated only after a successful upgrade and analysis of the LNI network. Ensure that the cards are equipped to retrieve the PID details.

Optical subnets and their role in networks

An optical subnet is a network structure that

- consists of a collection of spans with defined properties,
- is automatically created when a new network is set up in Cisco ONP, and
- must exist in at least one instance for every network.

When a new network is created, Cisco ONP links an optical subnet to it, ensuring that each network has its own optical subnet for proper operation.

Create optical subnet

Use this procedure to create an optical subnet in Cisco ONP for Non-SSON, SSON, or NCS 1010 networks.



Note Check the **Current Subnet** check box in the properties window below the network tree, to make the subnet you created as the current subnet. You cannot uncheck the **Current Subnet** check box.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Note For NCS 1010 networks, both C-Band and L-Band optical subnets appear by default, from the Release 7.9.1. For C-Band and C+L Futuristic networks, the L-Band optical subnet contains no fiber links unless upgraded or configured with an L-Band edge.

Procedure

Step 1 Open the required network (Non-SSON, SSON, or NCS 1010) in which you want to create a subnet.

Step 2 Expand **Subnet** in the network tree panel.

Step 3 Click the **Ellipsis** icon available next to the **Optical Subnet**, and select **Create Optical Subnet**.

Step 4 In the **Create Optical Subnet** dialog box:

If you are creating optical subnet for...	Then...
non-SSON network	From the **Cband Rules** drop-down list, choose the C-band design rules for the new optical subnet, then click **Save**.
SSON network	• From the **Band Type** drop-down list, choose either **C-Band** or **L-Band**. • From the **Spectral Density** drop-down list, choose the spectral density for the new optical subnet that you want to create. The selected spectral density determines the value of **Name**, **CBand Rules** or **LBand Rules**, and **Maximum Number of Channels** that appear in the **Create Optical Subnet** dialog box. • Click **Save**.

If you are creating optical subnet for...	Then...
NCS 1010 network	• From the **Band Type** drop-down list, choose either **C-Band** or **L-Band**. **Note** The **Band Type** option is available from Release 7.9.1. • From the **Spectral Density** drop-down list, choose the spectral density for the new optical subnet that you want to create. From Release 5.2, the range of spectral density has increased from 30 to 100 units. The selected spectral density determines the value of **Name**, **CBand Rules** or **LBand Rules**, and **Maximum Number of Channels** that appear in the **Create Optical Subnet** dialog box. • Click **Save**.

Step 5 (Optional) After the new optical subnet is created:

If you want to...	Then...
select a new spectral density	select a new spectral density from the **Spectral Density** drop-down list in the properties window displayed under the network tree.
add a fiber to a subnet	add a fiber to a subnet from the **Fiber links** drop-down list in the properties window. The fiber now appears in the **Fiber links** field. When you select the optical subnet, its corresponding fiber is highlighted in the map.
add a fiber to a subnet from the network tree panel	• Click the **Ellipsis** icon available in the right side of the required optical subnet and select **Edit Fibers**. • In the **Info** dialog box, click **OK**. The user interface will freeze to allow fiber selection from the map. • Select the required fiber and click the **Done** button appearing near the zoom icon. **Note** When a fiber is added to one of the subnets, it is automatically removed from the other subnets. Only one subnet rule is associated with each fiber.

Cisco ONP creates the new optical subnet with your selected properties and places it under **OpticalSubnet** in the network tree panel.

Convert NCS 2000 network to NCS 1010 network

Use this procedure to convert an NCS 2000 network (both SSON and non-SSON) into an NCS 1010 network.

Table 15: Feature History

Feature Name	Release Information	Feature Description
Convert NCS 2000 network to NCS 1010 network	Cisco ONP Release 5.1	The newly introduced **NCS 1010 Convert** option under the **Network** menu enables you to directly convert an existing NCS 2000 network into an NCS 1010 network. This conversion eliminates the need to build an NCS 1010 network from scratch.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the NCS 2000 network that you want to convert to an NCS 1010 network.

Ensure that the network is in **Design Mode**, **Upgrade Mode** or **Release Upgrade Mode**.

Step 2 Choose **Network** > **NCS 1010 Convert**, then click **OK**.

The network is not converted and shows an error message if

- the network contains traffic sites,
- the fiber type is LS or TWClassic,
- the network contains OTN services,
- the Traffic Type property is set to anything other than **Optical Source** or **Pluggable Card**, and
- the Traffic Type is 100G-SD-FEC or 200G-SD-FEC in non-SSON networks.

Step 3 Choose **File** > **Save**.

These parameters are automatically updated after the conversion:

- Contentionless sides are deleted, and contentionless demands are automatically changed as colorless, and
- protected channels are converted to two unprotected channels. The path, wavelength, regeneration sites, and cards that are configured are retained.

Share a network

Use this procedure to share a network with one or more users or user groups.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network that you want to share.

Step 2 Choose **File** > **Share**.

Step 3 In the **Share Network** dialog box, select one or more users or user groups, and then click **Share**.

You can share the network with selected users or user groups in read-only mode.

Access a shared network

Use this procedure to open a network shared by another user and save an editable copy for your own work.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open a shared network.

a) Choose **File** > **Open Shared**.

b) In the shared network list, choose the network you want to open.
The shared network opens in read-only mode.

Step 2 Choose **File > Save As**.

Step 3 Enter a name for your copy and click **Save**.

A copy of the shared network is saved.

You now have your own editable copy of the shared network. You can work on it according to the privileges of your user role.

Step 4 (Optional) If you want, share your updated network with other users.

Unshare a network

Use this procedure to remove user or user group access to a previously shared network, ensuring only authorized individuals retain visibility and control of the network.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network you want to unshare.

Step 2 Choose > **Share**.

Step 3 In the **Share Network** dialog box, remove the name of one or more users or user groups from the list, then click **Share**.

The shared network is no longer available to the users or user groups that are removed.

Analyze the network

After completing the network design, use this procedure to analyze the network.

Table 16: Feature History

Feature Name	Release Information	Description
Detailed Tooltip for Sites on the Map View	Cisco ONP Release 5.1	The **See More Details** option has been introduced in the tooltip displayed on hovering over Sites on the **Map** view of an analyzed network. This option shows the Amplifier data and PSD (Power Spectral Density) profile graph. The **See More Details** option avoids navigating to the **Entity Editor** to view these details.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network that you want to analyze.

Step 2 Analyze the network:

a) Choose **Network** > **Analyze**.

The analysis progress indicator shows the current analysis status. After successful analysis, the network goes to **Analyze Mode**.

b) If you see the "Analysis Failed." message, navigate to the **Elements** > **Messages** tab to see the list of error details in the analyzed network.

By default, the system displays only the key messages when the **Critical Only** toggle button is enabled. If you want to view the entire network message, disable the **Critical Only** toggle button.

c) Resolve the error and analyze the network again. Continue until you resolve all errors.

Note
You may see the error message 'Unexpected Situation 999' if incorrect property values are entered or changed during network design. Contact Cisco TAC to identify the exact cause of the error. Afterwards, modify the suggested property value so that the network analysis completes successfully.

Step 3 If you want to view the details such as **Amplifier Data** and **PSD Profile** graph for a site in an analyzed network, hover the mouse over a site and click **See More Details**.

Amplifier data includes output power, EOL gain, attenuator in and out, and Raman gain values. For NCS 1010 sites, the amplifier data does not include attenuator details, and only these sites show the PSD profile graph.

Bottom-up flow and network creation

A bottom-up flow is a network creation approach that

- enables incremental, step-by-step building of a network over several days,
- allows analysis and report generation at each phase without requiring all services or waves to be configured on the first day, and
- provides flexibility in the order of adding network elements such as services and waves.

How bottom-up flows work

Summary

The bottom-up flow process enables gradual, phase-based network creation and analysis, giving users flexibility in building and evaluating their network incrementally.

The key components involved in the process are:

- Network administrator: Builds and configures the network in stages.
- Network topology: Consists of sites and fibers initially added to form the network's structure.
- Services and waves: Additional network components that can be added over time for increased functionality and connectivity.

Workflow

The process involves the following stages:

1. On Day 0, the administrator creates the network by adding all sites and fibers to define the topology. They can analyze the network and view reports at this stage without configuring services or waves.
2. On Day 1, the administrator adds waves between sites (including both previously added and new sites/fibers), then re-analyzes and reviews updated reports.
3. On Day 2, the administrator adds services and tags the waves created in the previous stage, as well as incorporates additional sites and fibers as needed, with ongoing analysis and reporting.

4. After the initial topology is created, services or waves can be added in any order, without following a prescribed sequence.

Result

The bottom-up flow process supports flexible, staged network development and ongoing analysis, optimizing the configuration and deployment of Non-SSON networks.

Idle timeout in the Analyze mode

An idle timeout in analyze mode is a session management feature that

- logs users out of Cisco ONP if the browser is inactive for a default duration of 15 minutes,
- allows system administrators to disable or adjust the timeout through server configuration options, and
- affects ongoing network analysis by running it in the background if logout occurs during an active analysis cycle.

Idle timeout settings and session restoration behavior

The default idle timeout in Cisco ONP is 15 minutes. System administrators can disable this timeout by setting the enabled option to false in the configuration file, or adjust the timeout duration by editing the duration option.

If a session times out during an analysis, network analysis continues to run in the background. When the user logs in again:

- If the analysis is ongoing, the progress bar appears and no actions are allowed.
- If the analysis is complete, the network opens in Analyze mode.
- If the analysis failed, the network opens in Design mode and the failure reason can be viewed under **Elements** > **Messages**.

Upgrade the analyzed network

Table 17: Feature History

Feature Name	Release Information	Description
NCS 1010 Network Upgrade Flexibility	Cisco ONP Release 5.0	After a network is analyzed, all the network elements get locked. With this feature, you can selectively unlock certain network elements to upgrade the network further. This helps in preventing accidental updates to the part of the network that does not need any modification.

Use this procedure to upgrade an existing network that is in analyzed mode. You can change specific properties of a network element while keeping the network layout and design locked.

Upgrade is supported for NCS2K, NCS4K-2K, NCS4K-1K-2K, and NCS1010 networks.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network that you want to upgrade.

Step 2 Upgrade the network:

a) Choose **Network** > **Upgrade**.

b) Click **Yes** .

The message “Network Upgraded Successfully” appears. The network goes into upgrade mode and network elements such as sites, fiber, waves (for non-SSON), media channel (for SSON), and circuits (for NCS 1010) are locked.

Step 3 To modify a network element in the network tree panel, click the **Ellipsis** icon next to element, and choose **Unlock**.

Unlock individual elements at the node, side, add/drop card, or amplifier level in the network tree hierarchy.

If you want to change only the add/drop between MD-32-ODD/Even or BRK_24/16/8 in the NCS 1010 network, you can unlock the add/drop without unlocking the network elements that are higher in the hierarchy.

Make these modifications:

- Edit properties of network elements.
- Delete elements from the network.
- Add a new site, wave, service, demand, optical subnet, or fiber into the network map.

Step 4 Choose **File** > **Save**.

The newly added elements are automatically displayed in the network tree panel, and by default, remain unlocked.

Note
To insert a node in upgrade mode, unlock the fibers connected to that node, then add the node to the network.

Step 5 Choose **Network** > **Analyze**.

After the analysis is completed, the newly added elements are locked, and the optical reports and installation parameters of the upgraded network are updated.

When you add services or fibers while upgrading a network with an applied layout template, the template updates to include the new service or fiber. You can export the template, make changes, and reapply it to another network.

Step 6 Choose **Network** > **Design** to further upgrade the newly upgraded network design.

Each time you upgrade the network, Cisco ONP saves the new version as a child network and maintains the parent-child relationship.

Upgrade LNI network

Use this procedure to correct errors in your LNI network, modify ,and reanalyze it, and view updated BOM, layout, connections, and optical results.

Table 18: Feature History

Feature Name	Release Information	Feature Description
Upgrade LNI Network	Cisco ONP Release 4.1	This feature allows you to upgrade and modify the imported LNI (Live Network Import) network as required. You can also correct LNI errors, reanalyze the network, and view the updated parameters such as BOM, layout, connections, and optical results.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network imported through LNI that you want to upgrade.

Step 2 Upgrade the network:

a) Choose **Network** > **Upgrade**.

b) Click **Yes** .

The message “Network Upgraded Successfully” appears. After you upgrade the network, it enters upgrade mode, which locks elements such as sites, fiber, OTN services, and media channels.

Step 3 To modify a network element in the network tree panel, click the **Ellipsis** icon next to element, and choose **Unlock**.

Unlock individual elements at the node, side, add/drop card, or amplifier level in the network tree hierarchy.

Make these modifications:

- Edit the properties of network elements.
- Delete elements from the network.
- Add a new site, wave, service, demand, optical subnet, or fiber into the network map.

Step 4 Choose **File** > **Save**.

Each time that you upgrade the network, Cisco ONP saves the new version as a child network and maintains the parent-child relationship.

Step 5 Choose **Network** > **Analyze**.

Analysis succeeds only if the imported network is consistent and valid. If the analysis fails, perform the listed steps:

a) Check the reports under **Elements Messages** for failure reasons.
b) Resolve the issues by modifying the network manually in Cisco ONP or re-importing the network after correcting the errors.
c) Reanalyze the network.

Step 6 After analyzing the network:

a) Click the **Layout** tab and edit the layout manually to adjust chassis or card position for NCS 4000 and NCS 1004 platforms. See
b) Click the **BOM** tab and the **Results** tab to view the BOM and optical results.

Media channel unlocking scenarios

This table explains the various media channel conditions and the unlocking possibilities.

Table 19: Media channel unlocking scenarios

Conditions	Unlocking possibilities
The channel has OTN services. In 4K-2K cases, the service maps directly to the channel. In 4K-1K-2K, the service maps to the channel through the OTU4 trail.	Cisco ONP throws an error indicating that there are OTN services associated with the media channel. First, unlock the associated OTN services. Then, unlock and delete the media channel. You cannot update or delete the channel before unlocking the associated services.
Channel does not have OTN services going over it. For example, in the case of 4K-1K-2K, the media channel carries empty OTU4s.	Cisco ONP allows you to unlock the channel.When you unlock the channel, the properties of the channel and its child entities like Trail and Section are not cleared automatically, whether you or the system assigned them. You can only unlock the channel automatically if there are no associated OTU4s. After unlocking the channel, you can delete the channel. You cannot update the properties of the channel or its child entities. When the properties of the media channel or any of its child entities are auto-assigned, the system clears and sets only the wavelength to Auto. All other properties are not cleared.
Channel has neither OTN services nor OTU4(s) going over it. In case of 4K-1K-2K networks, Media Channel does not carry even empty OTUs.	Cisco ONP allows you to unlock the channel and automatically clears auto-assigned properties. After unlocking you can perform these: • Update various properties of the channel and its child entities. • Delete the channel.

Possible error scenarios and the workarounds

This table provides the workarounds for the errors that are shown under the **Elements > Messages** tab.

Table 20: Error scenarios and the workarounds

Error message	Workarounds
Device Authentication failure	Check the username and password of the device provided in the LNI input Excel file. Retry the LNI import using valid device credentials.
Device collection failed or Device not reachable.	Check for any connectivity issues in the setup. Fix any identified issues and retry the LNI import.
In Site4.A, output power setting is not supported by the amplifier.	Unlock C-Band amplifiers for side A within Site4 in the Network tree, and set the correct output power. If you are unsure, choose Auto and analyze the result. Cisco ONP chooses the best value based on the configuration.
Cannot Route demand! Did not find any valid Omnidirectional Side.	For protected OTN or SSON services, ensure that at least two contentionless sides are present on both the source and destination sites. Add contentionless sides where necessary, then analyze the network configuration.
• **Demand OTU3 has unrecognized type [OTU3]** • **ServiceGroup does not support the demandType OTU3 for OTU3**	Only 100GE, 10GE, and STM-64 service rates are supported. If a different service rate exists in the network, unlock the specific service, change it to a supported service type, update the ODU time slot accordingly, and analyze the changes.
Primary OTN Demand [100GE_Flex] has invalid Timeslot ranges. Allowed ranges are [1-80]	100GE service type must have ODU time slot in the range of 1–80. If any other value is set, update the correct value or leave it blank so that Cisco ONP can set it to the correct value.
Cannot complete mesh connections at Site3.	Unlock the site and reanalyze.
No OTN demand found for NCS4K trunk port - NCS4016-B - OTU40/8/0/1.	No action required. This is an information message to the user.
Fiber between Node1.A and Node2.B has an invalid value in connector loss value	Unlock the corresponding fiber couple and update the connector loss value so that it is greater than zero. The typical value is 0.2.
Fiber between Nod1.C and Node2.C has an invalid value in Tot SOL Loss w/o Connectors.	Unlock the corresponding fiber couple and update the Tot SOL Loss w/o Connectors value so that it is greater than zero.
Span Fiber-2 is forced as Raman but no traffic is present.	Remove Raman forcing on the fiber, or force the path for a service to ensure it travels through a Raman-enabled span.

Error message	Workarounds
Couple Fiber-2 has Raman enabled on the duct but corresponding Raman Forcing is missing.	Force RAMAN-CTP or COP on the Fiber-2 connecting node interface, or remove RAMAN forcing on the Fiber-2.

Note No specific action is required for noncritical messages. These are just information messages to the user.

Upgrade the software release of a network

Table 21: Feature History

Feature Name	Release Information	Feature Description
Release Upgrade	Cisco ONP Release 4.1	This feature allows you to choose the NCS 2000 system release to the desired release (11.1.0, 12.0.1, or 12.1.0), while performing the release upgrade of CTP network, Cisco ONP network, network imported through Excel, and LNI network.

You can upgrade the software version of networks that are imported from CTP, created in Cisco ONP, LNI Network, or imported from Excel to any desired release version. The release upgrade is supported for both SSON and non-SSON networks that have NCS 2000 nodes with ROADM, OLA, Traffic, or Passthrough functionality, and NCS 1010 networks.

Release upgrade is supported starting with NCS 2000 Release 11.1.0.

Note NCS 2000 supports SVO from the Release 12.1.0.

See Supported upgrade paths for network system releases, on page 57for the available upgrade releases for each network type.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network in which you want to perform the system release upgrade.

Step 2 Upgrade the software release of the network:

a) Choose **Network** > **Release Upgrade**.

b) From the **New System Release** drop-down list, choose the system release of NCS 2000 or NCS 1010, to which you want to upgrade.

c) Click **Submit**.

The upgraded network is saved as a child network.

Note If the PMD coefficient does not get updated with the expected value, update the fiber type first, followed by the PMD value when you edit the fiber properties.

What to do next

Unlock and modify network elements as needed.

Supported upgrade paths for network system releases

This table shows the available upgrade releases for each network type.

Table 22: Supported upgrade paths for network system releases

Network	Upgrade Release
CTP network (.mpz)	• From 11.0.0 to 11.1.0, 12.1.0, 12.2.0, and 12.3.1 • From 11.1.0 to 12.1.0, 12.2.0, and 12.3.1
Cisco ONP network	• From 11.0.0 to 11.1.0, 12.1.0, 12.2.0, and 12.3.1 • From 11.1.0 to 12.1.0, 12.2.0, and 12.3.1 • From 12.1.0 to 12.2.0, and 12.3.1
Excel imported network	• From 11.0.0 to 11.1.0, 12.1.0, 12.2.0, and 12.3.1
LNI network	• 11.1.0 to 12.0.1, 12.1.0, and 12.3.1 • 11.1.0 to 12.1.0, 12.2.0, and 12.3.1 • 11.1.0 to 12.0.1, 12.1.0, and 12.3.1, 25.1.1 • 11.1.0 to 12.1.0, 12.2.0, and 12.3.1, 25.1.1 **Note** You cannot directly release upgrade an LNI network. Perform the following: • Upgrade the LNI network. see #unique_74) • Analyze the network. (see #unique_75 • Release upgrade the analyzed LNI network.

Network	Upgrade Release
NCS 1010 Network	• 7.7.1 to 7.9.1, 7.10.1, 7.11.1, 24.31 • 7.9.1 to 7.10.1, 7.11.1, 24.31 • 7.10.1 to 7.11.1, 24.31 • 7.11.1 to 24.31

Plan mode

Plan mode is a feature that

- enables what-if analysis on existing network designs,
- simulates network behavior under failure scenarios, and
- determines the ability to reroute services without providing guidance for expanding network infrastructure.

Table 23: Feature History

Feature Name	Release Information	Feature Description
What-if Analysis for OTN Services	Cisco ONP Release 4.1	This feature extends the current implementation of What-if analysis for the OTN Services that are connecting the aggregated nodes. The failure report includes the number of failed services, restored services, and unrestored services. This feature is supported forsworn (4K-1K-2K and 1K-2K) and non-SSON (4K-2K) networks.

Advantages of plan mode

The advantages of the plan mode are:

- Simulates and analyzes potential network issues and solutions,
- focuses on rerouting capabilities, and
- avoids requiring physical changes to network infrastructure.

Supported network elements

Supported network elements in plan mode include:

- An NCS 2000 aggregated node that includes ROADM, OLA, and passthrough nodes
- Traffic nodes including1K-2K, 4K-2K, and 4K-1K-2K

- Nodes created in Cisco ONP
- Networks imported from Cisco Transport Planner in mpz format
- Networks imported from LNI

Limitations of plan mode

Plan mode has these limitations:

- Only users with PLANNER and ADMIN roles can access the Plan mode.
- Plan mode does not guide you in turning up new wavelengths or adding new network components.

Use this procedure to evaluate potential network failures and review restoration outcomes by simulating fiber and site outages in Plan mode.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with admin or planner role.

Follow these steps to perform a what-if analysis in Plan mode

Procedure

Step 1 Open the analyzed network.

Step 2 Choose **Network** > **Enter Plan Mode**.

The network switches to Plan mode. In this mode, you can perform what-if analysis by failing fibers and sites.

Step 3 Fail ne or more sites:

a) In the network tree, expand **Sites**.
b) Click the **Ellipsis** icon available in the right side of the site, and select **Fail**. Alternatively, right-click a site on the map and select **Fail**.
c) To fail multiple sites, select them and choose **Fail**.

Step 4 Fail one or more fibers:

a) In the network tree, expand **Fibers**.
b) Click the **Ellipsis** icon next to the fiber, and click **Fail**. Alternatively, right-click a fiber in the map and select **Fail**.
c) To fail multiple fibers, select them and choose **Fail**.

When a fiber fails, all media channels or waves, OTN services, and demands that pass through the failed fiber also fail. Symbols on the map indicate these failures:

- Failed channels: Red cross
- Fibers impacted due to site failure: Yellow cross
- Restored channels: Green check

d) To undo the fiber failure, click the **Ellipsis** icon next to the fiber, and click **Undo Fail**.

Step 5 (Optional) Create a failure set if you wish to group selected failures. SeeCreate a failure set.

Step 6 After testing, restore the failed fibers by choosing **Restore**.

The restored channels are indicated by a green check mark in the network tree and map.

All media channels or waves, and demands that pass through the restored fiber are also restored. The Path Computation Element (PCE) restores OTN services based on optical feasibility and OTN constraints.

Step 7 Export the failure report:

a) Choose **Export** > **Failure Report** to export the failure report as an Excel file. The failure report includes the parameters described in Failure report , on page 61.

b) Alternatively, click **Export** in the **Failure Report** area under the map.

Review unrestored channels and reasons for restoration failure in the **Elements** > **Messages** tab.

Step 8 Exit Plan mode:

a) Choose **Network** > **Exit Plan Mode**.

The what-if analysis and failure report are completed and exported, providing insight into service impact and recovery.

Create a failure set

Use this procedure to create and manage failed fibers and sites as a failure set within a failure group. You can simulate or track network outages efficiently in a single action.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open a network and enter the Plan mode.

Step 2 Click the **Ellipsis** icon next to the **Failure Groups** option in the network tree panel.

Step 3 Click **Add Failure Group**.

A failure group gets created.

Step 4 Add fibers and sites to the group.

a) Choose the **Fibers** and **Sites** to fail by selecting the check boxes next to them.

b) Click the **Ellipsis** icon next to the chosen **Fibers** and **Sites**, and click **Fail**.

Step 5 Click the **Ellipsis** icon next to the network name and click **Add Failure Set**.

Step 6 Select the failure group to which the failed fibers or sites must be added.

The system creates the failure set under the failure group and adds the failed fibers or sites to it.

Note
If a network has dark fibers that do not carry traffic, the system does not consider those paths for restoration.

Failure report

This table describes the various parameters of the failure report.

Table 24: Failure report

Report	Description
Failed Fibers	Shows the failed fibers in the network.
Failed Sites	Shows the failed sites in the network.
Impacted Fibers	Shows the fibers that are impacted due to the site failure.
Total Channels	Shows the total number of media channels in the network.
Failed Channels	Shows the total number of media channels that are passing through the failed ducts or sites in the network.
Restored Channels	Shows the total number of media channels that are restored from the failure state.
Unrestored Channels	Shows the total number of media channels that are not restored from the failure state due to the unavailability of alternate paths.
Fiber HotZones	Shows the fibers that have utilized greater than or equal to 80% of the bandwidth. You can modify the threshold by updating the value in the Feature.Properties file. • **Fiber**: Shows the fibers that are listed under fiber hot zones. • **Utilization Before (%)**: Shows the percentage of bandwidth that is utilized before the channel restoration. • **Utilization After (%)**: Shows the percentage of bandwidth that is utilized after the channel restoration.
Total Services	Shows the total number of services going through the fiber that was failed.
Failed Services	Shows the number of failed services going through the fiber that was failed.
Restored Services	Shows the number of restored services going through the fiber that was restored.
Unrestored Services	Shows the number of unrestored services going through the fiber that was restored.

Automatic suggestion for regeneration sites in Plan mode

Automatic suggestion for regeneration sites in plan mode is a Cisco ONP feature that

- analyzes optical channels for high and marginal risk of failure,
- automatically proposes feasible regeneration sites in planning mode, and
- allows users to incorporate these sites to ensure network optical feasibility.

This feature operates in Plan mode within Cisco ONP, leveraging a regeneration suggestion algorithm run by the Path Computation Element (PCE). It assesses network feasibility and presents suggested regeneration sites in the Feasibility Report for optically risky channels, streamlining the process of making the network optically feasible.

Table 25: Feature History

Feature Name	Release Information	Feature Description
Automatic Suggestion for Regeneration Sites	Cisco ONP Release 5.0	Cisco ONP displays feasibility report in the Plan mode. This report automatically suggests regeneration sites for the channels with high and marginal risk of failure. You can incorporate these regeneration sites in the optical network to make the channel optically feasible. This feature avoids multiple iterations required to manually create the regeneration sites and test the optical feasibility of large networks.

Supported scenarios for automatic regeneration site suggestion

Automatic regeneration site suggestion is supported for both SSON and non-SSON networks that have contentionless channels or waves between these site types:

- NCS2K (ROADM) sites
- 4K-1K-2K (TRAFFIC) sites

If channels already have forced regeneration, suggestions are shown at the section level.

How automatic regeneration site suggestion works

Summary

The automatic regeneration site suggestion process identifies channels at risk of optical failure and proposes suitable regeneration sites to enhance network feasibility.

The key components involved in the process are:

- Cisco ONP: Assesses network feasibility and displays the Feasibility Report in Plan mode.
- PCE (Path Computation Element): Runs the regeneration suggestion algorithm to determine optimal regeneration site locations.
- Feasibility Report: Presents the suggested regeneration sites and channel risk statuses for user review.

Workflow

The process involves these stages:

1. • Cisco ONP evaluates the optical feasibility of the network in Plan mode and identifies channels with high or marginal risk of failure (indicated as red and orange in the Optical Results page).
2. • Cisco ONP submits these channels to PCE, which executes a regeneration suggestion algorithm.
3. • The algorithm suggests regeneration sites for the identified channels.
4. • Upon entering Plan mode, Cisco ONP displays the recommended regeneration sites at the bottom of the map in the Feasibility Report.
5. • You can apply the suggested regeneration sites to improve optical feasibility or export the report for reference.

Result

The process enables rapid identification and application of regeneration sites to ensure optical feasibility for complex networks, minimizing manual intervention.

Apply the suggested regen sites

Use this procedure to apply the suggested regeneration sites to make the network optically feasible.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with admin or planner role.

Procedure

Step 1 Open an analyzed network.

Step 2 Enter the plan mode.

Step 3 Apply the suggested regen sites to the network.

a) Choose **Network** > **Open Feasibility Report**.

The **Feasibility Report** is displayed at the bottom of the map.

b) Select the channels that require regeneration and click **Apply**.

c) In the **Suggested Regen Applied** dialog box,click **Ok** .

Step 4 Exit the Plan mode.

a) Choose **Network** > **Exit Plan Mode**.

b) Click **Yes**.

The network gets automatically upgraded and saved as a new network. Channels with applied regens are unlocked. The Regen Sites property is automatically updated and becomes noneditable.

Step 5 Analyze the network.

On the **Optical Results** page, he SOL and EOL fields become green. Channels do not appear in the feasibility report again when you switch to plan mode.

Feasibility report

The **Feasibility Report** table encompasses several fields, which are crucial for assessing the optical feasibility of the network.

Table 26: Feasibility report

Field	Description
Channel Name	Displays the list of channels (trail and sections) that are not optically feasible.
Alarm	Displays the color of alarm (red, orange, or yellow)
Paths	Displays the actual path of the channel as hyperlink. If you click the link, the path is highlighted in the map.
Suggested Regens	Displays the intermediate sites that can be used as regen sites so that the channel becomes optically feasible.

The Suggested Regen field appears as NA in these situations:

- Channels display yellow alarms, meaning the loss is negligible.
- The loss is high and there are not enough available intermediate sites to compensate for the overall loss.
- Intermediate sites without added contentionless sides are not considered for regeneration sites.

Export the feasibility report

Use this procedure to save the regeneration site suggestions and channel feasibility results for external use or recordkeeping.

The Feasibility Report in Cisco ONP Plan mode includes regeneration site suggestions for channels at risk. You may need to export this information.

Procedure

Step 1 In the Plan mode, locate the Feasibility Report at the bottom of the map.

Step 2 Click **Export**.

The Feasibility Report, including suggested regeneration sites, is exported for reference or further analysis.

Line Rate Tuner mode

Line Rate Tuner mode is a network planning feature that

- automates the calculation and selection of optimal optical sources for a network,
- reduces human errors by minimizing manual calculations, and
- streamlines the process of selecting the correct optical source from available resources.

Table 27: Feature History

Feature Name	Release Information	Feature Description
Automated Selection of Optimal Wavelength Bitrate: Flexible Modeling	Cisco ONP Release 5.2	You can now automate the calculation of optical sources for your networks using the new Line Rate Tuner Mode. This mode reduces human errors while finding the correct optical source for your network from a set of network resources.

Note Line Rate Tuner mode is available for NCS 2000 networks and NCS 1010 networks.

Optimize optical sources using Line Rate Tuner mode

Use this procedure to automate, simulate, and apply optimal optical source configurations to your network using the Line Rate Tuner mode in Cisco ONP.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network in Analyze mode.

Step 2 Choose **Network** > **Enter Line Rate Tuner Mode**.

You see a progress bar while the system switches to Line Rate Tuner mode.

The network opens in the Line Rate Tuner Mode.

Step 3 Run the line rate tuner analysis on a section of media channel to create custom optical source that you can add to the network. For steps, see the Create a custom optical source using tuner analysis, on page 66 task.

Step 4 Run the tuner analysis again for another new section of the media channel. For steps, see the Start a new tuner analysis, on page 68 task.

Step 5 Open the tuner results and add them to the network. For steps, see the Add the custom optical source to the network, on page 69 task.

Step 6 Exit the Line Rate Tuner mode.

a) Choose **Network** > **Exit Line Rate Tuner Mode**.

The **Exiting Tuner** dialog box appears.

b) Choose the appropriate action as required.

Button	Actions
Previous State	Returns your network to its previous state and applies the changes.
Upgrade	Switches your network to Upgrade mode and applies the changes.
Cancel	Cancels the operation.

The network exits the Line Rate Tuner mode.

The network is updated with optimized optical sources and demand channels. Cisco ONP exits tuner mode, when required.

Create a custom optical source using tuner analysis

Use this procedure in Cisco ONP to simulate and configure a new custom optical source. You can also modify parameters for media channel sections and save the results.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network in Line Rate Tuner mode.

Step 2 Click **Open Tuner Input**.

Step 3 In the network tree, select the section of the media channel to which you want to add the tuner input.

The section you selected appears with default parameter values in **Select Input Parameters**.

Step 4 Modify the Input Parameters as required.

See Input parameters for creating custom optical sources, on page 67.

Step 5 (Optional) Click **Reset** to reset the modified parameters to default values.

Step 6 Click **Add**.

A confirmation message appears indicating the tuner input was added successfully. You can review the details of the modified section.

Table 28: Select section parameters

Section Parameters	Description
Section Label	Name of the modified section.
Src Site	Site name for the optical channel source.

Section Parameters	Description
Dst Site	Site name for the optical channel destination.
Path	Fiber paths in the section.
Actions	Icons to edit or delete the modified section.

Step 7 (Optional) Edit or delete the modified section.

To edit:

a. Click the pencil icon.

b. Modify the input parameters as required.

c. Click **Update** to save the changes.

To delete:

a. Click the trash bin icon.

b. Click **Yes** to confirm.

Step 8 Click **Run Tuner** to start the simulation.

The progress bar appears and notifies you when the analysis completes.

Step 9 In **Tuner Result**, click **Export** to export the results as an Excel file for reference.

The custom optical source is created, tuner analysis is completed, and results are available for export and review.

What to do next

Add the custom optical source to the network.

Input parameters for creating custom optical sources

This table describes the input parameters that are required for creating custom optical sources.

Table 29: Input parameters for creating custom optical sources

Property	Platform	Description
Optical Family	NCS 2000 SSON NCS 1010	Choose the optical family. Cisco ONP shows options based on the network analysis and the optical family you select. Based on the optical family you select, the remaining parameters provide related options.
Optical Source	NCS 2000 SSON NCS 1010	Choose the optical source. Cisco ONP shows a list of optical sources you have already imported.

Property	Platform	Description
Data Rate	NCS 2000 SSON NCS 1010	Choose the data rate. Based on the optical family you select, Cisco ONP displays options to choose the channel capacity for the new section.
Bit Rate Range	NCS 2000 SSON NCS 1010	Choose the bit data rate. Based on the optical family you select, Cisco ONP shows options to choose the speed of data transfer in the new section.
Baud Rate Range	NCS 2000 SSON NCS 1010	Choose the baud rate range. Based on the optical family you select, Cisco ONP shows options to set the minimum signal width for each new channel.
FEC Type	NCS 2000 SSON NCS 1010	Choose the FEC type. Based on the optical family you select, Cisco ONP shows a list of supported FEC types.
Result Type	NCS 2000 SSON NCS 1010	Choose the Result Type. The available options are: • Best OSNR: shows results based on maximum OSNR margin. • Maximum Capacity: shows results based on the maximum capacity of the channels.
Optical Feasibility	NCS 2000 SSON NCS 1010	Choose optical feasibility for the new section. The available options are: • Green • Yellow • Orange • Red Each color represents the severity of alarms that may arise in the new section.
Sigma Number	NCS 2000 SSON NCS 1010	Choose the sigma number from 0 to 3. The sigma number is used in the calculation of the OSNR margin.
Number of results	NCS 2000 SSON NCS 1010	Choose the number of optical source results required for the new section The default value is 5, but you can select up to 15 results.

Start a new tuner analysis

Use these steps to start a fresh tuner analysis for the new section.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network in Line Rate Tuner mode.

Step 2 Click **Start New**.

The **Start New Tuner** dialog box appears and asks for confirmation.

Step 3 (Optional) Check the **Retain the tuner inputs** check box to keep the previous input values.

Step 4 Click **Yes**.

The message *Started new tuner successfully* appears.

Step 5 Modify the input parameters of the new section as needed, and click **Update** to save the parameters.

Step 6 Click **Run Tuner** to trigger the simulation.

The *Running Tuner Analysis* progress bar appears. The message, *Tuner analysis completed successfully* appears.

What to do next

The analysis for the new section is completed successfully using the updated input parameters. The results are available for review.

What to do next

Add the tuner results to the network.

Add the custom optical source to the network

Use this procedure to add custom demand channels and their associated optical sources generated from a Tuner Result.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network in Line Rate Tuner mode.

Step 2 Click **Open Tuner Result**.

The **Tuner Result** pane appears and displays the new sections and their demand channels.

Step 3 To add the optical source to the network, perform one of these actions:

To add manually:

Note
For some custom optical source results, the download icon becomes disabled. In such cases, go to **Manage** > **Optical Source** to download the optical result as explained in Download Optical Sources.

a. Click the **Download Optical Source** icon.

The *Downloading Optical Source* message appears. The Excel sheet contains data in Cisco ONP format.

b. Open the Excel sheet to review the data.

c. Import optical sources as explained in Import Optical Sources.

To add automatically:

a. Click the **Add Demand to Network** icon.

The **No. of demands** pop-up appears asking for the number of demands to add to the network.

b. Enter the demands number and click **Add**.

When the *Demand is added successfully* message appears, confirm that the new demand appears in the network tree.

Cisco ONP automatically adds the required optical source to the server.

The custom optical source and its demand are successfully added to the network. You can review the new demand and associated optical source in the network tree.

Import optical sources

Use this procedure to import an optical source

An Optical source wavelength is a way to connect a DWDM interface from any external element to a third-party optical network.

.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Create an optical source from an Excel template, on page 71

Procedure

Step 1 Choose **Manage** > **Optical Source**.

The **Manage Optical Source** dialog box appears.

The default optical sources available in the server include:

- OpticalSources_NCS2K_400GXP-LC_NCS4K-4H-OPW-QC2
- NCS1004_OpticalSources_V3
- ONS-CFP2D-400G-C-OpticalSources-V2.mxd
- QDD-400G-ZRP-S-OpticalSources-V2.mxd

Note

By default, all existing optical source files are loaded in the server.

Step 2 Import the optical source as a .mxd file.

a) Click **Add**.
b) Choose **Optical Source (.mxd)**

The **Import Optical Source (.mxd)** dialog box appears.

c) Click **Choose File** and browse to the .mxd file stored on your local system, and click **Import**.

After the optical source is imported, a list of related interfaces appears.

Step 3 Import the optical source from an Excel spreadsheet.

a) Click **Add**.
b) Choose **Optical Source (.xlsx)**

The **Import Optical Source (.xlsx)** dialog box appears.

c) Click **Choose File** and browse to the .xls file (optical source template) saved in your local system, and click **Import**.
d) Choose the **Release Version** of the NSC2K network.
e) Select the interface.

If you want all the interfaces, then click **Select All**.

f) Click **Create**.

After the optical source is imported, a list of related interfaces appears.

Step 4 Select the check box next to each interface you want to import.

After you import the optical sources and their interfaces, they appear in the Type drop-down list in the properties window of the network tree. Use these interfaces when you create waves in your network design.

What to do next

Go to Download optical sources, on page 75 to download the optical source for Cisco ONC.

Create an optical source from an Excel template

Use this procedure to create an optical source with an optical source template downloaded from Cisco ONP.

Table 30: Feature History

Feature Name	Release Information	Feature Description
Create Optical Source using Excel Sheet	Cisco ONP Release 5.0	You can create an optical source by defining the details of interfaces and the corresponding optical classes in an Excel template. This feature provides you with the flexibility to create any required optical source based on existing or new traffic resources.

Procedure

Step 1 Choose **Export** > **Optical Source Template**.

The downloaded Excel template includes two sheets:

- Interface: Contains details specific to each interface.
- Class: Contains information that can be mapped to multiple interfaces.

For the list of the required Optical Parameters, refer to Optical Parameters Available in the Excel Sheet for Optical Sources Creation.

The downloaded sheet contains data for one existing interface as a reference. You can edit or delete this data from the sheet.

Step 2 Enter all required parameters from the specification sheet.

There are some hidden columns that are not mandatory for Optical Source Creation. However, you can expand those columns and enter the details.

Step 3 Fill in all information, then save the Excel file using the optical source name.

The optical source Excel file is ready for import.

What to do next

Go to Import Optical Sources to import the optical source from an Excel file.

Optical Parameters Available in the Excel Sheet for Optical Sources Creation

The following parameters are available in the Excel sheet template for creating optical sources.

Table 31: Optical Parameters for Creating Optical Sources

Parameters	Description
Interface Name	The name of the interface. It should be unique for all the interfaces that are added in the file.
Vendor Name	The name of the vendor.
Vendor IDs	The vendor IDs.
Platform	The name of the platform.
Pluggable PID	The PID of the pluggable.
Name	It is the combination of the Data Rate and Open Config Code. For example: R400G#5000.

Parameters	Description
FEC	The forward error correction type for the given interface.
Data Rate	The line rate for the given interface.
Mod Format	The modulation format to be used for the interface.
Baud rate	The baud rate for the given interface.
BPS	The speed of data transfer (bits per symbol) for the given interface.
Open Config Code	The unique code assigned to the interface as specified by the Open Industry Standard for optical networks. For example: 5000.
Sub Mode	Enter the sub-mode if there are any associated with the interface. If not, leave it blank.
Trunk Rate	The trunk rate of the transponder.
Nominal Bit Rate	The bit Rate for the interface
BER Target	The post FEC BER Target for the interface
Power Min and Power Max	The minimum and maximum Tx Power for the interface.
Ovl	The overload power limit for the interface
OL Power	The Rx power sensitivity for the interface.
OL OSNR	The Rx OSNR sensitivity for the interface.
PL Power	The extended Rx power sensitivity.
PL OSNR	The Rx OSNR sensitivity at the extended Rx power sensitivity.
Variance	The variance in power in the Txp.
Opt Class	The optical class to which the interface will be mapped.
InBand OSNR	The Tx OSNR contribution due to laser instability inside the Txp.
Out of Band OSNR	The Tx OSNR contribution due to Add/Drop at 80% and 100% channel spectral density.
ONC Release	The Software release of Cisco ONC from which this interface will be supported.
Interface Type	It is the same as the name of the interface.

Parameters	Description
Min and Max Frequency	The operating frequency range of the interface.

Table 32: Optical Class Parameters

Class Parameters	Description
Interface Type	The name of the interface. Enter the same name of the interface, if you are doing one to one mapping with the interface.
Opt Class	You can create the optical classes for different optical sources. Certain optical parameters are added in the optical class. Based on interface properties, multiple interfaces can be mapped to the same class. Enter a unique alphanumeric name for the Optical class. While creating new optical classes, we recommend using the name starting with "X" to avoid overlapping in the existing classes.
Bit Rate	The bit rate for the given interface.
Baud Rate	The baud rate for the given interface.
ModGB Coeff	The modulation guard band coefficient.
Modulation OSNR Penalty	The modulation OSNR penalty.
GBf	The filtering GuardBand at different OSNR penalties.
Mux/Demux Filtering Penalty	Enter the mux/demux filtering penalty value, if there are any.
Chromatic Dispersion	The chromatic dispersion limit at different OSNR penalties.

Find Optical Sources Faster

Use these steps to find the optical sources faster.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Choose **Manage** > **Optical Source**.

The **Manage Optical Source** dialog box appears.

Note
By default, all existing optical source files are loaded in the server.

Step 2 To find the customized optical sources:

a. Check **Show only line rate tuner generated sources**.

The dialog box displays only the customized optical sources.

Step 3 To filter the required optical source:

a. Enter the optical source name in the Search box.

The dialog box displays the optical sources matching the typed keyword.

Download optical sources

Use this procedure to download an optical source.

Procedure

Step 1 Choose **Manage** > **Optical Source**.

The **Manage Optical Source** dialog box appears.

Step 2 Select one or more optical sources to download.

Step 3 Click **Download** and select one of these options to download the optical sources.

- .mxd: Downloads the selected optical sources as an .mxd file.
- .xlsx: Downloads only the optical sources that were created and added using the Excel template as an .xlsx file. Optical sources added directly as an .mxd file are not included in the .xlsx file.
- .xml: Downloads the optical source data as a .xml file. This contains:
  - Application codes for circuit provisioning in Cisco ONC,
  - Optical parameters of the interfaces, and
  - Product IDs (PIDs) and Vendor ID information.

You can load the .xml file into Cisco ONC to create circuits with these interfaces. See Alien Import.

After the import is successful, the optical source will be present under the **Application Code** tab in the **Service Manager** screen of the Cisco ONC application. See Service Manager.

The selected optical source data is downloaded in the chosen format.

Delete optical sources

Use this procedure to permanently remove unwanted optical sources from Cisco ONP.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Choose **Manage** > **Optical Source**.

The **Manage Optical Source** dialog box appears.

Step 2 Choose one or more optical sources to delete.

Step 3 Click **Delete**.

Cisco ONP permanently removes the selected optical sources or aliens.

Layout template for NCS 2000 network

A layout template is a reusable configuration model that

- enables the design of consistent layout configurations for the NCS 2000 network,
- applies fixed layout rules to multiple nodes, and
- saves time, reduces effort, and minimizes configuration errors.

Layout templates are especially useful when deploying NCS 2000 networks that require identical configuration across several nodes. Defining the layout once allows network engineers to ensure uniformity and compliance with network design standards during deployment.

Note Layout templates do not support configurations where there is a mix of TXP and Real card labels for transponders.

Export layout template

Table 33: Feature History

Feature Name	Release Information	Feature Description
Layout Template Enhancement	Cisco ONP Release 4.1	This feature allows you to export the layout template for an individual site or for all the sites. The layout template export is possible only if the network is analyzed in Cisco ONP Release 4.1. The export of layout template is supported on 4K, 4K-1K-2K, and 2K nodes.

Use this procedure to export the layout template for a specific site or for all sites.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network to export the network layout template.

Step 2 Choose **Network** > **Analyze**.

Note
Network must be successfully analyzed to proceed further.

Step 3 Click the **Layout** tab.

Step 4 Click the name of a site in the left side panel to download the layout template.

Step 5 Hover the mouse pointer over the **Export** icon and click **Layout Template** for current site or all Sites.

The **Export Layout Template** dialog box appears.

Step 6 Click **Export**.

Note

- Export the layout template only in the analyze mode. If you export layout templates in upgrade or release upgrade modes, the results may be inaccurate.
- You can export the layout template for nodes of type 4000 and 1000. However, the exported layout template includes only the layout for NCS 2000 nodes. To export the layout template for the node types NCS4K-1K-2K and NCS1K-2K, complete these steps:
  - Right-click the site name in the **Layout** panel, and click **Export**.
  - Click **OK** to export the layout template in text format.

- The layout template for NCS 2000 is provided in XML format.

Import layout template for NCS 2000 network into Cisco ONP database

Use this procedure to import a template for the NCS 2000 network into the Cisco ONP database.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Choose **Manage** > **Layout Templates**.

Step 2 Click **Add** in the **Manage Layout Template** dialog box.

Step 3 Click **Choose Files** and select a template from your local system.

Step 4 Click **Import**.

The template is imported to the Cisco ONP database.

Download a layout template for NCS 2000 network

Use this procedure to download a template from the Cisco ONP database:

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Choose **Manage** > **Layout Templates**.

Step 2 Choose the template that you want to download and click **Download**.

You can also choose multiple templates.

The selected layout template is saved to your local system.

Delete Layout Template for NCS 2000 Network

Use this procedure to delete a NCS 2000 Network template from the Cisco ONP database:

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Choose **Manage** > **Layout Templates**.

Step 2 Choose the template that you want to download, and click **Delete** to delete the template from the Cisco ONP database.

You can also choose multiple templates.

Apply NCS 2000 layout template into a site

Use this procedure to configure the layout of the NCS 2000 section for a site. Although the site can be NCS4K-2K, NCS1K-2K-4K, or NCS1K-2K, you should apply the template only to the NCS 2000 section.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open a network that contains the site where you want to apply the layout template.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, expand **Sites** and choose the site.

Step 4 In the **Layout Template** drop-down list, choose the required template.

Note
Ensure that the other properties under the **Layout** section, such as **Chassis Type**, **Power Supply**, **Controller Card**, **Node Protection**, **Redundant Controller Card**, and **MF-Unit** are set to *Auto*. Otherwise, the **Layout Template** drop-down list remains disabled.

The NCS 2000 layout template is applied to the NCS 2000 section of the selected site.

Import layout templates into NCS1K-2K and NCS4K-1K-2K sites

Use this procedure to add exported layout templates for NCS 1000 and NCS 4000 into 4K-2K and 4K-1K-2K sites.

Note If you modify an exported template, rename it before reapplying in upgrade mode to ensure changes are visible in the layout view.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network that has the site to which you want to apply the layout template.
Step 2 Click the **Layout** tab.
Step 3 Click **Edit** to enable the edit mode.
Step 4 Right-click the site where you want to import the layout template, then click **Import**.
Step 5 Choose the layout template that you want to import into the site and click **OK**.

Cisco ONP applies the chosen layout template to the specified site.

Layout visualization

A network layout visualization is a graphical feature that

- displays the arrangement of racks, chassis, and cards in a network designed using Cisco ONP,
- allows users to interact with and highlight specific hardware components, and
- enables zooming in and out for detailed or broad views.

Table 34: Feature History

Feature Name	Release Information	Feature Description
Layout Visualization and Edit	Cisco ONP Release 4.1	This feature allows you to view and adjust the position of NCS 4016 and NCS 1004 chassis and cards in the layout. This feature is supported only on 4K-1K-2K and 1K-2K aggregated nodes and not supported on stand-alone NCS 2000 node.

When you click a particular rack, chassis, or card in the**Layout** panel, the corresponding hardware component is highlighted in the layout image. This feature enhances the ability to understand and manage complex network physical topologies.

View network layout

Use this procedure to view the network layout.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network for which you want to view the layout.

Step 2 Choose **Network** > **Analyze**.

Note
The network must be successfully analyzed to proceed further.

Step 3 Click the **Layout** tab.

Step 4 In the **Layout** panel, click the site.

Note
The OLA sites are highlighted in green, ROADM sites are highlighted in blue, and Aggregated nodes are highlighted in purple.

Passthrough sites are not listed in the layout.

Aggregated nodes are not available for the NCS 1010 network.

Step 5 Click any rack under a site to view the rack view of the network under the **Layout** tab.

Step 6 Click any chassis under a rack to view the chassis view of the network.

Note
When you click the Aggregated node under **Layout** panel, NCS 1004, NCS 2000, and NCS 4000 series chassis are placed in separate racks.

You can click the screenshot icon to capture images of all rack layouts of the selected site.

Edit the layout manually

Use this procedure to position the NCS 4016 and NCS 1004 chassis and cards by manually adjusting the layout.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where 4K-1K-2K and 1K-2K aggregated nodes are added.

This feature is not supported on NCS 2000 node.

Step 2 Choose **Network** > **Analyze**.

Note
To proceed, make sure the network has been successfully analyzed.

Step 3 Click the **Layout** tab.

Step 4 Click **Edit** to enter the Edit mode.

Step 5 Select a chassis (4K-1K-2K and 1K-2K) or card from a rack.

Step 6 Drag and drop the selected chassis or card from a particular rack to an empty slot in the same chassis, a different chassis, or a different rack.

Step 7 Add pluggables to a card.

Note
Make sure to add the required cards.

a) Select the Rack.

The cards available in the rack are displayed.

b) Select the card to which you want to add pluggables.

The ports available in the card are displayed.

c) Select the pluggable for each port.

These pluggables are displayed:

Card	Supported Pluggables
NCS4K-4H-OPW-QC2	• ONS-QSFP8-LR4= • QSFP-110G-SR4-S= • ONS-QSFP-4*10-MLR=
NCS4K-4H-OPW-LO	• ONS-QSFP8-LR4= • QSFP-100G-SR4-S= • ONS-QSFP-4*10-MLR=
NCS1K4-1.2T-K9=	• ONS-QSFP8-LR4= • QSFP-100G-SR4= • ONS-QSFP28-LR4-S= • QSFP-100G-CWDM4-S= • QSFP-100G-SM-SR=

d) Click the check mark.

Step 8 Click **Done**.

Your changes are saved in the layout. You can view any new chassis or card that has been added to the layout in the **BOM** tab.

After you manually edit the layout, you can view the regenerated BOM.

Manually edit the layout for NCS 1010 networks

Use this procedure to adjust the position of NCS 1010 chassis and patch panels within network layouts.

Table 35: Feature History

Feature Name	Release Information	Feature Description
Layout Edit Support for NCS 1010 Networks	Cisco ONP Release 5.0	Cisco has introduced NCS 1010 as a new optical line system to meet the growing optical network needs. Using Cisco ONP you can visualize and edit layouts for NCS 1010 chassis and patch panels.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open an NCS 1010 network.

Note
You can also create a new NCS 1010 network. For more information, see Manually design a network using Cisco ONP, on page 26.

Step 2 Choose **Network** > **Analyze**.

Note
Ensure the network is successfully analyzed before proceeding.

Step 3 Click the **Layout** tab.

Step 4 Click **Edit** to enter the Edit mode.

Step 5 Select a site.

Step 6 Select a unit (NCS 1010 chassis or patch panel) :

Choose one of these methods:

- Expand the rack under a site in the left panel and select a unit.
- Or, in the Rack view, click a chassis or patch panel.

Step 7 Adjust the position of the selected units using one of these methods:

Note
If necessary, click the **+New Rack** button to create more racks.

- In the Rack view, drag and drop the selected chassis or panel from one rack to the empty slot in the same or different rack.
- Swap units in the Rack view:
  - Click a transponder or NCS1K14-CCMD-16 card; the **Swap with** button appears.

- Click **Swap with** and select a slot to swap from the drop-down list.

Note
The **Swap with** button appears only for NCS 1014 and NCS 1020 chassis.

- Cut and Paste unit in the left panel:
  - Click **Cut** above the Rack view.
  - Right-click on an empty slot in the same or different rack and click **Paste**.

    Cisco ONP disables the Paste option if you try to paste the unit in the prohibited slots.

    Cisco ONP disables the Cut option if an existing cut unit is not pasted.
- Cut and Paste unit in the Rack view:
  - Right-click the selected chassis or panel and click **Cut**.
  - Right-click on an empty slot in the same or different rack and click **Paste**.

    Cisco ONP disables the Paste option if you try to paste the unit in the prohibited slots.

    Cisco ONP disables the Cut option if an existing cut unit is not pasted.
- Move the unit in the left panel:
  - Go to **Move to** > **Site-X** > **Rack-X** above the Rack view to move the chassis to the same or different rack. Or go to **Move to** > **Site-X** > **+ New rack** above the Rack view to move the chassis to a new rack.
- Move the unit in the Rack view:
  - Right-click the selected chassis or panel and go to **Move to** > **Site-X** > **Rack-X** to move the chassis to the same or different rack. Or go to **Move to** > **Site-X** > **+ New rack** to move the chassis to a new rack.

Note
The **Move to** option moves the unit automatically to the immediate empty slot. The **Cut** and **Paste** option moves the unit to the selected empty slot.

Step 8 Click **Done** to save the changes in the Layout.

A warning message appears when empty racks are present in the layout.

Step 9 Click **OK** to remove the empty racks.

View layout details using tooltip

Use this procedure when you need to quickly access hardware and port information in the Rack display.

Procedure

Step 1 Hover over a rack, chassis, or card in the Rack display to view summary details in a tooltip.

Step 2 Click **See More Details** in the tooltip to view information such as port number, type, pluggables, and rates.

Cisco ONP displays the detailed information for the selected rack, chassis, or card.

View internal node connections in the NCS 1010 network

Use this procedure to visualize the functional and detailed internal node connections for each site in an analyzed NCS 1010 network. These connections include port labeling and precise component interconnections.

Table 36: Feature History

Feature Name	Release Information	Feature Description
View Internal Node Connections of NCS 1010 Network	Cisco ONP Release 5.0	The Node diagram tab displays a functional view that includes precise connections and port labeling of each component such as OLT or ILA, NCS1K-BRK-8/16/24, AAWG-32-O, and AAWG-32-E, for each site in an analyzed NCS 1010 network.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open an NCS 1010 network.

Step 2 Choose **Network** > **Analyze**.

Note
Network must be successfully analyzed to proceed further.

Step 3 Click the **Layout** > **Node Diagram** tabs.

Step 4 For each site, click its name in the left panel and select a side to display the functional view.

The functional view displays both physical and logical connections, including:

- degree interconnections between NCS1010 (OLT or ILA) and NCS1K-BRK-8
- add/drop connections between NCS1010 and colorless add/drop units (NCS1K-BRK-8, NCS1K-BRK-16, or NCS1K-BRK-24), and colored add/drop units (AAWG-32-O or AAWG-32-E)

Step 5 To view port names and cable ID details, hover over any cable.

The functional view for each site displays all internal node connections, including port labeling, degree interconnections, and add/drop relationships between NCS 1010 components and related units. You can review port and cable details for precise analysis.

Copy configurations from one node to another

Use this procedure to copy the configurations of a specific node to a node at a different site.

You can copy the configuration only during a manual 4K-1K layout movement. It is not supported for NCS1010 layout movement.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network from which you want to copy the configuration.

Step 2 Choose **Network** > **Analyze**.

Note
Network must be successfully analyzed to proceed further.

Step 3 Click the **Layout** tab.

Step 4 Select the rack, chassis, or card of a particular site.

Step 5 Select the site that will receive the configurations from the **Copy To** drop-down list.

Step 6 Click **New Rack** to add a new rack. Cisco ONP copies the configuration to the new rack

Step 7 Click **Done** to save the changes in the layout.

Note
You can also cut, copy, and delete racks, chassis, and cards in the layout.

Export the IPC report

Use this procedure to export the connections of a current site or all sites to an Excel sheet.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network from which you want to export the connections of a current site or all sites to an Excel sheet.

Step 2 Choose **Network** > **Analyze**.

Note
The network must be successfully analyzed to proceed further.

Step 3 Click the **Layout** > **IPC** tabs.

You can view the patches that are listed in the left pane. Click each patch to view the details such as position, card, and port of the source and destination sites.

The patches that you click are highlighted in the rack.

Step 4 Hover over the **Export** icon, and click **Current site** or **All Sites** option.

The **Export IPC** dialog box appears.

Step 5 Click **Continue** to export the connections of the current site or all sites.

The cable-type and Cable ID are included in the report only for the NCS 1010 network.

Export port usage of an LNI network

Use this procedure to export the port usage details of an LNI network.

Table 37: Feature History

Feature Name	Release Information	Feature Description
Multi-Layer Connections Phase 1	Cisco ONP Release 4.1	This feature provides the connection trace of a service across various interfaces in a network. This feature allows you to export the following: • Consolidated port usage report based on network in addition to the internal port details which you can view by hovering the mouse pointer over the tooltip • Port usage report based on sites • Port usage report only for LNI imported networks

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the LNI network whose port usage you want to export.

Step 2 Choose **Network** > **Analyze**.

Note

To proceed, make sure the network has been successfully analyzed.

Step 3 Click the **Layout** tab.

Step 4 Select the site for which you want to export port usage.

Step 5 Hover the mouse over the **Export** icon and select **Port Usage** for either **Current site** or **All Sites**.

The **Export Port** dialog box appears.

Step 6 Click **Continue**.

Cisco ONP exports the port usage details in Excel format.



Note

- If you modify any services in the NCS 4000 node after upgrading the LNI network, the changes in the port usage details will not update.
- The demand labels shown for the trunk ports of the NCS4K-DWDM line card in the port mapping report are not logically related to the NCS 4000 trunk ports. They are related to NCS 1004 client ports.

Define multilayer connections for an SSON network

Use this procedure to define the Multilayer Connections (MLC) such as cards and pluggables for 4K-1K-2K and 1K-2K aggregated nodes in an SSON network.

Table 38: Feature History

Feature Name	Release Information	Feature Description
NCS4K-1K-2K Multilayer Connection Trace	Cisco ONP Release 4.2	You can define Multilayer Connections (MLC) such as cards and pluggables for NCS 4K-1K-2K and NCS 1K-2K aggregated nodes in an SSON network. This new tab in the **Layout** page helps to view end-to-end MLC trace for OTN service starting from **NCS4K IN** until **NCS2K** Add/Drop for LNI network. Also, it helps to define new traces for the newly added service and maintain the network design and deployment.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network where you want to define multilayer connections.

Step 2 Define the MLC:

a) Click the **Layout** tab.

b) Click the **MLC** tab.

Alternatively, you can navigate to the **MLC** page by clicking the **Ellipsis** icon available in the right side of the service name in the network tree and clicking **View in MLC**

You can view the service properties in a table. See MLC details, on page 90.

c) Click the service name to switch to the layout view.

You will view the layout and the service details in the right pane.

d) Select the rack, shelf, card, and ports from the drop-down lists for NCS4K In, NCS4K Out, NCS 1K In, and NCS 1K out, for both **Source** and **Destination** sites.

The NCS 2000 chassis details appear automatically.

Note
For an LNI imported network, all details appear automatically. If you add a new service, you can update its details.

e) Click the check icon to save your changes.

Click the refresh icon to remove changes you made after saving.

The updated details are included in the BOM.

Step 3 To export the MLC details, perform these steps:

a) Click the table icon to switch to the table view.

b) Choose **Export** > **MLC Traces**to export all the details available in the MLC table.

c) Choose **Export** > **LMP/TTI Connections** to export the details of Link Management Protocol (LMP) connections, which are between NCS 1004 and NCS 2000 cards, and Trail Trace Identifier (TTI) connections, which are between NCS 4000 and NCS 1004 cards.

All these connections are included in the BOM.

Step 4 To filter the services displayed in the left pane, click the Filter icon and choose one of these options:

- Source Site
- Destination Site
- Type of the traffic
- Trace Origin
  - LNI: imported through Import Live Network option
  - User Created: created through Cisco ONP UI
- Trace Status

- Completed: User has defined all MLC details,
- Partial: User has defined only partial MLC details, and
- Empty: User has not defined any MLC details.

Step 5 Click the three vertical dots and choose the option you need.

- **Enable Multi Select**: You can select up to the card level for different OTN.
- **Expand All**: Expands the service tree.
- **Collapse All**: Collapses the expanded service tree.
- **Show Trace Status**: Shows the trace status icon next to the service name.

Step 6 Click the three horizontal dots next to the service trace and choose the option you need.

- **Delete Trace**: Deletes the respective trace.
- **Locate in Map**: Shows the service in the map view.

Note
You can enable the same port number on the primary and secondary **NCS4K IN** nodes for Client 1+1 and other protection scheme.

MLC details

This section describes the various fields available in the MLC tab in the Layout view of a network.

The MLC tab includes these fields.

Table 39: MLC details

Properties	Description
Name	Name of the service
Group Name	Name of the group to which the service belongs
Type	Traffic type
Src Site	Source site
Src NCS4K In	Details of the rack, slot, card, port in the input side of the NCS 4000 chassis in the source site
Src NCS4K Out	Details of the rack, slot, card, port in the output side of the NCS 4000 chassis in the source site
Src NCS1K In	Details of the rack, slot, card, port in the output side of the NCS 1004 chassis in the source site

Properties	Description
Src NCS1K Out	Details of the rack, slot, card, port in the output side of the NCS 1004 chassis in the source site
Src NCS2K AddDrop	Add/Drop multiplexer and demultiplexer connected to the NCS 2000 chassis in the source site
Src NCS2K MPO	Media channel between the source and destination sites
Dst NCS4K In	Details of the rack, slot, card, port in the input side of the NCS 4000 chassis in the destination site
Dst NCS4K Out	Details of the rack, slot, card, port in the output side of the NCS 4000 chassis in the destination site
Dst NCS1K In	Details of the rack, slot, card, port in the input side of the NCS 1004 chassis in the destination site
Dst NCS1K Out	Details of the rack, slot, card, port in the output side of the NCS 1004 chassis in the destination site
Dst NCS2K AddDrop	Add/drop multiplexer and demultiplexer that is connected to the NCS 2000 chassis in the destination site
Dst NCS2K MPO	MPO cable connecting the NCS 2000 chassis in the destination site
Media Channel	Media channel between the source and destination sites
Notes	Additional notes, if applicable
Trace Origin	Indicates whether the service connections are user-created or imported through LNI.

Add new pluggables, alarm cables and 100G client bandwidth licenses to BoM

Use this procedure to add new pluggables, alarm cables, and 100G client bandwidth licenses to an existing BoM for the NCS 1004 and NCS 4000 platforms.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network you want to update.

Step 2 Analyze the network by choosing **Network** > **Analyze**.

Note
Ensure the network is successfully analyzed before proceeding.

Step 3 Click the **BOM** tab.

Step 4 Start adding new items:

a) Click **Add**.

The **New** dialog box opens.

Step 5 Specify the details:

a) Enter the Cisco part number of the pluggable, alarm cable, or 100G bandwidth license in the **Cisco Part Number** field.

b) Click **Add** to confirm the additions.

The new pluggables, alarm cables, or 100G bandwidth licenses are now listed in the BoM.

Spectrum utilization and path finder capabilities

Spectrum utilization and path finder are network visualization and management features that

- streamline the identification of available and used optical spectrum across network sites and fibers,
- enable interactive path selection and custom route planning, and
- provide tools for both comprehensive and minimal network mapping.

Table 40: Feature History

Feature Name	Release Information	Feature Description
Spectrum Utilization and Path Finder	Cisco ONP Release 24.3.1	The spectrum utilization and path finder introduces the **Minimal Map**, a streamlined network visualization tool focusing on essential data points like Sites and Fibers, enhancing usability and performance. **General Settings** now allow individual customization, including default map views and spectrum utilization colors. The **Path Finder/Selector** enables interactive path selection with options for manual and custom path finding for multiple routing options. The **Spectrum Utilization** provides a comprehensive visualization of used spectrum, while the **Spectrum Finder** helps locate and apply available spectrum across fibers, offering dual-view capabilities and multiple selection methods. These enhancements collectively improve network management, planning, and resource optimization.

The spectrum utilization and path finder feature introduces several key components to enhance network visualization, planning, and resource optimization:

- **Minimal map**: A visualization tool that focuses on sites and fibers, presenting a simplified network map for easier navigation and analysis.
- **Path finder/selector**: An interactive feature that lets users select network paths, supporting both manual and customized route finding to optimize network planning.
- **Spectrum utilization**: A visualization function that displays the usage status of optical spectrum, helping operators assess how spectrum resources are allocated.
- **Spectrum finder**: A utility that locates available optical spectrum on fibers and applies this information for provisioning circuits or media channels.

Find a custom path

Use this procedure to customize a fiber path on the map.

The **Custom Path Finder** is accessible exclusively through the minimal map. When you choose the custom path finder, the detailed map automatically switches to the minimal map.

Limitations

- This feature applies only to circuits (NCS1010/NCS1001), waves (NCS2000 NON-SSON), and media channels (NCS2000 SSON).

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 In the network tree, select the section of the media channel or circuit that you want to add a new path.

Step 2 Click the **Ellipses** icon and select **Custom Path Finder**.

The Custom Path Finder for the selected section opens.

Step 3 In the **Visualization** area, choose the required map view.

Map View	Result
Complete Map	Shows a complete network map of the selected path with other sites.
Sub Map	Shows only maps with chosen sites and fiber.

Step 4 In the **Options** area, choose the required parameters to calculate the Path Finder.

Option	Description
Minimum Hop	Routes using the minimum number of hop counts, regardless of the fiber length.
Minimum Length	Routes using the minimum fiber length, regardless of hop count.
Distinct Fiber Set	Provides a distinct set of fibers, ensuring that the same fiber is not used in other paths.
Number of Path Count	Calculates the number of paths according to the specified value.

Step 5 Click **Calculate**.

The system displays the list of paths calculated using the chosen parameters.

The calculated paths table contains the path parameters.

Table 41: Path Parameters

Parameter	Description
S.No	Displays the serial number.
Path	Shows the fiber path direction based on the selected **Options** parameters.
Funnel icon	Filters the path based on fiber labels.

Parameter	Description
Hops	Displays the hop count.
Total Length	Displays the total length of the fiber path.

Step 6 Click **Export** to export the chosen fiber path.

Step 7 In the **Selected Service and Path** area, check the service and path information and click **Apply Path** to apply the selected path.

Select path manually

The manual path selector is accessible exclusively through the minimal map. When you choose the manual path selection, the detailed map automatically switches to the minimal map.

Limitations

- Available in Design and Upgrade modes where circuits path can be updated.
- Applies to only Circuits (NCS1010/ NCS1001), Waves (NCS2000 NON-SSON), media channel (NCS2000 SSON).
- Applies to regen circuits/waves/media channel.
- Additional options are applicable for Section under Network Tree.

The procedure to select a path manually on the map is as follows:

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 In the network tree, select the section of the media channel that you want to add a new path.

Step 2 Click the **Ellipses** icon and select **Manual Path Selection**.

Step 3 In the Search field, enter the site or fiber to focus on it.

Step 4 Select the required the fibers to create a path.

The selected fibers appear on the **Operation Modes** pop-up pane under **Fibers** area.

Step 5 Click **Apply**.

View spectrum utilization and find available spectrum

Use this procedure to analyze the availability of network fiber spectrum and to apply the selected spectrum to a planned service.

The spectrum finder is accessible exclusively through the minimal map. When you choose the spectrum finder, the detailed map automatically switches to the minimal map.

Use the spectrum finder for the network in Design/Upgrade/Release Upgrade mode and view the spectrum utilization in Analyze mode.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 In the network tree, select the section of the media channel to view the spectrum utilization for each fiber.

Step 2 Click the **Ellipsis** icon and select **Spectrum Finder**.

The spectrum finder for the selected section opens.

Step 3 In the **Selected Fibers** area, click **+Add Fiber** and choose the required fibers from the drop-down list.

Step 4 In the **Visualization** area, choose the required map view.

Map View	Result
Complete Map	Shows a complete network map of the selected path with other sites.
Sub Map	Shows only the maps with chosen sites and fiber.

Step 5 In the **Spectrum Finder** area, modify the parameters as required.

Option	Description
Tabular View	Similar to Spectrum Utilization View.
Detailed View	Displays multiple fibers in a vertical orientation (Y-Axis) and the spectrum on the horizontal axis (X-Axis).
Spectrum Selection	Enable Spectrum Selection to modify the subsequent parameters.
Spacing	Enter the bandwidth (GHz) that is required for the network circuit.
Distinct Fiber Set	Provides Distinct set of fibers. This makes sure the same fiber is not repeated in other paths.
Number of Path Count	Calculates the number of paths based on the number provided.
Allow Overlap	Allows you to select overlapping wavelengths with selected fibers, when enabled.
Zoom	Zooms in and out of detailed view to granular view. Click **Default** reset zoom.

Option	Description
View Labels	Displays the labels. Enable to view the labels. You can also view the labels of existing occupied circuits.
Hovered Spectrum	Shows the start, end, and central wavelengths (THz) of the hovered spectrum when moving across the view.
Selected Spectrum	Shows the start, end, and central wavelengths (THz) of the selected spectrum when selecting across the view.
C-Band	Toggle to view the C-band spectrum usage.
L-Band	Toggle to view the L-band spectrum usage.
Fiber Utilization Graph	Displays the frequency utilzed in a fiber for each span in continuation in a vertical axis. Each square block is 3.125GHz. The frequency range starts from the left and continues towards the right, increasing 3.125GHz per block for both C- and L-band. For C-band, the first row has the starting frequency as 191.325 THz. A single row contains 53 blocks, totalling 0.165625 THz (53*3.125 GHz). The starting frequency of subsequent rows increment at 0.165625 GHz.

Color tone of the blocks varies in the fiber utilization graph.

Dark red	Indicates overlap of same spectrum across multiple waves.
Light red	Indicates less spectrum usage.

Step 6 In the **Apply Properties to Existing Service** area, check the service parameters and click **Apply Wavelength** and **Apply Path**.

Click **Apply Wavelength** and **Apply Path** to revert the changes.

Step 7 Select **Apply to Service**.

Designing networks with SVO card

A SVO card is a network hardware component that

- provides licenses based on functionality for features such as alarm correlation, performance monitoring, connection verification, and OTDR,
- serves as the primary card for all networks starting from Release 12.1.0, and
- can be deployed in both ROADM and TRAFFIC nodes as part of network designs.

Features of the SVO card:

The SVO card offers these key features and configuration options:

- The SVO card occupies two slots.
- It serves as the primary card for all networks starting from Release 12.1.0.
- For high availability, a node can be equipped with two SVO cards, but they cannot be in the same chassis.
- Two 10G SFP+ pluggables can be used to connect two SVO cards within a node.
- You can connect a Cisco ASR 920 switch to the SVO cards during network design.
- The SVO can function as either a card or a UCS based solution.

SVO licenses

- SVO cards require either a Base License or an SVO Full License which covers High Availability, Connection Verification, and Flex Spectrum. If the SVO Full License is not selected, the SVO Base License and High Availability are enabled by default.
- Types of SVO licenses include:
  - Cisco NMS: Features High Availability, Connection Verification, Flex Spectrum, and OTDR.
  - Third-Party NMS: Includes North Bound Interface (NBI), Alarm Correlation, Performance Monitoring, and Circuit Provisioning.

Chassis licensing:

- Every chassis added to the network must be licensed from Release 12.1.0 onwards. For networks upgraded to Cisco ONP Release 4.0 or higher, a new chassis license is required after analysis.
- Chassis licenses come in variants such as 1-chassis, 5-chassis, 10-chassis, 20-chassis, 50-chassis, and others, chosen based on cost optimization.
- A license is required for each chassis added to the network after the first chassis.
- Chassis License Flush Out allows you to replace existing chassis licenses with new ones. The current license remains active if the site is unlocked. However, you can use flush out only during network upgrade mode.
- You can continue using existing licenses with changes to the chassis unless you opt for the Chassis License Flush Out option.

SVO associations

A SVO association is a network configuration mechanism that

- enables a ROADM node equipped with an SVO card to manage OLA and DGE that may not have their own SVO card, and
- allows both manual and automatic association of secondary nodes to a primary node based on network topology and configuration, and

Associate OLA or DGE sites with SVO cards

Use this procedure to associate OLAsites with the SVO cards:

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 In the network tree panel, click the **Ellipsis** icon available next to any ROADM or Traffic site with SVO card.

Step 2 Click **Edit** SVO **Associations**.

Step 3 Select the OLA sites on the map to toggle the SVO connections. To confirm your selection, click **Done** at the top-right corner.

You can open widgets in the map and select the top section to view the association.

Note
You can also right-click any ROADM or Traffic site from the map and click **Edit SVO Associations**. For the DGE sites, the **Edit** SVO **Associations** option is not displayed.

During network analysis, the tool automatically associates the sites you do not associate with the SVO card.

Export device NETCONF XML file

Use this procedure to export the NETCONF XML files for all network sites or the entire network from the Cisco ONP GUI. This supports device configuration, automation, and network provisioning using the latest supported parameters.

The network must be in Analyze mode.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Table 42: Feature History

Feature Name	Release Information	Feature Description
New Parameters Included in NCS 1010 NETCONF XML file	Cisco ONP Release 24.3.1	The NETCONF XML file exported from the NCS 1010 network design now includes these new parameters to support seamless Day-0 provisioning and the setup of a new node added to the network. • Optical cross-connects • Gain range margin • Tone Rates • Raman tuning configurations • Slot reserve • Dmux WSS attenuation • Unused CCMD-16 ports shutdown • Span baseline-deviation • OTDR Thresholds • APC Span-loss correction threshold

Table 43: Feature History

Feature Name	Release Information	Feature Description
Export NETCONF File from NCS 1010 network	Cisco ONP Release 5.0	You can export the NETCONF XML files for all the NCS 1010 nodes, and upload them to the NCS 1010 nodes through the YANG suite. This enables automatic bring up of the NCS 1010 nodes using the NETCONF data.

Procedure

Step 1 In the network tree panel, click the three dots.

A pop-up list appears.

Step 2 In the list, click **Generate Device NetConf XML**.

The **Export** window appears displaying the network name.

Step 3 Click **Export**.

The message "Success. Device NetConf exported successfully" appears.

You can download a zip file that contains the NETCONF XML files for individual sites.

Note
You can choose the destination folder for saving the downloaded NETCONF XML files of individual sites.

This feature has limited scope in this release.

Note
For C+L Network, the partner band configurations are not included in the Cisco ONP-generated XML file. Manually configure the partner bands on the devices while bringing up the NCS 1010 C+L network.

From Release 24.3.1, these new parameters are available in the NETCONF file exported from the NCS 1010 network design:

- OSC TX Power
- Optical Cross Connect
- OTS tone rate
- OMS tone rate
- OTS tone pattern expected
- OTS tone detect OOB
- OTS tone pattern
- OTS tone frequency
- Raman pump configurations
- Line port attenuation
- Raman dual safety

These parameters are available only if you enable the **Enable Special Settings** check box under the Network properties.

- Raman turnup
- OTS ports shutdown
- OTDR autoscan
- Gain range margin
- OTDR excess attenuation threshold
- OTDR end of fiber threshold
- Slot reserve
- Dmux WSS attenuation
- Unused CCMD-16 ports shutdown
- Span baseline-deviation

- OTDR Thresholds
- APC Span-loss correction threshold

Upload NETCONF XML files on SVO web interface

Use this procedure to upload NETCONF XML files on the SVO web interface to configure and provision network nodes using exported configuration data.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 In the browser URL field, enter the IP address of the SVO line card.

The login page appears.

Step 2 Enter the username and password.

Step 3 Click **Login**.

Step 4 Click the hamburger icon and select **Node Configuration**.

Step 5 Click the **Node Setup** tab.

Step 6 Click **Select files** .

Step 7 Browse to the NETCONF XML files exported from the Cisco ONP GUI and upload them.

If the passive unit ID in the NETCONF file exceeds the range 1 to 126, SVO displays an error message. Validate the XML file and import it again.

Note
If the FEC mode provisioned in the 200G-CK-C line card does not match with the value in the NETCONF XML file, SVO displays an error message. Remove the provisioned FEC settings for this card and reimport the XML file.

Export device NETCONF XML Files for individual sites

Use this procedure to export device NETCONF XML files for individual sites from the Cisco ONP GUI.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Click the **Ellipsis** icon next to the site.

Step 2 In the list, click **Generate Device NetConf XML**.

Export window appears with network name.

Step 3 Click **Export**.

The message, "Success. Device NetConf exported successfully" appears.

You can download a zip file containing device NETCONF XML files of individual sites.

Upload NETCONF files to NCS 1010 device

Use this procedure to upload the NETCONF files that you downloaded from Cisco ONP, into the NCS 1010 device using a NETCONF client.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Log in to the YANG suite that has access to the NCS 1010 device.

Step 2 Connect to the NCS 1010 device.

Step 3 Copy the NETCONF XML file content that is downloaded from Cisco ONP, and paste it into the Protocol NETCONF Run RPC block.

Step 4 Append this commit code at the end of the NETCONF XML file content.

```
<rpc xmlns="urn:ietf:params:xml:ns:netconf:base:1.0" message-id="102">
<commit/>
</rpc>
```

Export Cisco Optical Site Manager NETCONF XML file

Use this procedure to export the Cisco Optical Site Manager NETCONF XML files for all the individual sites in a network, from the Cisco ONP GUI.

This feature has limited scope in this release.

Table 44: Feature History

Feature Name	Release Information	Feature Description
Export Cisco Optical Site Manager (COSM) NETCONF File from NCS 1010 network	Cisco ONP Release 5.2	The new **Generate COSM NetConf XML** option allows you to export from the Cisco Optical Network Planner, the Cisco Optical Site Manager NETCONF XML files for all the NCS 1010 nodes. You can then upload these files to the NCS 1010 nodes through the Cisco Optical Site Manager, enabling automatic bring-up of the NCS 1010 nodes.

The network must be in Analyze mode.

Procedure

Step 1 In the network tree panel, click the three dots.

A pop-up list appears.

Step 2 In the list, click **Generate COSM NetConf XML**.

Export window appears with network name.

Step 3 Click **Export**.

The message "Success. COSM NetConf exported successfully" appears.

Download the zip file that contains the COSM NETCONF XML files of individual sites.

Note
You can choose the destination folder to save the downloaded Cisco Optical Site Manager NETCONF XML files of individual sites.

Note

- For the ROADM OLT node, the device name is generated in the **Site Name-Side Name** format.
- For the OLA node, the device name is the same as the **Site Name**.

Ensure that you align the device name in COSM to match the specified format.

If the **Site Name** contains any special character, the XML file replaces the special character with its ASCII value in the COSM XML device name, providing a seamless experience with the COSM data backup workflow.

Note
L-Band Configuration is not certified in Cisco Optical Site Manager for Release 7.11.1. A future release will be considered for the L-Band configuration.

Upload Cisco Optical Site Manager NETCONF XML to NCS 1010 Device via Cisco Optical Site Manager Web Interface

Use this procedure to upload the Cisco Optical Site Manager NETCONF files that you downloaded from Cisco ONP into the NCS 1010 device using the Cisco Optical Site Manager web interface.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Log in to the Cisco Optical Site Manager UI that has access to the NCS 1010 device.

Step 2 Verify the device name, UID, and card layout position such as Rack ID and RU position with the CONP XML.

Make sure the device name and UID in Cisco Optical Site Manager match those in the CONP XML. If they do not match, delete the device and add it again using the name and UID from the CONP XML.

Step 3 Go to **Optical Setup**, browse the Cisco ONP-generated XML without optical cross connect (OXC) for that device, and load the file.

Step 4 Click the **Select files...** button.

The file explorer window appears.

a) Select the Cisco ONP-generated Cisco Optical Site Manager XML file from your local device.
b) Click **Open**, then click **Yes** in the confirmation message.
c) Click **Upload**.

The *COSM XML successfully uploaded* message appears.

Step 5 Go to **Optical Configuration** > **ANS parameter** and verify whether the respective configurations are complete.

Step 6 After you load the Cisco Optical Site Manager XML file without optical cross connect, load the file with optical cross connect.

Step 7 After adding the Cisco Optical Site Manager XML file with optical cross connect, go to the **Optical Cross Connections** tab and verify whether the respective configurations are complete.

Export NCS 1010 network planning data for Cisco Optical Network Controller

Use this procedure to export NCS 1010 network-planning data from Cisco ONP as a JSON file. You can upload the exported JSON file to Cisco Optical Network Controller to enable efficient bulk configuration and management of NCS 1010 devices.

Table 45: Feature History

Feature Name	Release Information	Feature Description
Export NCS 1010 Network Planning Data for Cisco Optical Network Controller (Cisco ONC)	Cisco ONP Release 5.0	You can export the planning data of NCS 1010 network, in the form of a JSON file. This JSON file can be uploaded into Cisco ONC to configure the managed devices in bulk.

You can export the planning data of NCS 1010 network only for releases 7.7.1 and 7.9.1.

Procedure

Step 1 In the network tree panel, click the **Ellipsis** icon next to the network name, and select **Generate CONC JSON** .

Step 2 In the **Export File** dialog box, enter the name of the JSON file, and click **Export** to download the JSON file to your local system.

Upload planning data into Cisco ONC

Use this procedure to upload the network planning data (JSON file) downloaded from Cisco ONP to efficiently transfer network design and configuration information into Cisco ONC.

Procedure


Step 1 Log in to Cisco ONC.

Step 2 Hover over the **Import** icon in the left panel and click **Planning Data Import**.

Step 3 Click **Import**.

Step 4 Browse and select the JSON file you downloaded from Cisco ONP.

You can use the planning data to configure the devices managed by Cisco ONC.

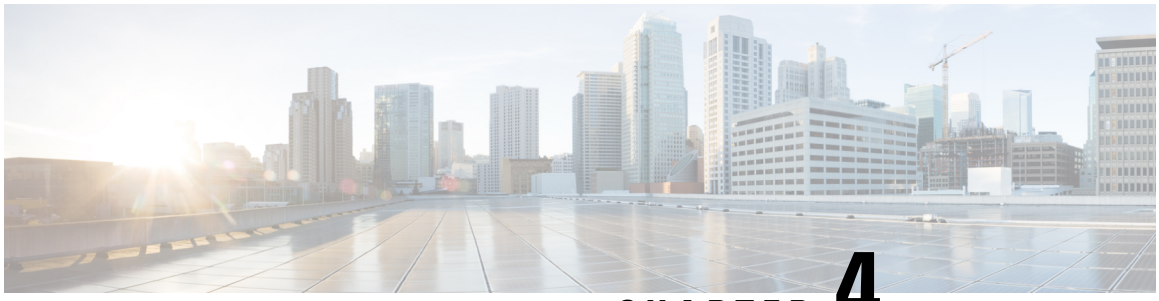

CHAPTER 4

Modify Network Properties

- Modify network properties, on page 108
- Modify site properties, on page 128
- Modify fiber properties , on page 164
- Modify fiber couple properties , on page 174
- Modify service properties, on page 177
- Modify service properties for NCS 1010, on page 182
- Services aggregation, on page 189
- Modify wave properties, on page 194
- Modify media channel properties, on page 196
- Modify circuit properties, on page 198
- Modify trail properties, on page 200
- Modify section properties, on page 213
- Modify side properties, on page 213
- Modify C-band amplifier properties, on page 223
- Modify L-Band Amplifier Properties, on page 234
- Modify Add/Drop multiplexer properties, on page 236
- Modify L-Band Add/Drop multiplexer properties, on page 244
- Modify client properties, on page 249
- Sort the Network Elements, on page 251
- Regeneration support, on page 252
- Multidegree ROADM, on page 254

Modify network properties

Table 48: Feature History

Feature Name	Release Information	Description
New Bandwidth Properties	Cisco ONP Release 5.1	Cisco ONP introduces the **Statistical Simulation Sigma**, **Statistical Simulation Margin Sigma**, and **OSNR Resolution Bandwidth** properties in this release. When the ideal OSNR values calculated by Cisco ONP are not feasible to be used at the time of deployment, you can modify the values for these properties to customize OSNR margin, power margin, and G-OSNR values to fix the fiber span issues.

Feature Name	Release Information	Description
New Network Level Properties	Cisco ONP Release 5.1	Three new Network Level properties are introduced to enable you to customize the core operations of an NCS 2000 Network. These operations ran in the background in the earlier releases. The new properties available under **Core Operations** as check boxes are: • **Enable LOGO Algorithm**—It runs the Local Optimization Global Optimization (LOGO) algorithm to find the efficient output power setpoint for booster amplifiers. By default, this **Enable LOGO Algorithm** check box is enabled. • **Log Enabled**—It generates, and stores logs only for selected network topologies. This saves a lot of storage space compared to previous implementations in which logs were automatically generated and saved for all topologies. • **Ignore Raman Span Checks**—It ignores the analysis of Raman spans between ROADM sites. This is useful when designing nonstandard network topologies with more than two Raman amplifiers between ROADM sites. Selecting the check box prevents Cisco ONP from raising an error message when analyzing such topologies.

Feature Name	Release Information	Description
BOM Customization for the UCS-based SVO Server Application	Cisco ONP Release 5.1	From this release onwards, the **BOM** does not include any UCS-based SVO server information. It is expected that you add the server PID and quantities manually. Cisco ONP prompts you to add the server by displaying the message "*UCS server is not billed in BoM, please add it as needed.*" in the **Messages** tab of the **Elements** tab.

Table 49: Feature History

Feature Name	Release Information	Description
Improved Optical Results	Cisco ONP Release 24.3.1	The new network-level properties introduced improve the accuracy of the optical results. • **Ignore APC Penalty**: When enabled, the APC penalty is not considered while calculating the OSNR and power margin. • **SOL Optimized PSD**: When enabled, an optimum PSD value is calculated by considering the SOL Span losses. Also, Cisco ONP sets PSD and drop attenuation to specific values for the CCMD-16 LC card connected to the ports of the OLT-E-C, to achieve optimal RX power for the circuits.

Feature Name	Release Information	Description
Skip Routing Failures in NCS 2000 Network Analysis	Cisco ONP Release 24.3.1	A new **Continue Analysis On Routing Failure** check box is introduced to improve network analysis reliability for larger NCS 2000 networks. When a routing failure occurs, this enhancement moves the network to **Partially Analysed** mode, and move the network to **Design** or **Upgrade** mode to edit properties and correct routing. After the analysis, • successful routing paths appear in the **BOM** and **Optical Reports** tabs. • failed routing paths are not listed in these tabs. • error messages for the individual routing failures appear in the **Messages** tab. • red cross marks appear next to the failed routing paths. This approach prevents a single failure from failing the entire analysis, isolating specific issues to enhance troubleshooting.

Table 50: Feature History

Feature Name	Release Information	Description
New Network Level Properties	Cisco ONP Release 5.2	New Network Level properties are introduced under **Advanced Optical Settings** for NCS 1010 network. You have the flexibility to define custom values for the following properties for the Raman span and validate the optical circuit feasibility. • **Amplifier Gain Range** • **Connector Loss** • **Minimum OSNR Margin** • **Minimum Span Loss for Raman Amplifiers** • **Percentage of Fibers with Higher Aging Loss** • **Generate Cross-Connect** • **Maximum OSC Reach for NCS 1010Raman Amplifiers** • **Retain Auto Placed Raman Spans for Failure** • **Freq Allocation Order** • **Link Power Control** • **Gain Estimator** • **OTDR**

Follow these steps to modify the properties of the network.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the network properties.

Step 2 Choose **Network** > **Entity Editor**.

Alternatively, click the network name in the network tree, and click **Show Advanced Properties** displayed under the network tree.

Step 3 In the **Entity Editor** window, click the **Site** tab.

Step 4 Click the network name, and modify the properties in the right pane. For the property descriptions, refer to:

- General properties of a network, on page 113
- System release properties, on page 118
- Network application configuration properties, on page 119
- Core operations properties, on page 122
- Optical algorithm and traffic algorithm options properties, on page 120
- Advanced Optical Settings properties, on page 123

Step 5 Click **Update**.

General properties of a network

This table describes various general properties of a network.

Table 51: General properties of a network

Property	Platform	Description	Available options	Default option
Name	NCS 2000 NCS 1010 NCS 1001	Displays the network name. You can modify the name.	—	—
Quick Analysis	NCS 2000	This check box allows you to quickly analyze the network by using a less accurate algorithm. The quick analysis option does not optimize the DCU and amplifier placement algorithm, resulting in an approximate BoM. For an accurate BoM, uncheck the **Quick Analysis** check box.	—	—

Property	Platform	Description	Available options	Default option
DWDM Interfaces	NCS 2000	Cisco ONP supports 100G and 200G transceivers as DWDM interfaces. This option is applicable only for automatically created waves, when OTN services are present.	• 100G: The entire network chooses the 100G wavelength for transmission. • 200G: The entire network chooses the 200G wavelength for transmission. If you enable both 100G and 200G options, by default, the entire network chooses the 200G wavelength for transmission. If the 200G wavelength is not optically feasible, then it selects 100G automatically for transmission.	—
Customer Name	NCS 2000 NCS 1010 NCS 1001	Enter the customer name.	—	—
Project	NCS 2000	Allows you to choose the project type.	• ANSI • ETSI ANSI networks do not allow you to define SDH (ETSI) service demands. ETSI networks do not allow you to define SONET (ANSI) service demands.	ANSI
	NCS 1010 **NCS 1001**	Displays the type of the project, ANSI, or ETSI. You cannot edit it.	—	—
Measurement Unit	NCS 2000 NCS 1010 NCS 1001	The unit of measurement of span length.	• km • miles	km

Property	Platform	Description	Available options	Default option
Chassis Type	NCS 1010	Choose the type of chassis. The available options are: **Note** When you check the **Enable Special Settings** check box, *NCS 1020* is selected as *Chassis Type* by default.	• NCS 1010 • NCS 1020	NCS 1010
NCS1014 Grouping	NCS 1010	This property groups all NCS1K14-CCMD-16 cards of a site in NCS1014 shelf.	—	—
	A2A Mode	NCS 2000	Allows you to choose A2A (Any to Any) mode.	• A2A_None • A2A_FAST	A2A_None
A2A Power Output	NCS 2000	The power output value is based on the chosen A2A mode.	—	—
A2A Demand Type	NCS 2000	The demand type is based on the chosen A2A mode.	—	—

Property	Platform	Description	Available options	Default option
A2A Channel Type	NCS 2000	The type of channel. You can choose multiple types.	• Contentionless: This property enables an N-degree ROADM node to accommodate N wavelengths of the same frequency from a single add or drop device. • Colorless: The colorless property enables tuning of channel wavelengths without changing the optical interface of the port. • Colored: The Colored property dedicates a separate port for each wavelength.	Contentionless
SSON	NCS 2000	Indicates whether the network is an SSON network.	—	—

Property	Platform	Description	Available options	Default option
Use client Payg	NCS 2000	This check box to enables the Pay As You Grow feature on the client cards. The PAYG feature provides a cost-effective solution for fewer wavelength requirements. A standard card is configured to work on maximum supported wavelengths, whereas a PAYG license comprises license restricted cards and a base license. So, instead of purchasing a standard card, you can purchase a PAYG license.	—	—
Naming Convention Enabled	NCS 2000	(Display only.) By default, the Naming Convention Enabled option is enabled for the networks that are created in Cisco ONP, and you cannot edit it. By default, the sides are named from T, S, R, Q, P, O, N, M, L, K, J, I, H, G, F, E, and index, depending upon the used Scalable Upto parameter. • You can import a mpz network without naming convention enabled, but the Cascaded SMR option remains disabled. • You cannot edit the label name of the side.	—	—

System release properties

The table provides details about different system release properties of a network.

Table 52: System release properties

Property	Platform	Description	Available options	Default option
NCS 1001	NCS 1001	Displays the system release of the NCS 1001 node in the network.	—	—
NCS 1010	NCS 1010	Displays the system release of the NCS 1010 node in the network.	—	—
NCS 4K	NCS 4000	Displays the system release of the NCS 4000 node in the network.	—	—
NCS 2K	NCS 2000	Displays the system release of the NCS 2000 node in the network.	—	—
NCS 1K (Available only on the SSON network)	NCS 1004	Displays the system release of the NCS 1004 node in the network.	—	—
Previous NCS 2K (Available only on the Release upgraded network)	NCS 2000	Displays the system release of the NCS 2000 node in the network, before the Release upgrade.	—	—
Previous NCS 1010 (Available only on the Release upgraded network)	NCS 1010	Displays the system release of the NCS 1010 node in the network, before the Release upgrade.	—	—

Property	Platform	Description	Available options	Default option
SVO	NCS 2000	The type of network management solution.	• Line Card: Chooses SVO card. • Server: Chooses SVO application that is hosted on a server. From Release 5.1, if you select *Server*, the PID for the server does not appear in the BoM report. A warning message "*UCS server is not billed in the BoM, please add it as needed.*" appears in the **Messages** tab of the **Elements** tab. • Auto: Chooses SVO card as default, for SVO solution.	SVO

Network application configuration properties

This table describes various network application configuration properties.

Table 53: Network application configuration properties

Property	Platform	Description	Available options	Default option
Install with COSM	NCS 1010	This check box enables you to see software license for COSM file for R7.11.1 networks.	—	—
Use Coordinates Distance	NCS 2000 NCS 1010 NCS 1001	This check box enables the use of x and y coordinates to calculate the fiber length.	—	—
Raman-Tuner	NCS 1010	This check box enables the Raman tuner.	—	—
Spectrum Utilization	NCS 1010	Displays , the spectrum utilization. This field is non-editable.	—	Shortest Path First.

Property	Platform	Description	Available options	Default option
Band Type	NCS 1010 NCS 1001	The type of band.	• C-Band • C+L Futuristic • C+L **Note** After creating a network, you can change the network band type if required.	C-Band
NCS 1010 Line Card	NCS 1010	The type of Line Card faceplate.	• Standard Faceplate • Enhanced Faceplate For R7.10.1 networks, Cisco ONP supports Enhanced NCS 1010 Line Cards. For R7.11.1 networks, Cisco ONP supports Enhanced NCS 1010 Line Cards and NCS1K14-CCMD-16-C/L cards.	Enhanced Faceplate
Routing Strategy	NCS 1010	The default routing priority for circuits based on minimum distance or minimum number of hops.	• HOP • LENGTH	HOP
NCS1010 Line Card	NCS 1010	The line card variant that will be applied to all edge sides in the network.	• Standard Faceplate • Enhanced Faceplate	Enhanced Faceplate
Max Auto Omni Allowed	NCS 1010	Based on the number that you enter, Cisco ONP will automatically generate up to that many Omni Edges and run the analysis. There is no need for manual creation by the user.	—	0

Optical algorithm and traffic algorithm options properties

This table describes various optical algorithm and traffic options properties of a network

Table 54: Optical algorithm and traffic algorithm options properties

Property	Platform	Description	Available options	Default option
Stat Sim Sigma	NCS 2000 NCS 1010 NCS 1001	The Statistical Simulation Sigma (Stat Sim Sigma) value is used in calculating the SOL G-OSNR, EOL G-OSNR, SOL Power, EOL Power, SOL OSNR margin, EOL OSNR margin, SOL Power margin, and EOL Power margin displayed in the **Optical Results** page. Choosing a lower value improves both OSNR and power margins. You can edit this value in Design mode, and Upgrade mode (after unlocking the network). Analyze the network and check the **Optical Results** page to view the updated OSNR and Power values.	• 1 • 2 • 3	3
Stat Sim Margin Sigma	NCS 2000 NCS 1010 NCS 1001	You can edit the Stat Sim Margin Sigma value in all modes (Design, Analyze (locked state), Upgrade, and Release Upgrade). To view the OSNR margin and power values that get updated based on the value you selected, reopen the **Optical Results** page.	• 1 • 2 • 3	3

Property	Platform	Description	Available options	Default option
Continue Analysis On Routing Failure	NCS 2000	This check box skips routing demand failures. Passed demands are listed in the **Optical Reports** tab, while failed demands are excluded. Failed demands are marked with red crosses in the network tree, with error messages displayed in the **Messages** tab. If any demand fails, the network switches to Partial Analysis mode. **Note** If any non-routing issue is present in the network, then the design network will not move to the *Partial Analysis mode*	—	—

Core operations properties

This table describes various core operations properties of a network.

Table 55: Core Operations properties

Property	Platform	Description	Available options	Default option
Enable LOGO Algorithm	NCS 2000	This property is enabled by default. If you are using a non-SSON network, you can edit it; however, in an SSON network, it remains non-editable. This algorithm enables the Cisco ONP to automatically find the optimal output power setpoint for booster amplifiers within a fiber span.	—	—

Property	Platform	Description	Available options	Default option
Log Enabled	NCS 2000 NCS 1010 NCS 1001	This check box enables generation and storage of network logs.	—	—
Ignore Raman Span Checks	NCS 2000	When enabled, network analysis ignores Raman span checks.	—	—

Advanced Optical Settings properties

This table describes various Advanced Optical Settings properties.

Table 56: Advanced Optical Settings properties

Property	Platform	Description	Available options	Default option
Enable Special Settings	NCS 1010	This check box enables these properties and sets their default values. • Amplifier Gain Range Margin • Connector Loss • Minimum OSNR Margin • Minimum Span loss for Raman Amplifiers • Percentage of Fibers with Higher Ageing Loss • Freq Allocation Order • MC Routing Order • Ignore APC Penalty • SOL optimized PSD If you check the **Enable Special Settings** check box, these parameters are added to the Device Netconf XML file. • Slot reserve • Unused CCMD-16 ports shutdown • Span baseline-deviation • OTDR Thresholds • Dmux WSS slice attenuation • APC span-loss correction threshold	—	—
Amplifier Gain Range Margin	NCS 1010	Enter the amplifier gain range margin.	—	3 dB

Property	Platform	Description	Available options	Default option
Connector Loss	NCS 1010	Enter the connector loss value.	0.25 - 0.5	0.5
Minimum OSNR Margin	NCS 1010	Enter the minimum OSNR margin required for the amplifier.	—	1 dB
Minimum Span Loss for Raman Amplifiers	NCS 1010	This is the minimum required span loss for fiber to be considered for Auto Raman placement.	—	27 dB
Percentage of Fibers with Higher Aging Loss	NCS 1010	When you click the field and a Fiber Sorting Settings window opens:	• Percentage of Fibers with Higher Aging Loss • Ageing Loss for Top Fibers • Ageing Loss for Bottom Fibers	• Percentage of Fibers with Higher Aging Loss: 40% • Ageing Loss for Top Fibers: 3 dB) • Ageing Loss for Bottom Fibers: 0.75 dB
Generate Cross-Connect	NCS 1010	Check this check box to add Cross connect details in the COSM XML	—	—
Raman Amplification	NCS 1010	The type of Raman amplification.	• Auto • User Forced	User Forced
Maximum Auto Ramans	NCS 1010	The maximum number of Raman enabled links on an end-to-end circuit path.	• 1 • 2 • 3 • 4 • 5 • All	5
Maximum OSC Reach for Raman Amplifiers	NCS 1010	The maximum span loss for which fiber can be considered for Auto Raman placement.	—	The default value is 33 dB.

Property	Platform	Description	Available options	Default option
Link Tuner	NCS 1010	Choose how to enable the Link Tuner.	• Automatic-Enabled • Force-Disabled • On-Request-Enabled	The default option is **On-Request-Enabled**, when the **Enable Special Settings** check box is checked, and the **Automatic-Enabled** check box is unchecked.
Ignore APC Penality	NCS 1010	By default, this check box remains checked, when the **Enable Special Settings** check box is checked. Automatic Power Control (APC) penalty occurs due to the inherent error in regulating the set-point for power. This penalty is considered while calculating the OSNR and power margin. When this property is enabled, this penalty is ignored during the calculation and thus providing accurate optical results.	—	—
Retain Auto Placed Raman Spans for Failure	NCS 1010	In general, automatically placed Raman will be retained only if the circuit becomes feasible with those Raman placements. Otherwise, it will be removed automatically. If you want to retain it, check this check box. It is disabled by default.	—	—
Raman Gain Auto Tuner	NCS 1010	Choose how to calibrate the Raman gain.	• Automatic • Automatic-On-request • No-calibration	No-calibration

Property	Platform	Description	Available options	Default option
SOL Optimized PSD	NCS 1010	By default this check box remains checked, when the **Enable Special Settings** check box is checked. When enabled, an optimum PSD value is calculated by considering the SOL Span losses.	—	—
Freq Allocation Order	NCS 1010	The Freq Allocation Order.	• FROM-LOWER-FREQ • FROM-HIGHER-FREQ	FROM-HIGHER-FREQ
Link Power Control	NCS 1010	Choose how to enable the Link Power Control.	• Automatic-Enabled • Force-Disabled • On-Request-Enabled	The default option is **On-Request-Enabled**, when the **Enable Special Settings** check box is checked, and **Automatic-Enabled** when the check box is unchecked.
Gain Estimator	NCS 1010	Allows you to choose how to enable the Gain Estimator.	• Automatic-Enabled • Force-Disabled • On-Request-Enabled	The default option is **On-Request-Enabled**, when the **Enable Special Settings** check box is checked, and **Automatic-Enabled** when the check box is unchecked.
OTDR	NCS 1010	Enables or disables the OTDR. By default, this is enabled.	—	—

Property	Platform	Description	Available options	Default option
MC Routing Order	NCS 1010	Routing order for the multicarriers.	• CREATION: Based on the *Freq Allocation Order* chosen, the tool allocates frequency based on order carrier creation. • NO-OF-CARRIERS: Based on the *Freq Allocation Order* chosen, the tool allocates frequency to circuits based on the number of carriers.	CREATION

Modify site properties

Table 57: Feature History

Feature Name	Release Information	Feature Description
Layer-2 SMR Enhancement to Support Second and Third Port Extension	Cisco ONP Release 5.2	This enhancement allows you to extend the contentionless sides in a ROADM site, increasing the number of provisioned contentionless sides in the NCS 2000 networks. New contentionless sides increase the number of traffic channels in the NCS 2000 networks. The new **Reserve Cascaded SMR Port** property reserves more SMR ports to extend the Layer-2 contentionless sides in a ROADM site.

Table 58: Feature History

Feature Name	Release Information	Feature Description
Shared SMR Port	Cisco ONP Release 4.2	You can enable the **Colored Add/Drop** property. This feature supports the use of contentionless and colored demands that are connected to the same port of an SMR card. With the **Shared SMR Port** enabled, you can create and validate the contentionless and colored configuration on a 16-degree SMR-20 node.

Use this procedure to modify the properties of the site.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the site properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, navigate to **Sites** > **Site**

Step 4 Choose the site and modify the properties in the next pane. For the property descriptions, refer to:

- General site properties, on page 129
- C-Band properties, on page 134
- Layout properties, on page 139
- Cisco NMS properties, on page 148
- Third party NMS properties, on page 151
- Map properties, on page 152
- Bill of materials properties, on page 153
- SVO properties, on page 156
- Enhanced face plate properties, on page 156

Step 5 Click **Update**.

General site properties

This table describes the descriptions of various general properties for sites.

Table 59: General site properties

Property	Platform	Description	Available options	Default
Name	NCS 2000 NCS 1010 NCS 1001	Enter the site name, either alphanumeric or numeric.	—	—
Type	NCS 2000	Choose the type of site.	• ROADM • OLA • Traffic • Passthrough **Note** • You can add a passthrough site as a place holder. You cannot add services or waves to this site and therefore cannot generate the report. Later, you can convert the passthrough site to a ROADM, OLA, or the Traffic site in the design mode. • OLA is an optical line amplifier site that is used only for amplification. You cannot add service or waves on this site.	The site type that you chose while designing.
	NCS 1010	Choose the type of site.	• ROADM • OLA • Traffic • Passthrough	ROADM
	NCS 1001	Displays the type of site.	—	—

Property	Platform	Description	Available options	Default
MPO Cable	NCS 1010	Choose the type of MPO cable.	• Auto • 16MPO-MPO • 24MPO-MPO	Auto
Node Type	NCS 2000	This field is noneditable.	FLEX NG-DWDM	FLEX NG-DWDM
Equipment Configuration	NCS 2000	Choose the configuration from the drop-down list. This option is available only for the Traffic site. • Large CO - NCS 4016 • Small Site - NCS 4016 • Small Site - NCS 4009	• Large CO - NCS 4016 • Small Site - NCS 4016 • Small Site - NCS 4009	Large CO - NCS 4016
Traffic Type (only for Traffic site)	NCS 2000	Choose the traffic type.	• 4K_1K_2K (for SSON) • 1K_2K (for SSON) • 4K_2K (non- SSON)	• 4K_1K_2K (for SSON) • 4K_2K (non- SSON)
SSON	NCS 2000	Indicates whether the network is an SSON network.	—	—
SVO	NCS 2000	This property is noneditable at site level. This property chooses SVO card as Server or Line card at the network level.	—	—
CLLI Code	NCS 1004 NCS 2000 NCS 4000	Enter a string holding the CLLI code.	—	—
Site Address	NCS 2000 NCS 1010 NCS 1001	Enter the site address.	—	—

Property	Platform	Description	Available options	Default
Evolved Mesh	NCS 2000	By default, this option is unchecked. When you enable this feature on the network, it is automatically enabled on the associated sites of the network.	—	This option remains unchecked.
Status	NCS 2000	Displays the status of the network. It shows whether the network is **Up** or **Down**.	—	—
Node Protection	NCS 2000	Choose the Node Protection.	• Same shelf • Separated shelves	Same shelf
Mpo16Lc	NCS 2000	Displays the fan-out module.	MF-MPO-16LC The MPO-16 to 16-LC fan-out module is a double slot module with one MPO-16 connector (COM) and eight LC duplex connectors. The MPO-16 connector is compatible with the SMR20 FS EXP and 16-AD-CCO FS units.	MF-MPO-16LC
Mpo16ToMpo8	NCS 2000	Choose the required Mpo16 to Mpo8 converter.	• MPO16ToMPO8Cable • MF-2MPO_ADP	MPO16ToMPO8Cable
MPO Cable	NCS 1010	Choose the required Mpo cable. • Auto • 16MPO-MPO • 24MPO-MPO	• Auto • 16MPO-MPO • 24MPO-MPO	Auto
Cascaded SMR	NCS 2000	Enable this option to add Layer-2 contentionless sides.	—	—

Property	Platform	Description	Available options	Default
Reserve Cascaded SMR Port	NCS 2000	**Note** This property becomes available when you enable *Cascaded SMR* for NCS 2000 networks from Release 11.1.x. Choose the number of ports to reserve for the cascaded SMR.	• 1, 2, and 3 if Scalable Upto Degree is 12 and 16. • 1 and 2 if Scalable Upto Degree is 8. • 1 if Scalable Upto Degree is 12 and 4.	1
Flex Spectrum	NCS 2000	You cannot edit this option.	—	This check-box remains checked for a newly created network.
Grooming Site	NCS 2000 NCS 4000	When you enable this option, it indicates that OTN traffic can be groomed at this site.	—	—
MR-MXP BreakOut Cable	NCS 2000	Check this check box to use the ONS-MPO-MPOLC-10 breakout cable to interconnect the client ports of the MR-MXP card with the NCS2K-MF-MPO-20LC passive module.	—	—
8X10G-FO	NCS 2000	Check this check box to use the NCS2K-MF-8X10G-FO passive module only for 10G on the client-side of the NCS2K-400G-XP card. By default, this passive module is enabled.	—	—
Band Type	NCS 1010 NCS 1001	Choose the required band type for NCS 1010 R7.9.1.	• C-Band • C+L futuristic • L-band	C-Band

Property	Platform	Description	Available options	Default
NCS 1010 Line Card	NCS 1010	Choose whether the Line Card faceplate is Standard Faceplate or Enhanced Faceplate. **Note** If you assigned a **Scalable Upto Degree** value that is supported for both standard and enhance at the site level, then you can select *Standard Faceplate* in one side and *Enhanced Faceplate* in another side.	• Enhanced Faceplate • Standard Faceplate	Enhanced Faceplate

C-Band properties

This table describes the descriptions of various C-Band properties under sites.

Table 60: C-band properties

Property	Platform	Description	Available options	Default
Structure	NCS 2000	Choose the type of the site.	The available options for ROADM and Traffic sites are: • Multi-degree • Line • Terminal For OLA and PASSTHROUGH, it is Line, and you cannot edit it.	Line
	NCS 1010	Choose the type of the site.	The available options for ROADM sites are: • Multi-degree • Line • Terminal For OLA and PASSTHROUGH, it is Line, and you cannot edit it.	Line
	NCS 1001	Choose the type of the site.	• Terminal • Terminal-Section • Terminal-Path	Terminal
	Functionality	NCS 2000		—

Property	Platform	Description	Available options	Default
			Displays the site functionality. The functionalities available for each type of site are: • Optical Cross Connect (OXC) for ROADM and traffic site • Auto or Line Amplifier for OLA site, Cisco ONP downgrades OLA site to passthrough if OLA is not required. • Passthrough for passthrough site	
NCS 1010		Displays the site functionality. ROADM is the default functionality for all site types.	—	—
NCS 1001		Displays site functionality.	—	—

Property	Platform	Description	Available options	Default
Scalable up to Degree	NCS 2000	This parameter determines the maximum number of degrees, ducts, or line sides that can be supported by the site.	• None • Auto • 4 • 8 • 12 • 16 The network is scalable up to 16 degrees for ROADM and Traffic sites. Choose 2 to have a LINE ROADM site. For OLA, the value is 2 and is noneditable.	4
	NCS 1010		• 7 • 9 • 15 • 17 • 23 • 25 • 31 If you choose **Line Card Faceplate** as *Enhanced Faceplate*, for NCS 1010 site, the available options are 3…15, 23, and 31.	7

Property	Platform	Description	Available options	Default
Site Type	NCS 2000	Choose the type of site. The Site type is Line for the OLA site.	• Auto When you choose Auto, the default option is SMR-20. • SMR-20 • SMR-9	Auto
	NCS 1010	For NCS 1010 site, the only option is OLT, and it is not editable.	—	—
	NCS 1001	Displays the type of site, and it is noneditable.	—	—
L0 Platform	NCS 2000 NCS 1010 NCS 1001	Displays the platform. For example, NCS 1010 , NCS 1001, or NCS 2000.	—	—
Shared SMR Port	NCS 2000	Check this check box to connect Contentionless unit 16-AD-CCOFS and Colored unit MD-48-ODD/Even to the same MPO port of SMR-20. When Shared SMR port is enabled, MD-48-ODD/EVEN unit connects to the specific side of SMR-20 through MPO-8LC and UPG-4 instead of directly connecting to SMR-20 through MPO-16LC. **Note** Shared SMR port becomes disabled, if • **Degree Mesh Type** property is *PPMESH8-5AD* • Or, **Site Type** property is *SMR-9* and **Scalable Upto Degree** property is *8*	—	—

Property	Platform	Description	Available options	Default
Degree Mesh Type	NCS 2000	Choose the mesh type for the Flex NG-DWDM site.	• DEG-5/UPG-4 • PPMESH8-5AD	DEG-5/UPG-4
Degree Type	NCS 1010	Displays the type of degree. For example, BRK-8.	—	—
Pre Equip Degree	NCS 2000	This parameter determines the number of degrees to be considered for the site hardware placement on day 0.	• None • Auto • 4 • 8 • 12 • 16	None If you choose None, only the sides that are present in the Cisco ONP GUI are shown. The values in the drop-down list are populated based on the value of **Scalable Upto Degree** parameter.
	NCS 1010	For NCS 1010 site, the options available are Yes and No.	—	—

Layout properties

This table describes the descriptions of various layout properties under sites.

Table 61: Layout properties

Property	Platform	Description	Available options	Default
Chassis Type	NCS 2000	Choose the type of chassis.	• M6 Chassis • M15 Chassis • Auto M15 is the default option when you choose Auto. The chassis type is supported for all the sites except the passthrough.	Auto
	NCS 1010		• NCS 1010 • NCS 1020	NCS 1010

Property	Platform	Description	Available options	Default
NCS1014 Grouping	NCS 1010	Enable this property to group all NCS1K14-CCMD-16 cards of a site in NCS1014 shelf.	—	—
	Power Supply	NCS 2000 NCS 1010 NCS 1001	Choose the type of Power Supply.	• Auto • AC Power • DC Power Auto
UTS AC Power Cables	NCS 2000 NCS 1010 NCS 1001	Choose the type of cables to be used for the AC power supply.	Cables are listed based on the country type and the Chassis type selected.	—
Chassis Type	NCS 2000	Choose the type of chassis. **Note** Chassis type is not supported for the passthrough site.	• M6, and M15 Chassis for OLA • M6 Chassis for ROADM and Traffic • M15 Chassis for ROADM and Traffic • Auto for all nodes	Auto
	NCS 1010		• NCS1010 • NCS1020	NCS1010

Property	Platform	Description	Available options	Default
Power Supply	NCS 2000	Choose the type of Power Supply.	For an NCS 2000 site, the available options are based on the chassis type: • Auto for all types of chassis • AC Power, DC power for M15 and M2 chassis • AC Power, DC Power, AC2 Power, DC40 Power, and DC20 Power for M6 chassis	Auto
	NCS 1010 **NCS 1001**		• Auto • AC Power • DC Power	Auto

Property	Platform	Description	Available options	Default
Controller Card	NCS 2000	Choose the type of the controller card. **Note** For NCS 1010, if you enable **Advanced Optical Settings**, Cisco ONP takes the default controller card as *NCS1010-CNTRL-B-K9*, else *NCS1010-CNTRL-K9*. However, you can still change the controller later.	For an NCS 2000 site, the default controller card is TNCS-2. The available options are based on the chassis type chosen. By default, controller cards that are supported by M15 chassis are listed. • Auto • TNC/TSC, TNC-E/TSC-E, TNCS, TNCS-0, TNCS-2, and TNCS-20 for M2 chassis • TNC/TSC, TNC-E/TSC-E, TNCS, TNCS-0, TNCS-2, and TNCS-20 for M6 chassis • TNCS, TNCS-0 TNCS-2, TNCS-20 for M15 chassis	Auto
	NCS 1010		• Auto • NCS1010-CNTRL-K9 • NCS1010-CNTRL-B-K9 *NCS1010-CNTRL-B-K9* appears for networks from R7.11.1.	Auto
	NCS 1001		NCS1K-CNTLR2	NCS1K-CNTLR2
	Redundant Controller Card		NCS 2000 NCS 1010 NCS 1001	

Property	Platform	Description	Available options	Default
				Choose whether to use a redundant controller card. **Note** When you select **Chassis Type** as *NCS1020*, you can force **Redundant Controller Card** to Yes.

Property	Platform	Description	Available options	Default
Layout Template	NCS 2000			

Property	Platform	Description	Available options	Default
		Choose the required layout template. **Note** After the chosen layout template is applied, all layout properties will be reset and disabled. **Note** After design analysis, if the applied layout template is not considered for card placement in the layout, check for the error message (non-critical) under the **Elements** > **Messages** tab. If you see a template-related error which indicates that there is a mismatch between the cards that are defined in the template and the cards that are created on the site, perform the following: • Export the template from the **Layout** page, and modify it as required. • Import the modified template using the **Manage** > **Layout Template** option. • Switch to Design mode and apply the template to the site using the **Entity Editor**. • Reanalyze the network to get the correct layout populated.		

Property	Platform	Description	Available options	Default
UTS AC Power Cables	NCS 2000 NCS 1010 NCS 1001	Choose the type of cables to be used for the AC power supply.	Cables are listed based on the country type and the Chassis type selected.	—
Redundant Power Scheme	NCS 2000	Choose the redundant power scheme from the drop-down list to configure the number of working and protected power units for the chassis. For an M6 chassis, the options available are Auto, Yes, and No.	For an NCS 2000 site, the options available are based on the chassis type. For M15 chassis, the options available are 1+0, 1+1, 2+0, 2+1, 3+0, 3+1, 2+2.	3+1 is the default redundancy power scheme for M15 DC chassis and 2+2 is the default redundancy power scheme for M15 AC chassis. For example, if you choose 3+1 redundant power scheme, there are 3 working power units and 1 protected power unit.
	NCS 1010 **NCS 1001**	The options available are Auto, .	• Auto • 1+0 • 1+1	Auto
Raman Adapter Share	NCS 2000	This option is available only for the OLA site. This option indicates that MF-2LC-ADP can be shared with EDRA amplifiers and not with RAMAN amplifiers irrespective of the default selection.	—	By default, this check box remains checked.

Property	Platform	Description	Available options	Default
ECU Type	NCS 2000	Choose the External Connection Unit (ECU) type from the drop-down list.	• Auto • ECU—Has 12 USB 2.0 ports and supports IEEE1588v2 PTP, time-of-day (ToD), and pulse-per-second (PPS) inputs. • ECU-S—Similar to ECU except that it has eight USB 2.0 ports and two USB 3.0 ports. • ECU60-S—Variant of ECU-S introduced for the NCS 2006 when the shelf is powered at –60VDC nominal input voltage. ECU-S and ECU60-S are supported only for M6 chassis.	Auto

Property	Platform	Description	Available options	Default
MF Unit	NCS 2000	Choose the mechanical frame for the passive optical modules from the drop-down list.	• Auto • MF-6RU/MF-10RU • MF-1RU • The NCS2K-MF-1RU has four slots for the passive optical modules. • The NCS2K-MF-6RU supports up to 14 single-slot passive optical modules such as any combination of NCS2K-MF-DEG-5, CS2K-MF-UPG-4, or Connection Verification (CV) units. • The NCS2K-MF10-6RU supports up to 10 double-slot passive optical modules such as NCS2K-MF-MPO-16LC=.	Auto
	NCS 1010		• Auto • MF-4RU • MF-1RU	MF-1RU
	NCS 1001		MF-1RU	MF-1RU
Chassis Disaggregation	NCS 2000	If you check this check-box, ROADM, and transponder cards are placed in different chassis.	—	—

Cisco NMS properties

This table describes the descriptions of various Cisco NMS properties under sites.

Table 62: Cisco NMS properties

Property	Platform	Description	Available options	Default
SVO Full License	NCS 2000	Enable this check box to add High Availability (Feature and License), Connection Verification license, Flex Spectrum license, and OTDR license packaged in it.	—	—

Property	Platform	Description	Available options	Default
High Availability	NCS 2000	Enable this check box to add the High Availability feature to the license package. Choose the high availability options: • Auto: Based on analysis and default behavior. • Local HA: Both active and standby SVO cards are placed on the same node. • None: No SVO card present. • Only Active: No High Availability. Only Primary SVO card is added. • Geo HA: SVO cards are placed in two different sites located at different geographical locations, but adjacent to each other. See Rules and Behavior that are applicable for the selection.	—	—

Property	Platform	Description	Available options	Default
Connection Verification License	NCS 2000	Enable this check box to add the Connection Verification feature to the license package.	—	—
SVO Flex Spectrum License	NCS 2000	Enable this check box to add the Flex Spectrum feature to the SVO license package. For SSON networks, the Flex Spectrum license is enabled by default.	—	—
OTDR License	NCS 2000	Enable this check box to add the OTDR feature to the license package.	—	—

Third party NMS properties

This table describes the descriptions of various Third party NMS properties under sites.

Table 63: Third party NMS properties

Property	Platform	Description	Available options	Default
3rd party Full License	NCS 2000	Enable this check box to add NBI (North Bound Interface), Alarm Correlation, Performance Monitoring, and Circuit Provisioning features to the license package.	—	—
NBI	NCS 2000	Enable this check box to add the NBI feature to the license package.	—	—

Property	Platform	Description	Available options	Default
Alarm Correlation	NCS 2000	Enable this check box to add the Alarm Correlation feature to the license package.	—	—
Performance Monitoring	NCS 2000	Enable this check box to add the Performance Monitoring feature to the license package.	—	—
Circuit Provisioning	NCS 2000	Enable this check box to add the Circuit Provisioning feature to the license package.	—	—

Map properties

This table describes the descriptions of various map properties under sites.

Table 64: Map properties

Properties	Platform	Description	Available options	Default
X Coordinate	NCS 2000 NCS 1010 NCS 1001	It represents the longitudinal location of the site. Longitude can be positive or negative (-180 to 180). Negative is west of Greenwich, and positive is eastward.	—	—
Y Coordinate	NCS 2000 NCS 1010 NCS 1001	It represents the latitudinal location of the site. Latitude can be positive or negative (- 90–90), north and south of the Equator.	—	—
Position Lock	NCS 2000 NCS 1010 NCS 1001	Check this check box to lock the site position on the map.	—	—

Bill of materials properties

This table describes the descriptions of various layout properties under sites.

Table 65: Bill of materials properties

Property	Platform	Description	Available options	Default	
License Suite	NCS 1010	Choose whether the License Suite is Essential (RTU + SIA3) or Advanced (RTU + SIA3).			
	NCS1k Line card license	NCS 1010	Choose the License Suite.	• Essential (RTU + SIA3) • Advanced (RTU + SIA3) • Essential (RTU + SIA5) • Advanced (RTU + SIA5)	Essential (RTU + SIA3)
Enable NCS	NCS 2000	This feature enables NCS features on all sites in the network.	—	—	

Property	Platform	Description	Available options	Default
Use PAYG	NCS 2000	The Pay As You Grow (PAYG) functionality significantly reduces the initial setup cost and enables the purchase of another wavelength capacity on a need basis. PAYG enables port-based cost or licensing for SMR-9 and SMR-20 cards.	—	—

Property	Platform	Description	Available options	Default
Connection Verification	NCS 2000	Enable this check box to: • Validate the correct optical interconnection between the optical cards inside a Flex ROADM. • Measure the insertion loss of the external passive path. • Validate the quality of the connections to the patch panel. • Check if the insertion loss is within the expected value. The following cards support connection verification: • SMR20 FS CV • MF-DEG-5-CV • MF-MPO-16LC-CV • MF-UPG-4-CV	—	—

Property	Platform	Description	Available options	Default
New FS-SMR PID	NCS 2000	You cannot edit this option. This option enables displaying of the new SMR-20 PID in the BOM page. You can enable this option when you unlock an mpz network where SMR-20 is selected, during an upgrade or release upgrade.	—	This check-box remains checked for newly created network.

Enhanced face plate properties

This table describes the descriptions of various Enhanced face plate properties under sites.

Table 66: Enhanced face plate properties

Property	Platform	Description	Availabe options	Default
Degree Priority	NCS 1010	Choose the port type for interconnect degree priority. **Note** This field appears only when you select **NCS 1010 Line Card** as *Enhanced Faceplate*.	• LC Ports • MPO Group	LC Ports
Add/Drop Shelf Type	NCS 1010	This property is noneditable and appears for networks from R7.11.1.	—	—

SVO properties

This table describes the descriptions of various **SVO** properties of a site.

Table 67: SVO properties

Properties	Platform	Description	Available options	Default
Chassis License Flush Out	NCS 2000	Allows you to flush out the existing chassis license and purchase a new chassis license.	—	—
SVO Pluggables	NCS 2000	Choose the pluggable. **Note** The SVO pluggables are not applicable for UCS-based SVO network design.	• Auto • ONS-SC +-10G-SR • ONS-SC +-10G-LR	Auto When you choose Auto, ONS_SC+-10G_SR is the default option.

Add contentionless side to a site

Contentionless functionality on a site refers to the contentionless add or drop ability of an N-degree ROADM node to accommodate N wavelengths of the same frequency from a single add or drop device. A ROADM is contentionless when the number of drop units equals the number of ROADM degrees.

Use the following procedure to add contentionless sides to a ROADM or traffic site.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network in which you want to add contentionless sides to a site.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 Click the site to which you want to add contentionless sides.

Step 4 Click the **Add Contentionless Side** icon.

Step 5 Enter the appropriate value in the **Enter number of contentionless sides** field.

The number of contentionless sides you can add to a site depends on the site type and the **Scalable Upto Degree** property.

If you want to add contentionless sides to	Then..
Layer-1 SMR site	Enter the appropriate value in the **Enter number of contentionless sides** field.

If you want to add contentionless sides to	Then..
Layer-2 SMR-20 site	• Check the **Evolved Mesh** check box. • Select **Site Type** as *SMR-20* or *Auto*. • Check the **Cascaded SMR** check box. • Select **Degree Mesh Type** as *DEG-5/UPG-4*. • Click **Update**. • Enter the appropriate value in the **Enter number of contentionless sides** field. See Contentionless sides for Layer-1 SMR, on page 158.
Extended Layer-2 SMR-20 site	• Choose the **Reserve Cascaded SMR Port** value. **Note** The **Reserve Cascaded SMR Port** drop-down property is available for NCS 2000 networks from R11.1.x. Based on the N-degree and Layer-2 SMR, you can add more contentionless sides on each site for the extended layer-2 SMR, but this will reduce the number of Layer-1 contentionless sides. • Click **Update**. • Enter the appropriate value in the **Enter number of contentionless sides** field. See Contentionless sides for extended Layer-2 SMR, on page 159.

Step 6 Click **OK**.

Contentionless sides for Layer-1 SMR

This table explains how many contentionless sides you can add to a site based on the site type, and the **Scalable Upto Degree** property.

Table 68: Contentionless sides for Layer-1 SMR

Site type	Scalable upto degree	Number of contentionless sides
SMR-20	4	16
SMR-20	8	12
SMR-20	12	8

Site type	Scalable upto degree	Number of contentionless sides
SMR-20	16	4
SMR-20	Line	8
SMR-20	Terminal	8
SMR-9	4	5
SMR-9	8	1

Contentionless sides for extended Layer-2 SMR

This table shows how many contentionless sides you can add to each site for the extended layer-2 SMR site. The number depends on the N-degree and Layer-2 SMR configuration

Table 69: Contentionless Sides for extended Layer-2 SMR

Reserve cascaded SMR port	Site type	Scalable upto degree	No. of contentionless sides for Layer-1 side	No. of contentionless sides with 1st Port Layer-2	No. of contentionless sides with 2nd Port Layer-2	No. of contentionless sides with 3rd Port Layer-2
1	SMR-20	4	16	20	Not supported	Not supported
	SMR-20	8	12	20	Not supported	Not supported
	SMR-20	12	8	20	Not supported	Not supported
	SMR-20	16	4	20	Not supported	Not supported
2	SMR-20	4	Not supported	Not supported	Not supported	Not supported
	SMR-20	8	11	20	20	Not supported
	SMR-20	12	7	20	20	Not supported
	SMR-20	16	3	20	20	Not supported
3	SMR-20	4	Not supported	Not supported	Not supported	Not supported
	SMR-20	8	Not supported	Not supported	Not supported	Not supported
	SMR-20	12	6	20	20	20
	SMR-20	16	2	20	20	20

Modify the number of contentionless side ports at a site

Follow these steps to modify the number of contentionless ports for a side in a ROADM site.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network in which you want to modify the number of contentionless ports for a side in a site.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 Expand a ROADM site, and select a contentionless side.

The properties of the side are displayed in the right panel.

Step 4 From the **Contentionless Ports** drop-down list, select the required number of ports.

Click **Update**.

Modify contentionless side to a site in upgrade mode

Limitations

- This feature supports networks running software release version 11.1.x or later.
- NCS 2000 networks have the limitation of Passive units count up to 126. When you add the second and third L2 contentionless sides, the passive units count goes beyond the limit. In such cases, the tool allows the analysis and notifies the limitation through an error message, *The passive units in this design (count) has exceeded the maximum supported passive units on the NE SW (126). Please review the design with Cisco before proceeding for deployment*.

Follow these steps to modify contentionless sides to a ROADM or traffic site in upgrade mode.

Before you begin

Open the network, upgrade it, and set these site properties in the **Entity Editor** window.

1. Enable **Evolved Mesh**.
2. Set **Site Type** to *SMR-20* or *Auto*.
3. Enable **Cascaded SMR**.
4. Set **Degree Mesh Type** to *DEG-5/UPG-4*.
5. Set **Scalable Upto Degree** property to the appropriate value.

If these prerequisites are not met, you must unlock the site to modify the contentionless sides.

Procedure

Step 1 Choose **Network** > **Entity Editor**.

Step 2 Click the site where you want to modify the contentionless sides.

Step 3 Check the **Cascaded SMR** check box if not enabled already.

The **Reserve Cascaded SMR Port** drop-down appears.

Step 4 Choose the SMR port value in **Reserve Cascaded SMR Port**.

To reduce the Layer-2 SMR sides:

a. Choose a lower value.

b. Click **Update**.

If SMR ports are available, the update becomes successful. Else, an error message appears. Perform the following actions:

1. Unlock the site.
2. Start over from Step 1.

To increase the Layer-2 SMR sides:

a. Choose a higher value.

b. Click **Update**.

If SMR ports are available, the update is successful. Else, an error message appears. Perform these actions:

1. Unlock the site.
2. Delete the lowest contentionless side from the Layer-1 SMR site.
3. Start over from Step 1.

Step 5 Click the site to which you want to add contentionless sides.

Step 6 Click the **Add Contentionless Side** icon.

Step 7 Enter the appropriate value in the **Enter number of contentionless sides** field.

The number of contentionless sides that can be added to a site depends on the type of site and the **Scalable Upto Degree** property.

Step 8 Click **OK**.

Add L-Band side to a site

Follow these steps to add L-Band sides to an NCS 1010 R7.9.1 site.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network in which you want to add the L-Band sides to a site.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 To add the L-Band sides:

- Click the site to which you want to add the L-Band sides.

  Note
  If you add an L-Band side to a site, the corresponding attached sides on other sites also receive L-Band sides automatically.

- Expand the site and click on a side to add L-Band to the selected side only.

Step 4 Click the **Add L-Band** icon.

The L-Band side appears under the required site or side.

Note
If ILA or pass-through sites are present in the APC domain, the end-to-end path in the L-band is enabled automatically.

Add omni-directional sides to a site

Table 70: Feature History

Feature Name	Release Information	Description
Omnidirectional Configuration Support for NCS 1010 Network	Cisco ONP Release 24.3.1	You can now include both colorless and colored omnidirectional configurations when designing an NCS 1010 network. New Properties Added: • **Add Omni-Directional** icon (under Entity Editor): Use this icon to add the required number of omnidirectional sides. • **Omni Variant** (under Side Properties): Select the desired Add/Drop stage, such as Dual OLT or 4x4 COFS. • **Max Auto Omni Allowed** (under Network Properties): Cisco ONP automatically generates the omni edges based on the number entered. This omnidirectional setup enhances the flexibility of the multidegree topology, allowing channels to be routed through any optical degree during a fiber cut without needing physical fiber reconnections.

The omnidirectional configuration allows you to add or drop traffic to any of the node directions in a multidegree topology. This configuration provides flexibility, enabling channels to be routed through any of the optical degrees during a fiber cut without needing to change the physical fiber connections.

Note Omni edges are not supported on a Terminal site.

Follow these steps to add omnidirectional sides to an NCS 1010 site.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network in which you want to add omnidirectional sides to a site.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 Click the site to which you want to add omnidirectional sides.

Step 4 Click the **Add Omni-Directional** icon.

Step 5 Enter the appropriate value in the **Enter number of Omni Directional sides** field.

The number of omnidirectional sides that can be added to a site depends on the **Scalable Upto Degree** property.

Step 6 Click **OK**.

The omnidirectional sides are created under the site and labeled as omni-1, and omni-2 and so on. A tag called *Omni* is added to the Omni side to indicate that it as an omnidirectional side.

To add L-band functionality to the side, click the **Add L-Band** icon.

Note
Cisco ONP will automatically generate up to the number of Omni Edges specified in the **Max Auto Omni Allowed** field under Network properties. Manual creation by the user is not required.

Modify fiber properties

Use this procedure to modify the properties of a fiber.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network where you want to modify the fiber properties.

When you click a fiber on the map, it will be highlighted in orange

Step 2 Choose **Network** > **Entity Editor**.

Step 3 Click the **Fiber** tab in the **Entity Editor** window.

Step 4 Choose the fiber and modify the required properties. For the property descriptions, refer to:

- General fiber properties, on page 165
- Physical and Raman amplification properties of fiber, on page 172
- Factors properties of fiber, on page 170
- Extended and totals properties of a fiber, on page 171

Step 5 Click **Update**.

General fiber properties

This table describes various general properties of the optical fiber connected between the sites.

Table 71: General fiber properties

Property	Platform	Description	Available options	Default
Name	NCS 2000 NCS 1010 NCS 1001	By default, the name of the fiber is based on the number of fibers between the source and destination sites. You can edit the name.	—	—
Source	NCS 2000 NCS 1010 NCS 1001	Displays the source site name. This field is noneditable.	—	—
Destination	NCS 2000 NCS 1010 NCS 1001	Displays the destination site name. This field is noneditable.	—	—
Bidirectional	NCS 2000 NCS 1010 NCS 1001	Indicates whether a standard single fiber is used to transmit the data in both directions.	—	—

Property	Platform	Description	Available options	Default
Fiber Type	NCS 2000	Select the fiber type. supports the following fibers, and the default fiber type is .	• G652-SMF • G652-SMF-28E • True Wave Reach • True Wave RS • True-Wave Plus • True-Wave Minus • True-Wave Classic • Free-Light • Tera-Light • Metro-Core • ELEAF • NDSF • ALLWave • SMF-28 ULL • SMF28-Ultra	G652-SMF
	NCS 1010	Select the fiber type.	• G652-SMF • G652-SMF-28E • True Wave Reach • True Wave RS • True-Wave Plus • True-Wave Minus • True-Wave Classic • Free-Light • Tera-Light • Metro-Core • ELEAF • NDSF • ALLWave • SMF-28 ULL • SMF28-Ultra	G652-SMF

Property	Platform	Description	Available options	Default
	NCS 1001	Select the fiber type.	• G652-SMF • G652-SMF-28E • True Wave Reach • True Wave RS • Free-Light • Tera-Light • ELEAF	

Property	Platform	Description	Available options	Default
Length	NCS 2000 NCS 1010 NCS 1001	Displays the span length of the fiber connecting a source and destination site. If necessary, change the span length manually. • The Cisco ONP tool automatically updates the fiber length to 1 km or 1 mile. If you change the fiber length, then the tool updates the same in the network tree and the map accordingly. • In the network tree pane, expand **Fiber** and select the fiber couple, A-Z and Z-A. The properties pane displays the fiber couple name, source side, destination side, its span length, loss, and, Polarization Mode Dispersion (PMD) value. • You can enter the different span length and loss values for the individual fibers in a fiber couple.	—	—

Property	Platform	Description	Available options	Default
Network status	NCS 2000 NCS 1010 NCS 1001	Displays the status of the network, whether the network is being deployed or not. If the network is not deployed, it shows the status as UNDISCOVERED.	—	—
Business status	NCS 2000 NCS 1010 NCS 1001	Displays the status of the fiber in a business perspective view. If fiber is not deployed, it shows the status as FUTURE. This field is noneditable.	—	—
Measurement Units	NCS 2000 NCS 1010 NCS 1001	Choose the measurement unit .You can set the measurement unit only for the duct, but not for the fiber pair (couple) or fiber.	• Km • Miles	Km
Ageing Loss [dB]	NCS 2000 NCS 1010 NCS 1001	Enter the aging loss value for the fiber.	—	—
DCN Extension	NCS 2000 NCS 1010 NCS 1001	Check this check box to enable the default use of data connection network (DCN) extension on each span in the project. This setting implies that the optical service channel (OSC) channel is not used to connect the two nodes.	—	—

Property	Platform	Description	Available options	Default
OSC FrameType	NCS 2000	Choose the OSC frame type. When set in Auto, Cisco ONP uses FE Frame as the preferred frame type.	• Auto • OC3 Frame • GE Frame • FE Frame	Auto
Ageing Factor	NCS 2000 NCS 1010 NCS 1001	Enter the number to fiber aging factor.	—	—

Factors properties of fiber

This table describes various factors properties of the optical fiber.

Table 72: Factors properties of fiber

Property	Platform	Description	Available options	Default
Loss Coefficient [dB/km]	NCS 2000 NCS 1010 NCS 1001	Loss is calculated based on the loss coefficient.	—	—
PMD Coefficient	NCS 2000 NCS 1010 NCS 1001	Displays the PMD coefficient.	—	—
QD C-Band	NCS 2000 NCS 1010 NCS 1001	Displays the secondary order dispersion for C-band.	—	—
CD C-Band	NCS 2000 NCS 1010 NCS 1001	Displays the secondary order dispersion for L-band.	—	—
RD Factor	NCS 2000 NCS 1010 NCS 1001	Displays the random dispersion value.	—	—

Extended and totals properties of a fiber

This table describes various extended and totals properties of the optical fiber.

Table 73: Extended and totals properties

Property	Platform	Description	Available options	Default
Extended				
Effective Mode Area	NCS 2000 NCS 1010 NCS 1001	Displays the effective mode area [µm^2]	—	—
SRS tilt coefficient	NCS 2000 NCS 1010 NCS 1001	Displays the Stimulated Raman Scattering tilt coefficient on the band.	—	—
DRBS coefficient	NCS 2000 NCS 1010 NCS 1001	Displays the Rayleigh Scattering capture coefficient.	—	—
N2	NCS 2000 NCS 1010 NCS 1001	Nonlinear index of refraction [1e-16 cm^2/W]	—	—
LFBR	NCS 2000 NCS 1010 NCS 1001	Length of individual fibers for sigmaDSP [Km]	—	—
Totals **(The properties under Totals are noneditable)**				
Loss EOL	NCS 2000 NCS 1010 NCS 1001	Displays the total loss EOL calculation.	—	—
Loss SOL	NCS 2000 NCS 1010 NCS 1001	Displays the total loss SOL calculation.	—	—
CD C-Band	NCS 2000 NCS 1010 NCS 1001	Displays the total chromatic dispersion for the C-band.	—	—

Property	Platform	Description	Available options	Default
QD C-Band	NCS 2000 NCS 1010 NCS 1001	Displays the secondary order dispersion for C-band.	—	—
RD	NCS 2000 NCS 1010 NCS 1001	Displays the random dispersion value.	—	—
PMD	NCS 2000 NCS 1010 NCS 1001	Displays the Polarization Mode Dispersion (PMD) value.	—	—

Physical and Raman amplification properties of fiber

This table describes various physical and Raman amplification properties of the optical fiber.

Table 74: Physical and Raman amplification properties of fiber

Property	Description	Available options	Default
Physical			
Length-Based Loss	The fiber loss value is automatically calculated based on length and loss coefficient, when you check this option.	—	—
Tot SOL Loss w/o connectors	Enter the start of life fiber loss value for each span, excluding the connector concentrated loss.	—	—
Connector Loss A	Connector Loss at Source Site [dB]	—	—
Connector Loss B	Connector Loss at Destination Site [dB]	—	—
Raman Amplification			

Property	Description	Available options	Default
Raman Amplified	Enable Raman Amplification on the ducts. **Note** When you enable Raman amplification, the side property *Enable C+L Band S/C* is automatically disabled.	—	—

Property	Platform	Description		
Physical				
Length-Based Loss	NCS 2000 NCS 1010 NCS 1001	The fiber loss value is automatically calculated based on length and loss coefficient, when you check this option.	—	—
Tot SOL Loss w/o connectors	NCS 2000 NCS 1010 NCS 1001	Enter the start of life fiber loss value for each span, excluding the connector concentrated loss.	—	—
Connector Loss A	NCS 2000 NCS 1010 NCS 1001	Connector Loss at Source Site [dB]	—	—
Connector Loss B	NCS 2000 NCS 1010 NCS 1001	Connector Loss at Destination Site [dB]	—	—
Raman Amplification				
Raman Amplified	NCS 2000	Enable Raman Amplification on the ducts. **Note** When you enable Raman amplification for NCS 2000 system release 12.2, the side property *Enable C+L Band S/C* is automatically disabled and vice versa.	—	—

Modify fiber couple properties

Use this procedure to modify the properties of a fiber couple.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network where you want to modify the fiber couple properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 Click the **Fiber** tab in the **Entity Editor** window.

Step 4 Choose the fiber and drill down to the fiber couple, and modify the required properties. For the property descriptions, refer to:

- General properties of a fiber couple, on page 174
- Physical and factors properties of a fiber couple, on page 175
- Totals properties of a fiber couple, on page 176

Step 5 Click **Update**.

General properties of a fiber couple

This table describes various general properties of an optical fiber couple.

Table 75: General fiber couple properties

Property	Platform	Description	Available options	Default
General			—	—
Name	• NCS 2000 • NCS 1010 • NCS 1001	By default, fiber couple is named based on the fiber name followed by COUPLE-AZ or COUPLE-ZA. The sides that are connected by the fiber couple are indicated inside brackets. The name is noneditable.	—	—

Property	Platform	Description	Available options	Default
Source Side	• NCS 2000 • NCS 1010 • NCS 1001	Displays the source side name. This field is noneditable.	—	—
Destination Side	• NCS 2000 • NCS 1010 • NCS 1001	Displays the destination side name. This field is noneditable.	—	—
Length	• NCS 2000 • NCS 1010 • NCS 1001	Automatically displays the span length of the fiber connecting a source and destination side. Change the span length manually, if necessary. You can enter the different span length and loss values for the individual fibers in a fiber couple.	—	—

Physical and factors properties of a fiber couple

This table describes various physical and factors properties of an optical fiber couple.

Property	Platform	Description
Physical		
Tot SOL Loss w/o connectors	• NCS 2000 • NCS 1010 • NCS 1001	Enter the start of life fiber loss value for each span, excluding the connector concentrated loss.
Connector Loss A	• NCS 2000 • NCS 1010	Connector Loss at Source Site [dB]

Property	Platform	Description
Connector Loss B	• NCS 2000 • NCS 1010	Connector Loss at Destination Site [dB]
Factors		
PMD coefficient	• NCS 2000 • NCS 1010 • NCS 1001	Displays the PMD coefficient.
Loss coefficient [dB]	• NCS 2000 • NCS 1010 • NCS 1001	Enter the value of the SOL fiber loss per kilometer used to calculate the loss of each span in the network.

Totals properties of a fiber couple

This table describes various Totals properties of an optical fiber couple. The properties under Totals are noneditable

Table 76: Totals properties

Property	Platform	Description	Available options	Default
Loss EOL	NCS 2000 NCS 1010 NCS 1001	Displays the total loss EOL calculation.	—	—
Loss SOL	NCS 2000 NCS 1010 NCS 1001	Displays the total loss SOL calculation.	—	—
CD C-Band	NCS 2000 NCS 1010 NCS 1001	Displays the total chromatic dispersion for the C-band.	—	—
QD C-Band	NCS 2000 NCS 1010 NCS 1001	Displays the secondary order dispersion for C-band.	—	—

Property	Platform	Description	Available options	Default
RD	NCS 2000 NCS 1010 NCS 1001	Displays the random dispersion value.	—	—
PMD	NCS 2000 NCS 1010 NCS 1001	Displays the Polarization Mode Dispersion (PMD) value.	—	—

Modify service properties

Use this procedure to modify the properties of the service.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the service properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, click the **Service** tab.

Step 4 Choose the service under the **Serives** tab, and modify the properties in the right pane. For the property descriptions, refer to:

- General service properties, on page 178
- Primary and secondary paths forcing properties, on page 179
- NCS1K domain properties, on page 181

Note

- Force both primary and secondary path fiber or channel to enable protected service. Ensure the wave type matches for both paths.
- Apply path forcing end-to-end, from the source to the destination. If you force only a partial path, the analysis fails.
- Force the wave path tagged to the service.
- For protection types 1+1+R+R, 1+1+R, and 1+R, you can force a path in restoration path1 or restoration path2. Fiber can also be forced in the primary or secondary path.

Step 5 Click **Update.**

General service properties

Table 77: General service properties

Property	Platform	Description	Available options	Default
Name	NCS 2000	The service name is based on the source and destination sites and the number of services between them. You can edit the name. For example, if there are two services between site 1 and site 2, the names of the services are Site-1-Site-2-1 and Site-1-Site-2-2, respectively.	—	—
Type	NCS 2000	Choose the types of service.	• 10GE • 100GE • STM-64	100GE
Protection	NCS 2000	Choose the protection type from the drop-down list. For more information on protection types, see #unique_170.	• Unprotected • 1+1 • Disjoint • S+NS • 1+R • 1+1+R • 1+1+R+R	1+1
Source	NCS 2000	Displays the source site name.	1+1	1+1
Destination	NCS 2000	Displays the destination site name.	—	—
Tertiary Source	NCS 2000	From the drop-down list, select the possible site as a tertiary source.	Lists the available sites	—

Property	Platform	Description	Available options	Default
Tertiary Destination	NCS 2000	From the drop-down list, select the possible site as a tertiary destination. Tertiary source and tertiary destination are enabled only when you select the protection scheme as Unprotected Disjoint. You can select either tertiary destination or both tertiary source and tertiary destination. • If you select only the tertiary destination, the demand is created between the source and destination and between the source and tertiary destination. These do not have common fibers in the path, which are disjoint. • If you select both tertiary source and tertiary destination, two unprotected demands are created between the source to destination, and tertiary source to tertiary destination. The demands are disjoint to each other.	Lists the available sites	—

Primary and secondary paths forcing properties

These tables describe the primary and secondary paths forcing properties for services. Secondary path is available only for (1+1) .

Table 78: Primary path forcing properties

Property	Platform	Description		
Path	NCS 2000	Cisco ONP automatically selects the shortest path as working path and also allows you to force the path manually.	—	—
Fiber	NCS 2000	Primary path fiber is forcing path for working trail.	—	—
Regeneration Platform	NCS 2000	Displays the platform of the regeneration site	—	—
Regen Sites	NCS 2000	Choose the regeneration site.	Lists the available sites.	—
Wavelength	NCS 2000	Click **Edit** to choose the wavelength. The default option is Auto.	Lists various wavelengths	—
ODU Timeslot	NCS 2000	Enter the ODU timeslot value.	—	—
Section Wavelength(s)	NCS 2000	Displays the selected **Wavelength**.	—	—
Src Channel Type	NCS 2000	Choose the type of source channel.	• Auto: *Auto* option is the contentionless demand. • Contentionless • Colorless • Colored	Auto
Dst Channel Type	NCS 2000	Auto-populated based on the Src channel type. You can still change the type. When you change the Dst channel type, Src channel type also changes to the same.	• Auto: Auto option is the contentionless demand. • Contentionless • Colorless • Colored	Same as the Src channel type.

Property	Platform	Description	Available options	Default
Path	NCS 2000	Secondary path is the protected path when the primary path fails. This path is the second best path after the primary path.	—	—
Fiber	NCS 2000	Secondary path fiber is for protected service, forcing path for the protected trail.	—	—
Regeneration Platform	NCS 2000	Displays the platform of the regeneration site	—	—
Regen Sites	NCS 2000	Choose the regeneration site.	Lists the available sites.	—
Wavelength	NCS 2000	Click **Edit** to choose the wavelength. The default option is Auto.	Lists various wavelengths	—
ODU Timeslot	NCS 2000	Enter the ODU timeslot value.	—	—
Section Wavelength(s)	NCS 2000	Displays the selected **Wavelength**.	—	—
Src Channel Type	NCS 2000	Choose the type of source channel.	• Auto: *Auto* option is the contentionless demand. • Contentionless • Colorless • Colored	Auto
Dst Channel Type	NCS 2000	Choose the type of destination channel.	• Auto: Auto option is the contentionless demand. • Contentionless • Colorless • Colored	Same as the Src channel type.

NCS1K domain properties

This table describes the various NCS1K domain properties for services.

Table 79: NCS1K domain properties

Property	Platform	Description	Available options	Default
Client Type	NCS 2000	Displays the client type. By default, client type is OTU4.	—	—
Interface Type	NCS 2000	Displays the interface type. By default, interface type is BH.	—	—
Trunk Mode	NCS 2000	Choose the trunk mode. **Note** Based on the selected trunk mode, Baud rates are filtered.	• 200G • 300G	200G
Baud Rate	NCS 2000	Choose whether the Baud rates mode as 60 or 69GBd.	• 60GBd • 69GBd	60GBd

Modify service properties for NCS 1010

Table 80: Feature History

Feature Name	Release Information	Feature Description
Transponder Support on NCS 1010 Network	Cisco ONP Release 24.3.1	You can now create optical services for the NCS 1010 network. You can include cards such as NCS1K14-2.4T-K9, NCS1K14-2.4T-X-K9, and NCS1K4-QXP-K9 as native transponder instead of optical sources and check the feasibility of the network. You can generate the traffic report and BoM with the exact count of cards and pluggables based on the requirements, along with licensing details for the OLT card and the transponders.

From Release 24.3.1, you can add services between two NCS 1010 or NCS 1020 sites. Follow these steps to modify the properties of the service.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the NCS 1010 network where you want to modify the service properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, click the **Service** tab.

Step 4 Choose the service under the network tree, and modify the properties in the right pane. See these references for the property descriptions.

- General service properties for NCS 1010 network , on page 183
- Primary path service properties for NCS 1010 network, on page 184
- Primary channel service properties for NCS 1010 network, on page 186

Step 5 Click **Update**.

General service properties for NCS 1010 network

This table lists the general service properties applicable for the NCS 1010 network.

Table 81: General service properties for NCS 1010 network

Property	Platform	Description	Available options	Default
General				
Name	NCS 1010	Services are named Service-1, Service-2, and so on. You can edit the name.	—	—
Type	NCS 1010	Choose the traffic type.	• 100GE • 400GE	100GE
Protection	NCS 1010	Protection is not supported for the NCS 1010 network.	Unprotected	Unprotected
Source	NCS 1010	Displays the source site name.	—	—
Destination	NCS 1010	Displays the destination site name.	—	—

Property	Platform	Description	Available options	Default
Encryption	NCS 1010	Check this check box to enable encryption on the service. Encrypted and non-encrypted services will not be aggregated. They use separate trunks. **Note** Encryption is supported only for NCS1K14-2.4T-X-K9 and NCS1K4-QXP-K9	—	—

Primary path service properties for NCS 1010 network

This table lists the primary path service properties applicable for the NCS 1010 network.

Table 82: Service properties for primary path in NCS 1010 network

Property	Platform	Description	Available options	Default
Path	NCS 1010	Displays the path of the service.	—	—
Fiber	NCS 1010	Select the fiber.	Displays the available fibers.	—
Regen Sites	NCS 1010	Select the regeneration site.	Displays the possible regeneration site.	—

Property	Platform	Description	Available options	Default
Channel	NCS 1010	Choose whether to create a new circuit or use an existing circuit. **Note** When you select an existing circuit with the following conditions: • **Traffic Type** is set to *Transponder Card* under the circuit properties. • **Trunk Mode** and **Baud Rate** are already defined under the Trail properties You will not be able to select **Trunk Mode** and **Baud Rate** under the Service properties. To edit these properties change the traffic type and change the **Channel** property to *Auto* or *Create New*.	• **Auto**:he system automatically chooses whether to create a new circuit or use an existing one. • **Create New**: A new circuit is created, and no existing circuits are used. • Existing circuits (shows the names of the circuits that are already created): Select an existing circuit to use. To specify a particular circuit, choose one from the drop-down list.	Auto
Band Type	NCS 1010	Displays whether it is a C-band type or L-band type.	—	—
Section Wavelengths	NCS 1010	Choose the wavelength for the regen site that is selected.	Displays multiple fixed grid wavelengths	Auto
Trunk mode	NCS 1010	Choose the trunk mode of the line card.	For NCS1K14-2.4T-K9 and NCS1K14-2.4T-X-K9, the trunk rate ranges from 400G to 1200G. For NCS1K4-QXP-K9, the trunk rate ranges from 100G to 400G.	Auto
Baud Rate	NCS 1010	Displays the baud rate that is suitable for the trunk rate.	—	—

Property	Platform	Description	Available options	Default
Wavelength	NCS 1010	Click **Edit** to choose the wavelength.	• Auto • Fixed Grid(64 Chs)	Auto

Primary channel service properties for NCS 1010 network

This table lists the primary channel service properties applicable for the NCS 1010 network.

Table 83: Service properties for primary channel in NCS 1010 network

Property	Platform	Description	Available options	Default
Primary Channel Source				
Card Type	NCS 1010	Select the card for the service.	• Auto • NCS1K14-2.4T-K9 • NCS1K14-2.4T-X-K9 • NCS1K4-QXP-K9	Auto
Modulation	NCS 1010	Displays the type of modulation.	—	—
Bundle Mode	NCS 1010	This property is enabled when you select the NCS1K14-2.4T-X-K9 card. When enabled, routing is based on Muxponder mode and supports trunk modes of 600G or 1000G. **Note** Default value for trunk mode will be 600G when bundle mode is enabled.	—	—
Trunk Mode	NCS 1010	Select a trunk mode from the drop-down list.	The options for trunk mode changes based on the selected Card Type.	Auto
Sub Mode	NCS 1010	This field is applicable only for the NCS1K4-QXP-K9 card. Choose the required sub mode.	• 1_E • 0_S	1_E —

Property	Platform	Description	Available options	Default
FEC	NCS 1010	Displays the type of FEC supported on the chosen card.	—	—
Src Add/Drop Type	NCS 1010	Select the Add/drop type.	• Auto • Colored • Colorless • Omni-colored • Omni-colorless	Auto
Client Interface	NCS 1010	Choose the client pluggable for the selected card.	• Auto • QDD-400G-FR4-S • QDD-400G-AOC1M • QDD-400G-DR4-S • QDD-400G-LR4-S	Auto
Client Port	NCS 1010	This property is enabled only when a trunk mode is selected. Choose the client port.	• Auto • 1 • 2 • 3 • 4 • 5 • 6	Auto
Trunk Type	NCS 1010	The trunk pluggables that are applicable for the selected card are displayed. Choose the required trunk pluggable.	—	—
Primary Channel Destination				
Card Type	NCS 1010	Select the card for the service.	• Auto • NCS1K14-2.4T-K9 • NCS1K14-2.4T-X-K9 • NCS1K4-QXP-K9	Auto

Property	Platform	Description	Available options	Default
Modulation	NCS 1010	Displays the type of modulation.	—	—
Bundle Mode	NCS 1010 t	This property is enabled when the NCS1K14-2.4T-X-K9 card is selected. When selected, routing will be based on Muxponder mode and supports Trunk modes 600G or 1000G. **Note** The default value for trunk mode is 600G when bundle mode is enabled.	—	—
Trunk Mode	NCS 1010	Select a trunk mode from the drop-down list.	he options for trunk mode change based on the selected card type.	Auto
Sub Mode	NCS 1010	This field is applicable only for the NCS1K4-QXP-K9 card. Choose the required sub mode.	• 1_E • 0_S	1_E
FEC	NCS 1010	Displays the type of FEC supported on the chosen card.	—	—
Dst Add/Drop Type	NCS 1010	Select the Add/drop type.	• Auto • Colored • Colorless • Omni-colored • Omni-colorless	Auto
Client Interface	NCS 1010	Select the client pluggable for the selected card.	• Auto • QDD-400G-FR4-S • QDD-400G-AOC1M • QDD-400G-DR4-S • QDD-400G-LR4-S	Auto

Property	Platform	Description	Available options	Default
Client Port	NCS 1010	This property is enabled only when a trunk mode is selected. Choose the client port.	—	—
Trunk Type	NCS 1010	The trunk options that are applicable for the selected card are displayed. Choose the required trunk pluggable.	See Supported Cards and Pluggables, on page 323	Auto

Services aggregation

Table 84: Feature History

Feature Name	Release Information	Feature Description
Services Aggregation	Cisco ONP Release 4.1	The services aggregation feature allows two or more services to share the same trunk port or channel. By default, the services are added to the DefaultGroup. You can export aggregation reports.

You can use services aggregation to allow multiple services to share the same connection point, such as a trunk port or channel. This ability to share is determined by the characteristics defined in their **Service Group**.

Specifically, when you add services to a 1K-2K-4K Traffic site within an **SSON network**, the system automatically creates a **DefaultGroup** under **Services** in the network tree. All the services you add are then automatically associated with **DefaultGroup**.

Create a new service group

Follow these steps to create a new service group.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network where you want to create a new service group.

Step 2 Click the **Ellipsis** icon on the right side of **Services** under the network tree and choose **Create Service Group**.

A new service group appears under Services.

Modify service group properties

Follow these steps to modify the properties of a service group.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the service group properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, click the **Services** tab, and click a service group.

Step 4 Modify the service group properties as required.

See Service group properties, on page 190.

Step 5 Click **Update**.

Service group properties

This table describes various service group properties.

Table 85: Service group properties

Property	Platform	Description	Available options	Default option
General				

Property	Platform	Description	Available options	Default option
Name	NCS 2000	Displays the group name. Edit the name if needed.	—	By default, the service name is based on the source and destination sites and the number of services between them. For example, if there are two services between site 1 and site 2, the name of the services are Site-1-Site-2-1 and Site-1-Site-2-2, respectively.
Demand Types	NCS 2000	Select the demand type. For default group all demand types are available, and you cannot edit them.	—	—
Default Group	NCS 2000	Indicates whether the service group is a default group or a user created group.	—	—
NCS 4 K				
Exclusive LC Usage	NCS 4000	Indicates whether the services belonging to this group must have an exclusive Line Card (LC). For example, when you check this check box, neither the Client LC nor the Trunk LC of the services belonging to this group can be shared by services belonging to any other groups.	—	—

Property	Platform	Description	Available options	Default option
Symmetric Aggregation	NCS 4000	Indicates whether this group allows aggregation of only symmetric services. Services are symmetric if they have same protection scheme. Following are the various protection schemes: For Example, all “1+1” services are symmetrical. If you check this check box, this service group allows aggregation of only symmetrical services. For example, “Unprotected” can be aggregated only with “Unprotected”, “1+R” only with “1+R”, “1+1” only with “1+1”, and so on. If this check box is unchecked, this service group allows aggregation of symmetrical and unsymmetrical services together. For example, “Unprotected” can be aggregated with either “Unprotected”, “1+R”, “1+1” “1+1+R” or “1+1+R+R”. See Rules for aggregating services, on page 192.	—	—
NCS 1 K				
Exclusive LC Usage	NCS 1004	Same as NCS 4 K.	—	—
Symmetric Aggregation	NCS 1004	Same as NCS 4 K.	—	—

Rules for aggregating services

These rules must be satisfied for any two services, whether symmetrical or non-symmetrical, to be aggregated:

1. Both services must have identical source and destination points.
2. The paths of the two services must align for the same path types.
   - Example for symmetric aggregation:

     When aggregating two "1+1" services, the working path of the first service must match the working path of the second service, and similarly, the protection paths of both services must also match.

- Example for non-symmetric aggregation:

  When aggregating a "1+1" service with a "1+1+R" service, the working path and protection path of the first service must match the corresponding paths of the second service. However, the restoration path of the second service can differ.

3. Both services must use the same wavelength for the same path types.
   - If the wavelength is set to "auto," it can be aggregated with either another "auto" wavelength or a fixed wavelength.
4. Both services must have the same trunk mode configuration for the same path types.
5. The regeneration sites for both services must align for the same path types.
6. The demand type is not a constraint for aggregation, except when considering trunk capacity availability.

Associate a service with the newly created group

By default, the services are associated with the **DefaultGroup**. However, you can change the group.

Follow these steps to associate a service to the newly created group.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 In the network tree, click the service that you want to associate to a group.

You can view the properties of the network at the bottom of the network tree.

Step 2 Selct the group from the **Service Group** drop-down list.

Step 3 Click **Update**.

Note
For an LNI-imported network, all services are in the Default group by default. When you upgrade the LNI-imported network for the first time, you can move the services to other newly created Service Groups without unlocking them. For later upgrades, unlock the services before moving them between Service Groups. The Service Groups stay locked during upgrade mode unless you perform a complete network-level unlock.

Export aggregation reports

Follow these steps to export the service aggregation reports.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open an analyzed network to export the aggregation reports.
Step 2 Choose **Export** > **Service Aggregation**.
Step 3 Save the aggregation report as an Excel file to your local system.

Modify wave properties

Table 86: Feature History

Feature Name	Release Information	Feature Description
PSM Support on Non-SSON Network	Cisco ONP Release 24.3.1	The **PSM-channel** option is now available as a **Protection Type** under the Wave properties for NCS 2000 non-SSON networks. This option allows you to use PSM channel trunk protection with the PSM card during network design, in addition to existing client protection. You can verify the optical feasibility for both working and protection paths, providing all necessary parameters and connections for deployment.

Follow these steps to modify the properties of the wave.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the wave properties.
Step 2 Choose **Network** > **Entity Editor**.
Step 3 In the **Entity Editor** window, click the **Services** tab, and click a wave.
Step 4 Modify the wave properties as required.

See Wave properties, on page 195.

Step 5 Click **Update**.

Wave properties

This table describes various wave properties.

Table 87: Wave properties

Property	Platform	Description	Available options	Default option
General				
Label	NCS 2000	Displays the name of the wave.	—	By default, the wave is named based on the source and destination sites and the number of waves between them. For example, if there are two waves defined between site 1 and site 2, the waves are named as Site-1-Site-2-1 and Site-1-Site-2-2, respectively. Edit the name if needed.
Source Site	NCS 2000	Displays the source site name.	—	—
Destination Site	NCS 2000	Displays the destination site name.	—	—
Traffic Type	NCS 2000	Select the traffic type.	• Optical Source • 100GE • 10GE LAN PHY • 40GE LAN PHY • Fiber Channel 10G • Fiber Channel 16G • Fiber Channel 8G • OC-192/STM-64 • OTU2 • OTU2e • OTU4 • Pluggable Card	Optical Source

Property	Platform	Description	Available options	Default option
Protection Type	NCS 2000	Select the protection type.	• Unprotected • Client 1+1 • PSM-Channel The *PSM-channel* option is available only for non-SSON networks. PSM-channel is not supported with the colorless Add/Drop MF-6AD-COFS. When you select the *PSM-Channel* option, the Protection Switch Module (PSM) for the Cisco ONS15454 Multiservice Transport Platform (MSTP) (15454-PSM card) is placed in the network to provide protection at the trunk level. The PSM card splits the traffic originated by transponder trunk across the working and protected TX ports. For more information on protection types, see #unique_170.	Unprotected
Forecast	NCS 2000	Check this check box to change a present wave to a forecast wave.	—	—
Encryption	NCS 2000	Check this check box to enable encryption.	—	—

Modify media channel properties

Follow these steps to modify properties of the media channel.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the media channel properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, click the **Services** tab, and click a media channel.

Step 4 Modify the media channel properties as required.

See Media channel properties, on page 197.

Step 5 Click **Update**.

Media channel properties

This table describes various media channel properties.

Table 88: Media channel properties

Property	Platform	Description	Available options	Default option
General				
Label	NCS 2000	Displays the media channel name.	—	By default, the media channel is named based on the source and destination sites and the number of media channels between them. For example, if there are two media channels between site 1 and site 2, they are named as Site-1-Site-2-1 and Site-1-Site-2-2, respectively. Edit the name if required.
Source Site	NCS 2000	Displays the source site name.	—	—
Destination Site	NCS 2000	Displays the destination site name.	—	—

Property	Platform	Description	Available options	Default option
Traffic Type	NCS 2000	Select the traffic type.	• Optical Source • 100GE • 10GE LAN PHY • 40GE LAN PHY • Fiber Channel 10G • Fiber Channel 16G • Fiber Channel 8G • OC-192/STM-64 • OTU2 • OTU2e • OTU4 • Pluggable Card	Optical Source
Protection Type	NCS 2000	Select the protection type. For more information on protection types, see #unique_170. For Client 1+1, ensure that the sites have contentionless sides for the analysis to be successful. By default, Cisco ONP finds both span and node disjoint path for Client1+1 protected waves, but allows you to force span and node disjoint path.	• Unprotected • Client 1+1	Unprotected
Forecast	NCS 2000	Check this check box to change a present wave to a forecast wave.	—	—
Encryption	NCS 2000	Check this check box to enable encryption.	—	—

Modify circuit properties

Follow these steps to modify the properties of the circuit in an NCS 1010 network.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the circuit properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, click the **Services** tab, and click a circuit.

Step 4 Modify the circuit properties as required.

See Circuit properties, on page 199.

Step 5 Click **Update**.

Circuit properties

This table describes various circuit properties.

Table 89: Circuit properties

Property	Platform	Description	Available options	Default option
General				
Label	NCS 1010 NCS 1001	Displays the name of the circuit.	—	By default, the circuit is named based on the source and destination sites and the number of circuits between them. \ For example, if there are two circuits defined between site 1 and site 2, the circuits are named as Site-1-Site-2-1 and Site-1-Site-2-2 respectively. Edit the name if required.
Source Site	NCS 1010 NCS 1001	Displays the name of the source site.	—	—
Destination Site	NCS 1010 NCS 1001	Displays the name of the destination site.	—	—

Property	Platform	Description	Available options	Default option
Traffic Type	NCS 1010 NCS 1001	Select the traffic type.	• Optical Source • Pluggable Card • Transponder Card	Optical Source
Protection Type	NCS 1010 NCS 1001	Select the protection type.	Currently, we support only Unprotected.	Unprotected
Forecast	NCS 1010 NCS 1001	Check this check box to change a present circuit to a forecast wave.	—	—
Encryption	NCS 1010	The Encryption property is enabled when you select *Line card* as the **Traffic Type**.	—	—

Modify trail properties

Table 90: Feature History

Feature Name	Release Information	Description
Bright ZR+ Pluggable Support	Cisco ONP Release 5.1	The Bright ZR+ pluggable can now be included in the network design by choosing them as **Card Type** or **Client Interface** under the **Trail** properties. This selection is available for all types of sites. The Bright ZR+ pluggable has high transmit optical power up to 0dBm, high transmit OSNR, and high-density QSFP-DD form factor.

Table 91: Feature History

Feature Name	Release Information	Description
Multilayer Nodes Enhancements	Cisco ONP Release 5.1	You can now choose from the full array of supported **Card Types** and **Client Interfaces** under the **Trail** properties option for the multilayer nodes. Previously, only a limited set of cards were available for selection. With this enhancement, you can design diverse networks leveraging the unique functionalities of all types of cards.

Follow these steps to modify the properties of the trail.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the trail properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, click the **Services** tab.

Step 4 Expand **Waves**, **Media Channels** or **Circuits**.

Step 5 Navigate to the required trail and click it.

Step 6 Modify the trail properties as required. See

- General trail properties, on page 201
- OTN trail properties, on page 204
- Source and destination trail properties, on page 204

Step 7 Click **Update**.

General trail properties

This table describes various general trail properties.

Table 92: General trail properties

Property	Platform	Description	Available options	Default option
Label	NCS 2000 NCS 1010 NCS 1001	Displays the name of the trail.	—	—
Path of Wave	NCS 2000 NCS 1010 NCS 1001	Select a fiber.	—	—
Regen Sites	NCS 2000 NCS 1010	Select the regeneration site.	—	—
Source Site	NCS 2000 NCS 1010 NCS 1001	Displays the source site name.	—	—
Destination Site	NCS 2000 NCS 1010 NCS 1001	Displays the destination site name.	—	—
Wavelength	NCS 2000 (Non-SSON)	Click **Edit** to choose the wavelength.	—	Auto
Central Wavelength [nm]	NCS 2000 NCS 1010 NCS 1001	Click **Edit** to select the central wavelength.	Multiple C-band and L-band wavelengths are listed. **Note** If you select *L-Band* as **Band Type**, the L-band wavelength options appear along with C-band wavelengths for NCS 1010 R7.9.1.	Auto
Multicarrier	NCS 2000 NCS 1010	Indicates whether the transmission is a multicarrier transmission.	—	—

Property	Platform	Description	Available options	Default option
Trunk Mode	NCS 2000	The trunk mode can be edited only when you choose *400G-XP-LC* as **Card Type**.	See Supported Cards and Pluggables, on page 323	Auto
	NCS 1010	The trunk mode can be edited only when the **Traffic Type** is set to *Line card* under the circuit properties.	See Supported Cards and Pluggables, on page 323	Auto
	NCS 1001	Trunk mode is noneditable.	—	—
Number Of Carrier(s)	NCS 1010	Enter the to add the required number of carriers to the channel.	2-16 **Note** If you select *Colorless* or *Omni-Colorless* as **Add/Drop Type** and *Auto* or *OLT/LC/AddDrop* as **Add/Drop Connector**, this property becomes editable. **Note** When you enable bundle mode in line circuit, this value is 2 and non-editable.	1
Baud Rate	NCS 1010	Select the baud rate that is suitable for the selected trunk rate.	—	—
Filtering Penality	NCS 2000 NCS 1010	Displays the value of the penalties that are caused by the different filter types (OADM, and ROADM).	—	—
OSNR Forward [dB]	NCS 2000 (non-SSON)	Displays the forward optical signal to noise ratio.	—	—
OSNR Reverse [dB]	NCS 2000 (non-SSON)	Displays the reverse optical signal to noise ratio.	—	—

Property	Platform	Description	Available options	Default option
Band Type	NCS 1010	Select the required band type for the circuit. **Note** When you select *L-Band* as **Band Type**, then the **Add/Drop Type** field automatically selects *Colorless* and becomes disabled.	• Auto • L-band • C-band	Auto
	NCS 1001	This property is noneditable. *C-Band* is the default option.		C-band

OTN trail properties

This table lists and defines OTN trail properties.

Property	Platform	Description	Available options	Default option
OTN (non-SSON)			—	—
ODUTimeslot	NCS 2000 (non-SSON)	Displays the Optical Data Unit timeslot.	—	—
SRLGs	NCS 2000 (non-SSON)	Displays the SRLGs associated with the trail.	—	—
OTN Hops	NCS 2000 (non-SSON)	Displays the number of OTN hops.	—	—
Quantity	NCS 2000 (non-SSON)	Displays the number of OTN services on the trail.	—	—

Source and destination trail properties

This table lists and defines various source and destination trail properties.

Property	Platform	Description	Available options	Default option
Source				

Property	Platform	Description	Available options	Default option
Card Type	NCS 2000 NCS 1010	Select the card used in the source site.		200G-SD-FEC

Property	Platform	Description	Available options	Default option
			See Supported Cards and Pluggables, on page 323 and Supported Optical Sources, on page 337 for more details about the list of supported cards. From Release 5.1, Bright ZR+ pluggables are supported for all the types of sites. Also, there are no limitations on the type of cards that can be chosen for the multilayer nodes. **Note** • Non-SSON • Colored and colorless—Baud rates less than 42 are supported and listed. • Colorless—Mean power less than –4.4 is supported and listed. • SSON • Colored—Baud rates less than 65 are supported and listed. • Colorless—All interfaces supported and listed. • Colorless—Mean power less than –4.4 are supported and listed. Mean power = (ochData.txRange.max +	

Property	Platform	Description	Available options	Default option
			ochData.txRange.min)/2 If contentionless is selected for the *source channel type*, the QDD interfaces are not supported.	
	NCS 1001	Select a card type from the drop-down list.	See Supported Cards and Pluggables, on page 323 and Supported Optical Sources, on page 337 for more details about the list of supported cards.	

Property	Platform	Description	Available options	Default option
Client Interface	NCS 2000 NCS 1010	Select a pluggable from the drop-down list.	The pluggables suitable for the chosen card type are displayed. See Supported Cards and Pluggables, on page 323 for more information on the list of supported pluggables. From Release 5.1, Bright ZR+ pluggables are supported for all the types of sites. Also, there are no limitations on the type of cards that can be chosen for the multilayer nodes. The pluggable FR-1(QSFP-100G-FR-S) is supported on the client ports of the 400G-XP LC starting from NCS 2000 Release 11.1.0. The pluggable ERL (QSFP-100G-ERL-S) is supported on the client ports of the 400G-XP LC with 100G traffic type starting from NCS 2000 Release 11.1.3. **Note** When you export the NCS 2000 R11.1.3 network, the Cisco ONP exports the NCS 2000 R11.1.0 report. You must edit the exported report for R11.1.3.	Auto
	NCS 1001	This property is noneditable.	—	Auto

Property	Platform	Description	Available options	Default option
Add/Drop Type	NCS 2000	Select the type of Add/Drop.	The available options are: • Auto • Colorless • Colored	Auto
	NCS 1010	Select the type of Add/Drop.	The available options are: • Auto • Colorless • Colored • Omni-Colorless • Omni-Colored	Auto
	NCS 1001	This property is noneditable. *Colored* is the default option.	—	Colored
Add/Drop Connector	NCS 1010	**Note** This property appears when you select **Add/Drop Type** as *Colorless*. Select the type of Add/Drop Connector.	The available options are: • Auto—Auto is OLT/LC/AddDrop. • OLT/LC/AddDrop—Combination of OLT LC ports and CCMD-16 LC ports • OLT/LC—Direct OLT LC ports • OLT/MPO/AddDrop—Combination of OLT LC ports and break out units such as BRK-8, BRK-16, BRK-24 MPO ports **Note** This property is applicable only for Enhanced NCS 1010 line cards from R7.11.1.	Auto
Modulation	NCS 1010	Displays the type of modulation.	—	—

Property	Platform	Description	Available options	Default option
Bundle Mode	NCS 1010	This property is enabled when the NCS1k14-2.4T-X-K9 card is selected. When selected, the routing is based on Muxponder mode and supports Trunk modes 600G or 1000G.	—	—
Sub Mode	NCS 1010	This field is applicable only for the NCS1K4-QXP-K9 card. Select the required sub mode.	The available options are: • 1_E • 0_S	1_E
FEC	NCS 1010	Displays the type of FEC supported on the chosen card.	The available options are: • OFEC • CFEC	OFEC
Trunk Type	NCS 2000 NCS 1010	Select the trunk type from the drop-down list.	See Supported Cards and Pluggables, on page 323 and Supported Optical Sources, on page 337 for more details about the list of supported cards.	Auto
	NCS 1001	This property is noneditable.	—	Auto
Contentionless Side	NCS 2000	Select the contentionless side from the drop-down list.	Displays the available contentionless sides.	Auto
Launch Power	NCS 1010 NCS 1001	Enter a launch power value. D	—	Auto
Destination				
Card Type	NCS 2000 NCS 1010	The destination card type is auto populated based on the source card type chosen.	—	—
	NCS 1001	Select the card type from the drop-down list.	See Supported Cards and Pluggables, on page 323 and Supported Optical Sources, on page 337 for more details about the list of supported cards.	[illegible]

Property	Platform	Description	Available options	Default option
Client Interface	NCS 2000 NCS 1010	Select a pluggable from the drop-down list. The pluggables suitable for the chosen card type are displayed.	See Supported Cards and Pluggables, on page 323 and Supported Optical Sources, on page 337 for more details about the list of supported cards.	Auto
	NCS 1001	This property is noneditable.	—	Auto
Trunk Type	NCS 2000 NCS 1010	Select the trunk type from the drop-down list.	See Supported Cards and Pluggables, on page 323 and Supported Optical Sources, on page 337 for more details about the list of supported cards.	Auto
	NCS 1001	This property is noneditable.	—	Auto
Add/Drop Type	NCS 2000	Select the type of the Add/Drop.	The available options are: • Auto • Contentionless • Colorless • Colored	Auto
	NCS 1010	Select the type of the Add/Drop.	The available options are: • Auto • Colorless • Colored • Omni-Colorless • Omni-Colored	Auto
	NCS 1001	This property is noneditable.	—	Colored

Property	Platform	Description	Available options	Default option
Add/Drop Connector	NCS 1010	**Note** This property appears when you select **Add/Drop Type** as *Colorless*. Select the type of Add/Drop Connector. **Note** This property is applicable only for Enhanced NCS 1010 line cards.	The available options are: • Auto—Auto is OLT/LC/AddDrop. • OLT/LC/AddDrop—Combination of OLT LC ports and CCMD-16 LC ports • OLT/LC—Direct OLT LC ports • OLT/MPO/AddDrop—Combination of OLT LC ports and break out units such as BRK-8, BRK-16, BRK-24 MPO ports	Auto
Modulation	NCS 1010	Displays the type of modulation.	—	—
Bundle Mode	NCS 1010	This property is enabled when the NCS1k14-2.4T-X-K9 card is selected. When selected, the routing is based on Muxponder mode and supports Trunk modes 600G or 1000G.	—	—
Sub Mode	NCS 1010	This field is applicable only for the NCS1K4-QXP-K9 card. Select the required sub mode.	The available options are: • 1_E • 0_S	1_E
FEC	NCS 1010	Displays the type of FEC supported on the chosen card.	—	—
Trunk Type	NCS 1010	Select the trunk pluggable.	See Supported Cards and Pluggables, on page 323	Auto
Contentionless Side	NCS 2000	Select the contentionless side from the drop-down list.	Displays the available contentionless sides.	Auto
Launch Power	NCS 1010 NCS 1001	Enter a launch power value.	—	Auto

Modify section properties

Follow these steps to modify properties of the section.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the section properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, click the **Services** tab.

Step 4 Expand **Waves**, **Media Channels** or **Circuits**.

Step 5 Navigate to a trail and select a section within the trail.

Step 6 Modify the section properties.

The section and the trail have the same properties. See these references for descriptions of the properties.

- General trail properties, on page 201
- OTN trail properties, on page 204
- Source and destination trail properties, on page 204

Step 7 Click **Update**.

Modify side properties

Table 93: Feature History

Feature Name	Release Information	Feature Description
Colorless Add/Drop Configuration with SMR-9 Card	Cisco ONP Release 24.3.1	In addition to the SMR-20 card, the colorless Add/Drop configuration can now be added to both SSON and non-SSON networks using the SMR-9 card, providing more flexibility to use the available SMR-9 ports for add/drop functionality.

Table 94: Feature History

Feature Name	Release Information	Feature Description
NCS2K-RMN-CTP-C+L support	Cisco ONP Release 5.0	Cisco ONP now supports the passive module, NCS2K-RMN-CTP-C+L (C- and L-band counterpropagating Raman amplifier), starting from the NCS 2000 system release 12.3.1 for SSON and non-SSON networks.

Table 95: Feature History

Feature Name	Release Information	Feature Description
Support for NCS2K-MF-CL-SC (C and L-band combiner and splitter)	Cisco ONP Release 4.2	Cisco ONP supports the passive module, NCS2K-MF-CL-SC (C and L-band combiner and splitter), starting from the NCS 2000 system release 12.2 for SSON and non-SSON networks. This feature enables combining C and L band wavelengths.

Use this procedure to modify the properties of a side in a site.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the side properties of a site.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, navigate to **Sites** > **Site** > **Side**.

Step 4 Modify the side properties as required. See these references for the property descriptions.

- General side properties, on page 214
- Bill of materials and layout properties for sides, on page 221
- Enhanced face plate properties for sides, on page 222

Step 5 Click **Update.**

General side properties

This table describes various general properties for the sides of a site.

Options	Platform	Description		
Label	NCS 2000 NCS 1010 NCS 1001	Displays the label of the side. Editable for NCS 1001. **Note** For L-band nodes, the suffix **L** is added to the side label.	—	—
Type	NCS 2000 NCS 1010 NCS 1001	Displays the type of the side. You cannot edit this property.	—	—
Omni Variant	NCS 1010	Select the type of omnidirectional add/drop stage.	• Dual OLT • 4x4 COFS (supports only C-band Omni colorless) You can choose 4x4 COFS only if the **Structure** under the **Sites** properties is *Line*. **Note** In a site, all Omni edges must have the same Omni Variant. Changing the Omni Variant for one edge updates the variant for all edges.	Dual OLT
Omni Directional Ports	NCS 1010	Enter the number of omnidirectional ports. It is applicable only for the 4x4COFS Omni variant. The available values range from 1 through 4, with a default value of 4.	—	—
Node Address	NCS 1010 NCS 1001	Enter the node address	—	—

Options	Platform	Description		
MPO Cable	NCS 1010	Choose the MPO cable.	• Auto • 16MPO-MPO • 24MPO-MPO	Auto
Colorless Ports (Displayed for Line side)	NCS 2000	Enter the number of colorless ports. From Release 24.3.1, this property is enabled for the SMR-9 card.	—	—
Contentionless Ports (Displayed for Contentionless side)	NCS 2000	Choose the number of contentionless ports.	1-16	16

Options	Platform	Description		
Enable C+L Band S/C (Displayed for Line side type)	NCS 2000		—	—

Options	Platform	Description		
		Cisco ONP supports the following passive modules: • NCS2K-MF-CL-SC (C and L-band combiner and splitter), starting from the NCS 2000 system release 12.2 for SSON and non-SSON networks. Check this check box to enable the NCS2K-MF-CL-SC card. This card is supported for ROADM, OLA, and traffic nodes, but not on the passthrough node. **Note** When you enable this option on a side: • It is automatically enabled on the side that is connected to the selected side through a fiber. • The fiber property *Raman Amplified is* automatically disabled, and the opposite way. • This card introduces a certain amount of attenuation and insertion loss that is reflected in the		

Options	Platform	Description		
		ANS parameters. The NCS2K-MF-CL-SC module does not appear in the layout.		

Options	Platform	Description		
		• NCS2K-RMN-CTP-C+L (C- and L-band counterpropagating Raman amplifier), starting from the NCS 2000 system release 12.3 for SSON and non-SSON networks. Check this check box to enable the NCS2K-RMN-CTP-C+L card. **Note** When you enable this option on a side: • If you enable the fiber property *Raman Amplified*, then the *NCS2K-RMN-CTP-C+L* card is automatically forced. • If you disable the fiber property *Raman Amplified*, then the *NCS2K-MF-CL-SC* card is automatically forced. • Fiber property *Raman Amplified is* automatically disabled for NCS 2000 system release 12.2. The NCS2K-RMN-CTP-C+L module appears in the layout.		
Band Type	NCS 1010 NCS 1001	Choose the required band type.	• C-Band • C+L Futuristic	C-Band

Options	Platform	Description		
NCS 1010 Line Card	NCS 1010	Choose whether the Line Card faceplate is Standard Faceplate or Enhanced Faceplate. **Note** If you assigned a **Scalable Upto Degree** value that is supported for both standard and enhance at the site level, then you can select *Standard Faceplate* in one side and *Enhanced Faceplate* in another side.	• Standard Faceplate • Enhanced Faceplate	Standard Faceplate
OSC Pluggable	NCS 1001	Choose the type of OSC pluggable.	• CWDM-SFP-1510 • CWDM-SFP-1610 • ONS-SC-Z3-1510 • ONS-SC-Z3-1610 • ONS-SE-155-1510	CWDM-SFP-1510

Bill of materials and layout properties for sides

This table describes various bill of materials and layout properties for the sides of a site.

Table 96: Bill of materials and layout properties for sides

Options	Platform	Description
Bill of Material		
License Suite	NCS 1010	Choose whether the License Suite is Essential (RTU +SIA3) or Advanced (RTU +SIA3).
	Layout	
Power Supply	NCS 1010 NCS 1001	Choose the type of Power Supply. The available options are Auto, AC Power, and DC Power. The default option is Auto. With the *Auto* option, the default power supply is selected as *DC Power*.

Options	Platform	Description
Chassis Type	NCS 1010	Choose the type of chassis. The available options are: • NCS 1010 • NCS 1020
Controller Card	NCS 1010	Choose the type of the controller card. The available options are: • Auto • NCS1010-CNTRL-K9 • NCS1010-CNTRL-B-K9
	NCS 1001	NCS1K-CNTLR2 is default.
Redundant Controller Card	NCS 1010 NCS 1001	Displays the redundant controller card, if any. Else displays No.
UTS AC Power Cables	NCS 1010 NCS 1001	Choose the type of cables to be used for the AC power supply. You can choose the cables when the **Power Supply** is set as *AC Power* or *DC Power*.
Redundant Power Scheme	NCS 1010 NCS 1001	Choose the redundant power scheme from the drop-down list to configure the number of working and protected power units for the chassis. The available options are Auto, 1+0, and 1+1.
MF Unit	NCS 1010 NCS 1001	Choose the mechanical frame for the passive optical modules from the drop-down list. The options available are Auto, MF-1RU, and MF-4RU.
Direct LC Add/Drop	NCS 1010	Choose the number of LC ports to reserve for Direct Add/Drop connection. The range of values is 0–14. This property appears for networks from R7.10.1. The chosen option will not be used for Degree Connection.

Enhanced face plate properties for sides

This table describes various enhanced face plate properties for the sides of a site.

Table 97: Enhanced face plate properties for sides

Options	Platform	Description	Available options	Default
Degree Priority	NCS 1010	Choose the port type for interconnect degree priority. **Note** This field appears only when you select **NCS 1010 Line Card** as *Enhanced Faceplate*.	• LC Ports • MPO Group	LC Ports
Direct LC Add/Drop	NCS 1010	Choose the number of LC ports to reserve for Direct Add/Drop connection. This property appears for networks from R7.10.1. The chosen option will not be used for Degree Connection.	The range of values is 0–14.	

Modify C-band amplifier properties

Use this procedure to modify the properties of C-band amplifiers in a site.

Table 98: Feature History

Feature Name	Release Information	Feature Description
Manual Editing of Raman COP values	Cisco ONP Release 4.1	This feature allows you to edit the crosstalk values of the Raman COP amplifier in the SSON network, starting from NCS 2000 Release 11.1.

Table 99: Feature History

Feature Name	Release Information	Feature Description
Inline Amplifier	Cisco ONP Release 4.2	The **Inline Amplifier** option allows you to enable an inline amplifier in the network. You can simulate the optical feasibility of the network with and without an inline amplifier. Based on the colorless or colored add/drop type selected and the QSFP-DD pluggable status, a default inline amplifier is enabled for the network.

Note Make sure that SMR card is forced on the site before you update the c-band amplifier properties.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network where you want to modify the C-band properties.

Step 2 Choose **Network** > **Entity Editor**.

Alternatively, click the network name in the network tree, and click **Show Advanced Properties** displayed under the network tree.

Step 3 In the **Entity Editor** window, click the **Site** tab.

Step 4 Choose **Sites** > **Site** > **Site domain** > **Side** > **C-Band**.

Step 5 Click **C-Band Amplifier** and modify the properties. For detailed property descriptions, refer to:

- General properties of a C-band amplifier, on page 224
- C-band amplifier and attenuator options, on page 228
- Raman amplification properties of a C-band amplifier, on page 232

General properties of a C-band amplifier

This table lists the general properties of a C-band amplifier.

Options	Platform	Description	Available options	Default
PSD Shape	NCS 1010	Enter a value.	—	Auto

Options	Platform	Description	Available options	Default
Dual Band PSD Shape	NCS 1010	Enter a value.	—	Auto
Raman COP Tilt	NCS 2000	Enter a value.	—	Auto
Pre Tilt	NCS 2000 NCS 1010	Enter a value.	—	Auto
Raman Tilt	NCS 2000 NCS 1010	Enter a value.	—	Auto
Booster Tilt	NCS 2000 NCS 1010	Enter a value.	—	Auto

Options	Platform	Description	Available options	Default

Inline Amplifier	NCS 2000		• Yes—EDFA17 or EDFA35 amplifier is chosen as the default amplifier when you choose colored add/drop module MD-64-C or colorless add/drop MF-6AD-CFS, respectively. See Modify Add/Drop multiplexer properties, on page 236.
			• No—No amplifier can be forced.
			• Auto
			  • EDFA17 amplifier is chosen as the default amplifier when any one of the demands aggregated in MD-64-C has low launch power optical resource or QSFP-DD pluggable is forced.
			  • EDFA35 amplifier is chosen as the default amplifier when any one of the demands aggregated in MF-6AD-CFS has low launch power optical resource or QSFP-DD pluggable is forced.
				Auto

Options	Platform	Description	Available options	Default
		Choose whether inline amplifier can be forced. **Note** When you configure MF-6AD-CFS+EDFA35 in an SSON or non-SSON network, the optical results show system error for the demands of the same or different types. This error affects the what-if analysis. Hence we recommend choosing the appropriate channel and client attenuators so that the inline amplifier works at the proper gain range. You can view the amplifier added in the **IPC**, **BOM**, and **Layout** tabs, after the successful analysis. **Note** • When you add a QDD demand while upgrading a network where the Inline Amplifier property is set as *no*, the inline amplifier can be included in the network only if you unlock the side and set the Inline amplifier property as *Auto* or *Yes*. • Default colorless configuration does not require inline amplifier. • When there are no demands passing through the colored or colorless Add/Drop device,		

Options	Platform	Description	Available options	Default
		the forced Inline amplifier is not placed.		

C-band amplifier and attenuator options

This table describes the various C-band amplifier and attenuator options you can choose in the C-band proeprties.

Table 100: C-band amplifier and attenuator options

Options	Platform	Description		
From Fiber				

Options	Platform	Description		
Pre Amp	NCS 2000	Choose a preamplifier from the drop-down list. The default value is Auto. To enable this field for ROADM and Traffic nodes, you must choose SMR-9 or SMR-20 from the **Site Type** drop-down list under the Site properties. If you choose SMR-9, the available options are: • SMR9-FS-EDFA17-PRE • SMR9-FS-EDFA24-PRE • SMR9-FS-EDFA24-PRE If you choose SMR-20, the available options are: • SMR20-FS-EDFA17-PRE • SMR20-FS-EDFA24-PRE For the OLA site, the available options are: • EDFA35-35-PRE • EDFA35-24-PRE • OPT -EDFA-17 • OPT -EDFA-24		
	NCS 1010	The options available for NCS 1010 are: • Auto • Normal • Extended		
	NCS 1001	The options available for NCS 1001 are: • Auto • NCS1001-PRE-1 • NCS1001-PRE-2		

Options	Platform	Description		
	Output Power	NCS 2000 NCS 1001	The default value is Auto. You can enter a value.	
Attenuator In	NCS 2000	This field is enabled only when you choose a preamplifier. Choose an attenuator from the drop-down list. The available options are: • ATT-LC-2 • ATT-LC-3 • ATT-LC-5 • ATT-LC-7 • ATT-LC-10 • ATT-LC-12 • ATT-LC-15 • ATT-LC-18		
Attenuator Out	NCS 2000	This field is enabled only when you choose a preamplifier. Choose an attenuator from the drop-down list. The available options are: • ATT-LC-2 • ATT-LC-3 • ATT-LC-5 • ATT-LC-7 • ATT-LC-10 • ATT-LC-12 • ATT-LC-15 • ATT-LC-18		
To Fiber				

Options	Platform	Description		
Booster	NCS 2000	The default value is Auto. To enable this field for ROADM and Traffic nodes, you must choose SMR-9 or SMR-20 from the **Site Type** drop-down list under the Site properties. If you choose SMR-20, the default booster is 20SMR-FS-BST. If you choose SMR-9, default booster is SMR9-FS-EDFA-BST. For the OLA node, the available options are: • EDFA35-35-BST • EDFA35-24-BST • OPT -EDFA-17 • OPT -EDFA-24		
	NCS 1010	For NCS 1010, it is OLT-C-EDFA-Bst		
	NCS 1001	The option available for NCS 1001 is: • NCS1001-BST		
Output Power	NCS 2000 NCS 1001	The default value is Auto. You can enter a value.		

Options	Platform	Description		
Attenuator In	NCS 2000	This field is enabled only when you choose a booster. Choose an attenuator from the drop-down list. The available options are: • ATT-LC-2 • ATT-LC-3 • ATT-LC-5 • ATT-LC-7 • ATT-LC-10 • ATT-LC-12 • ATT-LC-15 • ATT-LC-18		
Attenuator Out	NCS 2000	This field is enabled only when you choose a booster. Choose an attenuator from the drop-down list. The available options are: • ATT-LC-2 • ATT-LC-3 • ATT-LC-5 • ATT-LC-7 • ATT-LC-10 • ATT-LC-12 • ATT-LC-15 • ATT-LC-18		

Raman amplification properties of a C-band amplifier

This table describes the Raman amplification properties of a C-band amplifier.

Table 101: Raman amplification properties of a C-band amplifier

Options	Platform	Description		
Raman Amp	NCS 2000	Choose the Raman amplifier from the drop-down list. **Note** To force the RAMAN amplifier on NCS 2000 node, you must enable **RAMAN amplified** on the fiber, else the **Raman Amp** is disabled, and network analysis fails. **Note** When you enable the fiber property **Raman amplified** and the side property **Enable C+L Band S/C** for NCS 2000 node, **Raman Amp** is automatically forced as *RAMAN-C+L*.	The available options for NCS 2000 ROADM and Traffic sites are: • Auto • RAMAN-CTP • RAMAN-COP-CTP Raman Amp can be forced only between two nodes. The available options for the OLA site are: • Auto • EDRA1-26 • EDRA1-35 • EDRA2-26 • EDRA2-35 • RAMAN-CTP	Auto
	NCS 1010	Choose the Raman amplifier from the drop-down list. **Note** For NCS 1010 network, when Raman is forced on one side, Raman is automatically forced on all connected sides (APC Domain). If there are passthrough nodes connected, Raman will be automatically enabled on both sides of the passthrough nodes.	• Auto • None • Raman	Auto
Raman CTP Gain	NCS 2000	Enter a value.	—	—

Options	Platform	Description		
Raman COP Gain	NCS 2000	Enter a value. This field is enabled only when you choose RAMAN-COP-CTP.	—	—
Raman Gain	NCS 1010	Displays the Raman gain.	—	—
Static Data	NCS 2000	By default, this option is disabled. Enable it to edit the crosstalk values of the Raman COP amplifier. **Note** Static data is supported from Release 11.1 for SSON network.	—	—
Linear XT Avg	NCS 2000	Edit the value of average linear crosstalk.		
Linear XT Six	NCS 2000	Edit the value average linear crosstalk sigma.		
NonLinear XT Avg	NCS 2000	Edit the value of average nonlinear crosstalk.		
NonLinear XT Sig	NCS 2000	Edit the value of average nonlinear crosstalk sigma.		

Note Raman crosstalk values are present in the ANS file under *logoparameters* section.

Modify L-Band Amplifier Properties

Use this task to modify the properties of an L-band amplifier in a site.

Before you begin

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network where you want to modify the L-band properties.

Step 2 Choose **Network** > **Entity Editor**.

Alternatively, click the network name in the network tree, and click **Show Advanced Properties** displayed under the network tree.

Step 3 In the **Entity Editor** window, click the **Site** tab.

Step 4 Choose **Sites** > **Site** > **Site domain** > **Side** > **L-Band**.

Step 5 Click **L-Band Amplifier** to modify the properties.

See L-band properties, on page 235.

Step 6 Click **Update**.

L-band properties

This table describes various L-band properties.

Table 102: L-band properties

Options	Platform	Description		
General				
PSD Shape	NCS 1010	Enter a Power Spectral Density (PSD) value.	—	—
Dual Band PSD Shape	NCS 1010	Enter Central PSD and Tilt values.	—	—
Pre Tilt	NCS 1010	Enter a value.	—	Auto
Raman Tilt	NCS 1010	Enter a value.	—	Auto
Booster Tilt	NCS 1010	Enter a value.	—	Auto
From Fiber				
Pre Amp	NCS 1010	Choose the pre amplifier	• Normal • Extended	
To Fiber				
Booster	NCS 1010	Displays the Booster amplifier.	—	OLT-L-EDFA-Bst

Modify Add/Drop multiplexer properties

Table 103: Feature History

Feature Name	Release Information	Description
User-Defined Colorless Ports Distribution for CCMD Card in NCS 1010 Network	Cisco ONP Release 24.3.1	The new property, **Colorless Port Distribution** is introduced under the **Add/Drop Multiplexer** properties. This property allows you to select the number of CCMD cards to connect to the LC ports of the enhanced OLT and determine the number of channels for each chosen CCMD card. It provides the flexibility to choose the desired number of CCMD cards and distribute the colorless ports across them.

Table 104: Feature History

<table>
<tr><th>Feature Name</th><th>Release Information</th><th colspan="3">Feature Description</th></tr>
<tr><td rowspan="5">Modify Properties of Add/Drop Multiplexer and Demultiplexer</td><td rowspan="5">Cisco ONP Release 4.2</td><td colspan="3">You can create and validate network designs by choosing colored and colorless add/drop multiplexers and demultiplexers, and interlever under C-Band > Add/Drop. The following options are supported in this release:</td></tr>
<tr><td>Type of Add/Drop</td><td>Options</td><td>Network Supported</td></tr>
<tr><td>Colorless</td><td>• Direct SMR
• MF-6AD-CFS</td><td>• SSON
• Non-SSON</td></tr>
<tr><td>Colored</td><td>• MD-64-C
• MD-48-ODD
• MD-48-EVEN
• MD-48-ODD + MD-48-EVEN</td><td>• SSON
• Non-SSON</td></tr>
<tr><td>Interlever</td><td>• MpoCable
• MD-48-CM</td><td>• Non-SSON</td></tr>
</table>

Use this procedure to modify the properties of the add/drop multiplexer in a site.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the Add/Drop multiplexer properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, navigate to **Sites** > **Site** > **Site domain** > **Side** > **C-Band**

Step 4 Click **Add/Drop** and modify the properties in the next pane. For the property descriptions, refer to:

- General Add/Drop multiplexer properties, on page 237
- MPO connector properties, on page 240
- LC connector properties, on page 241

Step 5 Click **Update**.

General Add/Drop multiplexer properties

This table describes the general properties of the Add/Drop multiplexers.

Table 105: General Add/Drop multiplexer properties

Options	Platform	Description	Available options	Default
Colored Add/Drop	NCS 2000	Choose the colored add/drop multiplexer and demultiplexer. To mix 16-AD-CCOFS and MD-48-ODD/EVEN on the same MPO port of SMR-20 and connect MD-48-ODD/EVEN to SMR-20 via MPO-8LC and UPG-4, enable the Shared SMR port and select the required colored Add/Drop.	• MD-64-C: Passive optical multiplexer and demultiplexer module (for SSON network) • None • Auto Cisco ONP adds some options automatically based on the colored demands created and the wavelengths you configure in the non-SSON network. These options include: • MD-48-ODD • MD-48-EVEN • MD-48-ODD + MD-48-EVEN	Auto
	NCS 1010	Choose the colored add/drop multiplexer and demultiplexer for NCS 1010.	• Auto • None • MD-32-EVEN • MD-32-ODD • MD-32-ODD+MD-32-EVEN	Auto
	NCS 1001	Choose the colored add/drop multiplexer and demultiplexer for NCS 1001. **Note** Choose an Add/Drop type with a Baud rate that matches the Optical Source Baud rates.	• Auto • MD-64 • MD-32-EVEN • MD-48-EVEN • MD-48-ODD • MD48ODD+MD48EVEN • FLD-4 (10 variants)	Auto
	Colorless Add/Drop	NCS 2000		Auto

Options	Platform	Description	Available options	Default
			Choose the colorless add/drop multiplexer and demultiplexer for NCS 2000.	• Auto • Direct SMR: SMR-20 and SMR-9 cards that are directly connected to the colorless channels through MF-MPO-16-LC and MF-MPO-8-LC respectively. • MF-6AD-CFS: 6 Port Add/Drop Module (supported only for ROADM starting from NCS 2000 system release 11.0, and traffic site). **Note** If you choose MF-6AD-CFS for a side, choose the same for other sides of the site.
NCS 1010		Choose the colored add/drop multiplexer and demultiplexer for NCS 1010. **Note** QDD optical sources are not supported (both as optical source and pluggable) with colorless BRK-8, BRK-16, or BRK-24 configurations.	• Auto • None • BRK-8 • BRK-16 • BRK-24	Auto

Options	Platform	Description	Available options	Default
Interlever Type	NCS 2000	Choose the interlever type from the drop-down list. **Note** **Interlever Type** property is visible and editable only for Line sides of Multi-Degree nodes having **Site Type** property as *SMR-9* and **Scalable Upto Degree** property as *8* under the C-Band tab at the Site level.	• Auto • MpoCable • MD-48-CM	Auto

MPO connector properties

This table describes the properties of MPO connectors that are used in Add/Drop multiplexers.

Table 106: MPO connector Add/Drop properties

Options	Platform	Description	Available options	Default
Colorless Add/Drop	NCS 1010	**Note** **MPO Connector Add/Drop** appears for networks from R7.10.1. **Note** You cannot use QDD optical sources (as either an optical source or pluggable) with colorless BRK-8, BRK-16, or BRK-24 configurations.	• Auto • None • BRK-8 • BRK-16 • BRK-24	Auto

Options	Platform	Description	Available options	Default
Colorless Ports	NCS 1010	Enter the number of colorless ports. **Note** For the R7.10.1 network, you can assign a maximum of 48 colorless ports. The assigned ports are applicable to the MPO ports. For the R7.11.1 network, you can assign a maximum of 128 colorless ports.	—	0 If you keep the default value, Cisco ONP automatically calculates the number of colorless ports based on the number of circuits you added and colorless add/drop units you have configured.

LC connector properties

This table describes the properties of LC connectors that are used in Add/Drop multiplexers.

Table 107: LC connector Add/Drop properties

Options	Platform	Description	Available options	Default
Colorless Add/Drop	NCS 1010	**Note** **LC Connector Add/Drop** appears for networks from R7.11.1.	• Auto • None • NCS1K14-CCMD-16C	Auto
Colorless Ports	NCS 1010	Enter the number of colorless ports. **Note** For the R7.10.1 network, you can assign a maximum of 48 colorless ports. The assigned ports are applicable for the LC ports. For the R7.11.1 network, you can assign a maximum of 128 colorless ports.	—	0 If you keep the default value, Cisco ONP automatically calculates the number of colorless ports based on the number of circuits you added and colorless add/drop units you have configured.

Options	Platform	Description	Available options	Default
Colorless Ports Distribution	NCS 1010		—	—

Options	Platform	Description	Available options	Default
		• Click the field to open the **Colorless Ports Distribution** pop-up window. • Choose the NCS1K14-CCMD-16C for each of the LC ports, A/D 4 to A/D 17. • Select the number of ports for each CCMD card, ensuring the total does not exceed 128. • Click **Submit**. When allocating LC ports, consider these priorities: **1.** Degree connection **2.** Direct LC ports You can allocate CCMD cards only to LC ports that remain after other allocations. If the Degree Priority under Site Properties is set to LC Ports, the number of CCMD cards that can be forced on the line side edges depends on the number of degrees (including omni and line degrees, depending on the scalable degree) and the Direct LC ports. This is explained in this formula: Maximum number of CCMDs Allowed = 14 - (scalableUptoDegree - 1) - Direct LC add/drops - Number of Omni Edges The number of ports that you have selected is displayed in the field.		

Options	Platform	Description	Available options	Default
		When the **Enable Special Settings** under the Network properties is enabled, and if the **Colorless Ports Distribution** has not been set previously, the property defaults to *16, 16, 0*. In this case, three LC ports are already used for CCMD card. **Note** For omnidirectional sides, you can select the CCMD card for every LC port. After successful analysis of the network, you can view the port distribution under the **Layout** > **Node Diagram** tab. Currently, this property is supported only for the enhanced plate.		

Modify L-Band Add/Drop multiplexer properties

Use this procedure to modify the properties of the Add/Drop multiplexer in a site.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to modify the L-band Add/Drop multiplexer properties.

Step 2 Choose **Network** > **Entity Editor**.

Step 3 In the **Entity Editor** window, navigate to **Sites** > **Site** > **Site domain** > **Side** > **L-Band**.

Step 4 Click **Add/Drop** and modify the properties in the next pane. Refer to L-band Add/Drop multiplexer properties, on page 244 for property descriptions.

L-band Add/Drop multiplexer properties

This table describes the properties of L-band Add/Drop multiplexers.

Table 108: L-band Add/Drop multiplexers properties

Options	Platform	Description	Available options	Default
General				
Colorless Add/Drop	NCS 1010	**Note** Only L-band optical sources are supported. Pluggables are not supported in L-band networks.	• Auto • None • BRK-8 • BRK-16 • BRK-24	Auto
MPO Connector Add/Drop				
Colorless Add/Drop	NCS 1010	**Note** **MPO Connector Add/Drop** appears for networks from R7.10.1. **Note** QDD optical sources are not supported (both as optical source and pluggable) with colorless BRK-8, BRK-16, or BRK-24 configurations.	• Auto • None • BRK-8 • BRK-16 • BRK-24	Auto
Colorless Ports	NCS 1010	Enter the number of colorless ports.	—	0 If you keep the default value, Cisco ONP automatically calculates the number of colorless ports based on the number of circuits you added and colorless add/drop units you have configured. **Note** For the R7.10.1 network, you can assign a maximum of 48 colorless ports. The assigned ports are applicable for a combination of LC and MPO ports. For the R7.11.1 network, you can assign a maximum of 128 colorless ports.

Options	Platform	Description	Available options	Default
LC Connector Add/Drop				
Colorless Add/Drop	NCS 1010	**Note** **LC Connector Add/Drop** appears for networks from R7.11.1.	• Auto • None • NCS1K14-CCMD-16L	Auto
Colorless Ports	NCS 1010	Enter the number of colorless ports.	—	**Note** For the R7.10.1 network, you can assign a maximum of 48 colorless ports. The assigned ports are applicable for a combination of LC and MPO ports. For the R7.11.1 network, you can assign a maximum of 128 colorless ports.

Options	Platform	Description	Available options	Default
Colorless Ports Distribution	NCS 1010		—	—

Options	Platform	Description	Available options	Default
		• Click the field to open the **Colorless Ports Distribution** pop-up window. • Choose the NCS1K14-CCMD-16C for each of the LC ports, A/D 4 to A/D 17. • Select the number of ports for each CCMD card, ensuring the total does not exceed 128. • Click **Submit**. When allocating LC ports, consider these priorities: **1.** Degree connection **2.** Direct LC ports You can allocate CCMD cards only to LC ports that remain after other allocations. If the Degree Priority under Site Properties is set to LC Ports, the number of CCMD cards that can be selectd on the line side edges depends on the number of degrees (including omni and line degrees, depending on the scalable degree) and the Direct LC ports. This is explained in this formula: Maximum number of CCMDs Allowed = 14 - (scalableUptoDegree - 1) - Direct LC add/drops - Number of Omni Edges The number of ports that you have selected is displayed in the field.		

Options	Platform	Description	Available options	Default
		When the **Enable Special Settings** under the Network properties is enabled, and if the **Colorless Ports Distribution** has not been set previously, the property defaults to *16, 16, 0*. In this case, three LC ports are already used for CCMD card. **Note** For omnidirectional sides, you can select the CCMD card for every LC port. After successful analysis of the network, you can view the port distribution under the **Layout** > **Node Diagram** tab. This property is supported only for the enhanced plate.		

Modify client properties

Use this task to modify the properties of a client-side attenuator in a site.

Before you begin

Table 109: Feature History

Feature Name	Release Information	Feature Description
Channel Attenuators	Cisco ONP Release 4.2	You can set up channel attenuators for QSFP-DD demands. You can choose different channel attenuators based on the specific configuration and check for the optical feasibility of the channel.

Log in to the Cisco ONP web interface, on page 7

Procedure

Step 1 Open the network where you want to modify the client properties.

Step 2 Choose **Network** > **Entity Editor**.

Alternatively, click the network name in the network tree, and click **Show Advanced Properties** displayed under the network tree.

Step 3 In the **Entity Editor** window, click the **Site** tab.

Step 4 Choose **Sites** > **Site** > **Site domain** > **Side** > **Clients** > **Channel-Attenuators**.

Step 5 In the right pane of the **Entity Editor** window, modify properties of the client-side attenuator.

See Client properties, on page 250 for the descriptions.

Step 6 Click **Update**.

Client properties

This table describes various System Release properties under the Network properties.

Properties	Platform	Description	Available options	Default option
General				
Wavelength	NCS 2000	This column displays the selected wavelength.	—	—
New Wavelength - Auto	NCS 2000	Click **Edit** to select a Flex Grid or Fixed Grid wavelength. **Note** Select **Fixed Grid (64-Chs)** for SSON network with NCS1K-MD-64-C card. **Note** NCS1K-MD-64-C card has First Channel limitation for Colored sites. First Channel (196.1 THz) in Fixed Grid (64-Chs) wavelength supports only Terminal Add/Drop sites and not ROADM sites.	—	—

Properties	Platform	Description	Available options	Default option
RX-Attenuator	NCS 2000	Choose an RX-Attenuator from the drop-down list. **Note** You must select a wavelength to edit this field.	• Auto • None • ATT-LC-2 • ATT-LC-3 • ATT-LC-5 • ATT-LC-7 • ATT-LC-10 • ATT-LC-12 • ATT-LC-15 • ATT-LC-18	Auto
TX-Attenuator	NCS 2000	Choose a TX-Attenuator from the drop-down list. **Note** You must select a wavelength to edit this field.	• Auto • None • ATT-LC-2 • ATT-LC-3 • ATT-LC-5 • ATT-LC-7 • ATT-LC-10 • ATT-LC-12 • ATT-LC-15 • ATT-LC-18	Auto
New Wavelength	NCS 1001	Click **Add** to select a wavelength.		

Sort the Network Elements

You can sort the sites, services, fibers, waves, and SRLG in ascending or descending order. This feature is useful for huge networks, making it quick to locate the required site, fiber, wave, or SRLG names.

Follow these steps to sort the network elements in the network tree.

Procedure

Step 1 Open the network where you want to sort the network elements.

Step 2 Click the **Ellipsis** icon available in the right side of the network element in the network tree, such as **Sites**, and choose **Ascending** or **Descending**.

The network elements are sorted based on the alphabets, numbers, and, alphanumeric.

Regeneration support

Signal degradation in optical networks

As the fiber length increases in an optical network, unavoidable issues such as attenuation and dispersion lead to signal loss and power degradation. These problems can significantly affect the network's performance over long distances, necessitating the need for regenerators to maintain efficient signal transmission.

Role of regenerators

To address signal degradation, regenerators are used at specific points in the network to recover and strengthen optical signals. They achieve this through Optical-Electrical-Optical (OEO) conversion, which involves:

- Converting the weak optical signal into an electrical signal.
- Cleaning and amplifying the electrical signal.
- Converting the restored signal back into an optical format, known as Optical-Electrical-Optical (OEO) conversion.

Cisco ONP and regeneration sites

Cisco ONP supports the establishment of regeneration sites within optical networks. These sites are essential in maintaining signal integrity over long distances by utilizing regenerators to enhance the network's overall performance.

Note A regenerator site can only be a ROADM site.

Create a regeneration site

Table 110: Feature History

Feature Name	Release Information	Feature Description
Wavelength Forcing at the Section Level	Cisco ONP Release 4.1	This feature enables you to assign distinct wavelengths to various sections of the Regen sites

Follow these steps to create a regeneration site in the network.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the network where you want to create a regeneration site.

Step 2 In the network tree, expand **Waves**, select a wave and drill down to its trail.

Note
If the network is an SSON network or an NCS 1010 network, you see **Media Channels** or **Circuits** respectively. instead of waves. Expand **Media Channels** or **Circuits** , and drill down to its trail.

Step 3 Click the trail to view its properties.

Step 4 From the **Regen Sites** drop-down list, select a regeneration site.

Note
If you select a fiber from the **Path of Wave** drop-down list, you cannot select any regeneration site to force a path. Similarly, if you select a regeneration site, you cannot force a path for the wave. However, if you want to force a fiber, select the fiber from the **Path of Wave** drop-down list available under the section properties.

Step 5 If required, select the wavelength of each section in the properties for non-SSON network.

Note
For the SSON network, you can select the wavelength only at the trial level.

Step 6 Click **Update**.

Whenever a regeneration site is created, a new section is added along with the existing section under the trail. Regeneration can be performed using any two cards back-to-back or with a dedicated regenerator card.

Step 7 Click **Analyze** to analyze the network.

After analysis, if you click trail or section in the network tree, the map highlights the trail in orange color and the section in green color.

Note
You can assign different wavelengths for different sections. The **Wavelength** property under trail is denoted as "*", when different wavelengths are assigned for different sections.

You can also add a regeneration site when you are designing a new network or upgrading a network.

Multidegree ROADM

A multidegree ROADM is a network node configuration that

- enables a site to connect to two or more fiber spans,
- allows flexible routing of wavelengths across multiple paths in a mesh network, and
- supports higher degrees than simpler ROADMs, which typically connect only two directions.

You can design a multidegree ROADM configuration in Cisco ONP using cascaded SMR .

Design a multidegree ROADM site using cascaded SMR

Use this procedure to design a multidegree ROADM site in your network, using cascaded SMR modules.

When designing a multidegree ROADM site using cascaded SMR, be aware of these limitations:

- The configuration only supports contentionless add/drop demands.
- Layer-2 SMR is supported only for the SMR-20 card.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure


Step 1 Design a network. For detailed instructions, see the Manually design a network using Cisco ONP, on page 26 task.

Step 2 Modify these site properties.

- Set the **Structure** to *Multidegree* in the **C Band** section.
- Set the **Site Type** to *SMR-20* in the **C Band** section.
- Set **Degree Mesh Type** to *Auto* or to *DEG-5/UPG-4* in the **C Band** section.
- Check the **Evolved Mesh** and **Cascaded SMR** check boxes in the **General** section.
- Set the **Mpo16TOMpo8** to *MPO16To2MPO8* cable in the **General** section.

Step 3 Add a contentionless side to the site. For detailed steps, see the Add contentionless side to a site, on page 157 task.

Step 4 Modify the number of contentionless side ports for the site as needed. For detailed steps, see the Modify the number of contentionless side ports at a site , on page 159 task.

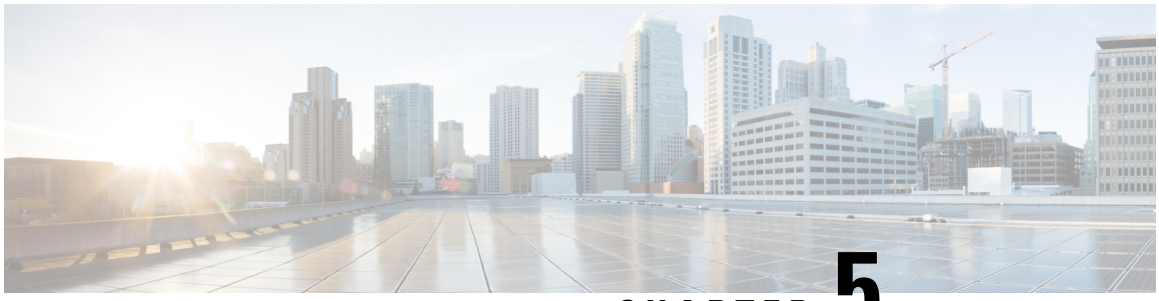

CHAPTER 5

Configure a Network

This chapter describes the various ways of configuring the network designed through Cisco ONP.

- Configure an NCS 2000 network for contentionless functionality, on page 255
- Configure an NCS 2000 network for colorless functionality, on page 256
- Configure an NCS 2000 network for colored functionality, on page 257
- Configure a network with mixed Add/Drop multiplexers and demultiplexers, on page 258
- Configure an NCS 1010 network for colorless functionality, on page 262
- Configure an NCS 1010 network for colored functionality, on page 263
- Configure an NCS 1010 network with mixed add/drop multiplexers and demultiplexers, on page 264
- Configure an NCS 1010 C+L-Band network with mixed Add/Drop multiplexers and demultiplexers, on page 265
- Configure an NCS 1014 Network for Colored Functionality, on page 265

Configure an NCS 2000 network for contentionless functionality

Use this procedure to configure contentionless functionality in a network.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Procedure

Step 1 Create a network design. See #unique_218.

Step 2 Add contentionless sides to the required sites. See Add contentionless side to a site, on page 157.

Step 3 Set the channel type for the demands:

a) In the **Entity Editor** window, click the **Services** tab.

b) Click the service connecting the site and set the **Src Channel Type** property as *Auto* or *Contentionless*. Then, click the trail under the wave (for non-SSON) or Media Channel (for SSON) and set the **Src Channel Type** property to *Auto* or *Contentionless*.

Note
Contentionless is the default option when you select *Auto*.

c) Click **Update**.

Step 4 Analyze the network by choosing **Network** > **Analyze.**

Configure an NCS 2000 network for colorless functionality

This procedure guides you through the process of configuring colorless functionality in an NCS 2000 optical network.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Procedure

Step 1 Create a network design. See #unique_218 .

Step 2 Set the channel type for the demands:

a) In the **Entity Editor** window, click the **Services** tab.

b) Click the service connecting the site. Set the **Src Channel Type** property as *Colorless*. For non-SSON click the trail under the wave. For SSON, click the Media Channel (for SSON). Set the **Src Channel Type** property as *Colorless*.

c) Under the **Site > Side** properties, choose the Line type side from which you want to create the colorless demand, and enter the number of **Colorless Ports**.

From Release 24.3.1, you can select the colorless ports for the SMR-9 card.

The number of colorless ports for MF-6AD-CFS depends on the **Scalable Upto Degree** property. See Colorless ports for SSON and Non-SSON networks, on page 256.

d) Click **Update**.

Step 3 Under the **C-Band** properties, choose *MF-6AD-CFS* or *Direct SMR* as the **Colorless Add/Drop**.

Step 4 Click **Update.**.

Step 5 Analyze the network by choosing **Network** > **Analyze.**

You can see the colorless Add/Drop unit getting added in the layout and BOM.

Colorless ports for SSON and Non-SSON networks

This table explains the maximum number of colorless ports that can be added based on the **Scalable Upto Degree** property for the MF-6AD-CFS card.

Table 111: Colorless ports for SSON and Non-SSON networks

Site type	Scalable upto degree	Maximum number of colorless ports for SSON	Maximum number of colorless ports for non-SSON
SMR-20	4	72	72
SMR-20	8	72	72

Site type	Scalable upto degree	Maximum number of colorless ports for SSON	Maximum number of colorless ports for non-SSON
SMR-20	12	24	24
SMR-20	16	24	24
SMR-20	Line	96	96
SMR-20	Terminal	120	96

Configure an NCS 2000 network for colorless functionality

Configure an NCS 2000 network for colored functionality

This procedure guides you through the process of configuring colored functionality in an NCS 2000 optical network.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Procedure

Step 1 Create a network design. See #unique_218 .

Step 2 Set the channel type for the demands:

a) In the **Entity Editor** window, click the **Services** tab.

b) Click the service connecting the site and set the **Src Channel Type** property as **Colored**. For non-SSON click the trail under the wave. For SSON, click the Media Channel (for SSON). Set the **Src Channel Type** property as **Colored**.

c) Click **Update**.

Step 3 For an SSON network, complete these steps.

a) Under the **C-Band** properties, choose **MD-64-C** as the **Colored Add/Drop**.

Note
MD-64-C is supported from NCS 2000 Release 12.x.

b) Click **Update.**.

By default, the system adds **MD-48-ODD** or **MD-48-EVEN**as the **Colored Add/Drop** when **Share SMR Port** is not enabled.

Note
If you choose **MD-48-EVEN** or **MD-48-ODD**, select an even wavelength for the **Wavelength** property under **Trail**.

Step 4 When **Share SMR Port** port is enabled, you can select the **Colored Add/Drop** by using these steps:

a) Under the **C-Band** properties, choose **MD-48-ODD**, **MD-48-EVEN**, or **MD-48-ODD+MD-48-EVEN** as the **Colored Add/Drop**.

Note

These Add/Drop units are supported from NCS 2000 Release 11.x.

b) Click **Update**.

Step 5 Analyze the network by choosing **Network** > **Analyze**.

The colored Add/Drop unit appears in the layout and BOM.

Configure a network with mixed Add/Drop multiplexers and demultiplexers

Use the following procedure to configure mixed wavelengths in a network:

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Table 112: Feature History

Feature Name	Release Information	Feature Description
Support for Mixed Add/Drop Configuration	Cisco ONP Release 4.2	You can configure different functionalities in the network created in Cisco ONP. Mixed wavelengths such as colorless and contentionless, colored and contentionless, can be added/dropped on the same side or direction. The following mixed configurations are supported: • Colored (MD-48-ODD/MD-48-EVEN) and Contentionless (16-AD-CCOFS) without shared SMR port • Colored and Contentionless (MD-64-C and 16-AD-CCOFS) • Colored (MD-64-C) and Colorless (Direct SMR) • Colored (MD-48) and Contentionless (16-AD-CCOFS) with Shared SMR Port • Colorless and MD-48-ODD/MD-48-EVEN • Colorless and 16-AD-CCOFS

Procedure

Step 1 Create a network design. See #unique_218.

Step 2 Set the properties of the network under the **Entity Editor** for different combinations of the functionalities, as described in Supported and unsupported mixed configurations, on page 259.

Note
You cannot mix the MF-6AD-CFS colorless configuration with any other configuration.

Supported and unsupported mixed configurations

This section describes the list of mixed configurations that are supported and unsupported by Cisco ONP.

Table 113: Supported mixed Configurations

Supported network type	Possible mixed configurations	Properties to be set
Non-SSON	Colored (MD-48-ODD/MD-48-EVEN) and Contentionless (16-AD-CCOFS) without shared SMR port	• Add required number of contentionless sides. • **Channel Type—**Set the **Src Channel Type** and **Dst Channel Type** to be **Colored** for one wave. Set the **Src Channel Type** and **Dst Channel Type** to be **Contentionless** for the second wave created on the same site. Both wavelengths must add/drop in the same side or direction. • By default, MD-48-ODD or MD_48-EVEN is added as the Colored Add/Drop in the BOM and layout when you set the **Channel Type** as **Colored** and when **Shared SMR Port** is disabled. By default, 16-AD-CCOFS is added in the BOM and layout when you set the **Channel Type** as **Contentionless**.

Supported network type	Possible mixed configurations	Properties to be set
SSON	Colored and Contentionless (MD-64-C and 16-AD-CCOFS)	• Add required number of contentionless sides. • **Channel Type—**Set the **Src Channel Type** and **Dst Channel Type** to be **Colored** for one media channel. Set the **Src Channel Type** and **Dst Channel Type** to be **Contentionless** for the second media channel created on the same site. Both channels must add/drop in the same side or direction. • **Colored Add/Drop—**MD-64-C under the side.
SSON	Colored (MD-64-C) and Colorless (Direct SMR)	• **Channel Type—**Set the **Src Channel Type** and **Dst Channel Type** to be **Colored** for one media channel. Set the **Src Channel Type** and **Dst Channel Type** to be **Colorless** for the second media channel created on the same site. Both channels must add/drop in the same side or direction. • Enter the number of **Colorless Ports** under the **Line Side** properties. • **Colored Add/Drop—**MD-64-C **Colorless Add/Drop—**Direct SMR

Supported network type	Possible mixed configurations	Properties to be set
Non-SSON	Colored (MD-48) and Contentionless (16-AD-CCOFS) with Shared SMR Port	• Add required number of contentionless sides. • **Channel Type—**Set the **Src Channel Type** and **Dst Channel Type** to be **Colored** for one wave. Set the **Src Channel Type** and **Dst Channel Type** to be **Contentionless** for the second wave created on the same site. Both wavelengths must add/drop in the same side or direction. • Check the **Shared SMR Port** check box, under the **Site** properties. • **Colored Add/Drop—**MD-48-ODD, MD-48-EVEN, or MD-48-ODD and MD-48-EVEN • If you choose **MD-48-EVEN**, make sure to select an even wavelength for the **Wavelength** property under **Trail**.
Non-SSON	Colorless and MD-48-ODD/MD-48-EVEN	• **Channel Type—**Set the **Src Channel Type** and **Dst Channel Type** to be **Colorless** for the wave. • Enter the number of **Colorless Ports** under the **Line Side** properties. • • • By default, MD-48-ODD/MD-48-EVEN is added as colored Add/Drop in the BOM and layout, when any colored demand is added in the non-SSON network.

Supported network type	Possible mixed configurations	Properties to be set
SSON	Colorless and Contentionless (16-AD-CCOFS)	• Add required number of contentionless sides. • **Channel Type—**Set the **Src Channel Type** and **Dst Channel Type** to be **Colorless** for the wave or media channel. • **Channel Type—Colorless** for one wave and **Contentionless** for another wave created on the same site. Both wavelengths must add/drop in the same side or direction.

Table 114: Unsupported mixed configurations

Network type	Mixed configurations
SSON	Colored (MD-64-C) and Colorless (MF-6AD-CFS)
SSON	Contentionless and Colorless (MF-6AD-CFS)
SSON	Colored (MD-64-C), Contentionless, and Colorless (MF-6AD-CFS)
SSON	Colored (MD-64-C) and Layer-2 Contentionless
Non-SSON	Contentionless and Colorless (MF-6AD-CFS)
Non-SSON	Colored (MD-48) and Colorless (MF-6AD-CFS)
	Colorless (Direct SMR) and Colorless (MF-6AD-CFS)
Non-SSON	Colored, Contentionless, and Colorless (MF-6AD-CFS)

Configure an NCS 1010 network for colorless functionality

Use this procedure to configure the colorless functionality in an NCS 1010 network.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Procedure

Step 1 Create a network design. See #unique_218 .

Step 2 Set the channel type for the demands.

a) In the **Entity Editor** window, click the **Services** tab.
b) Click the trail under the circuit, set the **Src Channel Type** property to *Colorless*.
c) Click **Update**.

Step 3 Under the **C-Band** properties, choose *BRK-8*, *BRK-16*, or *BRK-24* as the **Colorless Add/Drop**.

The Maximum number of colorless ports depends on the scalable upto degree. See Colorless ports for NCS 1010 networks, on page 263.

Note
Colorless configuration is not supported for scalable upto degree 31.

Step 4 Click **Update**.

Step 5 Analyze the network by choosing **Network** > **Analyze**.

The colorless Add/Drop unit is added in the layout and BOM.

Colorless ports for NCS 1010 networks

This section describes the maximum number of colorless ports based on the scalable up to degree.

Table 115: Colorless ports for NCS 1010 networks

Scalable upto degree	MPO port used for degree interconnect	Maximum number of colorless ports supported		
		BRK-24	BRK-16	BRK-8
7	4	72	48	24
9	1	66	44	22
15	3, 4	48	32	16
17	1, 2	42	28	14
23	2, 3, 4	24	16	8
25	1, 2, 3	18	12	6
31	1, 2, 3, 4	0	0	0
Terminal	NA	90	60	30
Line	4	72	48	24

Configure an NCS 1010 network for colored functionality

Use this procedure to configure the colored functionality in an NCS 1010 network.

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Procedure

Step 1 Create a network design. See #unique_218.

Step 2 Set the channel type for the demands:

a) In the **Entity Editor** window, click the **Services** tab.
b) Click the trail under the circuit and set the **Src Channel Type** property as *Colored*.
c) Click **Update**.

Step 3 Under the **C-Band** properties, choose *MD-32-EVEN*, *MD-32-ODD*, or *MD-32- ODD+MD-32-EVEN*as the **Colored Add/Drop**.

Step 4 Click **Update**.

Step 5 Analyze the network by choosing **Network** > **Analyze**.

The colored Add/Drop unit appears in the layout and the BOM.

Configure an NCS 1010 network with mixed add/drop multiplexers and demultiplexers

Use this procedure to configure mixed wavelengths in an NCS 1010 network:

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Procedure

Step 1 Create a network design. See #unique_218 .

Step 2 Set the properties under the **Entity Editor** for different combinations of the functionalities.

For example, set the source **Add/Drop Type** and destination **Add/Drop Type** to *Colored* for one circuit. Set the **Src Channel Type** and **Dst Channel Type** to *Colorless* for the second circuit created on the same site. Both channels must add or drop in the same side or direction.

You can select any combination of colored or colorless add/drop channels.

Note
When the **Scalable Upto Degree** is 31, you cannot use the colorless configuration. Therefore, you cannot use mixed configuration when **Scalable Upto Degree** is set to 31.

Configure an NCS 1010 C+L-Band network with mixed Add/Drop multiplexers and demultiplexers

Use this procedure to configure mixed wavelengths in an NCS 1010 C+L-Band network:

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Procedure

Step 1 Create a network design. See #unique_218.

Step 2 Set the properties under the **Entity Editor** for different combinations of the functionalities.

For example, set the source **Add/Drop Type** and destination **Add/Drop Type** to **Colored** or **Colorless** for the C-band circuit. Set **Band Type** to **L-band** for the second circuit that is created on the same site. Both channels must add/drop on the same side or in the same direction.

You can choose any combination of colored or colorless add/drop for C-band circuits. However, for L-band circuits, colorless add/drop is the default value.

Note
When **Scalable Upto Degree** is 31, only C-band colored configuration is supported. You cannot create colorless if all colorless ports are exhausted, so a mixed configuration is not supported for **Scalable Upto Degree** 31.

Configure an NCS 1014 Network for Colored Functionality

Use this procedure to configure colored and colorless omnidirectional functionalities in an NCS 1010 network:

Before you begin

Log in to the Cisco ONP web interface, on page 7 as a user with the admin role.

Note Deployment of more than two OLA nodes between two terminal sites is not supported.

Procedure

Step 1 Create a network design. See #unique_218 .

Step 2 Add Omnidirectional sides to the required sites. See Add omni-directional sides to a site, on page 163. You can also use the **Max Auto Omni Allowed** property under the network properties. When you enter a number, Cisco ONP automatically generates the same number of Omni Edges and runs the analysis.

Step 3 Select the Omni variant and type of omnidirectional add/drop stage.

a) In the **Entity Editor** window, click the **Sites** tab.
b) Choose the omnidirectional side under the required site, and set these properties.

Omni Variant: Select the type of omni variant as **Dual OLT** or **4x4 COFS**. The available options are:

Omni Directional Ports: Enter the number of omnidirectional ports.


Step 4 Select the type of omnidirectional add/drop stage.

a) In the **Entity Editor** window, click the **Services** tab.
b) Choose the required service and set the **Src Add/Drop Type** and **Dst Add/Drop Type** as *omni-colored* or *omni-colorless*.
c) Choose the trail under the service, and set the **Add/Drop Type** as *omni-colored* or *omni-colorless*.

Step 5 Click **Update**.

Step 6 Analyze the network by choosing **Network** > **Analyze**.

You can see the Omni Add/Drop unit getting added in the layout and BOM.

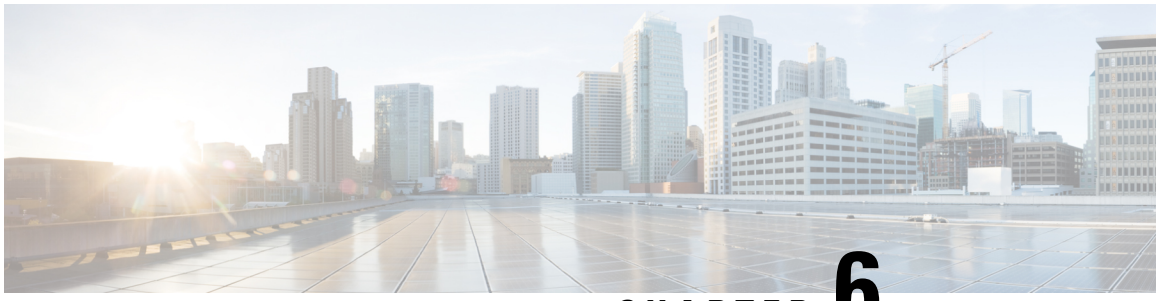

CHAPTER 6

View Network Reports

Table 116: Feature History

Feature Name	Release Information	Feature Description
Deployability and Debuggability Enhancements	Cisco ONP Release 24.3.1	

Feature Name	Release Information	Feature Description

		Cisco ONP enhances the debuggability and deployability of the network with the following improvements in Optical sources, and various reports available in the **Results** page:
		• **Optical Sources**: Including new optical parameters such as vendor name, vendor ID, and submode in the downloaded optical souce Excel file to improve inperoperability with Cisco Optical Network Controller.
		• **BOM**: The exported Excel file includes these updates:
		  • Sales BOM Sheet: Providing information tailored for sales personnel.
		  • Net BOM Sheet: Providing the site-wise BOM count and categories of elements such as Chassis, Controllers, Mux-Demux units, Line Cards, Fillers, and more, offering a comprehensive overview of all network elements in the analyzed network.
		• **IPC**:
		  • Consolidating the IPC Cabling Report and the IPC Patch Report into a unified view with additional columns, streamlining connection details and eliminating the need to access multiple sources.
		  • Highlighting patches when clicked.
		• **Optical Reports**: Filtering

Feature Name	Release Information	Feature Description
		results by any column available in the report for more precise data analysis. • **Elements > Messages**: Providing links to navigate to the respective object in the network tree, allowing users to take the necessary action to correct errors.

Table 117: Feature History

Feature Name	Release Information	Description

Simplified Navigation to Results Tab	Cisco ONP Release 5.1	Cisco ONP now provides a simplified approach to navigate to the **Results** tab to view reports for analyzed multinode network topologies with the following enhancements:
		• Click the **Ellipsis** icon available in the right side of a particular site in the network tree to view:
		  • BOM details
		  • Optical Reports
		• Click the **Ellipsis** icon available in the right side of a particular circuit/media/wave in the network tree to view:
		  • Optical Report
		  • Traffic Report
		• New **IPC** tab —The **IPC** tab is introduced in **Cabling Reports** to intuitively view the internal patch connections for a site.
		• Search Box—The **Results** tab is enhanced with a Search Box at the top. You can use this search box to find a particular site in the topology by entering the site name.

• Network reports, on page 271

Network reports

The Cisco ONP home page has multiple tabs to access the reports of the analyzed network. You can also view the reports for specific site, fiber, or wave properties by clicking the respective report in the Network Tree pane. The tabs are:

• Dashboard

- Elements
- Map
- BOM
- Layout
- Results

View reports in the Dashboard tab

Follow these steps to view various reports of an analyzed network under the **Dashboard** tab.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the analyzed network for which you want to view the network summary.

Step 2 Click the **Dashboard** tab.

The **Network Summary** tab displays this information about the network:

- Total count of sites
- Total count of fibers
- Total count of SRLGs (Shared Risk Link Groups)
- Total count of services
- Total count of waves/media channels/circuits
- Total count of messages

View reports in the Elements tab

The **Elements** tab provides comprehensive reports of network elements and any associated messages.

Follow these steps to view the network elements report and messages.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the analyzed network for which you want to view the network summary.

Step 2 Click the **Elements** tab.

You can view the reports described in this table.

Table 118: Reports under Elements

Report	Description
Sites	Shows the site information, which consists of the name of the sites, their types, and their X and Y coordinate values.
Fibers	Shows the information about the fiber length between the source and the destination for the corresponding sites. You can sort and filter the fiber details available in each column of the table.
Services	Shows the service type, source and destination sites for particular service, quantity, protection type, and status. For each service, the report shows the primary path, secondary path, and their status.
Waves	The Waves report shows the number of waves available in the network and the wave utilization. Click each wave to view the following details: • Wave: Consists of a wave UID and its source and destination sites. • Wave Details: Provides details of wave OSNR, channel path, OTN services associated to wave and excluded channels. • Channels: Port details of the source and destination cards, the wavelength that is used, and its utilization demands. • Optical Results: Provides details of optical parameters such as OSNR, SOL, EOL, power margin, CD, and PMD.
SRLGs	Lists the names of created SRLGs and their fiber details. Click **Export** at the bottom to export the report in .xlsx format.
Messages	Shows messages that relate to errors that occurred while analyzing the network. By default, only critical messages for the analyzed network are listed here. You can disable the **Critical Only** toggle button to view all messages. Click the link in the Target column to navigate to the respective object in the network tree and take the necessary action to correct the error.

Step 3 Click each tab to view the respective report.

Step 4 Click the Pop-up icon to view the reports in a larger, resizable window.

View details of the BOM report

Table 119: Feature History

Feature Name	Release Information	Feature Description
MLP Brownfield with Diff BOM	Cisco ONP Release 4.1	This feature allows you to perform the following: • Compare the BOMs of two or more LNI imported networks. • Upgrade brownfield network. • Upgrade the Cisco ONP network with traffic sites.

The Bill of Materials (BOM) report includes these components:

- Detailed price lists for each site.
- Categories of elements such as Chassis, Controller, Mux-Demux, Line Card, Filler, and more.
- The overall BOM for the entire network.

Follow these steps to view the BOM report for an analyzed network.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the analyzed network for which you want to view the BOM.

Step 2 Click the **BOM** tab.

The BOM details are displayed.

To view the BOM details for OTN and DWDM separately, click each site. See Licensed PIDs available in the BOM report, on page 275for the list of licensed PIDs added into the BOM report.

See for the list of licensed PIDs added into the BOM report.

Step 3 View the BOM details for any particular site.

a) In the network tree, expand **Site** and click the **Ellipsis** icon available in the right side of the required site.

b) Click **Open BOM**

Cisco ONP opens the **BoM** tab and provides the BoM details of the selected site.

c) Expand the Site to view the PID information.

Step 4 Click **Export** to export the BOM details in the form of a spreadsheet, and save it into your local system.

We recommend that you export the BOM report only in analyze mode. Exporting the reports in the upgrade and release upgrade modes may lead to inaccuracies..

From Release 24.3.1, the exported Excel file includes these updates:

- **Sales BOM Sheet**: Contains information tailored for sales representatives.
- **Net BOM Sheet**: Now includes the sitewide BOM count, providing a comprehensive overview of all network elements in the analyzed network.

Step 5 Compare the BOM of the existing network with other networks:

a) Click **Compare with: Other Networks**.
b) From the **Other Networks** dialog box, choose the network that you want to be compared with.

You can view both BOM reports displayed on the same page for comparison.

Step 6 Use the Search box on top of the BOM reports to search for any specific site or wave in the reports.

a) Enter the name of the specific site or wave in the Search box.
b) Choose **equals** or **contains** from the drop-down list.
c) Click the Search icon to search for the required site or wave.

Licensed PIDs available in the BOM report

Table 120: Feature History

Feature Name	Release Information	Feature Description
Support for New PIDs for SMR-20 Card	Cisco ONP Release 4.2	The following new licensed PIDs for the SMR-20 card are displayed on the BOM page so that you can view the price details and consider ordering. • NCS2K-FSSMR-2LIC= • E-NCS2K-1P-LIC= • E-NCS2K-5P-LIC= • E-NCS2K-10P-LIC=

Cisco ONP introduces new licensing PIDs with each platform release to incorporate the latest updates and features.

This table lists the licensed PIDs included in the BOM report for different Cisco ONP releases.

Table 121: Licensed PIDs added to BOM report

Cisco ONP release supported from	Platform	PIDs and description
4.2	NCS 2000	• **NCS2K-FSSMR-2-LIC=** : 20-port FS-SMR licensed to enable two ports • **E-NCS2K-1P-LIC=** : Software license to enable one port on licensed 20-port FS-SMR • **E-NCS2K-5P-LIC=** : Software license to enable five ports on licensed 20-port FS-SMR • **E-NCS2K-10P-LIC=** : Software license to enable ten ports on licensed 20-port FS-SMR
5.2	NCS 1010 from Release 7.11.1	• **NCS1K10-ATO=** : NCS 1010 ATO • **SF-NCS1K10-7111K9S=** : Software license to download the COSM NETCONF XML file for the COSM UI. • **NCS1K4-CCMD-C=** : 16-port, C-Band Colorless Coherent Multiplexer/Demultiplexer with an EDFA • **NCS1K4-CCMD-L=** : 16-port, L-Band Colorless Coherent Multiplexer/Demultiplexer with an EDFA

Cisco ONP release supported from	Platform	PIDs and description
	NCS 1020 from Release 24.3.1 NCS 1001 from Release 7.10.1	• **NCS1020-SA=** : NCS 1020 Shelf Assembly • **NCS1020-FAN=** : NCS 1020 Fan for NCS 1014 Slots • **NCS1020-FAN-BLANK=** : NCS 1020 Fan Blank • **CWDM-SFP-1510=**: CWDM 1510 NM SFP Gigabit Ethernet and 1G/2G FC • **CWDM-SFP-1610=**: CWDM 1610 NM SFP Gigabit Ethernet and 1G/2G FC • **ONS-SC-Z3-1510=**: SFP - OC48/STM16/GE, CWDM, 1510 nm, Commercial Temp • **ONS-SC-Z3-1610=**: SFP - OC48/STM16/GE, CWDM, 1610 nm, Commercial Temp • **ONS-SE-155-1510=** : SFP - OC3/STM1 CWDM, 1510 nm, EXT
	NCS 1014 transponder cards from Release 24.3.1.	

Cisco ONP release supported from	Platform	PIDs and description
		• **S-NCS1K14-L-100U=** : NCS 1014 100G Client Capacity Smart License - 400-600 • S-NCS1K14-L-100L= : NCS 1014 100G Client Capacity Smart License - 700-900 • S-NCS1K14-L-100M= : NCS 1014 100G Client Capacity Smart License - 1T-1.2T • NCS1K14-2.4T-K9= : Network Convergence System 1014 2.4T Line Card • **NCS1K14-2.4T-X-K9=** : Network Convergence System 1014 2.4T-X Line Card • **NCS1K4-QXP-K9=** : NCS1004 3.2T QSFP-DD DCO Transponder • **ESS-TXP-SIA3** : Essential Coherent DWDM interface SIA 36-59 months • **ESS-TXP-SIA5** : Essential Coherent DWDM interface SIA 60-120 months • **ESS-TXP-RTU** : Essential Coherent line card interface RTU • **ADV-TXP-SIA3** : Advance Coherent DWDM interface SIA 36-59 months • **ADV-TXP-SIA5** : Advance Coherent DWDM interface SIA 60-120 months • **ADV-TXP-RTU** : Advance Coherent line card interface RTU **Note** This is applicable only for the newly designed and upgraded networks.

View details of layout and internal connections

Follow these steps to obtain the layout details and internal connections of an analyzed network.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Click the **Layout** tab on the Cisco ONP homepage.

Step 2 Type the site name in the search box, or select a site from the **Sites** drop-down list.

The site layout is displayed with its racks and cards.

a) Hover the mouse pointer over the transponder card to view the details of the slot, the PID of the card, and the ports.
b) Expand the Ports to view details, such as wavelength and trunk mode.
c) Hover the mouse pointer over the chassis to view the total power consumption.

SVO supports up to 50 UIDs; beyond which, the site layout displays incorrect UID for the chassis.

Step 3 Click the **IPC** tab to view the internal patch connections of the selected site.

Export Internal connections

Cisco ONP allows you to export internal fiber connections in two ways: either at site-level or network-level.

Follow these steps to export internal fiber connections.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

View details of layout and internal connections, on page 279

Procedure

Step 1 Click the **Ellipsis** icon available in the right side of the internal fiber connection or site.

Step 2 Click **Export**.

View end-to-end OCH connections

Table 122: Feature History

Feature Name	Release Information	Feature Description
View the End-to-End Optical Channel (OCH) Connectivity from Source to Destination	Cisco ONP Release 24.3.1	You can now view the end-to-end OCH connection details in the graphical form for the analyzed NCS 1010 networks. The new **OCH** tab in **Layout** displays all the OCH connectivity from source to destination in: • **Degree Connection View**: Displays the source and destination site's connectivity. • **Functional View**: Displays the end-to-end port and card connections from source to destination through the fiber.

You can now view the end-to-end OCH connection details in the graphical form in Degree Connection and Functional views for the analyzed NCS 1010 networks.

Follow these steps to view the end-to-end OCH connectivity from source to destination.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the analyzed NCS 1010 network for which you want to view the end-to-end OCH connectivity./

Step 2 Click the **Layout** tab on the Cisco ONP homepage.

Step 3 Click the **OCH** tab.

The **OCH Pipes** pane appears to display the sites and sections in the circuits tree.

Step 4 Click the ellipsis icon next to the **Circuits**.

A pop-up list displays the view options.

Table 123: Option Descriptions

Options	Descriptions
Expand All	Expands all the items in the circuits tree.
Collapse All	Collapses all the items in the circuits tree.

Step 5 Use the search bar or filter icon to select the required source and destination sites.

Icon/Field	Description
Search	Locates the site based on the typed-in site name.
Filter	Filters the circuit based on **Source Site** and **Destination Site**.
Reset	Resets the filter conditions.

Based on the unit that you select in the circuit tree, you can see the site connectivity or the detailed end-to-end OCH connectivity.

If you click the...	Then you can see the...
circuit in the OCH tree	source and destination site connectivity only.
sections in the OCH tree	end-to-end OCH connectivity, including intermediate nodes and cards connectivity.

Step 6 In the graphical area, use the action icons to view the source and destination sites connectivity.

Table 124: Action icons

Icons	Description
Zoom In	Zooms in for a closer view of a specific connection
Zoom Out	Zooms out for a larger view of the entire connection
Fit View	Resets the zoom-in/zoom-out view to the default view
Lock/Unlock	Locks the view at a specific area Unlocks the view
Download PNG	Downloads the end-to-end circuit connection as a PNG image
Switch to Degree Connection View / Switch to Functional View	• **Degree Connection View**: Displays the source and destination site's connectivity • **Functional View**: Displays the end-to-end port and card connections from source to destination through the fiber
Reset All Nodes Position	Reverts the nodes to the default position

Export end-to-end OCH connections

Follow these steps to view the end-to-end OCH connectivity from source to destination.

Before you begin

Log in to the Cisco ONP web interface, on page 7

View end-to-end OCH connections, on page 280

Procedure

Step 1 In the graphical area, click the download icon.

The **Export** pop-up list displays the circuit options.

Table 125: Option descriptions

Options	Descriptions
Current Circuit	Provides details of the end-to-end OCH connectivity for the circuit that you selected.
All Circuits	Provides details of the end-to-end OCH connectivity for all the circuits.

Step 2 Click the required option to export the end-to-end OCH connectivity details to an Excel sheet.

View power consumption and unit weight report

Table 126: Feature History

Feature Name	Release Information	Feature Description
Power Consumption and Unit Weight Report	Cisco ONP Release 5.2	Now, you can generate the power consumption and unit weight report for each product ID (PID). In the layout tab, you can see the power consumption and unit weight values and export them into Excel as a report for a single site or all sites. With prior knowledge of power consumption and weight details for each PID, you can plan and design an energy-efficient network. The new options that allow you to view and export the reports are: • **Show Typical Power Consumption** • **Show Max Power Consumption** • **Show Unit Weight** • **Power Consumption & Weight**

The Power Consumption and Unit Weight report includes power consumption and weight details of cards and shelves at each site.

Remember The power consumption of the Power Supply Unit (PSU) is not included in the total power consumption for NCS 1001, NCS 1010, NCS 1014, and NCS 1020 chassis. Determine the total power consumption for these chassis by adding 8 percent of the aggregated power consumption of all the cards inside the chassis to account for the PSU power consumption.

Note To view the power consumption and weight report, upgrade and analyze the LNI network.

Follow these steps to view the power consumption and unit weight report for each site.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the analyzed network for which you want to view the power consumption and weight report.

Step 2 Click the **Layout** tab on the Cisco ONP homepage.

Step 3 Click the ellipsis icon next to **Sites**.

A pop-up list displays these options.

Table 127: Option descriptions

Options	Description
Expand All	Expands all the items in the layout tree.
Collapse All	Collapses all the items in the layout tree.
Show Typical Power Consumption	Check the **Show Typical Power Consumption** check box to view typical power consumption values of each card and shelf in watts.
Show Max Power Consumption	Check the **Show Max Power Consumption** check box to view the power consumption values of each card and shelf in watts. Max Power Consumption for a shelf is the sum of cards and modules. **Note** The total power consumption of an NCS 2000, NCS 4000, or NCS 1000 shelf changes based on AC or DC power supply. • For DC power supply, total power consumption of the shelf includes all Cards, DC power module, and fan tray. • For AC power supply in NCS 2000 M6 only, total power consumption of the shelf includes all cards, fan tray, 10% of power consumed by all cards, and 5W of Cooling Unit power consumption.

Options	Description
Show Unit Weight	Check the **Show Unit Weight** check box to view the weight of each card and shelf in kilograms. The unit weight for a shelf is the sum of cards and modules.

Step 4 Select the options as you require.

Export power consumption and unit weight report

Follow these steps to export the power consumption and weight report of each shelf and card.

Before you begin

Log in to the Cisco ONP web interface, on page 7

View power consumption and unit weight report , on page 282.

Procedure

Step 1 In the graphical area, click the download icon.

The **Export** pop-up list displays these options.

Table 128: Option Descriptions

Options	
Current site	Provides details of the site that you selected.
All Sites	Provides details of all the sites.

Step 2 Click the option as you require.

Step 3 Click **Power Consumption & Weight** to export the optical reports details in an Excel sheet.

We recommend that you export the power consumption and weight report only in the analyze mode. Exporting the reports in the upgrade and release upgrade modes may be inaccurate.

View the results of analyzed network

Note You can refer to the optical results data to check and correct the optically not feasible channels. You can modify the network properties in the Upgrade and Release Upgrade modes. After making the necessary corrections, analyze again to update the optical results based on the new modifications.

Follow these steps to view the details of optical reports, installation parameters, traffic reports, and cabling reports.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Open the analyzed network for which you want to view the optical results.

Step 2 Click the **Results** tab on the Cisco ONP home page.

By default, the **Optical Report** tab appears. Each row in the tab shows the performance of one optical path. See Optical Report, on page 287.

Note
From Release 24.1.1, you can view the multicarrier sites highlighted in the **Optical Report** tab, and organized in the I**nstallation Report** tab.

To view the optical report for any particular optical path:

a) In the network tree, expand **Circuits/Waves/Media Channels** and click the **Ellipsis** icon available in the right side of the required optical path.
b) Click **Open Results**.

The Cisco ONP opens the **Optical Report** tab and provides the details of the selected optical path.

c) Expand the optical path to view the wave and aggregated wave information for a selected circuit.

Step 3 From the **OSNR RBW** drop-down list, select the OSNR Resolution bandwidth between 0.5 nm and 0.1 nm.

The default value is 0.5 nm. You can change it in Design mode, Analyzed mode, Upgrade mode, and Release upgrade mode. When set to 0.1 nm, the SOL G-OSNR and EOL G-OSNR values increase to 7 dB.

Step 4 Click the **Installation Parameters** tab.

The Installation Parameters report specifies the values to be provisioned at installation for each site in the network.

To view the installation parameters for Automatic Node Setup (ANS) and Automatic Node Provisioning (ANP), click the respective tabs. See Installation parameters, on page 290

Step 5 Click the **Traffic Report** tab.

You can view the aggregated demand channel data in the form of the traffic reports. See Traffic reports, on page 291.

In Release 5.1, you can view the traffic report for all imported networks except the imported .mpz networks. To view the traffic report for individual optical path in imported .mpz networks, you must manually search in the Search box.

To view the traffic report for any particular optical path:

a) In the network tree, expand **Circuit** and click the **Ellipsis** icon available in the right side of the required optical path.
b) Click **Open Results**.

The Cisco ONP displays the traffic report for the selected optical path.

Note
By default, **Optical Result** appears under the **Results** tab. Click **Traffic Report** to view traffic reports.

c) Expand the optical path to view the wave information.

Step 6 Click the **Cabling Report** tab. See Cabling report , on page 292

You can view the patch cord connections related to internal patch connections and multishelf management. This report is available for the networks starting from NCS 2000 system Release 12.1.0.

To view the internal patch connections for any particular site:

a) In the network tree, expand **Site** and click the **Ellipsis** icon available in the right side of the required site.
b) Click **Open Cabling Report**.

The Cisco ONP opens the **Cabling Report** tab. By default, the **IPC** tab appears and provides the IPC details of the selected site.

c) To view the internal patch connections, expand the Site.

Step 7 Use the Search box on top of the reports to search for any specific site or wave in the reports

a) Enter the name of the specific site or wave in the Search box.
b) Choose **equals** or **contains** from the drop-down list.
c) Click the Search icon to search for the required site or wave.

Step 8 Click **Export Report** to export the optical reports details in an Excel sheet.

We recommend exporting the optical report only in analyze mode. Exporting reports in upgrade and release upgrade modes may be inaccurate.

Compare installation parameters of two networks

Table 129: Feature History

Feature Name	Release Information	Feature Description
UI Revamp of Optical Reports	Cisco ONP Release 4.1	This feature improves the user experience while comparing the installation parameters and optical reports of two networks.

Use this task to compare the installation parameters of two networks.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Click the **Results** tab on the Cisco ONP home page.
Step 2 Click **Installation Parameters**.
Step 3 Click **Other Networks**.
Step 4 From the list of networks, select the network with which to compare.

FInd a new parameter called **diffBy**.

Step 5 To stop comparing the two networks, click **Clear**.

Step 6 Click **Export Report** to export the comparison report.

Compare the optical reports of two networks

Follow these steps to compare the optical reports of two networks.

Before you begin

Log in to the Cisco ONP web interface, on page 7.

Procedure

Step 1 Click the **Results** tab on the Cisco ONP home page.

Step 2 Click **Optical Report**.

Step 3 Click **Other Networks**.

Step 4 From the list of networks, select the network with which to compare.

The optical parameters display two values.

Step 5 To stop comparing the two networks, click **Clear**.

Step 6 Click **Export Report** to export the comparison report.

Optical Report

From Release 24.3.1, you can filter the results by any column available in the report for more precise data analysis. For reports represented as colored icons, you can use the first letter of the color (e.g., "g" for green) to filter the results.

Table 130: Optical Report

Optical Parameter	
Name	Displays the ID number of the wave and aggregated waves. ID is automatically generated based on the site name.
Protection	Displays the protection type of the wave.
Protection Type	Displays whether the path type is Protected or Working path for NCS 1001.
SOL	Displays an icon indicating the results summary of the analysis that is run with Start of Life (SOL) fiber loss values: • Green indicates success. • Yellow indicates success with a marginal failure risk. • Orange indicates that the channel has a higher risk of failure. • Red indicates failure.

Optical Parameter	
EOL	Displays an icon indicating the results summary of the analysis that is run with End of Life (EOL) fiber loss values. The indicator shows the optical performance for the path at the end of the fiber life: • Green indicates success. • Yellow indicates success with a marginal failure risk. • Orange indicates that the channel has a higher risk of failure. • Red indicates failure.
SE	Indicates a system-related error that may impact the analysis of the design. If the indicator is red, review the messages that are reported at the end of the analysis or determine which units or sites have a problem.
P/F	Displays the present or forecast services indication.
Source	Displays the name of the source site and side; for example, Site 1-E.
Src Colorless	Displays whether the colorless functionality is enabled on source ports.
Src Contentionless	Displays whether the contentionless functionality is enabled on source ports.
Destination	Displays the name of the destination site and side; for example, Site 1-E.
Dst Colorless	Displays whether the colorless functionality is enabled on destination ports.
Dst Contentionless	Displays whether the contentionless functionality is enabled on destination ports.
Wavelength	Displays the wavelength of the optical channel.
Band Type	Displays the band type of the optical path.
Src Tx Type	Displays the type of DWDM unit or pluggable port module that is used at the source of the specific Optical Channel (OCH) trail. The class of the DWDM unit is also displayed.
Dst Tx type	Displays the type of DWDM unit or pluggable port module that is used at the destination of the specific OCH Trail. The class of the DWDM unit is also displayed.
Span	Displays the total span length (source to destination) for this path in kilometers.
Suggested Regen Locations	Displays the regeneration locations.
BER Target	Displays the bit error rate (BER) target for this channel, based on the capability of the channel's optical interface. It is 1.0E-15 for the interfaces using forward error correction (FEC) and 1.0E-12 for interfaces without FEC.
SOL OSNR	Displays the start of life average Optical Signal to Noise Ratio (OSNR) value at the receiver.
EOL OSNR	Displays the end of life average OSNR value at the receiver.

Optical Parameter	
SOL OSNR margin	Displays the SOL OSNR margin calculation. It is the difference between the OSNR value at certain power of the working point of the receiver client and the working area boundary.
EOL OSNR margin	Displays the EOL OSNR margin calculation, which is the difference between the OSNR value at a certain power of the working point of the receiver client and the working area boundary.
SOL RX	Displays the SOL average power that is received at the destination site in dBm.
EOL RX	Displays the EOL average power that is received at the destination site in dBm.
SOL Power Margin	Displays the SOL power budget margin at the receiver in decibels. It is defined as the offset between the receiver working point and the BER curve with margin. A positive value indicates that there are no power problems.
EOL Power Margin	Displays the EOL power budget margin at the receiver in decibels. It is defined as the offset between the receiver working point and the BER curve with margin. A positive value indicates that there are no power problems.
SOL Overload	Displays the SOL overload margin at the receiver in decibels. A positive value indicates that there are no overload problems.
EOL Overload	Displays the EOL overload margin at the receiver in decibels. A positive value indicates that there are no overload problems.
Residual CD	Displays the chromatic dispersion (CD) margin of the demand.
CD robustness	Displays the robustness to chromatic dispersion of the receiver.
Single-Channel NLE Status	Displays the status of alarms if any nonlinear effect (NLE) is present in the demand.
Multi-Channel NLE Status	Provides the status of the nonlinear effect (NLE) on a particular channel or demand due to other channels or demands.
Min GB	Displays the minimum Guard Band (GB) requirement between channels on the 40G CP-DQPSK MXP and 40G CP-DQPSK ME MXP cards, and other transponders in a mixed any-to-any connectivity.
Filtering Penalty	Displays the value of the penalties that are caused by different filter types (OADM, ROADM, and arrayed waveguide grating (AWG)).
PMD	Displays the calculated total Polarization Mode dispersion (PMD) for each circuit. If the overall PMD for the link overcomes the maximum that is allowed, the PMD value is displayed in a red-colored font. The maximum allowed value depends on the client interface. For these special cases, the network must be manually resolved by contacting a Cisco TAC team.
RX Atten	Displays the attenuation at the input of the receiver.
TX Atten	Displays the attenuation at the output of the receiver.
Encryption	Displays the encryption type of the channel. Possible values are N/A, Yes, No.

Installation parameters

This table outlines the installation parameters for the ANS component.

Table 131: ANS Parameters

Parameter	Description
Name	Displays the name of the site
Side	Displays the line side
Position	Displays the rack number, shelf number, and slot position of the card where the patch cord originates.
Unit	Displays the name of the card.
Port	Displays the port number where the patch cord originates.
Port ID	Displays the port ID.
Port Label	Displays the name of the port.
Parameter	Displays the name of the parameter to be set, such as RX Power Low, PSDShape, PSD, Gain, AmpliGainRange, AddAttenuation, DropAttenuation, Control Mode, MinExpSpanLoss, MaxExpSpanLoss, and so on. For the CCMD-16 LC card connected to the ports of the OLT-E-C, the PSD is set using a specific formula and the VOA drop attenuation is set to 0dB to have optimal RX power for the circuits.
Value	Displays the name of the value to be set for the parameter.
Measurement Unit	Displays the measurement unit for the related installation parameter value, such as dBm.
Manual Set	Indicates with a Yes or No which parameters must be manually set using the Cisco Transport Controller (CTC) interface.

This table outlines the installation parameters for the ANP component.

Table 132: ANP Parameters

Parameter	Description
Name	Displays the name of the site.
Unit ID	Displays the unit (slot number) of the passive units in the shelf.
Shelf ID	Displays the shelf identifier.
Rack Number	Displays the rack number.
Rack Position	Displays the rack position in the shelf.
Slot Position	Displays the slot position in the shelf for the card.

Parameter	Description
Equipment Type	Displays the card type.
Description	Displays the details of the card type.

Traffic reports

This table displays the aggregated data of demand channel in the traffic report for the analyzed network.

Table 133: Traffic Reports

Traffic report	Description
Demand	Categorizes each demand type. Each demand is further categorized into service, trails, and sections.
Section	Displays the sections under every service.
Src Site	Displays the site name for the optical channel source.
Band Type	Displays the band type for the optical path.
Src Position	Displays the rack, shelf ID, and slot identifiers for the source of the optical channel.
Src Card	Displays the unit name for the optical channel source.
Dst Site	Displays the site name for the optical channel destination.
Dst Position	Displays the rack, shelf ID, and slot identifiers for the destination of the optical channel.
Dst Card	Displays the unit name for the optical channel destination.
Client Service Type	Displays the client service type of the demand; for example, OC-48.
Protection Type	Displays the protection type of the demand
Encryption	Displays whether the demand is encrypted with values: NA, Yes, or No.
Wavelength	Displays the wavelength value of the optical channel, and the serial number of the wavelength in the wavelength band.
Max Latency (for NCS 2000 network)	Displays the latency time for the current circuit. This value includes all the latency components for the circuit, including fiber and DWDM units on the path.
Fiber Latency (for NCS 1010 and NCS 1001)	Displays the latency time for the fiber.

Cabling report

The IPC Cabling and Patch reports are consolidated into a single view with additional columns. This streamlines connection details and eliminates the need to access multiple sources.

This table shows patch cord connections related to internal patch connections and multishelf management.

Table 134: IPC

Parameter	Description
Name	Displays the name of the site.
Src Unit Type	Displays the source unit.
Src Position	Displays the rack, shelf, and slot position of the card from which the patch cord originates.
Src Port Label	Displays the name of the port.
SrcFicBay	Displays the assigned rack number.
SrcShelfName	Displays the type of shelf or the shelf name.
SrcShelfNumber	Displays the type of shelf or the shelf name.
SrcShelfUniqueId	Displays the unique ID assigned to the shelf. The unique ID will be used in COSM XML to push the configuration to the device.
SrcRUPosition	Displays the rack unit position in layout.
SrcCardNumber	Displays the card slot number within the shelf .
Cable	Displays the type of cable.
Dst Unit Type	Displays the source unit.
Dst Position	Displays the rack, shelf, and slot position of the card from which the patch cord terminated.
Dst Port Label	Displays the name of the port.
DstFicBay	Displays the assigned rack number.
DstShelfName	Displays the type of shelf or the shelf name.
DstShelfNumber	Displays the assigned shelf number.
DstShelfUniqueId	Displays the unique ID assigned to the shelf, which is used in COSM XML to push the configuration to the device.
DstRUPosition	Displays the rack unit position in layout.
DstCardNumber	Displays the card slot number within the shelf .

Parameter	Description
ManuallySet/AutomaticallySet	Indicates whether a cable connection will be automatically generated or requires manual configuration for NCS 2000 networks.

Table 135: MSM

Parameter	Description
Name	Displays the name of the site.
Src Unit Type	Displays the source unit.
Src Position	Displays the rack, shelf, and slot position of the card from which the patch cord originates.
Src ID	Displays the source unit ID.
Src Port Label	Displays the name of the port.
Cable Type	Displays the type of cable.
Dst Unit Type	Displays the source unit.
Dst Position	Displays the rack, shelf, and slot position of the card from which the patch cord terminated.
Dst ID	Displays the destination unit ID.
Dst Port Label	Displays the name of the port.
W/P	Indicates whether the connection relates to a present or forecast circuit.

Confidential banner in exported reports

Table 136: Feature History

Feature Name	Release Information	Feature Description
Confidential Banner	Cisco ONP Release 4.1	This feature indicates the confidentiality of the reports or results generated by Cisco ONP for a network. The CONFIDENTIAL banner is placed in all the exported reports. It is placed in the first row and first cell of the Excel sheet, followed by a blank row and the contents of the exported report.


Table 137: Feature History

Feature Name	Release Information	Feature Description
Customizable Confidential Banner	Cisco ONP Release 4.2	The Confidential Banner string can be customized as required. An admin user can modify the banner string when the *confidentialBanner.enabled* field is set to true in the *feature.properties* file.

The "CONFIDENTIAL" banner appears in all exported reports. In Excel files (.xlsx), it is located in the first cell of the first row, followed by a blank row, and then the report contents. If the .xlsx file contains multiple sheets, the banner is included on each sheet.

The "CONFIDENTIAL" banner is updated only when reports are exported in .xlsx format.

Server administrators can customize the "CONFIDENTIAL" banner text by modifying the `confidentialBanner.content` field. To enable banner customization, the `confidentialBanner.enabled` field must be set to `true` in the `feature.properties` file. By default, this field is set to `false`.

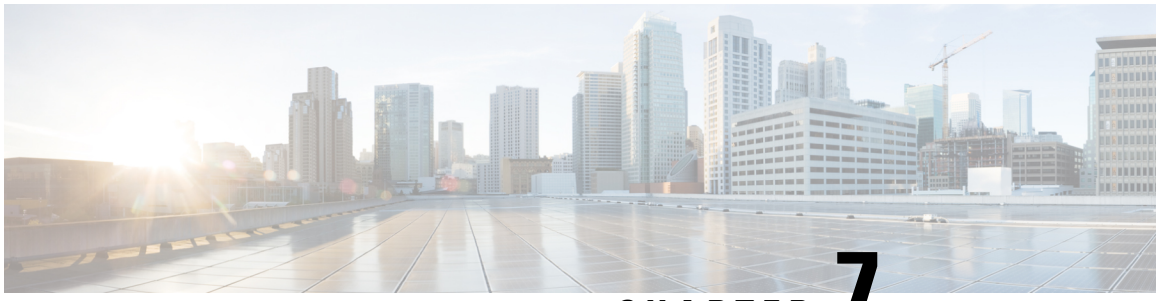

CHAPTER 7

Backup and Restore Cisco ONP Database

- Backup Database, on page 295
- Restore database using script, on page 299

Backup Database

The database backup configuration on the server, set by the system administrators, allows backups of the entire database to be taken daily, weekly, or monthly. Only system administrators have access to the backup folders and can perform restorations. Backup archives are stored on a highly durable NFS share. The available backup archives include:

- Daily archives for the last 7 days
- Weekly archives for the last 4 weeks
- Monthly archives for the last 6 months

Note You can change the duration for monthly archives.

Setup Backup

Before you begin

- Ensure that a highly durable 2 TB NFS storage is available to store database archives.
- Ensure that the storage is accessible from the Cisco ONP environment.
- Set up rules as defined by the Cisco ONP network and configure the appropriate Access Control List (ACL) to permit or deny access to the storage as needed.

Procedure

Step 1 Log into the Cisco ONP server, where you have installed Cisco ONP by using the tar archive.

Step 2 Create a folder for backup. Ideally it should be mounted on a reliable object storage such as NFS.

Step 3 Copy backup, rotation, and setup backup scripts from `ONP/images` folder to the new folder created in step 2.

Example:

```
 $ cd
$ mkdir cnp_backups
$ tree ~/cnp_backups/
 /home/ciscocnp/cnp_backups/
├── backup_postgres.sh
└── rotation.sh
└── setup_backup.sh
```

Ensure that all scripts have necessary permissions:

```
 $ chmod +x backup_postgres.sh
 $ chmod +x rotation.sh
 $ chmod +x setup_backup.sh
$ ls -l | grep .sh
 -rwxrwxr-x 1 ciscocnp ciscocnp 518 Jan 16 05:23 backup_postgres.sh
-rwxrwxr-x 1 ciscocnp ciscocnp 1412 Feb 1 05:50 rotation.sh
```

Step 4 Copy `restore_postgres.sh` from `/ONP/images/`.

Perform manual backup

Follow these steps to back up the Cisco ONP database.

Procedure

Step 1 Browse to the location where the backup_postgres.sh script is stored.

Step 2 Use the `bash rotation.sh` command to execute the rotation.sh script.

Example:

```
user@server:~/cnp_backups$ bash rotation.sh
```

This command creates the necessary folder structure.

Step 3 Use the `bash backup_postgres.sh` command to execute the script.

Example:

```
 user@server:~/cnp_backups$ bash backup_postgres.sh
```

The backup file is stored in the daily backup folder (backup.daily) with the current time stamp.

Schedule a backup

You can schedule a backup in either of these two ways:

• Schedule a backup using script, on page 297
• Schedule a backup with Crontab, on page 297

Schedule a backup using script

Follow these steps to schedule the backup operation using a script.

Procedure

Step 1 Log in to the Cisco ONP server.

Step 2 Use the command `bash rotation.sh` to execute the rotation.sh script.

Example:

```
user@server:~/cnp_backups$ bash rotation.sh
```

This command creates the necessary folder structure.

Step 3 Use the command `bash setup_backup.sh` to execute the setup_backup.sh script.

Example:

```
user@server:~/cnp_backups$ bash setup_backup.sh
```

The backup file is stored in the daily backup folder (backup.daily) with the current time stamp.

Step 4 Enter the path at the user prompt to store the file.
Backup files are stored in your required file path as shown in this example.

Example:

```
/user-defined path/backups/backup.daily
```

Schedule a backup with Crontab

Follow these steps to schedule the backup operation using Crontab.

Procedure

Step 1 Log in to the Cisco ONP server.

Step 2 Use the command `sudo crontab -e` to configure the Crontab job.

```
user@server~/cnp_backups$ sudo crontab -e
```

Step 3 Update the `Crontab.sh`script with the required cron job entries using the Syntax to schedule the backup using Crontab, on page 300, to schedule backup operations.

Example:

This example shows the scheduling of the backup operation at 3:00 a.m daily.

```
0 3 * * * /home/ciscocnp/cnp_backups/backup_postgres.sh
```

Syntax to schedule the backup using Crontab

Use this syntax to schedule a backup in Crontab:

```
m h dom mon dow
```

Where:

- m: Minutes (0–59)
- h: Hours (1–23)
- dom: Day of the month (1–31)
- mon: Month of the year (1–12)
- dow: Day of the week (0–6, where 0 represents Sunday)

To specify the time, you can provide exact values for the minute (m), hour (h), day of the month (dom), month (mon), and day of the week (dow). Alternatively, you can use the wildcard character `*` in these fields to indicate "any value."



Note The backup jobs are initiated according to the system daemon's understanding of time and time zones as defined by the cron scheduler.

Restore the database manually

Follow these steps to restore the database manually.

Procedure

Step 1 Check the Cisco ONP Database.

Example:

```
$ postgres CnpDB

MongoDB shell version: 2.6.10
 connecting to: CnpDB
 Server has startup warnings:
 2019-01-31T12:17:39.354+0000 I STORAGE [initandlisten]
 2019-01-31T12:17:39.354+0000 I STORAGE [initandlisten] ** WARNING: Using the XFS filesystem is
strongly recommended with the WiredTiger storage engine.
 2019-01-31T12:17:39.354+0000 I STORAGE [initandlisten] ** See
http://dochub.mongodb.org/core/prodnotes-filesystem
 2019-01-31T12:17:40.013+0000 I CONTROL [initandlisten]
 2019-01-31T12:17:40.013+0000 I CONTROL [initandlisten] ** WARNING: Access control is not enabled
for the database.
 2019-01-31T12:17:40.013+0000 I CONTROL [initandlisten] ** Read and write access to data and
configuration is unrestricted.
 2019-01-31T12:17:40.013+0000 I CONTROL [initandlisten]
```

```
 > show collections
 NetworkEntity
 SystemLog
 BOM
 fs.files
 Users
 fs.chunks
 ErrorInfo
 NetworkObject
 UserGroups
 TaskInfo
 ActionGroups
 Roles
 >
 ```
```

**Step 2** Remove the Cisco ONP back-end and front-end Docker services,"docker service rm cnp_cnp cnp_cnp_frontend" and check again:

**Example:**

```
```

$ postgres CnpDB

```
 MongoDB shell version: 2.6.10
 connecting to: CnpDB
 Server has startup warnings:
 2019-01-31T12:17:39.354+0000 I STORAGE [initandlisten]
 2019-01-31T12:17:39.354+0000 I STORAGE [initandlisten] ** WARNING: Using the XFS file system is
strongly recommended with the WiredTiger storage engine.
 2019-01-31T12:17:39.354+0000 I STORAGE [initandlisten] ** See
http://dochub.mongodb.org/core/prodnotes-filesystem
 2019-01-31T12:17:40.013+0000 I CONTROL [initandlisten]
 2019-01-31T12:17:40.013+0000 I CONTROL [initandlisten] ** WARNING: Access control is not enabled
for the database.
 2019-01-31T12:17:40.013+0000 I CONTROL [initandlisten] ** Read and write access to data and
configuration is unrestricted.
 2019-01-31T12:17:40.013+0000 I CONTROL [initandlisten]
 > show collections
 >
 ```
```

Step 3 Copy the database to the folder that is mapped to PostgresDB container's volume:

Example:

```
 $ sudo cp backups/2019-02-01-04-29.archive /var/lib/postgresdb_cnp/
```

Step 4 Restore the database and check.

Example:

```
 $ docker exec -t cnp_postgres.1.$(docker service ps -f 'name=cnp_postgres.1' -f 'desired-state=running'
 cnp_postgres -q) bash -c "postgresrestore -u \$(cat \$MONGO_INITDB_ROOT_USERNAME_FILE) -p \$(cat
\$MONGO_INITDB_ROOT_PASSWORD_FILE) --authenticationDatabase admin --port 27017 -h localhost --db
CnpDB --gzip --archive=/data/db/2019-02-01-04-29.archive"
```

Restore database using script

You can restore the database using a script, which is available at this location:

`/ONP/Images/restore_postgres.sh`

Follow these steps to restore the database using a script:

Procedure

Use the command `sudo bash restore_postgres.sh` to restore the database

Example:

```
 $ sudo bash restore_postgres.sh DB backup archive file path.
$ sudo bash restore_postgres.sh /backups/backup.daily/2019-05-05-23-58.archive
```

The database backup is created and a confirmation prompt appears asking to delete the database.

```
!!! WARNING! Complete Restore Operation will replace Existing Database with Backup Database
(Recommended) !!!
Do you want Complete Restore? (Yes/No) [default - Yes]
```

Enter `Yes` to delete the database and restore the database with backup file.

Enter `No` to not delete the database and apply only missing data(s) from backup file.

Syntax to schedule the backup using Crontab

Use this syntax to schedule a backup in Crontab:

```
m h dom mon dow
```


Where:

- m: Minutes (0-59)
- h: Hours (1-23)
- dom: Day of the month (1-31)
- mon: Month of the year (1-12)
- dow: Day of the week (0-6, where 0 represents Sunday)

To specify the time, you can provide exact values for the minute (m), hour (h), day of the month (dom), month (mon), and day of the week (dow); alternatively, you can use the wildcard character `*` in these fields to indicate "any value."



Note The backup jobs are initiated according to the system daemon's understanding of time and time zones as defined by the cron scheduler.

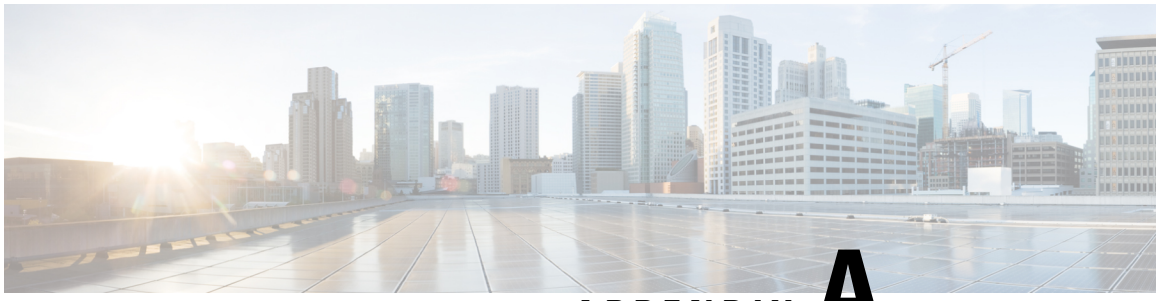

APPENDIX A

Cisco ONP UI Reference

This appendix chapter describes the various options available in the Cisco ONP UI.

Table 138: Feature History

Feature Name	Release Information	Feature Description

User Interface Enhancements	Cisco ONP Release 24.3.1	Cisco ONP improves the user experience with these user interface enhancements:
		• **Maps**:
		  • Providing an option to increase the workable area.
		  • Switching to zoom mode that automatically centers the map on the selected node.
		  • Highlighting nodes and fibers selected in the network tree on the map.
		• **Entity Editor**: Adding tooltips for some of the properties.
		• **Results**:
		  • Including Raman information in the Fiber Details that are exported from **Export**>**Fibers**.
		  • Introducing **Export Report** button to export Optical Reports/BOM differences between two networks in CONP.
		  • Maintaining the recent view in the **Results** tab view when switching to the **Map** or **BoM** tabs.
		• Enabling editing of EOL Aging Loss with **Aging Loss [dB]** property in both the entity editor and Properties pane.
		• Updating optical sources with minimum system release information for user visibility in the **Manage Optical Source** dialog box.
		• Adding an *OMNI* marker to identify the Omni-Directional sides in the NCS 2000 networks.
		• **Component Logs**: Streamlining log management, this **Logs** menu option provides direct access to critical component logs such as cnp Backend (BE), ODE, GENE, and PCE through the user interface.

• Menu bar, on page 302
• Network Tree, on page 310
• Design Palette, on page 312
• Entity Editor, on page 314

Menu bar

This table lists all options available in your Cisco ONP GUI menu bar.

Table 139: Menu options and descriptions

Options	Description
File	Performs common file operations such as New, Open, Open Shared, Save, Save As, Share, and Delete
Network	Opens Entity Editor, analyzes the network, and converts non-SSON to SSON networks
Export	Exports reports of CPZ, sites, fibers, SRLGs, services, waves, media channels, optical results, service aggregation, BOM, and messages. Export allows you to download Excel and LNI templates
Import	Imports CPZ, Excel, LNI, and MPZ to design a network in Cisco ONP
Manage	Manages Layout Templates and Optical Sources
Logs	Displays log events initiated during a specific period, such as user login, user logout, password change, and LNI - start, failed, and completed
Job Monitor	Monitors background tasks
Control Panel	Manages users, user groups, user roles, permissions, system configuration, and dictionary
Preferences	Changes the default map view and personalizes the color code for spectrum utilization
Help	Displays the Cisco ONP version
Last Login	Shows the last date and time you logged in to Cisco ONP including the last login IP details
Username	Displays the name of the user who has currently logged in to Cisco ONP

File

The **File** menu includes common file options such as New, Open, and Delete.

Options	Description
New	Creates a new network. By default, NCS 1010 is created. To create NCS 2000 networks, change **L0 Network Platform** to *NCS2000*. You can check the **SSON Network** check box and select **System Release** for NCS 2K to create an SSON network.
Open	Opens a saved network. The network name in blue-colored font indicates that the network is in the Design mode, and the network name in green-colored font indicates that the network is in the Analyze mode. **Note** If you view a blank screen when you open a network, refresh the browser, or log in to Cisco ONP again.
Open Shared	Opens a shared network.
Save	Saves a network.
Save As	Saves the network with a new name.
Share	Shares a network or networks.

Options	Description
Delete	Deletes a network or networks.

Network

The **Network** menu includes options such as Entity Editor, Analyze, and SSON Convert in the design mode. It includes options such as Entity Editor, Design, Upgrade, and Enter Plan Mode in the Analyze mode.

Options	Description
Entity Editor	Use this option to edit various properties of an element in the network
Analyze	Analyzes the network after completing the design
SSON Convert	Converts a Non-SSON network to an SSON network
Design	Switches from Analyze mode to Design, Upgrade, or Release Upgrade mode
Upgrade	Upgrades an existing network that is in the Analyze mode
Release Upgrade	Upgrades the NCS 2K or NCS 1010 System Release of a network
Enter Plan Mode	Switches to the Plan mode
Exit Plan Mode	Exits the plan mode
Enter Link Rate Tuner Mode	Enters the link rate tuner mode
Open Tuner Input	Opens the tuner input table to add parameters for custom optical sources
Run Tuner	Runs the tuner input options to provide custom optical source results.
Start New	Starts fresh tuner analysis
Open Tuner Result	Opens the already analyzed tuner results
Exit Link Rate Tuner Mode	Exits the link rate tuner mode
Restore	Restores failed fibers and nodes
Open Failure Report	Expands the Failure Report from the bottom of the Map. Data is populated after Restore.
Open Feasibility Report	Expands the Feasibility Report from the bottom of the Map. The report displays the data regarding Auto Regen Suggestions for channel feasibility.

Export

The **Export** menu includes options to export reports of Sites, Fibers, Services, SRLG, Waves, Messages, and BOM.

Options	Description
CPZ	Export the .cpz design file of a network into your local system.
Sites	Exports site details such as x and y coordinates, grooming site flag, CLLI code, site address, site type, and site name.
Fibers	Exports fiber details such as length, loss to fiber, source and destination site, source and destination edge. From Release 24.3.1, the exported fiber details contains the Raman information.
Services	Exports service details such as name, type, path, quantity, and protection.
SRLGs	Exports details about created SRLGs.
Waves (Available for non-SSON network)	Exports wave details such as Label, Source and Destination sites, Card Type, Wavelength, Utilization, Source port, Destination port, Demands, OTN Hops, OSNR, OSNRMarginEOL, StatusEOL, Excluded Channels, and Path of Wave.
Media Channels (Available for SSON network)	Exports media channel details such as Media Channel Label, Media Carrier Label, Source and Destination sites, Card Type, Wavelength, Utilization, Source port, Destination port, Demands, OTN Hops, OSNR, OSNRMarginEOL, StatusEOL, Excluded Channels, and Path of Media channel.
Circuits (Available for NCS1010 network)	Exports circuits details such as Circuit Label, Carrier Label, Source and Destination sites, Card Type, Traffic Type, Wavelength, Utilization, Source port, Destination port, Demands, OTN Hops, OSNR, OSNRMarginEOL, StatusEOL, Excluded Circuits, and Path of Circuit.
Messages	Shows the complete log of the analysis, including critical errors.
Excel	Download sample Excel file that can be used as a reference for creating networks using the Import Excel feature.
LNI Template	Download sample LNI file that can be used as a reference for creating networks using the Import feature.
Optical Source Template	Download sample Optical Source Excel file that can be used as a reference for creating User Defined/custom Optical Source using the **Manage** > **Optical Sources** feature.
BOM	Exports details about pricing and quantity of the network equipment
Failure Groups	This option is available only in the plan mode. You can add failed fibers to a failure group.
Failure Report	This option is available only in the plan mode. It shows the failed fibers, total channels, failed channels, restored channels, and fiber hotzones.
Optical Results	Exports details such as protection type, SOL, EOL, source, and destination
Device Configuration	Exports the Device Netconf XML file and COSM Netconf file.

Import

The Import menu imports an Excel file, a CPZ file, or an MPZ file.

Options	Description
CPZ	Imports the .cpz network design files that are exported from another Cisco ONP instance
Excel	Imports an Excel file containing all the design parameters
Live	Imports a live deployed network by retrieving configurations of the nodes, provided in the LNI input Excel sheet
MPZ	Imports the .mpz network design files from CTP to Cisco ONP, to avoid recreating the networks that are already created in CTP

Manage

You can manage layout templates and optical sources.

Options	Description
Layout Templates	Imports reusable templates to design layout configurations for a network
Optical Sources	Imports an optical source from your local system

Logs

System Logs

The System Logs option allows an admin user, or user with USER MANAGEMENT, and NETWORK MANAGEMENT permissions to view at logs the events that are initiated during a specific time interval. Examples of events are user login, user logout, password change, Live Network Import (LNI)-start, failed, completed and analysis-start, and failed.

The **SYSTEM LOGS** page includes the following fields:

Field	Description
Time Stamp	Provides the date and time of the specific event
Event Type	Shows the type of event, which includes user login, user logout, password change, and so on
Description	Describes the event, which includes user login success, user logout success, and so on
Username	Shows the user who has initiated specific events
Event Source	Shows the IP address of the device from where the event is initiated

Events that are captured in the System Logs are:

Event	Description
SIGNUP	New user sign-up for Cisco ONP
LOGIN	User log in to Cisco ONP
USER STATE CHANGE	User state change from Active to Inactive and the converse
USER ROLE CHANGE	User role change, such as admin to planner, and so on
LOGOUT	User log out from Cisco ONP
USER DELETION	Deletion of a particular user
UNAUTHORIZED	User enters invalid login credentials
LNI_START	Successful initiation of Live Network Import
LNI_COMPLETE	Successful completion of live import of a network
LNI_CANCEL	Cancellation of Live Network Import
LNI_PURGE	Imported Live network data is successfully purged
ANALYZE_LNI_START	Analysis of LNI network started successfully
ANALYZE_LNI_END	Analysis of LNI network completed successfully
LNI_POPULATE_DESIGN_DATA	Populating of L0 DesignData initiated
ANALYZE START	Starting of the network analysis
ANALYZE END	Completion of the network analysis
ANALYZE CANCEL	Cancellation of the network analysis
UPGRADE NETWORK	Entering the Upgrade mode
PLAN_INIT	Entering the Plan mode
PLAN_END	Exiting the Plan mode
PLAN_REROUTE	Checking for alternate paths to restore failed media channels or waves
PLAN_PROGRESS	Restoration of failed media channels or waves in progress
RELEASE_UPGRADE_NETWORK	Upgrading the system release of the network is in progress.

Component Logs

The Component Logs option allows you to access logs for multiple critical components such as cnp Backend (BE), ODE, GENE, and PCE, directly through the user interface. This streamlines the process, eliminating the need for server access and manual file navigation. This enhancement simplifies log management, aiding in performance monitoring, troubleshooting, and system insights.

The **Component Logs** page includes the fields:

Field	Description
Time Stamp	Provides the date and time of the specific event
Logs	Describes the events for the selected component
Component	Provides list of critical components to choose from. The available components are: • BE • ODE • GENE • PCE
Search	Locates specific log entries based in the entered value
Pages	Allows you to navigate through logs page by page

Job Monitor

The **Job Monitor** menu checks and manages tasks running in the background.

You can access this menu if you have ADMIN, NETWORK_MANAGEMENT, or NETWORK_PLANNING role.

The **JOB MONITOR** page has the following options:

Options	Description
Refresh	Refreshes the display information.
Filter	Applies one or more of the following filter options: Task Type: Filters the display information based on the task type. Select Start Date: Filters the display information based on the start date of the task. Select End Date: Filters the display information based on the end date of the task. Username: Filters the display information based on the username.
Created Date	The date on which the task is started by the user.
User Name	Name of the user who initiated the job.
Network Name	Name of the network on which the task is running.
Task Type	The type of background task: Valid values are ANALYZE and EPNM_IMPORT.
Messages	The current state of the task.

Options	Description
Cancel	Enables you to cancel or stop an ongoing background task: • The Admin can cancel any of the running background tasks. Other valid users can cancel only their own tasks. • If you want to cancel your ongoing network analysis, you can open Cisco ONP at the browser in incognito mode, or contact the Admin. • After a task is cancelled, it gets removed from the job monitor. You can check the status of a cancelled task from **System logs** page. Click **Logs** to open the **System logs** page.
Check Progress	Enables you to view the status of the LNI operation.
Clear all Completed Tasks	Removes all the completed tasks from the **Job Monitor** page.

Control Panel

Apart from designing, analyzing, and creating BOM for a network, a user with admin rights can activate, manage, and delete users and their roles.

To navigate to the control panel page, click **Control Panel**.

The admin or any user with USER_MANAGEMENT role can lock, unlock an individual user account, and manually expire the individual user password. For more information, see Manage Users and Roles, on page 13.

Preferences

This menu contains the General Settings option to customize Cisco ONP settings such as the default map view and spectrum utilization percentage.

Field	Description
General Settings	Allows choosing the default map view and applying color codes for spectrum usage percentage • **Default Map**: Choose the **Detailed** or **Minimal** map from the drop-down list. • **Spectrum Utilization Percentage**: Click and drag to change the color code to indicate spectrum usage.

Help

This menu provides information about the Cisco ONP version.

Field	Description
About	Provides the Cisco ONP version.

Network Tree

Table 140: Feature History

Feature Name	Release Information	Feature Description
Network Tree Enhancements	Cisco ONP Release 5.2	Now, you can use the Ellipsis icon at the right side of each element in the Network tree to perform various actions such as Expand All, Collapse All, Enable Multi-Select, and so on. Also, you have multiple entity-level options to filter the elements under the Network tree. These enhancements make the Network tree more intuitive.

The left pane of the Cisco ONP home page comprises a network tree. The network tree includes various network elements. When you click each element, the respective property is displayed under the network tree. You can edit the properties. For more information on editing the network properties, see Modify Network Properties, on page 107.

Table 141: Network Tree Elements

Network Tree Elements	Description
Network name	Displays the name of the network.
Sites	Customer premise equipment that is located in a rack within a building. When you click a site name in the network tree, the site will be highlighted in orange on the map. When multiselect is enabled, the network tree displays checkboxes for each site, fiber, and circuit. Selecting multiple sites from the network tree highlights the same sites on the map.
Fiber	Optical fiber connecting two sites.
Fiber Couple	A fiber couple consists of two different fibers (clockwise and counterclockwise), one for transmission and another for reception.

Network Tree Elements	Description
Services	Service is the circuit through which traffic flows between nodes. When you add services to the Traffic site (of the type 1K-2K-4K) in an SSON network, a DefaultGroup is created under the Services in the network tree. You can also create a new service group.
Waves or Medial Channel or Circuits	The wave or Media channel represents a DWDM channel. In a wave hierarchy, for each wave, there is a trail. When you expand a trail, there is a section under each trail. The trail is an optical path or a network section joining two traffic nodes. It can have more than one section depending on whether the trail has a regenerator site. For more information on regeneration, see Regeneration support, on page 252.
SRLG	Shared Risk Link Group (SRLG) is useful for routing the protected services. If there are Fiber 1 and Fiber 2 in the network, they are assumed to be diverse and are used as alternates for protection purposes. If Fiber 1 and Fiber 2 are in an SRLG, they are not true alternates, and they share the same risk of failure. Therefore, if Fiber1 fails, Fiber 2 also fails, and Fiber 2 cannot be used as a protected path.
Optical subnet	An optical subnet is a collection of spans with certain associated properties. When you create a new network, Cisco ONP automatically creates an optical subnet that is associated to the network. At least one optical subnet must exist for each network.

Use the Search box on top of the network tree to search for any specific site, fiber, or wave in the network tree panel. Click the Refresh icon to refresh your search.

Now, you can filter the elements available in the network tree using the Filter icon available next to the Search box. The following table explains the various filter options available.

Table 142: Network Tree Elements

Filters	Options Available Under Each Filter
Network Filter	Entity Type
Sites Filter	Site Type, and DWDM Site Type
Fibers Filter	Source Site, Destination Site, Source Edge, Destination Edge, and Raman
Services Filter	Protection Type, Source Site, Destination Site, Src Add-Drop Type, and Dst Add-Drop Type

Filters	Options Available Under Each Filter
Waves, Medial Channel, or Circuits Filter	Protection Type, Source Site, Destination Site, Src Add-Drop Type, and Dst Add-Drop Type

Design Palette

Table 143: Feature History

Feature Name	Release Information	Feature Description
Intuitive Map Display	Cisco ONP Release 5.2	The new intuitive map display allows you to virtually rearrange networks for a clutter-free view without impacting the original design. This display simplifies adding new nodes to complex networks. Save the last modified network in the new view to retain the latest rearrangement. The new icons in the Design Palette that enable the intuitive display are: • **Switch to Intuitive Arrangement**/**Switch to Coordinates Arrangement**—Toggles the map between the intuitive and original displays. • **Rearrange nodes**—Overrides node coordinates and rearranges the map in a presentable manner.

At the right of the Cisco ONP home page, there is the design palette. You can use this design palette to create a network design. It consists of the following six icons:

Icons	Description
Switch to Zoom Mode/ Switch to Normal Mode	Click this icon to toggle between Normal and Zoom modes. **Zoom Mode:** Highlights the selected node and automatically centers the map on the selected node. The size of labels, such as fiber and service names, adjusts according to the mode. **Normal Mode:** Highlights the selected node on the map. Autozoom is disabled. You need to manually move the map to view the selected node if it is not visible.
Zoom In	Click this icon to magnify the map.
Zoom Out	Click this icon to minimize the map.
Reset Zoom	Click this icon to reset the map to its original size.
Switch to Intuitive Arrangement/**Switch to Coordinates Arrangement**	Click this icon to toggle between the intuitive and coordinates display. Save the last modified network in the Intuitive view to retain the latest rearrangement. The saved networks retain the map designs when reopened or shared with others. When you export the network as CPZ or Excel files, the exported files include both original and modified or rearranged coordinate data.

Icons	Description
Rearrange nodes	Click this icon to rearrange the map in a presentable fashion.
Drawing Tool	The Drawing Tool consists of the following icons: • **Traffic Site**: Select this icon, and click the working area to create traffic sites in the network. • **ROADM Site**: Select this icon, and click the working area to create ROADM sites. • **OLA Site**: Select this icon, and click the working area to create OLA sites. • **Passthrough Site**: Select this icon, and click the working area to create passthrough sites. • **Link**: Click this icon, and drag and drop between sites to create a fiber link. • **OTN Service**: Click this icon to create OTN service between sites. • **DWDM channel**: Click this icon to add a wave or medial channel between sites. • **Select**: The **Select** icon looks similar to the cursor tool. Click this icon to select a node, link service, and so on.
Layers Window	Use this icon to view or hide layers such as fiber link, service, text, and channel. The following are the four toggle icons: • **Toggle Fiber**: Click this icon to view or hide fiber link details from the network. • **Toggle Service**: Click this icon to view or hide service details from the network. • **Toggle Wave**: Click this icon to view or hide the channel or wave details from the network. • **Toggle Text**: Click this icon to view or hide the text from the network. • **Toggle SVO associations**: Click this icon to remove or add SVO associations. • **Expand/Collapse All Demands**: Click this icon to expand the waves or media channels so that you can view them clearly. Click this icon again to collapse the waves and media channels to their original shape and position. The eye symbol in the icon indicates that you are currently viewing the respective details.
Zoom Tool	The icon below the **Drawing Tool** is the **Zoom Tool**. You can change the display of the working area by using this function. Click the arrow to view two sliders. • **Map Fade**: Move the **Map Fade** slider from right to left to fade the map from the background. • **Zoom In/Out**: To magnify the map, move the Zoom in or out slider from left to right.

Icons	Description
Zoom Elements	Click the **Zoom Elements** icon to view four sliders. • **Media Channel Width**: Move this slider from left to right to increase the channel width. • **Path Spread**: Move this slider from left to right to increase the space between the paths. • **Fiber Width**: Move this slider from left to right to increase the fiber width. • **Service Width**: Move this slider from left to right to increase the service width.
Show Failed (available only in plan mode)	This icon shows the failed media channels in the map. Failed ones are marked with a red cross mark.
Traffic Monitor (available only in plan mode)	This icon shows the total number of impacted media channels, demands, or services that are working or failed in the entire network.
Switch to Minimal Map/**Switch to Detailed Map**	Click this icon to toggle between Minimal Map and Detailed Map. **Switch to Minimal Map:** Focuses on Sites and Fibers, allowing you to view spectrum utilization, and supporting the spectrum and path finder. **Switch to Detailed Map:** Displays all network components for a comprehensive view.

Entity Editor

The **Entity Editor** allows you to edit various properties of an element in the network. Choose **Network** > **Entity Editor** to open the **Entity Editor** window.


The **Entity Editor** enhances some properties with descriptions in the form of tooltips.

The table lists the operations that you can perform in the **Entity Editor** window.

Options	Description
Left pane filter	Includes check boxes to filter the network elements displayed under each tab: • For the **SITE** tab, you can choose whether to display OTN (only traffic node), DWDM (ROADM, OLA, or pass-through) node, or both. • For the **FIBER** tab, you can choose the fiber connecting a particular source and destination sites. • For the **SERVICE** tab, you can choose to display either services, waves, or both.
Right pane properties	Displays all properties of the selected network element. You can modify the properties as required.

Options	Description
Search	Searches for a particular network element.
Refresh	Refreshes the list of network elements displayed under each tab.
Expand/Collapse	Expands or collapses the network elements available in the network tree under each tab.
Select Similar	Selects similar network elements available in the network tree. For example, select a ROADM site, and click the **Select Similar** icon. All ROADM sites are selected. You can change a property in all the selected sites at the same time. This option allows you to identify and compare the property difference. For example, if a property is different among the selected sites, that property is dimmed. You can select an option that is applied to all the selections.
Un-Select All	Deselects all selections that you make under the network tree.
Delete	Deletes the selected network elements.
Add Contentionless Sides (available only under the **Site** tab for the NCS 2000 network)	Adds contentionless sides to NCS 2000 networks. Contentionless functionality on a site refers to the contentionless add/drop ability of an N-degree ROADM node to accommodate N wavelengths of the same frequency from a single add/drop device. For a ROADM to be contentionless, the number of drop units have to be equal to ROADM degrees. • Click the ROADM site to add contentionless sides. • Click the **Add Contentionless Side** icon. • Enter an appropriate value in the **Enter number of contentionless sides** field. • Click **OK**. After adding the contentionless side, you can edit the contentionless port property of the side at the right pane. You can select any of the values ranging from 1 to16. The default value is 16.
Add L-Band (available only under the **Site** tab for NCS 1010 site)	Adds L-Band sides to an NCS 1010 R7.9.1 site. To add L-Band sides, • Click the site or side to which you want to add L-band sides. • Click the **Add L-Band** icon.

Options	Description
Add Omni-Directional (available only under the **Site** tab for the NCS 1010 network)	Adds omnidirectional functionality on a site. Omnidirectional functionality on a site refers to the ability to route channels through any of the optical degrees in a multidegree topology during fiber cut without the need for physical fiber reconnections. To add omnidirectional functionality, • Click the ROADM site to which you want to add omnidirectional sides. • Click the **Omni-Directional** icon. • Enter the appropriate value in the **Enter number of Omni Directional sides** field. • Click **OK**.
Copy (available only under the **Service** tab)	Clones a service or wave that is connected between two sites. To clone a service, • Select a wave and click **Copy**. • Enter the quantity in the **Clone Service/DWDM Channel** dialog box, and click **OK**. –1 is added at the end of the label of the cloned wave. An example label of a cloned wave is Site-2-Site3-1-1. The original wave is Site-2-Site3-1. You can rename the label. You can also clone a service in a similar way.

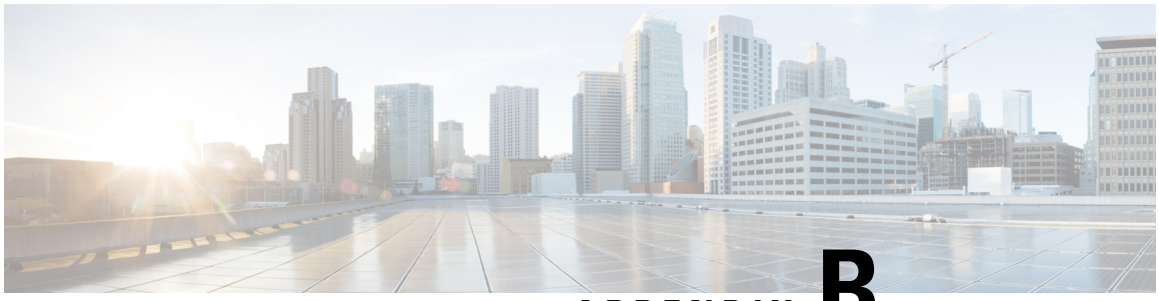

APPENDIX B

Supported ROADMs, Add/Drop Cards, and Modules

• Supported ROADMs, Add/Drop Cards, and Modules, on page 317

Supported ROADMs, Add/Drop Cards, and Modules

Cisco ONP supports the following ROADM, Add/Drop cards and modules:

Table 144: NCS 2000 ROADM Cards

Product	Product Description
NCS2K-9-SMR34FS=	9-port Single Module ROADM - 20—34-dB Gain - Flex Spectrum
NCS2K-9-SMR24FS=	9-port Single Module ROADM - 12—24-dB Gain - Flex Spectrum
NCS2K-9-SMR17FS=	9-port Single Module ROADM - 0—17-dB Gain - Flex Spectrum
NCS2K-20-SMRFS=	20-port Single Module ROADM - Switchable Gain Flex Spectrum
NCS2K-20-SMRFS-CV=	20-port SMR - Switch. Gain Flex Spectrum with Connection Verification

Table 145: NCS 2000 ADD/DROP Line Cards and Optical Passive Modules

Product	Product Description
NCS2K-16-AD-CCOFS=	4- to 12-degree 16-port Contentionless Add/Drop Unit
NCS2K-MF-6AD-CFS=	6-port Colorless Flex Spectrum Add/Drop MF Unit
NCS2K-MF-MPO-16LC=	MPO-16 to 16xLC Fan-Out MF Unit with Integrated Monitoring
NCS2K-MF-M16LC-CV=	MPO-16 to 16xLC Fan-Out with Connection Verification
15216-MD-48-ODD=	ONS 15216 48-channel Mux/DeMux Exposed Faceplate Patch Panel Odd
15216-MD-48-EVEN=	ONS 15216 48-channel Mux/DeMux Exposed Faceplate Patch Panel Even

Product	Product Description
15216-MD-48-CM=	ONS 15216 Mux/Demux Plugin Coupler/De-Interleaver Module
NCS1K-MD-64-C=	NCS 1000 64-channel Odd Mux/Demux Patch Panel—C-band

Table 146: NCS 2000 Controller Cards and Common Equipment

Product	Product Description
NCS2006-DC=	NCS 2006 30A DC Power Filter
NCS2006-AC=	NCS 2006 1500W AC Power Supply
NCS2015-SA-DC=	NCS 2015 Shelf Assembly - DC Power
NCS2015-SA-AC=	NCS 2015 Shelf Assembly - AC Power
NCS2K-TNCS-2-K9=	NCS 2000 Transport Node Controller, version 2
NCS2K-TNCS-2O-K9=	NCS2000 Transport Node Controller with 2x OTDR/OSC, version 2
NCS2K-TNCS-K9=	Transport Node Controller for NCS2002, 2006, and 2015 chassis
NCS2K-TNCS-O-K9=	NCS 2000 Transport Node Controller with 2x OTDR/OSC
NCS2K-SVO-K9=	Shelf Virtualization Orchestrator - LC, Full
NCS2K-PSM=	Protection Switching Module (PSM) card for NCS 2000

Table 147: NCS 2000 Series Passive Optical Modules

Product	Product Description
NCS2K-MF-6RU=	6RU Mechanical Frame for Passive Units—14 slots with USB Hub
NCS2K-MF10-6RU=	6RU Mechanical Frame for Passive Units—10 slots with USB Hub
NCS2K-MF-1RU=	1RU Mechanical Frame—4 slots
NCS2K-MF-UPG-4=	4-degree Upgrade Mesh Interconnection MF Unit
NCS2K-MF-UPG-4-CV=	4-degree Upgrade Mesh Interconnect with Connection Verification
NCS2K-MF-DEG-5=	Up to 5-degree Mesh Interconnection MF Unit
NCS2K-MF-DEG-5-CV=	5-degree Mesh Interconnect with Connection Verification
NCS2K-PPMESH8-5AD=	2RU 8-degree Mesh Patch Panel—5-Add/Drop Port + Monitoring

Table 148: NCS 4000 Chassis and NCS 1004 Line Cards

Product	Product Description
NCS4016-SA-DC=	NCS 4016 shelf assembly - DC Power

Product	Product Description
NCS4016-SA-AC=	NCS 4016 shelf assembly - AC Power
NCS4009-SA-DC=	NCS 4009 shelf assembly - DC Power
NCS4K-4H-OPW-QC2=	NCS 4000 400G Packet/OTN/WDM—QSFP28/CFP2 line card
NCS4K-24LR-O-S=	NCS 4000 24-port low rate OTN—SFP line card
NCS1004=	Network Convergence System 1004 four line card slots

Table 149: NCS 1010 Line Cards, Chassis, and PSUs

Product	Product Description
NCS1K-OLT-C=	NCS 1010 Optical Line Terminal—C-band
NCS1K-OLT-L=	NCS 1010 Optical Line Terminal—L-band
NCS1K-OLT-R-C=	NCS 1010 Optical Line Terminal with Raman—C-band
NCS1K-ILA-C=	NCS 1010 In-Line Amplifier—C-band
NCS1K-ILA-L=	NCS 1010 In-Line Amplifier—L-band
NCS1K-ILA-2R-C=	NCS 1010 In-Line Amplifier with 2x Raman—C-band
NCS1K-ILA-R-C=	NCS 1010 In-Line Amplifier with 1x Raman—C-band
NCS1010-SA=	NCS 1010 Shelf Assembly
NCS1010-DC-PSU=	NCS 1010 DC Power Supply Unit
NCS1010-AC-PSU=	NCS 1010 AC Power Supply Unit
NCS1K-E-OLT-C=	NCS 1010 Optical Line Terminal—C-band, enhanced
NCS1K-E-OLT-R-C=	NCS 1010 Optical Line Terminal with Raman—C-band, enhanced
NCS1K-E-OLT-L=	NCS 1010 Optical Line Terminal—L-band, enhanced
NCS1K-E-ILA-R-C=	NCS 1010 In-Line Amplifier with 1x Raman—C-band, enhanced
NCS1K-E-ILA-2R-C=	NCS 1010 In-Line Amplifier with 2x Raman—C-band, enhanced
NCS1K-E-ILA-R-C-2=	NCS 1010 In-Line Amplifier with 1x Raman west facing—C-band, enhanced
NCS1K14-2.4T-K9=	NCS 1014 2.4T Line Card

Table 150: NCS 1010 Passive Modules

Product	Product Description
NCS1K-BRK-SA=	NCS 1000 shelf for four passive modules

Product	Product Description
NCS1K-BRK-8=	NCS 1000 MTP/MPO to 8-port passive breakout module
NCS1K-BRK-24=	NCS 1000 MTP/MPO to 24-port colorless channels passive breakout module
NCS1K-BRK-16=	NCS 1000 MTP/MPO to 16-port colorless channels passive breakout module
NCS1K-MD-32O-C=	NCS 1000 32-channel Odd Mux/Demux Patch Panel - 150GHz—C-band
NCS1K-MD-32E-C=	NCS 1000 32-channel Even Mux/Demux Patch Panel - 150GHz—C-band
NCS1K14-CCMD-16-C	NCS 1000 16-port Colorless Mux/Demux Optical Line Card—C-band
NCS1K14-CCMD-16-L	NCS 1000 16-port Colorless Mux/Demux Optical Line Card—L-band

Table 151: NCS 1020 Chassis and Modules

Product	Product Description
NCS1020-SA=	NCS 1020 Shelf Assembly
NCS1010-CTR2-K9=	NCS 1010, 1012, 1020 Controller, 112500-bps Default Console Baud Rate
NCS1010-CTR2-B-K9=	NCS 1010, 1012, 1020 Controller, 9600-bps Console Baud Rate
NCS1020-FAN=	NCS 1020 Fan for NCS 1014 Slots
NCS1020-FAN-BLANK=	NCS 1020 Fan Blank
NCS1010-FLR-P=	Filler / Blank for NCS 1010 Slot on NCS 1012, 1020, Passive
NCS1010-FLR-A=	Filler / Blank for NCS 1010 Slot on NCS 1012, 1020, Active, with Fan slots
NCS1010-CTR2-FLR=	Filler / Blank for Controller Slot on NCS 1012, 1020
NCS1K14-BLANK=	Network Convergence System 1014 Blank card


Table 152: NCS 1001 Chassis, Modules, and Pluggables

Product	Product Description
NCS1001-K9=	Network Convergence System 1001 line system 3 slots
NCS1K-CNTLR2=	Network Convergence System 1001 Control card
NCS1K-EDFA=	Network Convergence System 1001 amplifier module
NCS1K-PSM=	Network Convergence System 1001 protection module
NCS1K-2KW-AC2=	Network Convergence System 1001 AC power supply unit - 2KW normal operating temperature, 600W short term high temperature

Product	Product Description
NCS1K-2KW-DC=	Network Convergence System 1001 DC power supply unit - 2KW normal operating temperature, 600W short term high temperature
NCS1K1-FAN=	Network Convergence System 1001 line system Fan
ONS-SC-Z3-1510=	SFP OC-48/STM-16/GE, CWDM, 1510 nm
ONS-SE-155-1510	SFP OC-3/STM-1, CWDM, 1510 nm EXT; SFP Pluggable Optics Module
CWDM-SFP-1510	CWDM 1510-nm SFP; Gigabit Ethernet 1 and 2 Gb Fibre Channel
CWDM-SFP-1610	CWDM 1610-nm SFP; Gigabit Ethernet 1 and 2 Gb Fibre Channel
ONS-SC-Z3-1610=	SFP OC-48/STM-16/GE, CWDM, 1610 nm

Product	Product Description
15216-MD-48-ODDE	ONS Multiplexer/Demultiplexer Patch Panel Even Extended
15216-MD-48-EVENE	ONS Multiplexer/Demultiplexer Patch Panel Odd Extended
15216-MD-48-CME	ONS Coupler and Splitter
15216-FLD-OSC	OSC Combiner and Splitter
NCS1K-MD-64-C	NCS 1000 64 channels Odd Multiplexer/Demultiplexer Patch Panel-C-band
N1K-MD-32E-C	NCS 1000 32 channels Even Multiplexer/Demultiplexer Patch Panel, No-loopback - 150GHz - C-band

Supported ROADMs, Add/Drop Cards, and Modules

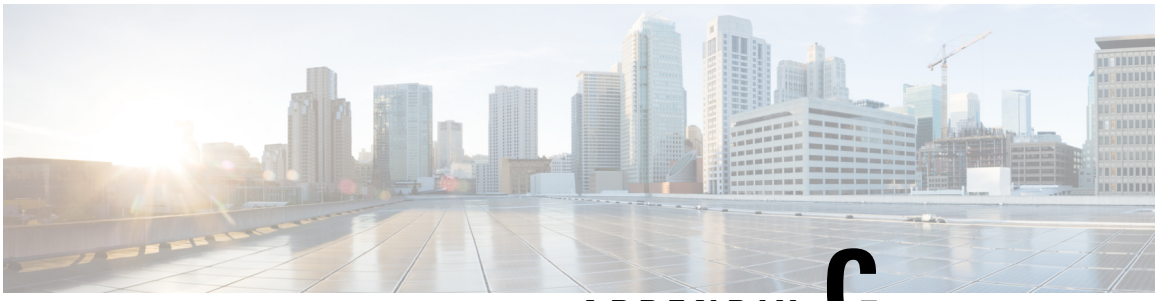

APPENDIX C

Supported Cards and Pluggables

- Supported Transponder Cards and Pluggables, on page 323

Supported Transponder Cards and Pluggables

Table 153: Feature History

Feature Name	Release Information	Feature Description
Pluggable Support	Cisco ONP Release 4.1	QSFP-100G-FR-S= pluggable is supported on the QSFP ports of the 400G-XP LC transponder card with 100GE data rate.
QSFP-100G-ERL-S Pluggable	Cisco ONP Release 5.1	The new QSFP-100G-ERL-S pluggable enables you to design and validate topologies for NCS 2000 R11.1.3 networks. This pluggable is supported on the QSFP ports of the 400G-XP-LC transponder card with 100GE data rate. You can select this pluggable from the **Client Interface** drop-down list at trail level properties for the 400G-XP-LC transponder card.

Cisco ONP supports the following transponders and pluggables for NCS 2000 networks:

Table 154: Supported Transponder Cards and Pluggables for NCS 2000 Network

Transponder/ Muxponder	Traffic Type	FEC mode	Pluggables Supported	Encryption SSON	Encryption Non-SSON	Trunk Mode
200G-CK-LC + MR-MXP (200G MXP mode)	• 100GE • OTU4	SD-FEC_20	• SR-1(CPAK-100G-SR10) • SR-1(CPAK-100G-SR4) • LR-1(CPAK-100G-LR4) • SR-1(CPAK-100G-SR10) • LR-1(CPAK-100G-LR4)	Yes (only for 100GE)	No	Auto, TRK_200G
200G-CK-LC + MR-MXP (100G TXP mode)	100GE	SD-FEC_20	• SR-1(CPAK-100G-SR10) • SR-1(CPAK-100G-SR4 • LR-1(CPAK-100G-LR4)	Yes	Yes	Auto, TRK_100G
200G-CK-LC + MR-MXP (100G TXP mode)	100GE	SD-EFEC	• SR-1(CPAK-100G-SR10) • SR-1(CPAK-100G-SR4 • LR-1(CPAK-100G-LR4)	Yes	Yes	Auto, TRK_100G
200G-CK-LC + MR-MXP (100G TXP mode)	100GE	SD-FEC	• SR-1(CPAK-100G-SR10) • SR-1(CPAK-100G-SR4 • LR-1(CPAK-100G-LR4)	Yes	Yes	Auto, TRK_100G
200G-CK-LC + MR-MXP (100G MXP mode)	• 10GE • 10GE LAN PHY • OC192 • OTU2	SD-FEC_20	• LR-1(ONS-QSFP-4*10G-MLR) • LR-1(QSFP-4*10G-MLR) • SR-1(QSFP-40G-SR4) • SR-1(ONS-SC+10G-SR) • LR-1(ONS-SC+10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x)	Yes	Yes	Auto, TRK_100G

Transponder/ Muxponder	Traffic Type	FEC mode	Pluggables Supported	Encryption SSON	Encryption Non-SSON	Trunk Mode
200G-CK-LC + MR-MXP (100G MXP mode)	• 10GE • 10GE LAN PHY • OC192 • OTU2	SD-EFEC	• LR-1(ONS-QSFP-4*10G-MLR) • LR-1(QSFP-4*10G-MLR) • SR-1(QSFP-40G-SR4) • SR-1(ONS-SC+10G-SR) • LR-1(ONS-SC+10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxxx)	Yes	Yes	Auto, TRK_100G
200G-CK-LC + MR-MXP (100G MXP mode)	• 10GE LAN PHY • 10GE • OC192 • OTU2	SD-FEC	• LR-1(ONS-QSFP-4*10G-MLR) • LR-1(QSFP-4*10G-MLR) • SR-1(QSFP-40G-SR4) • SR-1(ONS-SC+10G-SR) • LR-1(ONS-SC+10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxxx)	Yes	Yes	Auto, TRK_100G
200G-CK-LC + MR-MXP (100G MXP mode 2*10G 2*40G MODE)	• 10GE • 10GE LAN PHY • 40GE	SD-FEC_20	• SR-1(ONS-SC+10G-SR) • LR-1(ONS-SC+10G-LR) • DWDM(ONS-SC+-10G-C) • LR-1(QSFP-40G-LR4) • DWDM(ONS-SC+-10GEPxxx) • SR-1(QSFP-40G-SR4) • SR-1(QSFP-40G-SR-BD)	Yes	Yes	Auto, TRK_100G
200G - CK-LC + MR - MXP (100G MXP mode 2*10G 2*40G MODE)	• 10GE • 40GE	SD-EFEC	• SR-1(ONS-SC+10G-SR) • LR-1(ONS-SC+10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxxx) • SR-1(QSFP-40G-SR4) • LR-1(QSFP-40G-LR4) • SR-1(QSFP-40G-SR-BD)	Yes	Yes	Auto, TRK_100G

Transponder/ Muxponder	Traffic Type	FEC mode	Pluggables Supported	Encryption SSON	Encryption Non-SSON	Trunk Mode
200G - CK-LC + MR -MXP (100G MXP mode 2*10G 2*40G MODE)	• 10GE • 40GE	SD-FEC	• SR-1(ONS-SC+10G-SR) • LR-1(ONS-SC+10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • SR-1(QSFP-40G-SR4) • LR-1(QSFP-40G-LR4) • SR-1(QSFP-40G-SR-BD)	Yes	Yes	Auto, TRK_100G
200G - CK-LC +10x10G -LC	• 10GE • OC192 • OTU2 • OTU2e	SD-FEC_20	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER(ONS-SC+-10G-ER) • ZR (ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	Yes for OTU2e	No	Auto, TRK_100G
200G - CK-LC +10x10G -LC	• 10GE • OC192 • OTU2 • OTU2e	SD-EFEC	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER (ONS-SC+-10G-ER) • ZR (ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	Yes for OTU2e	No	Auto, TRK_100G
200G-CK-LC + 10x10G -LC	• 10GE • OC192 • OTU2 • OTU2e	SD-FEC	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER(ONS-SC+-10G-ER) • ZR(ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	Yes for OTU2e	No	Auto, TRK_100G

Transponder/ Muxponder	Traffic Type	FEC mode	Pluggables Supported	Encryption SSON	Encryption Non-SSON	Trunk Mode
200G - CK-LC + MR-MXP (200G Mxp 100G+10*10G Mode)	• 100GE • 10GE • OC192 • OTU2	SD-FEC_20	• SR-1(CPAK-100G-SR10) • SR-1(CPAK-100G-SR4) • LR-1(CPAK-100G-LR4) • SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER(ONS-SC+-10G-ER) • ZR(ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	Yes for 100GE and OTU2	No	Auto, TRK_200G
200G-CK-LC + MR-MXP + MR-MXP (200G Mxp 4*40G + 4*10G Mode)	• 10GE • 10GE LAN PHY • 40GE	SD-FEC_20	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • SR-1(QSFP-40G-SR4) • LR-1(QSFP-40G-LR4) • SR-1(QSFP-40G-SR-BD)	Yes	Yes	Auto, TRK_200G
200G-CK-LC + 10x10G -LC + MR-MXP	• 10GE • OC192 • OTU2	SD-FEC_20	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER(ONS-SC+-10G-ER) • ZR(ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x) • LR-1(ONS-QSFP-4*10G-MLR) • ZR(ONS-SC+-10G-ZR)	Yes	Yes	Auto, TRK_200G

Transponder/ Muxponder	Traffic Type	FEC mode	Pluggables Supported	Encryption SSON	Encryption Non-SSON	Trunk Mode
200G-CK-LC + MR-MXP + MR-MXP	• 10GE • OC192 • OTU2	SD-FEC_20	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER(ONS-SC+-10G-ER) • ZR(ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x) • LR-1(ONS-QSFP-4*10G-MLR) • ZR(ONS-SC+-10G-ZR)	Yes	Yes	Auto, TRK_200G
100GS - CK-LC + 10x10G-LC	• 10GE • OC192	EFEC, SD-FEC_20	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER(ONS-SC+-10G-ER) • ZR(ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	No	No	Auto, TRK_100G
100G - LC-C + 10x10G-LC	• 10GE • OC192 • Fiber Channel 10G • Fiber Channel 8G • OTU2 • OTU2e	FEC	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER(ONS-SC+-10G-ER) • ZR(ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	No	No	Auto

Transponder/ Muxponder	Traffic Type	FEC mode	Pluggables Supported	Encryption SSON	Encryption Non-SSON	Trunk Mode
100G - LC-C + 10x10G-LC	• 10GE • OC192 • Fiber Channel 10G • Fiber Channel 8G • OTU2 • OTU2e	EFEC	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER (ONS-SC+-10G-ER) • ZR(ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	No	No	Auto
100G - LC-C + 10x10G-LC	• 10GE • OC192 • Fiber Channel 10G • Fiber Channel 8G • OTU2 • OTU2e	HG-FEC	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER (ONS-SC+-10G-ER) • ZR (ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	No	No	Auto
100G - CK-LC-C + 10x10G-LC	• 10GE • 10GE LAN PHY • OC192 • Fiber Channel 10G • Fiber Channel 8G • OTU2 • OTU2e	FEC	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER(ONS-SC+-10G-ER) • ZR(ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	No	No	Auto

Transponder/ Muxponder	Traffic Type	FEC mode	Pluggables Supported	Encryption SSON	Encryption Non-SSON	Trunk Mode
100G -CK-LC-C + 10x10G-LC	• 10GE • 10GE LAN PHY • OC192 • Fiber Channel 10G • Fiber Channel 8G • OTU2 • OTU2e	EFEC	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER(ONS-SC+-10G-ER) • ZR(ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	No	No	Auto
100G - CK-LC-C + 10x10G-LC	• 10GE • 10GE LAN PHY • OC192 • Fiber Channel 10G • Fiber Channel 8G • OTU2 • OTU2e	HG-FEC	• SR-1(ONS-SC+-10G-SR) • LR-1(ONS-SC+-10G-LR) • DWDM(ONS-SC+-10G-C) • DWDM(ONS-SC+-10GEPxx.x) • ER(ONS-SC+-10G-ER) • ZR(ONS-SC+-10G-ZR) • DWDM(ONS-SC+-10G-xx.x)	No	No	Auto

Transponder/ Muxponder	Traffic Type	FEC mode	Pluggables Supported	Encryption SSON	Encryption Non-SSON	Trunk Mode
400G-XP-LC	• 100GE • 10GE LAN PHY • 10GE • 40GE • Fiber Channel 10G • Fiber Channel 16G • Fiber Channel 8G • OC192 /STM64 • OTU2 • OTU2e • OTU4	SD-FEC_25-NO_DE	• SR-1(QSFP-100G-SR4-S) • LR-1(QSFP-100G-LR4-S) • LR-1(QSFP-28-LR4) • SR-1(QSFP-100G-SM-SR) • SR-1(QSFP-40/100G-SRBD) • LR-1(ONS-QSFP-4*10G-MLR) • LR-1(QSFP-4*10G-LR) • SR-1(QSFP-40G-SR4) • ER(ONS-QSFP-4*10G-MER) • LR-1(QSFP-40G-LR4) SR-1(QSFP-40G-SR-BD • LR-1(ONS-QC16GFC-LW) • LR-1(ONS-QC16GFC-SW) • LR-1(ONS-QSFP28-LR4) • FR-1 (QSFP-100G-FR-S) (only for 100GE) • ER-1 (QSFP-100G-ERL-S) (only for 100GE)	Yes	Yes	TRK_100G, TRK_200G

Transponder/ Muxponder	Traffic Type	FEC mode	Pluggables Supported	Encryption SSON	Encryption Non-SSON	Trunk Mode
400G-XP-LC	• 100GE • 10GE LAN PHY • 10GE • 40GE • Fiber Channel 10G • Fiber Channel 16G • Fiber Channel 8G • OC192 /STM64 • OTU2 • OTU2e • OTU4	SD-FEC_15 -NO_DE	• SR-1(QSFP-100G-SR4-S) • LR-1(QSFP-100G-LR4-S) • LR-1(QSFP-28-LR4) • SR-1(QSFP-100G-SM-SR) • SR-1 (QSFP-40/100G-SRBD) • LR-1(ONS-QSFP-4*10G-MLR) • LR-1(QSFP-4*10G-LR) • SR-1(QSFP-40G-SR4) • ER(ONS-QSFP-4*10G-MER) • LR-1(QSFP-40G-LR4) • SR-1(QSFP-40G-SR-BD • LR-1(ONS-QC16GFC-LW) • LR-1(ONS-QC16GFC-SW) • LR-1(ONS-QSFP28-LR4) • FR-1 (QSFP-100G-FR-S) (only for 100GE) • LR-1 (QSFP-100G-ERL-S) (only for 100GE)	Yes	Yes	TRK_100G, TRK_200G
100G-LC-C	• 100GE • OTU4	FEC	SR-1(CPAK-100G-SR10)	No	No	Auto
100G-LC-C	• 100GE • OTU4	EFEC	SR-1(CPAK-100G-SR10)	No	No	Auto
100G-LC-C	• 100GE • OTU4	HGFEC	SR-1(CPAK-100G-SR10)	No	No	Auto
100G - CK-LC-C	• 100GE • 40GE • OTU4	FEC	• SR-1(CPAK-100G-SR4) • SR-1(CPAK-100G-SR10) • LR-1(CPAK-100G-LR4)	No	No	Auto

Transponder/ Muxponder	Traffic Type	FEC mode	Pluggables Supported	Encryption SSON	Encryption Non-SSON	Trunk Mode
100G - CK-LC-C	• 100GE • 40GE • OTU4	EFEC	• SR-1(CPAK-100G-SR4) • SR-1(CPAK-100G-SR10) • LR-1(CPAK-100G-LR4)	No	No	Auto
100G - CK-LC-C	• 100GE • 40GE • OTU4	HGFEC	• SR-1(CPAK-100G-SR4) • SR-1(CPAK-100G-SR10) • LR-1(CPAK-100G-LR4)	No	No	Auto
100GS - CK-LC	100GE	FEC	SR-1(CPAK-100G-SR10)	Yes	No	Auto, TRK_100G
100GS - CK-LC	100GE	EFEC	LR-1(CPAK-100G-LR4)	YEs	No	Auto, TRK_100G
100GS - CK-LC	100GE	SD-FEC_20	SR-1(CPAK-100G-SR10)	Yes	No	Auto, TRK_100G
200G - CK-LC (100G Mode only)	• 100GE • OTU4	FEC	• SR-1(CPAK-100G-SR4) • SR-1(CPAK-100G-SR10) • LR-1(CPAK-100G-LR4)	Yes (for 100GE)	No	Auto, TRK_100G
200G - CK-LC (100G Mode only)	• 100GE • OTU4	EFEC	• SR-1(CPAK-100G-SR4) • SR-1(CPAK-100G-SR10) • LR-1(CPAK-100G-LR4)	Yes (for 100GE)	No	Auto, TRK_100G
200G-CK-LC (100G Mode only)	• 100GE • OTU4	SD-FEC_20	• SR-1(CPAK-100G-SR4) • SR-1(CPAK-100G-SR10) • LR-1(CPAK-100G-LR4)	Yes (for 100GE)	No	Auto, TRK_100G


Cisco ONP supports the following transponders and pluggables for NCS 2000 networks:

Table 155: Supported Transponder Cards and Pluggables for NCS 1010 Network

Transponder / Muxponder	Traffic Type	FEC mode	Pluggables Supported		Encryption	Trunk Mode
			Client Pluggables	Trunk Pluggables		
NCS1K14-2.4T-K9	100GE 400GE	SD_FEC_15	• Auto • QDD-400G-FR4-S • QDD-400-AOC1M • QDD-400G-DR4-S • QDD-4x100G-LR-S	• Auto • CIM8-C-K9	No	• Auto • 400G • 500G • 600G • 700G • 800G • 900G • 1000G • 1100G • 1200G
NCS1K14-2.4T-X-K9	100GE 400GE	SD_FEC_15	• Auto • QDD-400G-FR4-S • QDD-400-AOC1M • QDD-400G-DR4-S • QDD-400G-LR4-S • QDD-4x100G-LR-S • QDD-4x100G-FR-S	• Auto	Yes	• Auto • 400G • 500G • 600G • 700G • 800G • 900G • 1000G • 1100G • 1200G

Transponder / Muxponder	Traffic Type	FEC mode	Pluggables Supported		Encryption	Trunk Mode
			Client Pluggables	Trunk Pluggables		
NCS1K4-QXP-K9	100GE	OFEC CFEC	• Auto	• Auto • QDD400G-ZRP-S • QDD400G-ZR-S	Yes	• Auto
			• QSFP-100G-DR-S • QSFP-100G-LR4-S • QSFP-100G-LR-S • ONS-QSFP-28-LR4 • QSFP-100G-CWDM4-S • QSFP-100G-FR-S • QSFP-100G-SR4-S			• 100G
			• QDD-4x100G-LR-S			• 100G • 200G • 300G • 400G
	400GE		• QDD-400G-FR4-S • QDD-400-AOC1M • QDD-400G-DR4-S			• 400G

Supported Cards and Pluggables

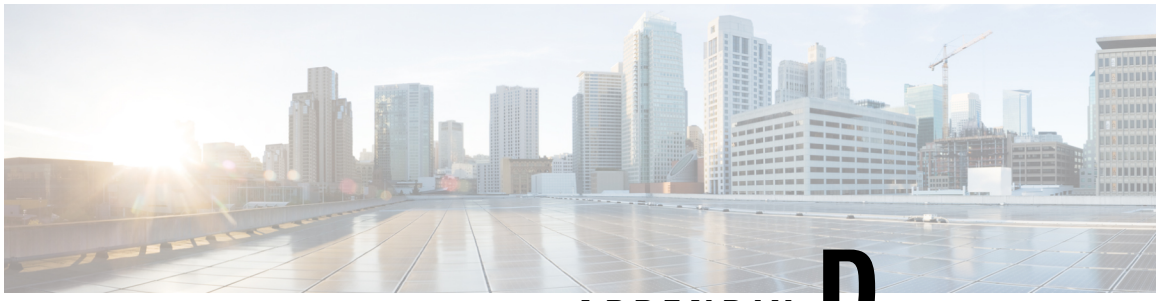

APPENDIX D

Supported Optical Sources

- Supported Optical Sources, on page 337

Supported Optical Sources

Table 156: Feature History

Feature Name	Release Information	Feature Description
New Optical Source and Pluggable Support	Cisco ONP Release 4.2	Optical Sources enable you to simulate the optical feasibility of the network with the 400G and other interfaces that are not natively modeled in Cisco ONP. The following Optical Sources are introduced in this release: • ONS-CFP2D-400G-C-OpticalSources-V 2.mxd • QDD-400G-ZRP-S-OpticalSources-V2.mxd

Cisco ONP supports the following optical sources:

Note From Release 24.3.1, the optical sources for NCS 2000 networks are tagged with System Release to indicate from when the optical sources support the network release.

- OpticalSources_NCS2K_400GXP-LC_NCS4K-4H-OPW-QC2 DWDM Line Card
  - 400GXP_100G_25%_DE
  - 400GXP_200G_15%_DE
  - 100G-SD-FEC
  - 400GXP_100G_15%_DE
  - 200G-SD-FEC
  - 400GXP_100G_15%

- 400GXP_200G_15%
- 400GXP_200G_25%DE

- NCS1004_OpticalSources_V3
  - NCS1004_QPSK_SP_16QAM_200G_27%SDFEC_60GBd
  - NCS1004_SP_16QAM_300G_27%SDFEC_69GBd
  - NCS1004_QPSK_200G_27%SDFEC_69GBd
  - NCS1004_16QAM_32QAM_400G_27%SDFEC_62GBd
  - NCS1004_16QAM_400G_27%SDFEC_69GBd
  - NCS1004_SP_16QAM_16QAM_300G_27%SDFEC_60GBd
  - NCS1004_32QAM_500G_27%SDFEC_69GBd

- NCS1004_L_Band_OpticalSources_V3
  - NCS1004_L_200G_QPSK_27%SDFEC_69GBd
  - NCS1004_L_200G_QPSK_SP_16QAM_27%SDFEC_60GBd
  - NCS1004_L_300G_SP_16QAM_16QAM_27%SDFEC_60GBd
  - NCS1004_L_300G_SP_16QAM_27%SDFEC_69GBd
  - NCS1004_L_400G_16QAM_32QAM_27%SDFEC_62GBd
  - NCS1004_L_400G_16QAM_27%SDFEC_69GBd

- QDD and CFP2-DCO variants
  - **ONS-CFP2D-400G-C-OpticalSources-V2.mxd**[1]
    - CFP2_200OR_TXP_FOIC2_OFEC_15_DE_ON_4Q_1S_BR63_1
    - CFP2_300OR_TXP_FOIC3_OFEC_15_DE_ON_8Q_1S_BR63_1
    - CFP2_400OR_TXP_FOIC4_OFEC_15_DE_ON_16Q_1S_BR63_1
  - **ONS-CFP2D-400G-C-OpticalSources-V2.mxd**[2]
    - CFP2_300ZR+_MXP_GAUI8_OFEC_15_DE_ON_8Q_0S_BR60_1
    - CFP2_200ZR+_MXP_GAUI2_OFEC_15_DE_ON_8Q_1E_BR40_1
    - CFP2_200ZR+_MXP_GAUI2_OFEC_15_DE_ON_16Q_1E_BR30_1
    - CFP2_400ZR_TXP_GAUI8_CFEC_15_DE_ON_16Q_0S_BR59_8
    - CFP2_200ZR+_MXP_GAUI2_OFEC_15_DE_ON_4Q_0S_BR60_1
    - CFP2_100ZR+_TXP_GAUI2_OFEC_15_DE_ON_4Q_1S_BR30_1

[1] The optical source interfaces are supported for SSON networks.
[2] The optical source interfaces are supported for SSON and non-SSON networks.

- CFP2_200ZR+_MXP_GAUI2_OFEC_15_DE_ON_4Q_1S_BR60_1
- CFP2_400ZR+_TXP_GAUI8_OFEC_15_DE_ON_16Q_1E_BR60_1
- CFP2_300ZR+_MXP_GAUI8_OFEC_15_DE_ON_8Q_1E_BR60_1
- CFP2_400ZR+_TXP_GAUI8_OFEC_15_DE_ON_16Q_0S_BR60_1
- CFP2_100OR_TXP_FOIC1_OFEC_15_DE_ON_4Q_1S_BR31_6
- CFP2_200OR_TXP_FOIC2_OFEC_15_DE_ON_8Q_1S_BR42_1
- CFP2_200OR_TXP_FOIC2_OFEC_15_DE_ON_16Q_1E_BR31_6

- **QDD-400G-ZRP-S-OpticalSources-V2.mxd**[2]
  - QDD_200ZR+_MXP_GAUI2_OFEC_15_DE_ON_4Q_1S_BR60_1
  - QDD_400ZR_TXP_GAUI8_CFEC_15_DE_ON_16Q_0S_BR59_8
  - QDD_200ZR+_MXP_GAUI2_OFEC_15_DE_ON_4Q_0S_BR60_1
  - QDD_400ZR+_TXP_GAUI8_OFEC_15_DE_ON_16Q_1E_BR60_1
  - QDD_400ZR+_TXP_GAUI8_OFEC_15_DE_ON_16Q_0S_BR60_1
  - QDD_300ZR+_MXP_GAUI8_OFEC_15_DE_ON_8Q_1E_BR60_1
  - QDD_400ZR+_TXP_GAUI8_OFEC_15_DE_ON_16Q_0E_BR60_1
  - QDD_300ZR+_MXP_GAUI8_OFEC_15_DE_ON_8Q_0E_BR60_1
  - QDD_100ZR+_TXP_GAUI2_OFEC_15_DE_ON_4Q_1S_BR30_1
  - QDD_200ZR+_MXP_GAUI2_OFEC_15_DE_ON_16Q_1E_BR30_1
  - QDD_300ZR+_MXP_GAUI8_OFEC_15_DE_ON_8Q_0S_BR60_1
  - QDD_200ZR+_MXP_GAUI2_OFEC_15_DE_ON_8Q_1E_BR40_1

  - From Release 24.3.1, CONP supports **QDD-400G-ZR-S** Optical Sources.
    QDD_400ZR_TXP_GAUI8_CFEC_15_DE_ON_16Q_0S_BR59_8

- Bright ZR+ Optical Sources
  - Bright-400G-FOIC4-OFEC-16QAM-1-E_BR63_14
  - Bright-400G-FOIC4-OFEC-16QAM-1-S_BR63_14
  - Bright-300G-FOIC3-OFEC-8QAM-1-S_BR63_14
  - Bright-200G-FOIC2-OFEC-QPSK-1-S_BR63_14
  - Bright-200G-FOIC2-OFEC-8QAM-1-E_BR42_09
  - Bright-200G-FOIC2-OFEC-16QAM-1-E_BR31_57
  - Bright-200G-FOIC2-OFEC-16QAM-1-S_BR31_57
  - Bright-100G-FOIC1-OFEC-QPSK-1-S_BR31_57

- Bright-100G-FOIC1-OFEC-DQPSK-1-S_BR31_57
- Bright-400G-400ZR-CFEC-16QAM-1-S_BR59_84
- Bright-400G-400ZRP-OFEC-16QAM-1-E_BR60_14
- Bright-400G-400ZRP-OFEC-16QAM-1-S_BR60_14
- Bright-300G-300ZRP-OFEC-8QAM-1-E_BR60_14
- Bright-300G-300ZRP-OFEC-8QAM-1-S_BR60_14
- Bright-200G-200ZRP-OFEC-QPSK-1-S_BR60_14
- Bright-200G-200ZRP-OFEC-8QAM-1-E_BR40_09
- Bright-200G-200ZRP-OFEC-16QAM-1-E_BR30_07
- Bright-100G-100ZRP-OFEC-QPSK-1-S_BR30_07
- Bright-100G-OTU4-SCFEC-DQPSK-1-S_BR27_95
- From Release 24.3.1, CONP supports the **DP04QSDD-HE0** Optical Sources.

  Bright_100G_100ZRP_OFEC_QPSK_1S_BR30_07
- Bright_200G_200ZRP_OFEC_16QAM_1E_BR30_07
- Bright_400G_400ZRP_OFEC_16QAM_1S_BR60_14
- Bright_200G_200ZRP_OFEC_8QAM_1E_BR40_09
- Bright_400G_400ZRP_OFEC_16QAM_1E_BR60_14
- Bright_300G_300ZRP_OFEC_8QAM_1E_BR60_14
- Bright_300G_300ZRP_OFEC_8QAM_1S_BR60_14
- Bright_200G_200ZRP_OFEC_QPSK_1S_BR60_14
- Bright_400G_400ZR_CFEC_16QAM_1S_BR59_84



Note Delete any of the old versions of Bright ZR+ optical sources that may be present in the server. The latest list of optical resources will be automatically loaded after Cisco ONP, Release 5.1 software is installed.

- Bright_ZRP_OpticalSources_V2

  The Rx OSNR sensitivity is improved for the *Bright_400G_400ZRP_OFEC_16QAM_1E_BR60_14* interface in the new version.

  The latest list of optical resources will be automatically loaded after Cisco ONP, Release 5.2 software is installed.

- CIM8_OpticalSource_V10
  - CIM8_900G_15FEC_Eth_ZR_BR138

- CIM8_700G_15FEC_Eth_ZR_BR128
- CIM8_800G_15FEC_Eth_ZR_BR108
- CIM8_800G_15FEC_Eth_ZR_BR138
- CIM8_900G_15FEC_Eth_ZR_BR118
- CIM8_1000G_15FEC_Eth_ZR_BR128
- CIM8_1000G_15FEC_Eth_ZR_BR138
- CIM8_800G_15FEC_Eth_ZR_BR118
- CIM8_800G_15FEC_Eth_ZR_BR128
- CIM8_400G_15FEC_Eth_ZR_BR88
- CIM8_400G_15FEC_Eth_ZR_BR128
- CIM8_500G_15FEC_Eth_ZR_BR88
- CIM8_500G_15FEC_Eth_ZR_BR128
- CIM8_600G_15FEC_Eth_ZR_BR98
- CIM8_600G_15FEC_Eth_ZR_BR128
- CIM8_700G_15FEC_Eth_ZR_BR98
- CIM8_400G_15FEC_Eth_ZR_BR108
- CIM8_900G_L_15FEC_Eth_ZR_BR138
- CIM8_800G_L_15FEC_Eth_ZR_BR138
- CIM8_400G_L_15FEC_Eth_ZR_BR128
- CIM8_500G_L_15FEC_Eth_ZR_BR138
- CIM8_1000G_L_15FEC_Eth_ZR_BR138
- CIM8_700G_L_15FEC_Eth_ZR_BR138
- CIM8_600G_L_15FEC_Eth_ZR_BR138


- From Release 24.3.1, CONP supports the CIM8 Optical Sources:
  - CIM8_600G_15FEC_Eth_ZR_BR138
  - CIM8_1200G_15FEC_Eth_ZR_BR138
  - CIM8_700G_15FEC_Eth_ZR_BR138
  - CIM8_500G_15FEC_Eth_ZR_BR138
  - CIM8_1100G_15FEC_Eth_ZR_BR138

Note NCS 1004 is supported as an optical source.

Note The following optical source files are not supported in NCS 2000 Release 11.0:

- NCS1004_16QAM_32QAM_400G_27%SDFEC_62GBd
- NCS1004_QPSK_SP_16QAM_200G_27%SDFEC_60GB

Hence, we recommend you to upgrade the system release of the network to Release 11.1, or force the optical source files that are supported for the Release 11.0.

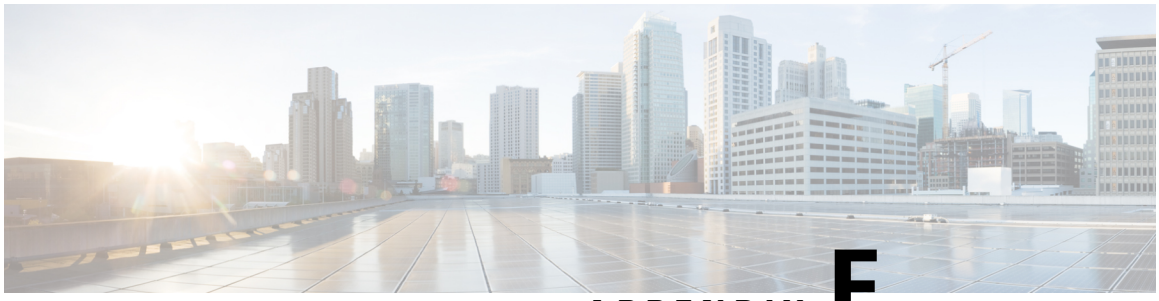

APPENDIX E

Supported Amplifiers

- Supported Amplifiers, on page 343

Supported Amplifiers

Cisco ONP supports the following amplifiers:

Table 157: Cisco ONP Supported NCS 2000 Amplifiers


Amplifier	Description
15454-M-RAMAN-CTP	Raman Amp C-Band
15454-M-RAMAN-COP	Raman Amp C-Band
EDFA 35 for OLA node	Erbium Doped Fiber Amplifier (EDFA) that can function in dual gain with maximum gain of 35 dB
NCS2K-EDRA2-26C	21dBm EDFA + Bst 26dB Span - C-Band
NCS2K-EDRA1-26C	21dBm EDFA 26dB Span - C-Band
NCS2K-EDRA2-35C	21dBm EDFA + Bst 35dB Span - C-Band
NCS2K-EDRA1-35C	21dBm EDFA35dB Span - C-Band

Note

- RAMAN-CTP is supported on all nodes.
- EDRAs are supported on the OLA node.
- For ROADM and Traffic nodes, the booster amplifier and preamplifier are in-built. The booster is 20SMR-FS-BST.

Table 158: Cisco ONP Supported NCS 1010 Amplifiers

Amplifier	Description		
	Lower Range Gain (dB)	Standard Range Gain (dB)	Tilt Uncontrolled Range Gain (dB)
C-Band			
OLT-C-Bst	16	24	31
OLT-C-Pre-Normal	12	22	25
OLT-C-Pre-Extended	17	32	35
ILA-C-Normal	8	17	20
ILA-C-Extended	13	30	33
ILA-R-C-Normal	8	17	23
ILA-R-C-Extended	13	30	36
ILA-2R-C-Normal	8	17	20
ILA-2R-C-Extended	13	30	33
E-ILA-R-C-Normal	8	17	20
E-ILA-R-C-Extended	13	30	33
E-ILA-2R-C-Normal	8	17	20
E-ILA-2R-C-Extended	13	30	33
E-ILA-C-R-2-Normal	8	17	20
E-ILA-C-R-2-Extended	13	30	33
L-Band			
OLT-L-Bst	17.5	25.5	32.5
OLT-L-Pre-Normal	13.3	23.3	26.3
OLT-L-Pre-Extended	18.3	36.3	39.3
ILA-L-Normal	10.8	19.8	22.8
ILA-L-Extended	15.8	32.8	35.8

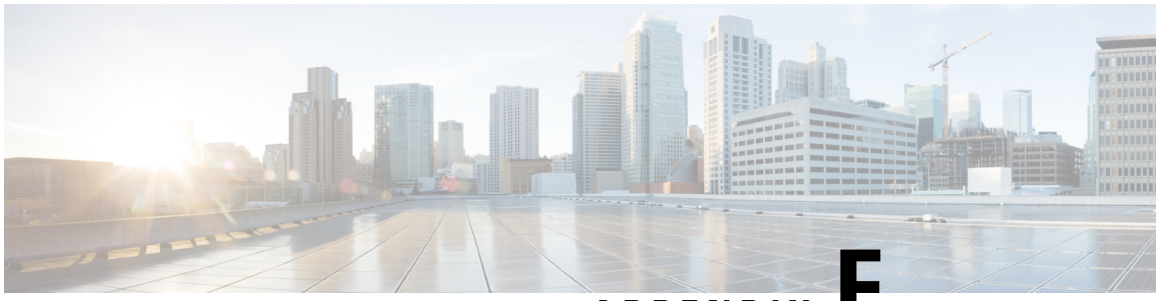

APPENDIX F

Troubleshoot

- Troubleshooting Tasks, on page 345

Troubleshooting Tasks

The following table describes the common error messages that are related to Cisco ONP configuration and the workarounds:

Table 159: Troubleshooting Tasks for Cisco ONP Configuration

Warning Message or Error	Probable Reason for the Error	Workaround
Cannot Route demand! Didn't find any valid Contentionless Side.	Required contentionless sides are not created on add/drop sites. For protected service or wave, minimum two contentionless sides are required on the add/drop sites.	Check and add the required number of contentionless sides on the target service or wave source and destination sites.
Error: No valid path from <*source*> to <*destination*>	Disjoint path is not available for protected demand. Or Forced wavelength may be already used for other demand in the same path. Or The number of colorless demands created is more than the colorless ports forced on the interfaces.	For linear topology, change the demand protection to unprotected. For ring topology, ensure that at least two nodes and fiber-disjoint paths are available and the forced wavelength is unconfined in the end-to-end path. Force the required number of colorless ports.
Error: Traffic subnet constraints prevent routing of section.	Disjoint path is not available for protected demand. Or Forced wavelength may be already used for other demands in the same path.	For linear topology, change the demand protection to unprotected. For ring topology, ensure that at least two nodes and fiber-disjoint paths are available and the forced wavelength is unconfined in the end-to-end path.

Warning Message or Error	Probable Reason for the Error	Workaround
Error: The sum of CoDem and Non-CoDem colorless ports and ports that are used for Omnidirectional and Contentional sides cannot exceed 20 when the TYPE is SMR-20.	The number of contentionless sides, colorless ports that are forced, and colored demand exceed SMR-20 port capacity. Or The Cascaded SMR flag is enabled, and colored or colorless demand is created.	If the Cascaded SMR flag is enabled, create only contentionless demands on those nodes. Else, reduce the number of contentionless sides, colorless ports, or colored demands that are created, to get successful network analysis.
Couple between <*source*>.<*side*> and <*destination*>.<*side*> is of invalid type.	The fiber connecting these sides is not supported by Cisco ONP.	Change the fiber type to the one that is supported by Cisco ONP.
Unconnected nodes or sites are present in the network.	Any of the sites are connected to the fiber in the Ring/Linear network.	Connect the fiber to the nodes in the ring network.
Unfeasible forcing	Wrong path has been forced on the wave or media channel.	Force the correct path on the Wave/Media Channel.
E11000 duplicate key error collection: CnpDB.dbchangelog index: _id_ dup key: { : ObjectId(") }	Restore database script attempts to write data in the postgres database, but the data with the same index is already present.	Clear the contents of postgresdb_cnp folder before running the restore command: **rm -rf /var/lib/postgresdb_cnp/***cannot
Cannot complete mesh connection.	There is an issue with setting up connection in the lock mode.	Unlock the mentioned entity or unlock the complete site.
Path constraints prevent routing.	Invalid path has been forced.	Check the path and choose the correct primary path and secondary path fibers. Or Remove all the fibers that are forced to set the **Path of Wave** property as *Auto*.
Traffic subnet constraints prevent routing.	Forced Wavelength is not part of the Optical subnet rule.	Force the wavelength as per optical subnet rule or change the optical subnet rule.
MF Unit value MF1-RU is not supported in RPT, so resetting the value to default for <*site name*>.	Template is applied when properties such as **ECU**, **MF Unit** are forced.	Set the property **MF Unit** to *Auto* and then force the template.

Warning Message or Error	Probable Reason for the Error	Workaround
Please force MD-48-CM as Interlever Type for {0}.	In non-SSON traffic, the ROADM site with the properties (DEG-8, SMR-9, number of contentionless sites is equal to 1) has 96 colored waves. The **Interlever Type** is property set to *Auto* or *MpoCable.*	Modify the Interlever forcing on the line side to MD-48-CM.
The sum of forced CoDem and Non-CoDem colorless ports and colored demands can't be greater than 9 for type SMR-9.	During upgrade or Release upgrade, colorless port is forced on SMR-9, and more than one contentionless side is added in the imported MPZ network.	Delete the extra contentionless sides.
No Route Found.	Plan mode restoration fails because the presence of dark fiber in the restoration path makes it difficult to find it.	Check the restoration path. It must not have any dark fiber.
Wavelength Forced {0} in this {1} is already in use / not as per current optical subnet channel rule.	Two fibers are occupied by a wave with the same wavelength. The fiber belongs to a subnet where the wavelength is not supported. For example, a wave with an even wavelength is forced through a fiber belonging to the C40 channel or C48 channel subnet rules.	Correct the wave such that the wavelength is supported by the optical subnet C-band rule.
tm.unsupported_client_pluggable.msg =Incompatible Client Interface forcing.	ROADM sites having waves with optical source other than 100, 200SDFEC are converted to traffic sites.	Before you convert the site type to traffic, modify the optical source wave to be feasible.
Error Message	Slow internet connectivity, or idle session.	Refresh the browser and try again.
Please provide a valid .mpz network file.	The MPZ file that you are trying to upload does not have a valid file extension.	Upload proper .MPZ file.
Failed to import mpz file, please make sure the MPZ file is not in use and retry.	MPZ file remains open in the CTP tool.	Close MPZ file in the CTP tool before uploading it to Cisco ONP .
Cannot connect to Server;(Password).	Failed to connect to Postgres DB on opening **Control Panel** tab.	Restart the Postgres database container or reinstall the Build.

Warning Message or Error	Probable Reason for the Error	Workaround
Null pointer exception	The applied layout template file has syntax error such as extra SPACE, TAB, missing symbols such as <, >.	Fix the syntax and reapply the template.
Object not found in cache.	Intermediate network disconnection.	Refresh the browser or log in again to Cisco ONP.
Session does not exist.	Idle time-out	Log in again to Cisco ONP.
Forced/Locked wavelength is not feasible for spectrum to be allocated for the demand/MCH <*Site-1-Site-3-1*>. Insufficient spectrum around the forced central wavelength.	Forced wavelength is not a feasible central wavelength based on the configuration.	Force another wavelength that is next to the currently forced one.
Route could not be found/Alternate path not found/<Optically not feasible>.	Insufficient spectral width due to the following reasons: • The alternate path has no waves (dark fiber). • Optical parameters are not feasible. • Wavelength dos not have sufficient bandwidth.	Make sure that the alternate path has waves associated with the fiber and has sufficient bandwidth available.
Error: Could not find any valid flex configuration for the traffic matrix defined at <*Site-1.A*> This could be because of configuration limitations, invalid forcings, or equipment restrictions.	Check if it is 8 degrees, SMR-9 node with Evolved Mesh ON and contentionless and colorless/colored mixed add/drop configuration.	Change Evolved Mesh to Off, reduce Scalable upto degree to 8, change Site Type to SMR-20, or Remove contentionless or colorless forcing.
Single hop path Site-1~Site-3 needs regeneration but has no regenerator hosting sites.	Check if **Quick analysis** under Network property is disabled.	• Enable **Quick analysis**. • After successful analysis, check the optical report and look for the waves that require regeneration. • Split the long haul demand between the intermediate short distance nodes that are equivalent to regen site. • Disable **Quick analysis** and analyze.

Warning Message or Error	Probable Reason for the Error	Workaround
Missing SOURCE TermPoint for PceServiceRequest	Required Add/Drop card cannot be placed on the source node.	Check the source node configuration (such as scalable upto degree, number of colored and colorless circuits or port forcing,and colored add/drop card forcing).
Missing DESTINATION TermPoint for PceServiceRequest	Required Add/Drop card cannot be placed on the destination node.	Check the destination node configuration (such as scalable upto degree, number of colored and colorless circuits or port forcing,and colored add/drop card forcing).
Service allocation failed: No resource available	Spectrum allocation failed for the mentioned service	• Check the colored add/drop forcing and the number of colored demands routing on the path. • Check the number of colorless demands, ports, and add/drop cards forced on the path. • Check the optical subnet defined on the path and the type of service used.
Service allocation failed: [PCE-WAL00028] - No free spectrum available to allocate circuit: [PCE-WAL00028]	Spectrum allocation failed for the mentioned service	Check the card type forced for the colored circuit. Circuits with a maximum spectrum of 75GHz can be used with colored add/drop MD-32-ODD/EVEN. For example, a circuit that has an interface with rate greater than 60-bit rate or 60GBd cannot work with 75GHz fixed grid add/drop with 82% spectral density. Change to colorless add/drop BRK-24 or change to interface type having less spectral occupancy.
Colorless configuration is not supported for *Scalable Upto Degree* [25]	Check if MF Unit is forced as MF-1RU. Only 3 USB ports available with NCS 1010 OLT-C-R. Maximum of only 3 Passives can be connected to OLT line cards. So, for Scalable upto degree >25, since USB ports are not available to connect to passive colorless Add/Drop, error appears.	Force MF Unit as MF-4RU

Warning Message or Error	Probable Reason for the Error	Workaround
Error: No free spectrum available to allocate circuit	1. If it is an L-band Circuit, L-band forcing may be missing in the intermediate nodes. 2. Complete spectrum is utilized in the path if forced, or on all the available path between source and destination.	1. 1. Force L-band on all intermediate nodes on the L-band circuit route path. 2. 2. Try to force other available path or add new path if spectrum is exhausted on all available paths.
Untested System Configuration: Number of OLA sites between Terminal sites is more than 2. Please contact support before deployment.	The NCS 1001 network has more than two OLA sites between Terminal sites.	Keep only two OLA sites between Terminal sites.