


View Inventory

This chapter describs the tasks to view the inventory details of a single or multiple racks.

Figure 1: View Inventory

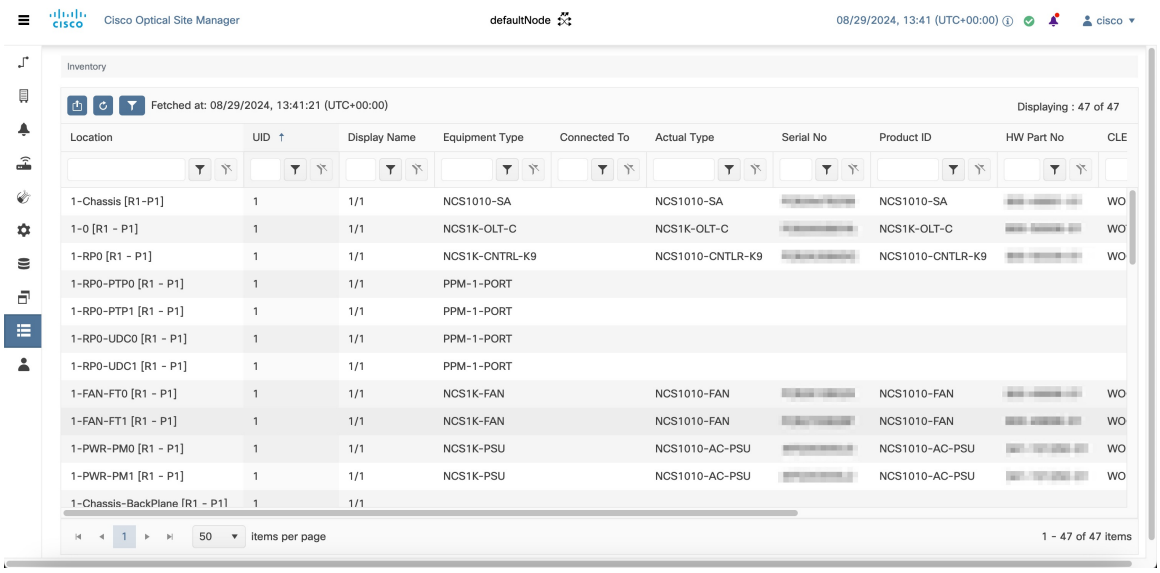

- View inventory of all racks or chassis, on page 1
- View inventory of a rack or chassis, on page 2

View inventory of all racks or chassis

You can view inventory details of all racks and chassis, such as location, display name, and equipment type.

Follow these steps to view the inventory of all the racks and chassis:

Before you begin

Log into Cisco Optical Site Manager

Procedure

Step 1 Click **Inventory**.

The **Inventory** page appears and displays the inventory details.

Step 2 Click the **Export to Excel** icon to export and download the inventory information to an Excel file (optional).

View inventory of a rack or chassis

You can view inventory details, such as location, display name, and equipment type, for a specific rack or chassis.

Follow these steps to view the inventory details of a rack or chassis:

Before you begin

Log into Cisco Optical Site Manager

Procedure

Step 1 Click **Topology** in the left panel.

Step 2 Perform one of these steps:

- Double-click the rack name from the rack view.
- Right-click the chassis from the rack view and select **Open**

Step 3 Click the **Inventory** tab.

Step 4 Click the **Export to Excel** icon to export and download the inventory information to an Excel file (optional).

The **Inventory** page appears and displays the inventory details.