


View Inventory

This chapter describs the tasks to view the inventory details of a single or multiple racks.

Figure 1: View Inventory

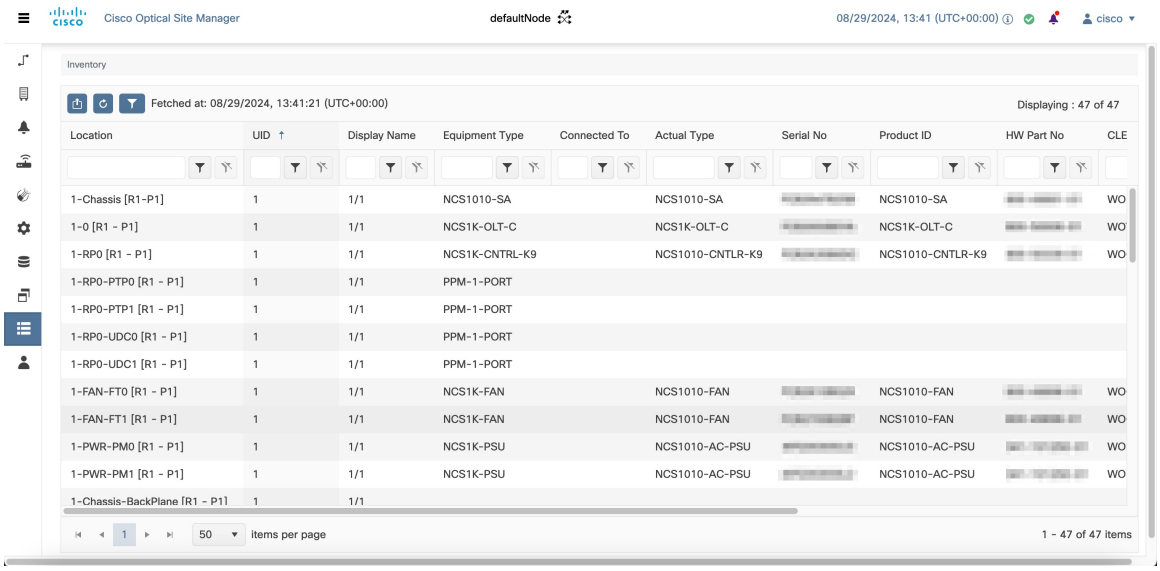

- View inventory of all racks or chassis, on page 1
- View inventory of a rack or chassis, on page 2

View inventory of all racks or chassis

You can view inventory details of all racks and chassis, such as location, display name, and equipment type.

By default, the **Inventory** page sorts the inventory table by the **UID** column. To sort the table by location, click the **Location** column header.

Follow these steps to view the inventory of all the racks and chassis:

Before you begin

Log into Cisco Optical Site Manager

Procedure

Step 1 Click **Inventory**.

The **Inventory** page appears and displays the inventory details.

Step 2 Click the **Export to Excel** icon to export and download the inventory information to an Excel file (optional).

View inventory of a rack or chassis

You can view inventory details, such as location, display name, and equipment type, for a specific rack or chassis.

Follow these steps to view the inventory details of a rack or chassis:

Before you begin

Log into Cisco Optical Site Manager

Procedure

Step 1 Click **Topology** in the left panel.

Step 2 Perform one of these steps:

- Double-click the rack name from the rack view.
- Right-click the chassis from the rack view and select **Open**

Step 3 Click the **Inventory** tab.

Step 4 Click the **Export to Excel** icon to export and download the inventory information to an Excel file (optional).

The **Inventory** page appears and displays the inventory details.