

FAQ and support

This chapter contains the following sections:

- Security Cloud Control, on page 1
- FAQ about onboarding devices to Security Cloud Control, on page 2
- Device types, on page 3
- Security, on page 5
- Troubleshooting, on page 5
- How do I transfer a Firewall Threat Defense device to a new or existing Security Cloud Control organization?, on page 6
- Terminologies and definitions used in Zero-Touch Provisioning, on page 6
- Policy optimization, on page 7
- Connectivity, on page 7
- Complete the initial configuration of a Secure Firewall Threat Defense device using the CLI, on page 8
- What does it mean to be FedRAMP certified, on page 11
- About Data Interfaces, on page 12
- How Security Cloud Control processes personal information, on page 12
- Contact Security Cloud Control support, on page 12

Security Cloud Control

What is Security Cloud Control?

Security Cloud Control (formerly Cisco Defense Orchestrator) is a cloud-based multi-device manager that allows network administrators to create and maintain consistent security policies across various security devices.

You can use Security Cloud Control to manage these devices:

- Cisco Secure Firewall ASA
- Cisco Secure Firewall Threat Defense
- Cisco IOS devices

Security Cloud Control administrators can monitor and maintain all these device types through a single interface.

FAQ about onboarding devices to Security Cloud Control

FAQs About Onboarding Secure Firewall ASA to Security Cloud Control

How do I onboard an ASA using credentials?

You can onboard ASAs one at a time or in a bulk operation. device at a time. When onboarding an ASA that is part of a high-availability pair, use Onboard an ASA Device to onboard only the primary device of the pair. The method of onboarding a security context or admin context is the same for onboarding any other ASA.

How do I onboard more than one ASA at a time?

You can create a list of ASAs using a CSV file, and Security Cloud Control will onboard all the ASAs in the list. See Onboard ASAs in Bulk for instructions on how to bulk onboard ASAs.

What do I do after onboarding my ASAs?

See Managing ASA with Security Cloud Control to get started.

FAQs About Onboarding Secure Firewall Threat Defense to Cloud-Delivered Firewall Management Center

How do I onboard Secure Firewall Threat Defense?

You can onboard an FTD device using a CLI registration key, through zero-touch provisioning, or with a serial number.

What do I do after onboarding my Secure Firewall Threat Defense?

Once the device is sychronized, navigate to **Administration** > **Integrations** > **Firewall Management Center** and select an action from the Actions, Management, or Settings pane to begin configuring your threat defense device in Cloud-Delivered Firewall Management Center. See Cloud-delivered Firewall Management Center Application Page to get started.

How do I troubleshoot my Secure Firewall Threat Defense?

See Troubleshoot Onboarding Secure Firewall Threat Defense.

FAQs About on-premises Firewall Management Center

How do I onboard an on-premises Firewall Management Center?

You can onboard an on-premises Firewall Management Center to Security Cloud Control. Onboarding an on-premises Firewall Management Center also onboards all the devices registered to on-premises Firewall Management Center. Security Cloud Control does not support creating or modifying objects or policies associated with on-premises Firewall Management Center or the devices registered to on-premises Firewall

Management Center. You must make these changes in the on-premises Firewall Management Center UI. For more information, see Onboard an On-Prem Management Center.

FAQs About Onboarding SSH Devices to Security Cloud Control

How do I onboard an SSH device?

You can use the username and password of a highly privileged user stored on the SSH device to onboard the device with a Secure Device Connector (SDC). See Onboard an SSH Device to get started.

How do I delete a device?

You can delete a device from the inventory page.

You can delete a device from the **Security Devices** page.

Device types

What is an Adaptive Security Appliance (ASA)?

The Cisco ASA provides advanced stateful firewall and VPN concentrator functionality in one device as well as integrated services with add-on modules. The ASA includes many advanced features, such as multiple security contexts (similar to virtualized firewalls), clustering (combining multiple firewalls into a single firewall), transparent (Layer 2) firewall or routed (Layer 3) firewall operation, advanced inspection engines, IPsec VPN, SSL VPN, and clientless SSL VPN support, and many more features. ASAs can be installed on virtual machines or supported hardware.

What is an ASA Model?

An ASA model is a copy of the running configuration file of an ASA device that you have onboarded to Security Cloud Control. You can use an ASA model to analyze the configuration of an ASA device without onboarding the device itself.

What is Firepower Threat Defense (FTD)

Cisco's next generation firewall software image. It strives to combine the best of Sourcefire next generation firewall services and the ASA platform. It can be installed on a number of different Firepower hardware devices or virtual machines. This is not the same as a ASA FirePOWER module.

What is Firepower Device Manager (FDM)

Firepower Device Manager is Firepower Threat Defense management software delivered with the FTD image. FDM is designed to manage the one FTD it is delivered with. You may also hear FDM referred to as the "local device manager."

What is Firepower?

Firepower is a general term that refers to a group of next generation firewall hardware and software.

When is a device Synced?

When the configuration on Security Cloud Control and the configuration stored locally on the device are the same.

When is a device Not Synced?

When the configuration stored in Security Cloud Control was changed and it is now different that the configuration stored locally on the device.

When is a device in a Conflict Detected state?

When the configuration on the device was changed outside of Security Cloud Control (out-of-band), and is now different than the configuration stored on Security Cloud Control.

What is an out-of-band change?

When a change is made to the device outside of Security Cloud Control. The change is made directly on the device using CLI command or by using the on-device manager such as ASDM or FDM. An out-of-band change causes Security Cloud Control to report a "Conflict Detected" state for the device.

What does it mean to deploy a change to a device?

After you onboard a device to Security Cloud Control, Security Cloud Control maintains a copy of its configuration. When you make a change on Security Cloud Control, Security Cloud Control makes a change to its copy of the device's configuration. When you "deploy" that change back to a device, Security Cloud Control copies the changes you made to the device's copy of its configuration. See these topics:

- Preview and deploy configuration changes for all devices
- Deploy Configuration Changes from Security Cloud Control to FTD
- Deploy Configuration Changes from Security Cloud Control to an ASA

What ASA commands are currently supported?

All commands. Click the **Command Line Interface** link under Device Actions to use the ASA CLI.

Are there any scale limitations for device management?

Security Cloud Control's cloud architecture allows it to scale to thousands of devices.

Does Security Cloud Control manage Cisco Integrated Services Routers and Aggregation Services Routers?

Security Cloud Control allows you to create a model device for ISRs and ASRs and import its configuration. You can then create templates based on the imported configurations and export the configuration as a standardized configuration that can be deployed to new or existing ISR and ASR devices for consistent security.

Can Security Cloud Control manage SMA?

No, Security Cloud Control does not currently manage SMA.

Security

I received the error "Could not validate your OTP" when logging into Security Cloud Control for the first time

Check that your desktop or mobile device clock is synchronized with a world time server. Clocks being out of sync by less or more than a minute can cause incorrect OTPs to be generated.

Is my device connected directly to Security Cloud Control cloud platform?

Yes. The secured connection is performed using the Security Cloud Control SDC which is used as a proxy between the device and Security Cloud Control platform. Security Cloud Control architecture, designed with security first in mind, enables having complete separation between data traversing back and forth to the device.

How can I connect a device which does not have a public IP address?

You can leverage Security Cloud Control Secure Device Connector (SDC) which can be deployed within your network and doesn't need any outside port to be open. Once the SDC is deployed you can onboard devices with internal (non-internet routable) IP addresses.

Does the SDC require any additional cost or license?

No.

How can I check the tunnel status? State options

Security Cloud Control performs the tunnel connectivity checks automatically every hour, however ad-hoc VPN tunnel connectivity checks can be performed by choosing a tunnel and requesting to check connectivity. Results may take several seconds to process.

Can I search a tunnel based on the device name as well as its IP address of one of its peers?

Yes. Search and pivot to a specific VPN tunnel details by using available filters and search capabilities on both name and the peers IP addresses.

Troubleshooting

While performing complete deploy of device configuration from Security Cloud Control to managed device, I get a warning "Cannot deploy changes to device". What can I do to solve that?

If an error occurrs when you deploy a full configuration (changes performed beyond Security Cloud Control supported commands) to the device, click "Check for changes" to pull the latest available configuration from device. This may solve the problem and you will be able to continue making changes on Security Cloud Control and deploy them. In case the issue persist, please contact Cisco TAC from the **Contact Support** page.

While resolving out-of-band issue (changes performed outside of Security Cloud Control; directly to a device), comparing the configuration present in Security Cloud Control that of the device, Security Cloud Control presents additional metadata that were not added or modified by me. Why?

As Security Cloud Control expands its functionality, additional information will be collected from the device's configuration to enrich and maintain all required data for better policy and device management analysis. These are not changes that occurred on managed device but already existing information. Resolving the conflict detected state can be easily solved by checking for changes from the device and reviewing the changes occurred.

How do I transfer a Firewall Threat Defense device to a new or existing Security Cloud Control organization?

To transfer a Firewall Threat Defense device to a new or existing Security Cloud Control organization, follow these steps:

1. Ensure that all pending changes are downloaded to the Firewall Threat Defense device so that the latest changes are available on it.
2. Remove the Firewall Threat Defense device from the source Security Cloud Control organization.
3. (optional) Create a new Security Cloud Control organization in the desired region by using Security Cloud Control Provisioning Portal and enable Cloud-delivered Firewall Management Center on it. Skip this step if the target Security Cloud Control organization already exists.
4. Onboard the Firewall Threat Defense device to the new Security Cloud Control organization using the CLI registration key method.

Terminologies and definitions used in Zero-Touch Provisioning

- **Claimed** - Used in the context of serial number onboarding in Security Cloud Control. A device is "claimed" if its serial number has been onboarded to a Security Cloud Control tenant.
- **Parked** - Used in the context of serial number onboarding in Security Cloud Control. A device is "parked" if it has connected to the Cisco Cloud, and a Security Cloud Control tenant has not claimed its serial number.
- **Initial provisioning** - Used in the context of the initial FTD setup. During this phase, the device accepts EULA, creates a new password, configures management IP address, sets FQDN, sets DNS servers, and chooses to manage the device locally with FDM.
- **Zero-Touch Provisioning** - It is the process of shipping an FTD from the factory to a customer site (typically a branch office), an employee at the site connects the FTD to their network, and the device contacts the Cisco Cloud. At that point, the device is onboarded to Security Cloud Control tenant if its serial number has already been "claimed," or the FTD is "parked" in the Cisco cloud until a Security Cloud Control tenant claims it.

Policy optimization

How can I identify a case when two or more access lists (within the same access group) are shadowing each other?

Security Cloud Control Network Policy Management (NPM) is able to identify and alert the user if within a rule set, a rule higher in order, is shadowing a different rule. User can either navigate between all network policies or filter to identify all shadow issues.



Note Security Cloud Control supports only fully shadowed rules.

Connectivity

The Secure Device Connector changed IP address, but this was not reflected within Security Cloud Control. What can I do to reflect the change?

In order to obtain and update the new Secure Device Connector (SDC) within Security Cloud Control, you will need to restart the container using the following commands:

```
 Stop Docker deamon>#service docker stop
Change IP address
Start Docker deamon >#service docker start
Restart container on the SDC virtual appliance >bash-4.2$ ./cdo/toolkit/toolkit.sh restartSDC
 <tenant-name>
```

What happens if the IP address used by Security Cloud Control to manage my devices (FTD or ASA) changes?

If the IP address of the device changes for any reason, whether it is a change in the static IP address or a change in the IP address due to DHCP, you can change the IP address that Security Cloud Control uses to connect to the device and then reconnect the device . When reconnecting the device you will be asked to enter the new IP address of the device as well as re-enter the authentication credentials.

What networking is required to connect my ASA to Security Cloud Control?

- ASDM image present and enabled for ASA.
- Public interface access to 52.25.109.29, 52.34.234.2, 52.36.70.147
- ASA's HTTPS port must be set to 443 or to a value of 1024 or higher. For example, it cannot be set to port 636.
- If the ASA under management is also configured to accept AnyConnect VPN Client connections, the ASA HTTPS port must be changed to a value of 1024 or higher.

Complete the initial configuration of a Secure Firewall Threat Defense device using the CLI

Connect to the device's CLI to perform initial setup, including setting the management IP address, gateway, and other basic networking settings using the setup wizard. Ensure all DNS and firewall ports are accessible for communication.

The dedicated management interface is a special interface with its own network settings. If you do not want to use the management interface, you can use the CLI to configure a data interface instead.

This configuration is ideal for devices that are going to be onboarded with their CLI registration key.

Note Do **not** use this configuration procedure for devices that are onboarding with zero-touch provisioning.

Procedure

Step 1 Connect to the device's CLI, either from the console port or using SSH to the management interface. If you intend to change the network settings, we recommend using the console port so you do not get disconnected.

(Firepower hardware models) The console port connects to the FXOS CLI. The SSH session connects directly to the Firewall Threat Defense CLI.

Step 2 Log in with the username **admin** and the password **Admin123** .

At the console port, you connect to the FXOS CLI. The first time you log in to FXOS, you are prompted to change the password. This password is also used for the Firewall Threat Defense login for SSH.

Note
If the password was already changed, and you do not know it, you must reimage the device to reset the password to the default.

For Firepower and Secure Firewall hardware, see the Reimage Procedures in the Cisco FXOS Troubleshooting Guide for the Firewall Threat Defense .

For the ISA 3000, see the Cisco Secure Firewall ASA and Threat Defense Reimage Guide .

Example:

```
firepower login:
                        admin
Password:
                        Admin123
Successful login attempts for user 'admin' : 1
[...]
Hello admin. You must change your password.
Enter new password:
                        ********
Confirm new password:
                        ********
Your password was updated successfully.
```

```
[...]
firepower#
```

Step 3 If you connected to FXOS on the console port, connect to the Firewall Threat Defense CLI.

connect ftd

Example:

```
firepower# connect ftd
>
```

Step 4 The first time you log in to the device, you are prompted to accept the End User License Agreement (EULA) and, if using an SSH connection, to change the admin password. You are then presented with the CLI setup script.

Note
You cannot repeat the CLI setup wizard unless you clear the configuration; for example, by reimaging. However, all of these settings can be changed later at the CLI using **configure network** commands. See the threat defense command reference.

Defaults or previously entered values appear in brackets. To accept previously entered values, press **Enter**.

Note
The management interface settings are used even when you enable Firewall Threat Defense access on a data interface. For example, the management traffic that is routed over the backplane through the data interface will resolve FQDNs using the management interface DNS servers, and not the data interface DNS servers.

See the following guidelines:

- **Configure IPv4 via DHCP or manually?**—If you want to use a data interface for Firewall Threat Defense access instead of the management interface, choose **manual**. Although you do not plan to use the management interface, you must set an IP address, for example, a private address. You cannot configure a data interface for management if the management interface is set to DHCP, because the default route, which must be **data-interfaces** (see the next bullet), might be overwritten with one received from the DHCP server.
- **Enter the IPv4 default gateway for the management interface**—If you want to use a data interface for Firewall Threat Defense access instead of the management interface, set the gateway to be **data-interfaces**. This setting forwards management traffic over the backplane so it can be routed through the FMC access data interface.
- **If your networking information has changed, you will need to reconnect**—If you are connected with SSH but you change the IP address at initial setup, you will be disconnected. Reconnect with the new IP address and password. Console connections are not affected.
- **Manage the device locally?**—Enter **YES** to configure the device for the device to be managed by either the Cloud-Delivered Firewall Management Center or Secure Firewall Device Manager.

  Manage the device locally?—Enter **NO** to configure the device for remote management with the on-premises Firewall Management Center.
- **Configure firewall mode?**—We recommend that you set the firewall mode at initial configuration. Changing the firewall mode after initial setup erases your running configuration. Note that data interface Firewall Threat Defense access is only supported in routed firewall mode.

Step 5 (Optional) Configure a data interface for Firewall Management CenterCloud-Delivered Firewall Management Center access.

configure network management-data-interface

You are then prompted to configure basic network settings for the data interface.

Note
You should use the console port when using this command. If you use SSH to the Management interface, you might get disconnected and have to reconnect to the console port. See below for more information about SSH usage.

See the following details for using this command. See About Data Interfaces, on page 12 for more informatio.

- The original management interface cannot use DHCP if you want to use a data interface for management. If you did not set the IP address manually during initial setup, you can set it now using the **configure network** {**ipv4** | **ipv6**} **manual** command. If you did not already set the management interface gateway to **data-interfaces**, this command will set it now.
- When you onboard the device for Firewall Threat Defense management through Security Cloud Control, Security Cloud Control discovers and maintains the interface configuration, including the following settings: interface name and IP address, static route to the gateway, DNS servers, and DDNS server. For more information about the DNS server configuration, see below. You can later make changes to the access interface configuration, but make sure you don't make changes that can prevent the device or Security Cloud Control from re-establishing the management connection. If the management connection is disrupted, the device includes the **configure policy rollback** command to restore the previous deployment.
- This command sets the *data* interface DNS server. The Management DNS server that you set with the setup script (or using the **configure network dns servers** command) is used for management traffic. The data DNS server is used for DDNS (if configured) or for security policies applied to this interface.

  Also, local DNS servers are only retained if the DNS servers were discovered at initial registration. For example, if you registered the device using the Management interface, but then later configure a data interface using the **configure network management-data-interface** command, then you must manually configure all of these settings in Security Cloud Control, including the DNS servers, to match the device configuration.
- You can change the management interface after you onboard the Firewall Threat Defense for Firewall Threat Defense management through , to either the management interface or another data interface.
- The FQDN that you set in the setup wizard will be used for this interface.
- You can clear the entire device configuration as part of the command; you might use this option in a recovery scenario, but we do not suggest you use it for initial setup or normal operation.
- To disable data managemement, enter the **configure network management-data-interface disable** command.

Example:

```
> configure network management-data-interface
Data interface to use for management: ethernet1/1
Specify a name for the interface [outside]:
IP address (manual / dhcp) [dhcp]:
DDNS server update URL [none]:
https://jcrichton:pa$$w0rd17@domains.example.com/nic/update?hostname=<h>&myip=<a>
```

```
Do you wish to clear all the device configuration before applying ? (y/n) [n]:

Configuration done with option to allow FMC access from any network, if you wish to change
 the FMC access network
use the 'client' option in the command 'configure network management-data-interface'.

Setting IPv4 network configuration.
Network settings changed.

>
```

Example:

```
> configure network management-data-interface
Data interface to use for management: ethernet1/1
Specify a name for the interface [outside]: internet
IP address (manual / dhcp) [dhcp]: manual
IPv4/IPv6 address: 10.10.6.7
Netmask/IPv6 Prefix: 255.255.255.0
Default Gateway: 10.10.6.1
Comma-separated list of DNS servers [none]: 208.67.222.222,208.67.220.220
DDNS server update URL [none]:
Do you wish to clear all the device configuration before applying ? (y/n) [n]:

Configuration done with option to allow FMC access from any network, if you wish to change
 the FMC access network
use the 'client' option in the command 'configure network management-data-interface'.

Setting IPv4 network configuration.
Network settings changed.

>
```

Step 6 (Optional) Limit data interface access to Security Cloud Control on a specific network.

configure network management-data-interface client *ip_address netmask*

By default, all networks are allowed.

What does it mean to be FedRAMP certified

Being "FedRAMP certified" means that a cloud service provider (CSP) has undergone a rigorous security assessment and authorization process as defined by the Federal Risk and Authorization Management Program (FedRAMP). This certification ensures that the CSP meets stringent security standards required for handling sensitive government data. The key aspects of being FedRAMP certified include:

1. **Standardized Security Assessment**: The CSP has been evaluated against a standardized set of security requirements and assessment procedures.
2. **Authorization**: The CSP has received an official authorization to operate (ATO) from a federal agency.
3. **Continuous Monitoring**: The CSP is required to continuously monitor and report on their security controls to maintain their FedRAMP Authorized status.
4. **Compliance**: The certification ensures that the CSP complies with federal regulations for cloud services, providing a high level of security assurance for government agencies and contractors.

Overall, FedRAMP certification signifies that the cloud service provider has implemented strong security measures to protect customer data and is in compliance with federal security mandates.

Learn more at What is FedRAMP.

About Data Interfaces

You can use either the dedicated management interface or a regular data interface for communication with the device. Security Cloud Control access on a data interface is useful if you want to manage the FTD remotely from the outside interface, or you do not have a separate management network. Security Cloud Control supports high availability on the FTD managed remotely from the data interface.

FTD management access from a data interface has the following limitations:

- You can only enable manager access on one physical, data interface. You cannot use a subinterface or EtherChannel.
- Routed firewall mode only, using a routed interface.
- PPPoE is not supported. If your ISP requires PPPoE, you will have to put a router with PPPoE support between the FTD and the WAN modem.
- The interface must be in the global VRF only.
- SSH is not enabled by default for data interfaces, so you will have to enable SSH later using Security Cloud Control. Because the management interface gateway will be changed to be the data interfaces, you also cannot SSH to the management interface from a remote network unless you add a static route for the management interface using the **configure network static-routes** command.

How Security Cloud Control processes personal information

To learn how Security Cloud Control processes your personal identifiable information, see the Security Cloud Control Privacy Data Sheet.

Contact Security Cloud Control support

This chapter covers the following sections:

Export The Workflow

We strongly recommend exporting the workflow of a device that is experience issues prior to opening a support ticket. This additional information can help the support team expeditiously identify and correct any troubleshooting efforts.

Use the following procedure to export the workflow:

Procedure

Step 1 In the navigation bar, click **Inventory**.

Step 2 In the left pane, click **Security Devices**.

Step 3 Click the **Devices** tab to locate your device.

Step 4 Click the appropriate device type tab and select the device you need to troubleshoot.

Use the **filter** or **search bar** to locate the device you need to troubleshoot. Select the device so it is highlighted.

Step 5 In the **Device Actions** pane, select **Workflows**.

Step 6 Click the **Export** button located at the top right of the page, above the table of events. The file automatically saves locally as a **.json** file. Attach this to any emails or tickets you open with TAC.

Open a Support Ticket with TAC

A customer using a 30-day trial or a licensed Security Cloud Control account can open a support ticket with Cisco's Technical Assistance Center (TAC).

- How Security Cloud Control Customers Open a Support Ticket with TAC.
- How Security Cloud Control Trial Customers Open a Support Ticket with TAC.


How Security Cloud Control Customers Open a Support Ticket with TAC

This section explains how a customer using a licensed Security Cloud Control tenant can open a support ticket with Cisco's Technical Assistance Center (TAC).

Procedure

Step 1 Log in to Security Cloud Control.

Step 2 Next to your tenant name, click the help button and select **Contact Support**.

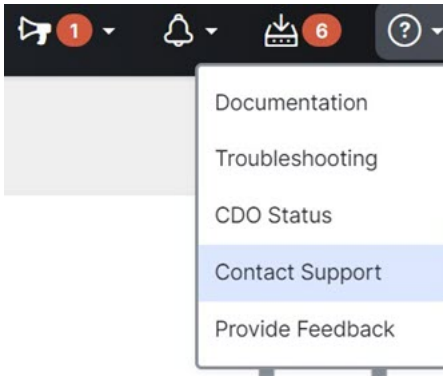

Step 3 Click **Support Case Manager**.

Step 4 Click the blue **Open New Case** button.

Step 5 Click **Open Case**.

Step 6 Select **Products and Services** and then click **Open Case**.

Step 7 Choose a **Request Type**.

Step 8 Expand **Find Product by Service Agreement** row.

Step 9 Fill in all the fields. Many of the fields are obvious. This is some additional information:


- **Product Name (PID)** - If you no longer have this number, see the Security Cloud Control Data Sheet.
- **Product Description** - This is the description of the PID.
- **Site Name** - Enter your site name. If you are a Cisco Partner opening a case for one of your customers, enter the customer's name.
- **Service Contract** - Enter your service contract number.
  - **Important**: In order for your case to be associated with your Cisco.com account, you need to associate your contract number to your Cisco.com profile. Use this procedure to associate your contract number to your Cisco.com profile.
    a. Open to Cisco Profile Manager.
    b. Click the **Access Management** tab.
    c. Click **Add Access**.
    d. Choose **TAC and RMA case creation, Software Download, support tools, and entitled content on Cisco.com** and click **Go**.
    e. Enter service contracts number(s) in the space provided and click **Submit**. You will receive notification via email that the service contract associations have been completed. Service contract association can take up to 6 hours to complete.

Important
Important: If you are not able to access any of the links below, please contact your authorized Cisco partner or re-seller, your Cisco account representative, or the individual in your company who manages Cisco service agreement information.

Step 10 Click **Next.**

Step 11 In the **Describe Problem** screen, scroll down to **Manually select a Technology**, click it, and type **Security Cloud Control** in the search field.

Step 12 Select the category that best matches your request, and click **Select**.

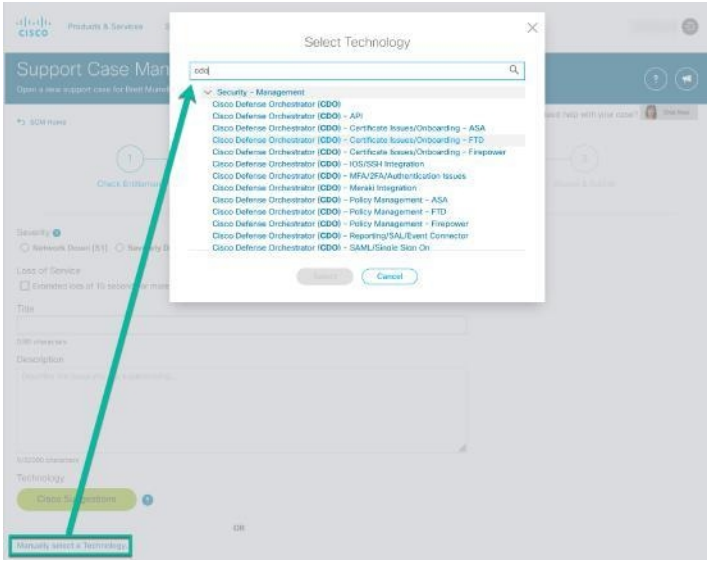

Step 13 Complete the remainder of the service request and click **Submit**.


How Security Cloud Control Trial Customers Open a Support Ticket with TAC

This section explains how a customer using a free trial of a Security Cloud Control tenant can open a support ticket with Cisco's Technical Assistance Center (TAC).

Procedure

Step 1 Log in to Security Cloud Control.

Step 2 Next to your tenant and account name, click the help button and select **Contact Support**.

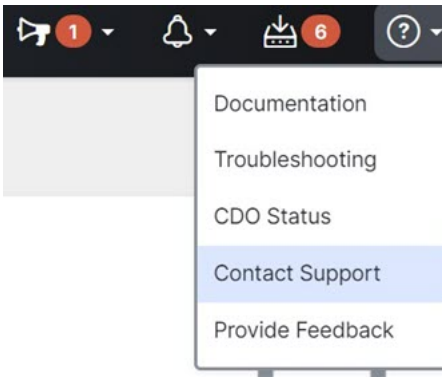

Step 3 In the **Enter Issue or request below** field, specify the issue that you are facing or your request and click **Submit**.

Your request, along with the technical information, will be sent to the support team, and a technical support engineer will respond to your query.

Security Cloud Control Service Status Page

Security Cloud Control maintains a customer-facing service status page that shows you if the Security Cloud Control service is up and any service interruptions it may have had. You can view up-time information with daily, weekly, or monthly graphs.

You can reach the Security Cloud Control status page by clicking **Security Cloud Control Status** in the help menu on any page in Security Cloud Control.

On the status page, you can click the **Subscribe to Updates** to receive a notification if the Security Cloud Control service goes down.