

Intelligent Fabric Module (IFM), X-Fabric Module, and Active Fan Module Field Replaceable Unit Instructions

This appendix contains the following topics:


- Cisco UCS 9108 25G IFM Field Replaceable Unit Replacement Instructions, on page 1
- Cisco UCS 9108 100G IFM Field Replaceable Unit Replacement Instructions, on page 2
- Cisco UCS 9508 Active Fan Module (AFM) Field Replaceable Unit Replacement Instructions, on page 2
- Cisco UCS X9416 X-Fabric Module Field Replaceable Unit Replacement Instructions, on page 3
- Cisco UCS X9516 X-Fabric Module Field Replaceable Unit Replacement Instructions, on page 3

Cisco UCS 9108 25G IFM Field Replaceable Unit Replacement Instructions

The rear of the Cisco UCS X9508 can contain a pair of UCS 9108 Intelligent Fabric Modules (IFMs), which come in either 25G or 100G speeds.

Refer to the following illustration for information about field-replacement options on the UCS 9108 25G IFM (UCSX-I-9108-25G).

Figure 1: Cisco UCS 9108 25G IFMs (UCSX-I-9108-25G) Replacement Instructions

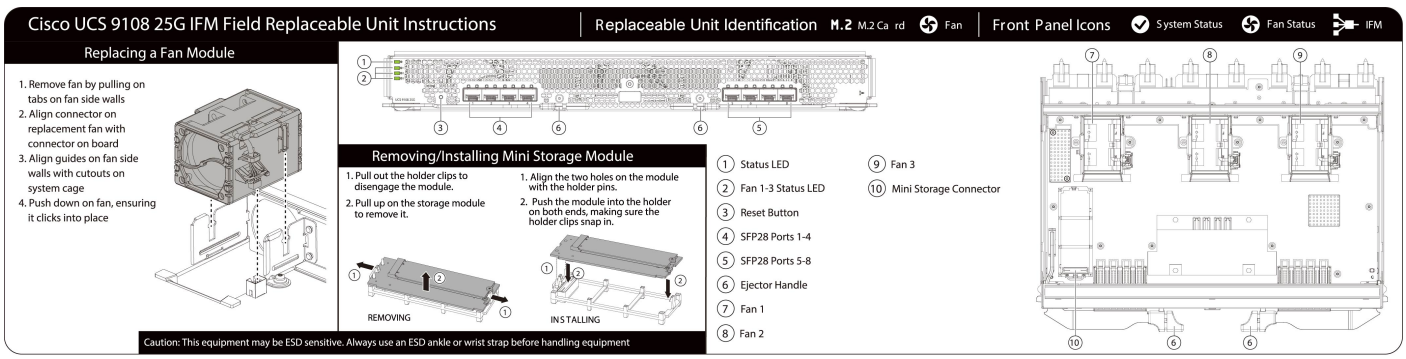


473982

Cisco UCS 9108 100G IFM Field Replaceable Unit Replacement Instructions

The rear of the Cisco UCS X9508 contains a pair of UCS 9108 Intelligent Fabric Modules (IFMs), which come in either 25Gbps or 100Gbps speeds.

Refer to the following illustration for information about field-replacement options on the UCS 9108 100G IFM (UCSX-I-9108-100G).

Figure 2: Cisco UCS 9108 100G IFMs (UCSX-I-9108-100G) Replacement Instructions

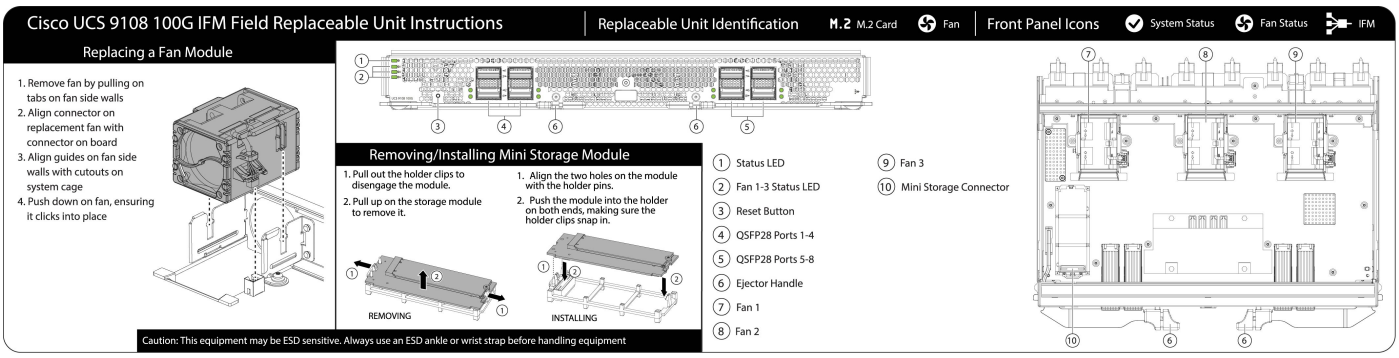


473981

Cisco UCS 9508 Active Fan Module (AFM) Field Replaceable Unit Replacement Instructions

The rear of the Cisco UCS X9508 chassis can contain a rear blank (UCS-9508-RBLK) that is an active fan module.

Refer to the relevant section below for the specific AFM installed in your system.

Figure 3: Cisco UCS 9508 Rear Blank (UCSX-9508-RBLK) Replacement Instructions

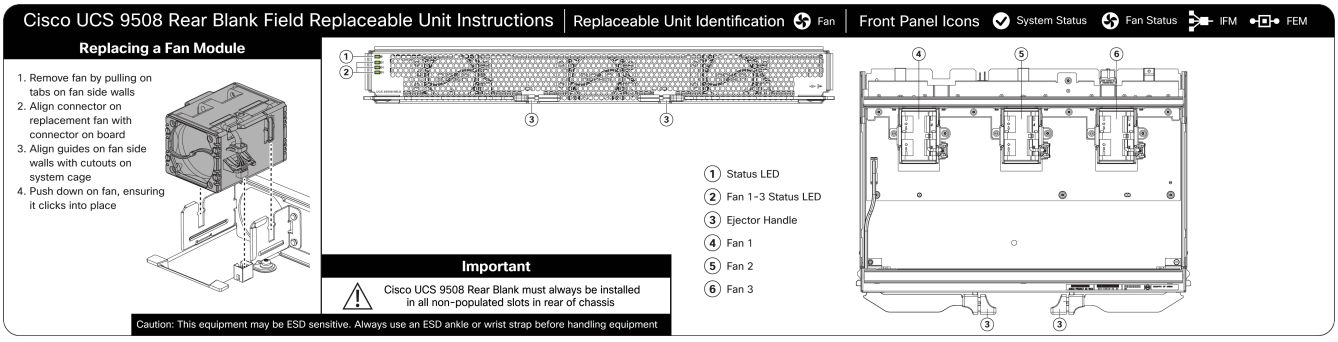


476034

Cisco UCS X9416 X-Fabric Module Field Replaceable Unit Replacement Instructions

Refer to the following illustration for field-replacement instructions for the Cisco UCS X9416 X-Fabric Module (XFM).

Figure 4: Cisco UCS X9416 X-Fabric Module (UCSX-F-9416) Field Replacement Instructions

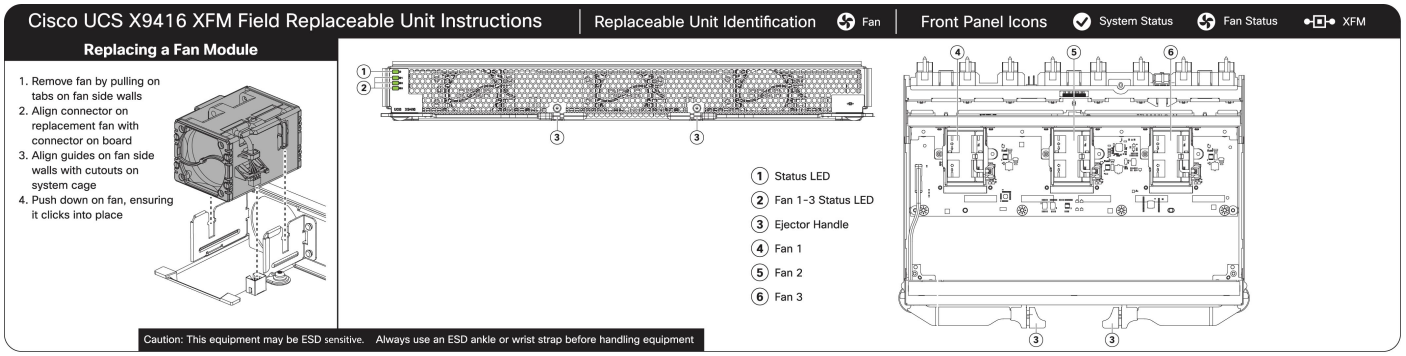


476033

Cisco UCS X9516 X-Fabric Module Field Replaceable Unit Replacement Instructions

Refer to the following illustration for field-replacement instructions for the Cisco UCS X9516 X-Fabric Module (XFM).

Figure 5: Cisco UCS X9516 X-Fabric Module (UCSX-F-9516) Field Replacement Instructions

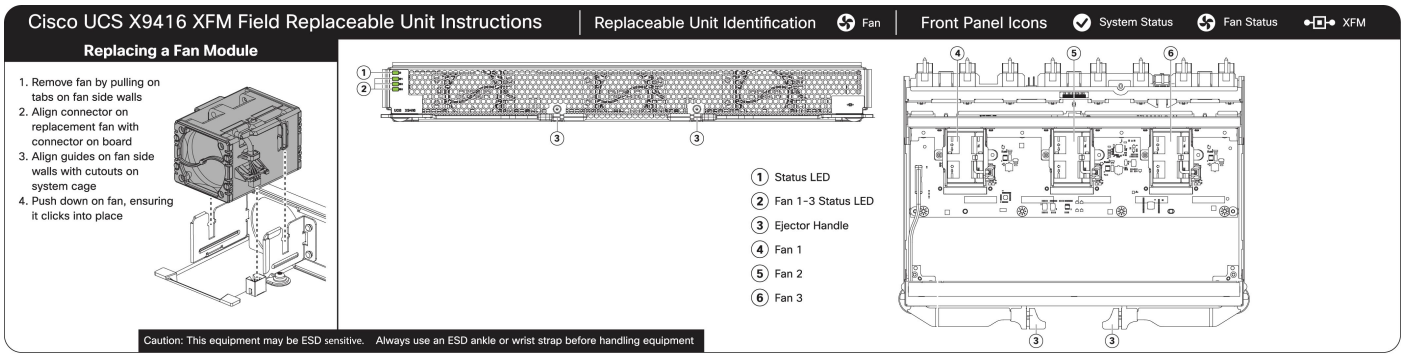

476033