Spec Sheet

Cisco Compute Hyperconverged and Compute-Only (CO) Node Server with Nutanix

225C M8 All-NVMe Servers

A printed version of this document is only a copy and not necessarily the latest version. Refer to the following link for the latest released version:

https://www.cisco.com/c/en/us/products/servers-unified-computing/HCI-c-series-rack-servers/datasheet-listing.html

CISCO SYSTEMS
170 WEST TASMAN DR
SAN JOSE, CA, 95134
WWW.CISCO.COM

PUBLICATION HISTORY

REV A.21 OCTOBER 08, 2026

CONTENTS

OVERVIEW 5
Cisco Compute Hyperconverged Server 5
Cisco Compute-Only (CO) Node Server 7
DETAILED VIEWS 9
Detailed Chassis Front View 9
Detailed Chassis Rear Views 10
Three Half-Height Risers 11
Two Full-Height Risers 13
BASE SERVER STANDARD CAPABILITIES and FEATURES 14
CONFIGURING THE CISCO COMPUTE HYPERCONVERGED SERVER 16
STEP 1 VERIFY SERVER SKU 17
STEP 2 AI INTENT (OPTIONAL) 18
STEP 3 USE CASE INTENT (REQUIRED) 19
STEP 4 SELECT MANAGEMENT MODE (REQUIRED) 20
Nutanix HCI Rack platform scale and limits 21
STEP 5 SELECT RISERS 22
STEP 6 SELECT CPU(s) 23
STEP 7 SELECT MEMORY (REQUIRED) 25
Memory configurations and mixing rules 26
STEP 8 SELECT DRIVES (REQUIRED) 27
STEP 9 SELECT CISCO COMPUTE HYPERCONVERGED CONNECTIVITY (REQUIRED) 29
A. For Intersight Standalone Mode (IS Managed) - HCI Connectivity: 29
B. For Intersight Managed Mode (IMM-Managed) - HCI Connectivity: 30
STEP 10 SELECT PCIe CARDS 31
SELECT OPTIONAL PCIe OPTION CARD ACCESSORIES 32
STEP 11 SELECT GPU CARDS (OPTIONAL) 33
STEP 12 SELECT POWER SUPPLY (REQUIRED) 34
STEP 13 SELECT INPUT POWER CORD(s) (REQUIRED) 35
STEP 14 SELECT TOOL-LESS RAIL KIT (REQUIRED) AND REVERSIBLE CABLE MANAGEMENT ARM (OPTIONAL) 39
STEP 15 SELECT SECURITY DEVICES (REQUIRED) 40
STEP 16 SELECT LOCKING SECURITY BEZEL (OPTIONAL) 41
STEP 17 SELECT MANAGEMENT CONFIGURATION (OPTIONAL) 42
STEP 18 SELECT HYPERVISOR 43
CONFIGURING THE CISCO COMPUTE-ONLY (CO) NODE SERVER 44
STEP 1 VERIFY SERVER SKU 48
STEP 2 AI INTENT (OPTIONAL) 49
STEP 3 USE CASE INTENT (REQUIRED) 50
STEP 4 SELECT MANAGEMENT MODE (REQUIRED) 51
Cluster Scale and Limits 51
STEP 5 SELECT RISERS 53
STEP 6 SELECT CPU(s) 54
STEP 7 SELECT MEMORY (REQUIRED) 56
Memory configurations and mixing rules 57
STEP 8 SELECT M.2 DRIVES (REQUIRED) 58
STEP 9 SELECT CISCO COMPUTE CONNECTIVITY (REQUIRED) 60
A. For Intersight Standalone Mode (ISM) - HCO Connectivity: 60
B. For Intersight Managed Mode (IMM) - HCO Connectivity: 61
STEP 10 SELECT PCIe CARDS 62

CONTENTS

STEP 11 SELECT GPU CARDS (OPTIONAL) 63
STEP 12 SELECT POWER SUPPLY (REQUIRED) 64
STEP 13 SELECT INPUT POWER CORD(s) (REQUIRED) 65
STEP 14 SELECT TOOL-LESS RAIL KIT (REQUIRED) AND REVERSIBLE CABLE MANAGEMENT ARM (OPTIONAL) 69
STEP 15 SELECT SECURITY DEVICES (REQUIRED) 70
STEP 16 SELECT LOCKING SECURITY BEZEL (OPTIONAL) 71
STEP 17 SELECT MANAGEMENT CONFIGURATION (OPTIONAL) 72
SELECT NUTANIX SOFTWARE AND NUTANIX PROFESSIONAL SERVICES 73
Top Level Nutanix Software And Professional Services PIDs 75
Nutanix Software And Professional Services PID Decoder 77
Nutanix Software PIDs and Description 78
Nutanix software limited orderability 120
Professional Services PIDs and Description 122
Nutanix Support: 139
Software With Professional Services PID Mapping 140
SELECT CISCO INTERSIGHT 148
SELECT GUEST VM OPERATING SYSTEM LICENSES 150
SUPPLEMENTAL MATERIAL 151
Chassis 151
Serial Port Details 153
KVM Cable 153
UPGRADING or REPLACING CPUs and Memory 154
TECHNICAL SPECIFICATIONS 155
Dimensions and Weight 155
DISCONTINUED EOL PRODUCTS 156
Power Specifications 157
Environmental Specifications 161
Compliance Requirements 162

CONTENTS

OVERVIEW

Cisco Compute Hyperconverged Server

Cisco Compute Hyperconverged with Nutanix is a hyperconverged infrastructure solution integrating Cisco's best-in-class compute (Cisco Unified Computing System), datacenter networking, and SaaS infrastructure management platform (Cisco Intersight) with Nutanix's market-leading hyperconverged storage software, Nutanix Cloud Platform.

The Cisco Compute Hyperconverged with Nutanix family of appliances delivers pre-configured UCS servers that are ready to be deployed as nodes to form Nutanix clusters in a variety of configurations. Each server appliance contains three software layers: UCS server firmware, hypervisor (Nutanix AHV), and hyperconverged storage software (Nutanix AOS).

Physically, nodes are deployed into clusters, with a cluster consisting of Cisco Compute Hyperconverged All-NVMe Servers. Clusters support a variety of workloads like virtual desktops, general-purpose server virtual machines in edge, data center and mission-critical high-performance environments.

The Cisco Compute Hyperconverged HCINX225C M8 All-NVMe Server features a 1U form factor with a single-socket design, harnessing the power of 5th Gen. AMD EPYC™ processors, and refer to the **BASE SERVER STANDARD CAPABILITIES and FEATURES, page 14**.

Cluster Scale: Nutanix clusters scale is determined by the cluster Management Mode. Refer to the *Table 7 on page 21* for the scale and limits details.

These servers can be interconnected and managed in two different ways:

- **Intersight Standalone mode:** servers are centrally managed using Cisco Intersight® (SaaS, PVA or CVA). While a minimum of three nodes are required to deploy a standard Nutanix cluster, we also offer an option to deploy a single node cluster and a two-node cluster for Edge and branch locations and situations that already have a high-performance network fabric installed. Refer to Nutanix documentation on single node.
- **Intersight Managed Mode**: The nodes are connected to a pair of Cisco UCS® 6400 Series or a pair of Cisco UCS 6500 Series fabric interconnects that are entirely managed from Intersight (SaaS, PVA or CVA). All Servers are connected to the same pair of fabric interconnect. While a minimum of three nodes are required to deploy a standard Nutanix cluster, option to deploy a single node cluster and a two-node cluster for Edge and branch locations is supported. Refer to Nutanix documentation on single node.



IMPORTANT NOTE: HCI M8 platforms are supported in Intersight Standalone Mode (ISM) and Intersight Managed Mode(IMM) only. No UCS Managed Mode (UMM) deployments are supported with M8 platforms.

See *Figure 1 on page 6* for front and rear views of the server.

Figure 1 Cisco Compute Hyperconverged HCINX225C M8 All-NVMe Server

Front View



Rear View (three half-height riser card version)



Rear View (two full-height riser card version - shown with riser blanks installed)



Cisco Compute-Only (CO) Node Server

Traditional hyperconverged solutions requires scaling compute and storage together. Modern workloads require modern flexibility. When you need to scale compute capacity without adding storage, Cisco Compute-Only (CO) nodes provide that critical capability-empowering you to design clusters that match your exact requirements

Cisco Compute-Only (CO) nodes serve two purposes: expanding hyperconverged node or connecting to external storage like Everpure Flash Array

A) Expanding Cisco Compute Hyperconverged node cluster with Compute-Only (CO) node:

Cisco's Compute-Only (CO) node solution enables you to expand the compute resources of Cisco Hyperconverged cluster running Nutanix by adding UCS certified servers without additional storage. These storage-less, Cisco certified Compute-Only (CO) servers integrate seamlessly into your existing or new hyperconverged Nutanix cluster, allowing organizations to efficiently support CPU-intensive applications by scaling processing resources independently of storage infrastructure.

Key benefits:

- Cost-effective scaling for compute-heavy workloads
- Flexibility in cluster design

Delivering performance, versatility and density without compromise, the Compute-Only (CO) Node addresses the broadest set of workloads.

B) Cisco Compute-Only (CO) node connected to Everpure Flash Array (Flashstack with Nutanix)

Everpure® FlashArray//X™ and FlashArray//XL™ delivers mission-critical performance with the efficiency and resiliency that’s missing from legacy arrays. FlashArray //X and FlashArray//XL™ packs more IOPS, ultra consistent latency, and greater scale into a smaller footprint. Non-disruptive upgrades, always-on availability, and built-in data protection ensure workloads are always running while cutting risk. FlashArray//XL is designed to provide the highest performance density with a level of operational and management simplicity. FlashArray//C™ delivers a balanced all-flash storage solution optimized for file services and general-purpose workloads. With predictable performance, streamlined operations, and built-in cyber resiliency, it keeps applications consistently secure and positions organizations to outperform capacity-optimized, all-flash, and hybrid storage alternatives.

Nutanix Cloud Platform (NCP) consolidates computing, storage, and networking into a unified pool. It uses AOS for storage, AHV for virtualization, and Prism Central for centralized management across environments.

The Cisco Compute-Only (CO) node with Nutanix Cloud Platform (NCP) and Everpure FlashArray solution delivers a disaggregated infrastructure architecture that enables independent scaling of compute and storage resources. This solution combines industry-standard Cisco Compute-Only (CO) node servers running Nutanix AHV and AOS connected to external Everpure FlashArray. The FlashStack solution with Nutanix integration provides organizations with the agility to adapt infrastructure resources dynamically while maintaining enterprise-level reliability and performance

Key Benefits:

- Independent Scalability: Scale compute and storage resources separately based on workload demands
- Enterprise-Grade Protection: Built-in data protection and disaster recovery capabilities

- Hybrid Cloud Ready: Seamlessly extend operations across on-premises and cloud environments
- Investment protection – enables using Nutanix Cloud Platform with existing storage.


Cisco Compute Only 225c M8 NVMe Nutanix Node features a 1U form factor with a single-socket design, harnessing the power of 5th Gen. AMD EPYC™ processors, and refer to the **BASE SERVER STANDARD CAPABILITIES and FEATURES, page 14**.

DETAILED VIEWS

Detailed Chassis Front View

Figure 2 shows the detailed front view of the Cisco Compute Hyperconverged HCINX225C M8 All-NVMe Server

Figure 2 Detailed Chassis Front View

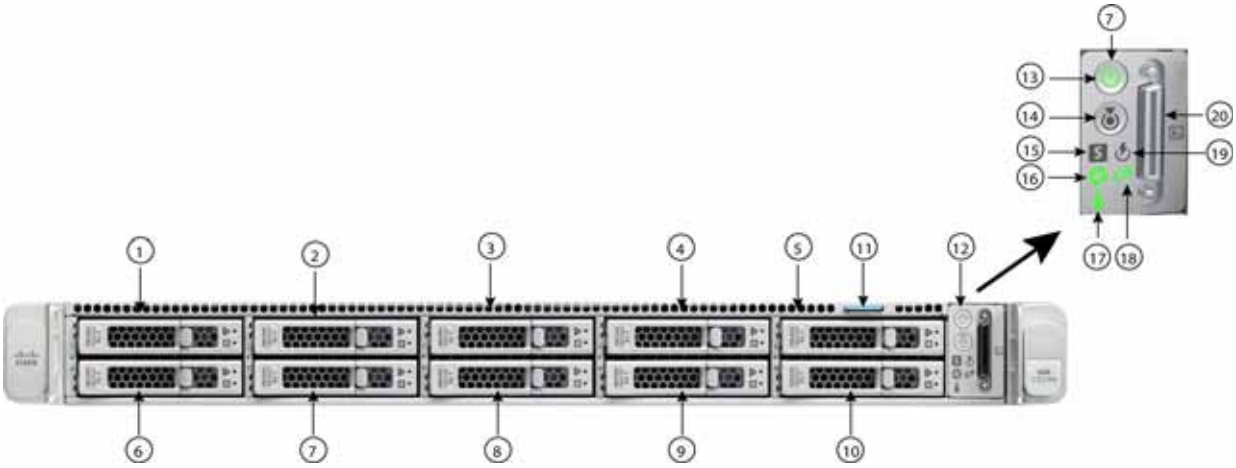

1 - 10	Drive bays 1 – 10 support only NVMe PCIe drives	**16**	Fan status LED
11	Asset tag location	**17**	Temperature status LED
12	Control panel	**18**	Network link activity LED
13	Power button/power status LED	**19**	Power supply status LED
14	Unit Identification button/LED	**20**	KVM connector (used with KVM cable that provides two USB 2.0, one VGA, and one serial connector)
15	System status LED	**-**	-

Detailed Chassis Rear Views


Figure 3 shows the details of the rear panel for the Server with one rear half-height PCIe riser.

Figure 4 shows the details of the rear panel for the Server with two rear full-height PCIe risers.

Three Half-Height Risers

NOTE: Gen4 and Gen5 risers cannot be mixed.

Figure 3 Chassis Rear View (three half-height, 3/4 length PCIe risers)

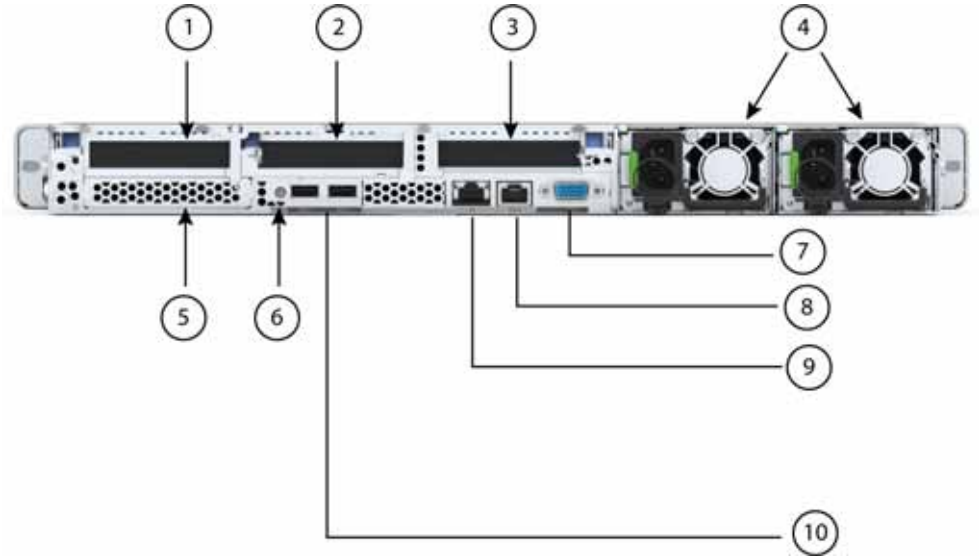


1	There are two half height riser 1 options: **Riser 1A PCIe Gen4** ■ Supports one PCIe slot (slot 1) ■ Slot 1 is half-height, 3/4 length, x16, NCSI, Single Wide GPU **Riser 1B PCIe Gen5** ■ Supports one PCIe slot (slot 1) ■ Slot 1 is half-height, 3/4 length, x16, NCSI, Single Wide GPU	**6**	System ID pushbutton/LED
2	There are two half height riser 2 options: **Riser 2A PCIe Gen4 x16** ■ Supports one PCIe slot (slot 2) ■ Slot 2 is half-height, 3/4 length, x16, Single Wide GPU **Riser 2B PCIe Gen5 x16** ■ Supports one PCIe slot (slot 2) ■ Slot 2 is half-height, 3/4 length, x16, Single Wide GPU	**7**	VGA display port (DB15 connector)

3	There is one half height riser 3 option: **Riser 3A PCIe Gen4 x16** ■ Supports one PCIe slot (slot 3) ■ Slot 3 is half-height, 3/4 length, x16, NCSI, Single Wide GPU	**8**	COM port (RJ45 connector)
4	Power supplies (two, redundant as 1+1)	**9**	1GBE dedicated Ethernet management port
5	Modular LAN on motherboard (mLOM)/OCP 3.0 slot	**10**	USB 3.0 ports (two)

Two Full-Height Risers

Figure 4 Chassis Rear View (two full-height, 3/4-length PCIe risers)

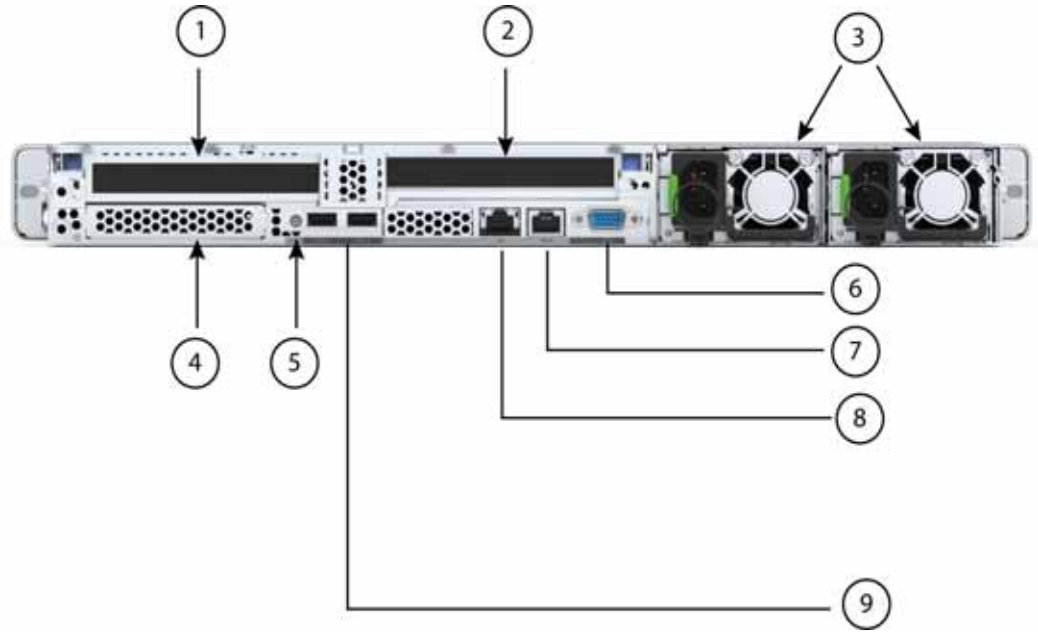

1	**Riser 1C PCIe Gen5** ■ Supports one PCIe slot (slot 1) ■ Slot 1 is full-height, 3/4 length, x16,NCSI, Single Wide GPU	**6**	VGA display port (DB15 connector)
2	**Riser 3C PCIe Gen5 x16** ■ Supports one PCIe slot (slot 3) ■ Slot 3 is Full-height, 3/4 length, x16, NCSI, Single Wide GPU	**7**	COM port (RJ45 connector)
3	Power supplies (two, redundant as 1+1)	**8**	1GBE dedicated Ethernet management port
4	Modular LAN on motherboard (mLOM)/OCP 3.0 slot	**9**	USB 3.0 ports (two)
5	System ID pushbutton/LED	**-**	-

BASE SERVER STANDARD CAPABILITIES and FEATURES

Table 1 lists the capabilities and features of the base server. Details about how to configure the server for a particular feature or capability (for example, processors, drives, or amount of memory) are provided in CONFIGURING THE CISCO COMPUTE HYPERCONVERGED SERVER, page 16.

Table 1 Capabilities and Features

Capability/Feature	Description
Chassis	■ One rack unit (1RU) chassis
CPU	■ Single-Socket Configuration ■ Supports one AMD EPYC™ 9005 Series processor
Memory	■ 12 slots for registered DIMMs (RDIMMs)
Multi-bit Error Protection	■ This server supports multi-bit error protection.
Video	The Cisco Integrated Management Controller (CIMC) provides video using the Matrox G200e video/graphics controller: ■ Integrated 2D graphics core with hardware acceleration ■ Embedded DDR memory interface supports up to 512 MB of addressable memory (8 MB is allocated by default to video memory) ■ Supports display resolutions up to 1920 x 1200 16bpp @ 60Hz ■ High-speed integrated 24-bit RAMDAC ■ Single lane PCI-Express host interface running at Gen 1 speed
Power subsystem	Up to two of the following hot-swappable power supplies: ■ 1050 W (DC) ■ 1200 W (AC) ■ 1600 W (AC) ■ 2300 W (AC) One power supply is mandatory; one more can be added for 1 + 1 redundancy.
Expansion slots	■ Half-height riser slots (select up to three) • Riser 1A PCIe Gen4 x16 HH • Riser 1B PCIe Gen5 x16 HH • Riser 2A PCIe Gen4 x16 HH • Riser 2B PCIe Gen5 x16 HH • Riser 3A PCIe Gen4 x16 HH ■ Full-height riser slots (select up to two) • Riser 1C PCIe Gen5 x16 FH • Riser 3C PCIe Gen5 x16 FH

Table 1 Capabilities and Features *(continued)*

Capability/Feature	Description
Interfaces	■ Rear panel • One 1Gbase-T RJ-45 management port • One RS-232 serial port (RJ45 connector) • One DB15 VGA connector • Two USB 3.0 port connectors • One flexible modular LAN on motherboard (mLOM)/OCP 3.0 slot that can accommodate various interface cards ■ Front panel • One KVM console connector (supplies two USB 2.0 connectors, one VGA DB15 video connector, and one serial port (RS232) RJ45 connector)
Internal storage devices (Applicable to hyperconverged Node Only)	**Drive storage:** Drives are installed into front-panel drive bays, which provide hot-swappable access for NVMe drives. ■ Three to ten 2.5-inch direct-attach NVMe SSDs only. **Other storage:** ■ A mini-storage module connector on the motherboard supports a boot-optimized RAID controller carrier that holds two SATA M.2 SSDs.
PCIe	■ Up to 3 PCIe 4.0 slots or up to 2 PCIe 5.0 slots and 1 dedicated mLOM/OCP 3.0 slot
Integrated management processor	■ Baseboard Management Controller (BMC) running Cisco Integrated Management Controller (CIMC) firmware. ■ Depending on your CIMC settings, the CIMC can be accessed through the 1GE dedicated management port or a Cisco virtual interface card (VIC). ■ CIMC manages certain components within the server, such as the Cisco 12G SAS HBA.
Front Panel	■ A front panel controller provides status indications and control buttons
ACPI	■ This server supports the advanced configuration and power interface (ACPI) version 6.5
Fans	■ Eight hot-swappable fans for front-to-rear cooling
Infiniband	■ The InfiniBand architecture is supported by the PCI slots.
CIMC	■ Cisco Integrated Management Controller 4.3 (6) or later
Intersight	■ Intersight provides server management capabilities

CONFIGURING THE CISCO COMPUTE HYPERCONVERGED SERVER

Follow these steps to configure the Cisco Compute Hyperconverged HCINX225C M8 All-NVMe Server:

- *STEP 1 VERIFY SERVER SKU, page 17*
- *STEP 2 AI INTENT (OPTIONAL), page 18*
- *STEP 3 USE CASE INTENT (REQUIRED), page 19*
- *STEP 4 SELECT MANAGEMENT MODE (REQUIRED), page 20*
- *STEP 5 SELECT RISERS, page 22*
- *STEP 6 SELECT CPU(s), page 23*
- *STEP 7 SELECT MEMORY (REQUIRED), page 25*
- *STEP 8 SELECT DRIVES (REQUIRED), page 27*
- *STEP 9 SELECT CISCO COMPUTE HYPERCONVERGED CONNECTIVITY (REQUIRED), page 29*
- *STEP 10 SELECT PCIe CARDS, page 31*
- *STEP 11 SELECT GPU CARDS (OPTIONAL), page 33*
- *STEP 12 SELECT POWER SUPPLY (REQUIRED), page 34*
- *STEP 13 SELECT INPUT POWER CORD(s) (REQUIRED), page 35*
- *STEP 14 SELECT TOOL-LESS RAIL KIT (REQUIRED) AND REVERSIBLE CABLE MANAGEMENT ARM (OPTIONAL), page 39*
- *STEP 15 SELECT SECURITY DEVICES (REQUIRED), page 40*
- *STEP 16 SELECT LOCKING SECURITY BEZEL (OPTIONAL), page 41*
- *STEP 17 SELECT MANAGEMENT CONFIGURATION (OPTIONAL), page 42*
- *STEP 18 SELECT HYPERVISOR, page 43*
- *SELECT NUTANIX SOFTWARE AND NUTANIX PROFESSIONAL SERVICES, page 73*
- *SELECT CISCO INTERSIGHT, page 148*
- *SELECT GUEST VM OPERATING SYSTEM LICENSES, page 150*

STEP 1 VERIFY SERVER SKU

Top level ordering product ID (PID) is shown in *Table 2*

Table 2 Top level ordering PID (major line bundle)

Product ID (PID)	Description
HCI-M8-NTNX-MLB	Cisco Compute Hyperconverged M8 with Nutanix MLB This major line bundle (MLB) consists of the Cisco Compute Hyperconverged Server, with Intersight and Nutanix software PIDs.

Select server product ID (PID) from *Table 3*.



CAUTION: This products may not be purchased outside of the approved bundles. (must be ordered under the MLB)

Table 3 PID of The Base Server

Product ID (PID)	Description
HCINX225C-M8SN	Up to 10 SFF front drives (NVMe PCIe SSDs only) with no CPU, memory, HDD, PCIe cards, or power supply

The Cisco Compute Hyperconverged HCINX225C M8 All-NVMe Server:

- Includes a 10-drive backplane
- Does not include power supply, CPU, memory DIMMs, solid-state drives (SSDs), NVMe drives, SD cards, riser 1, riser 2, riser 3, tool-less rail kit, or option cards.



NOTE: Use the steps on the following pages to configure the server with the components that you want to include.

STEP 2 AI INTENT (OPTIONAL)

Select AI Intent

- The available AI Intent options are listed in *Table 4*.

Table 4 AI Intent

Product ID (PID)	Description
COMPUTE-AI	Compute Artificial Intelligence Use Case
COMPUTE-OTHER	Compute Other Use Case

STEP 3 USE CASE INTENT (REQUIRED)

Select Use Case Intent

- The available use case intent are listed in *Table 5*.

Table 5 Use Case Intent

Product ID (PID)	Description
NTNX-HCI	Nutanix HCI Use Case/ Nutanix HCI + CO Use Case
NTNX-NUS	Nutanix Unified Storage (NUS) Use Case

STEP 4 SELECT MANAGEMENT MODE (REQUIRED)

The available management modes are listed in *Table 6*.

Table 6 Management Modes

Product ID (PID)	Description
HCI-IS-MANAGED	Deployment mode for Standalone Server Managed by Intersight (ISM)
HCI-IMM-MANAGED	Deployment mode for Server and FI Managed by Intersight (IMM)



NOTE:

- HCI deployment with standalone servers that are intersight managed (HCI-IS-MANAGED):
  - This deployment option allows server nodes to be directly connected to existing Top of Rack (ToR) switches without the need for a pair of UCS Fabric Interconnects. The installation for this type of deployment must need foundation central and Intersight.
  - If this deployment mode is selected, then either HCI-MLOM or HCI-PCIE connectivity mode must be selected from **STEP 9 SELECT CISCO COMPUTE HYPERCONVERGED CONNECTIVITY (REQUIRED), page 29** and additional cards should be selected from **STEP 9 SELECT CISCO COMPUTE HYPERCONVERGED CONNECTIVITY (REQUIRED), page 29**
  - IMC standalone mode is not supported. The servers must be Intersight managed
- HCI deployment with servers and FI both managed by Intersight (HCI-IMM-MANAGED)
  - This deployment option connects the server to Cisco Fabric Interconnects operating in Intersight managed mode (IMM). The installation for this type of deployment is performed using foundation central and Intersight
  - UCS 4th Gen and 5th Gen fabric interconnects (6454, 64108, 6536) are supported with this solution.
  - HCIX modular server nodes can be mixed with HCI nodes when operating in this mode. They must all be connected to the same pair of FI.
  - If this deployment mode is selected, then HCI-MLOM from HCI connectivity mode must be selected from **STEP 9 SELECT CISCO COMPUTE HYPERCONVERGED CONNECTIVITY (REQUIRED), page 29** and additional cards should be selected from **STEP 9 SELECT CISCO COMPUTE HYPERCONVERGED CONNECTIVITY (REQUIRED), page 29**

Nutanix HCI Rack platform scale and limits

Table 7 Nutanix HCI Rack platform scale and limits

Scale	Limit		Hypervisor (AHV/ESXi)
	Intersight Standalone (ISM)	Intersight Managed (IMM)	
Min. Cluster Size	1	1	Both
Max. Cluster Size	32	32	Both
Initial cluster deployment /Node preparation for expansion	16	16	Both
Cluster expansion	8 at a time	8 at a time	Both
Number of parallel deployments in FC	32	32	Both

STEP 5 SELECT RISERS

The riser PIDs are listed in *Table 8*.



CAUTION:

- Full-height risers cannot be mixed with half-height risers.
- Gen4 and Gen5 risers cannot be mixed.

Table 8 PIDs of the Risers and Riser Blanks

Product ID (PID)	Description
Riser 1 Option	
HCI-RIS1A-225M8	UCS C-Series M8 1U Riser 1A PCIe **Gen4** x16 HH ■ Half-height riser 1 ■ One x16 PCIe Gen4 riser, standard PCIe, supports Cisco VIC, half-height, 3/4 length
HCI-RIS1B-225M8	UCS C-Series M8 1U Riser 1B PCIe **Gen5** x16 HH ■ Half-height riser 1 ■ One x16 PCIe Gen5 riser, standard PCIe, supports Cisco VIC, half-height, 3/4 length
HCI-RIS1C-225M8	UCS C-Series M8 1U Riser 1C PCIe **Gen5** x16 FH ■ Full-height riser 1 ■ One x16 PCIe Gen5 riser, standard PCIe, supports Cisco VIC, full-height, 3/4 length
Riser 2 Option	
HCI-RIS2A-225M8	UCS C-Series M8 1U Riser 2A PCIe **Gen4** x16 HH ■ Half-height riser 2 ■ One x16 PCIe Gen4 riser, standard PCIe, half-height, 3/4 length
HCI-RIS2B-225M8	UCS C-Series M8 1U Riser 2B PCIe **Gen5** x16 HH ■ Half-height riser 2 ■ One x16 PCIe Gen5 riser, standard PCIe, half-height, 3/4 length
Riser 3 Option	
HCI-RIS3A-225M8	UCS C-Series M8 1U Riser 3A PCIe **Gen4** x16 HH ■ Half-height riser 3 ■ One x16 PCIe Gen4 riser, standard PCIe, supports Cisco VIC, half-height, 3/4 length
HCI-RIS3C-225M8	UCS C-Series M8 1U Riser 3C PCIe **Gen5** x16 FH ■ Full-height riser 3 ■ One x16 PCIe Gen5 riser, standard PCIe, supports Cisco VIC, full-height, 3/4 length
Accessories/spare included along with selected risers: ■ UCSC-FBRS2-C225M8 for riser 2 and UCSC-FBRS-C220-D riser filler blank for riser 3 is auto included, if riser 2 or riser 3 are not selected. UCSC-FBRSF-225M8 is auto included if only one full height riser is selected	

STEP 6 SELECT CPU(s)

- Single socket configuration
- CPU-to-CPU communication using Infinity Fabric Interconnect
- Cache size of up to 512 MB
- Up to 160 cores
- Power: Up to 400Watts

Select CPUs

CAUTION: For systems configured with processors operating above 28º C [82.4º F], a fan fault or executing workloads with extensive use of heavy instructions sets may assert thermal and/or performance faults with an associated event recorded in the System Event Log (SEL).

Table 9 Available 5th Gen EPYC 9005 Series Processors

Product ID (PID)	Maximum Socket	Core	CPU Base Frequency	CPU Boost Frequency	Default TDP	Cache Size	Highest DDR5 DIMM Clock
	(S)	(C)	(GHz)	(GHz)	(W)	(MB)	(MT/s)[1]
HCI-CPU-A9845	1S	160	2.10	3.70	390	320	6000
HCI-CPU-A9825	1S	144	2.20	3.70	390	384	6000
HCI-CPU-A9745	1S	128	2.40	3.70	400	256	6000
HCI-CPU-A9655[2]	1S	96	2.60	4.50	400	384	6000
HCI-CPU-A9645	1S	96	2.30	3.70	320	256	6000
HCI-CPU-A9565[2]	1S	72	3.15	4.30	400	384	6000
HCI-CPU-A9555[2]	1S	64	3.20	4.40	360	256	6000
HCI-CPU-A9535	1S	64	2.40	4.30	300	256	6000
HCI-CPU-A9455	1S	48	3.15	4.40	300	256	6000
HCI-CPU-A9365	1S	36	3.40	4.30	300	192	6000
HCI-CPU-A9355	1S	32	3.55	4.40	280	256	6000
HCI-CPU-A9335	1S	32	3.00	4.40	210	128	6000
HCI-CPU-A9255	1S	24	3.20	4.30	200	128	6000
HCI-CPU-A9135	1S	16	3.65	4.30	200	64	6000
HCI-CPU-A9115	1S	16	2.60	4.10	125	64	6000
HCI-CPU-A9575F	1S	64	3.30	5.00	400	256	6000
HCI-CPU-A9475F	1S	48	3.65	4.80	400	256	6000
HCI-CPU-A9375F	1S	32	3.80	4.80	320	256	6000
HCI-CPU-A9275F	1S	24	4.10	4.80	320	256	6000
HCI-CPU-A9175F	1S	16	4.20	5.00	320	512	6000

Table 9 Available 5th Gen EPYC 9005 Series Processors

Product ID (PID)	Maximum Socket	Core	CPU Base Frequency	CPU Boost Frequency	Default TDP	Cache Size	Highest DDR5 DIMM Clock
	(S)	(C)	(GHz)	(GHz)	(W)	(MB)	(MT/s)[1]
HCI-CPU-A9655P	1S	96	2.60	4.50	400	384	6000
HCI-CPU-A9555P	1S	64	3.20	4.40	360	256	6000
HCI-CPU-A9455P	1S	48	3.15	4.40	300	256	6000
HCI-CPU-A9355P	1S	32	3.55	4.40	280	256	6000

Notes:

1. If higher or lower speed DIMMs are selected than what is shown in *Table 11 on page 26* for a given CPU speed, the DIMMs will be clocked at the lowest common denominator of CPU clock and DIMM clock.
2. SKU available in Q2 2025


STEP 7 SELECT MEMORY (REQUIRED)

The *Table 10* below describes the main memory DIMM features supported on server.

Table 10 Server Main Memory Features

Memory DIMM server technologies	Description
DDR5 memory clock speed	Up to 6000 MT/s 1DPC
Operational voltage	1.1 Volts
DRAM fab density	16Gb, 24Gb, and 32Gb
DRAM DIMM type	RDIMM (Registered DDR5 DIMM)
Memory DIMM organization	Twelve memory DIMM channels per CPU; 1 DIMM per channel only
Maximum number of DRAM DIMM per server	Up to 12 (1-Socket)
DRAM DIMM Densities and Ranks	16GB 1Rx8, 32GB 1Rx4, 64GB 2Rx4, 96GB 2Rx4, 128GB 2Rx4, 256GB 4Rx4
Maximum system capacity (DRAM DIMMs only)	3TB (12x256GB)

Figure 5 12-Channel Memory Organization

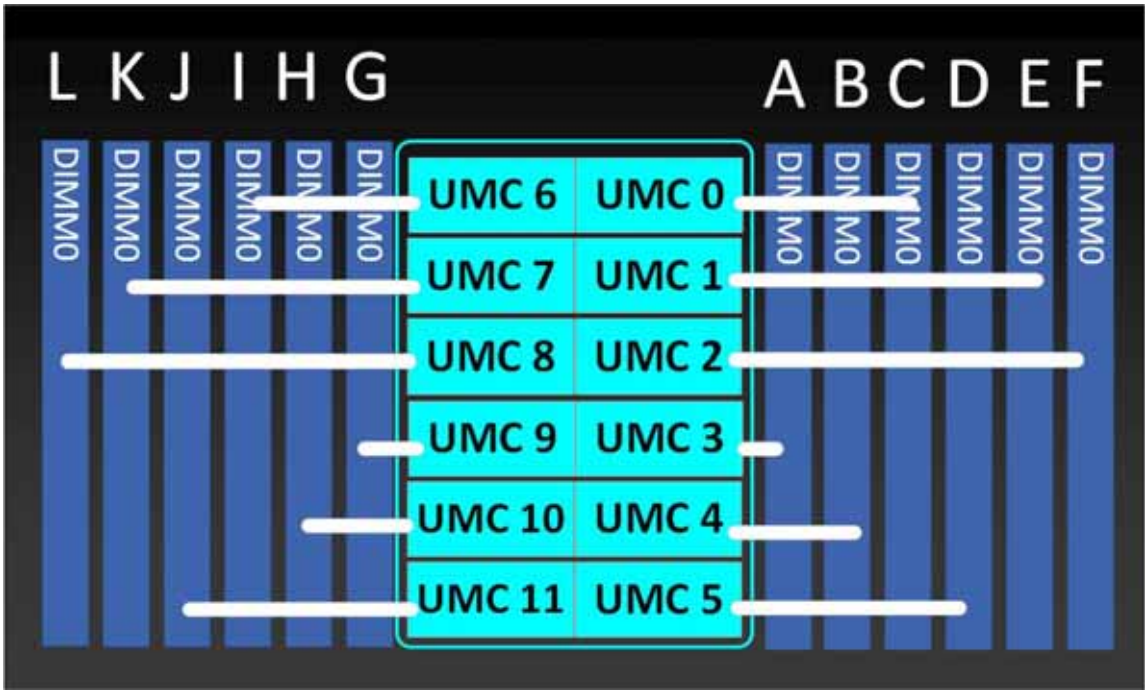

Select DIMMs

The supported memory DIMMs are listed in *Table 11*.

NOTE: All memory DIMMs must be Cisco DDR5-6400 memory PIDs, although the memory will operate at the maximum speed of the 5th Gen. AMD EPYC™ CPUs memory controller, up to 6000 MT/s.

Table 11 Available DDR5 DIMMs

Product ID (PID)	PID Description	Ranks/DIMM
DDR5-6400 MT/s PIDs list[1]		
HCI-MRX16G1RE5	16GB DDR5-6400 RDIMM 1Rx4 (16Gb)	1
HCI-MRX32G1RE5	32GB DDR5-6400 RDIMM 1Rx4 (16Gb)	1
HCI-MRX32G2RE5	32GB DDR5-6400 RDIMM 2Rx8 (16Gb)	2
HCI-MRX64G2RE5	64GB DDR5-6400 RDIMM 2Rx4 (16Gb)	2
HCI-MRX96G2RF5	96GB DDR5-6400 RDIMM 2Rx4 (24Gb)	2
HCI-MR128G2RG5	128GB DDR5-6400 RDIMM 2Rx4 (32Gb)	2
HCI-MR256G4RG5	256GB DDR5-6400 RDIMM 4Rx4 (32Gb)	4
DIMM Blank[2]		
UCS-DDR5-BLK	UCS DDR5 DIMM Blanks	

Notes:

1. If higher or lower speed DIMMs are selected than for a given CPU speed, the DIMMs will be clocked at the lowest common denominator of CPU clock and DIMM clock. check the *Table 9* column **"Highest DDR5 DIMM Clock Support"**
2. Any empty DIMM slot must be populated with a DIMM blank to maintain proper cooling airflow.

Memory configurations and mixing rules

- For full details on supported memory configurations see the **M8 Memory Guide.**

STEP 8 SELECT DRIVES (REQUIRED)

The standard disk drive features are:

- 2.5-inch small form factor
- Hot-pluggable
- Drives come mounted in sleds

Select Drives

The available NVMe SSDs drives are listed in *Table 12*



CAUTION: Cisco uses solid state drives (SSDs) from a number of vendors. All solid state drives (SSDs) are subject to physical write limits and have varying maximum usage limitation specifications set by the manufacturer. Cisco will not replace any solid state drives (SSDs) that have exceeded any maximum usage specifications set by Cisco or the manufacturer, as determined solely by Cisco.



NOTE: Nutanix AOS supports a maximum of 216TB raw capacity per node in a All-flash system and 307TB raw capacity per node in a All-NVMe system for NCI use cases (AOS 6.8.1 and Later).

Table 12 Available drives

Product ID (PID)	PID Description	Drive Type	Capacity
Capacity Drive			
HCI-NVMEG4-M1536	15.3TB 2.5in U.3 15mm P7450 Hg Perf Med End NVMe	NVMe	15.3 TB
HCI-NVMEG4-M6400	6.4TB 2.5in U.3 15mm Micron P7450 Hg Perf Hg End NVMe (3X)	NVMe	6.4 TB
HCI-NVB1T9M2V	1.9TB 2.5in U.3 15mm Micron 7500 Hg Perf Med End 1X NVMe	NVMe	1.9 TB
HCI-NVB3T8M2V	3.8TB 2.5in U.3 15mm Micron 7500 Hg Perf Med End 1X NVMe	NVMe	3.8 TB
HCI-NVB7T6M2V	7.6TB 2.5in U.3 15mm Micron 7500 Hg Perf Med End 1X NVMe	NVMe	7.6 TB
HCI-NVB12T8M2P	12.8TB 2.5in U.3 15mm Micron 7500 Hg Perf Hg End 3X NVMe	NVMe	12.8 TB
Boot Drive			
HCI-M2-480G	480GB M.2 SATA SSD	SATA	480GB
HCI-M2480OA1V	480GB M.2 Boot Solidigm S4520 SATA 1X SSD	SATA	480GB
HCI-M2-960G	960GB 2.5in M.2 SATA Micron G2 SSD	SATA	960GB
M.2 Raid controller (Internal)			
HCI-M2-HWRAID2	Cisco Boot optimized M.2 Raid controller for SATA drives		

Approved Configurations

- Three to ten capacity drives
- Two boot drives with M.2 Raid controller



NOTE:

- Dual M.2 SATA SSD with the HW RAID controller is the only supported boot configuration for this solution.
- It is recommended that M.2 SATA SSDs be used as boot-only devices.
- Order two identical M.2 SATA SSDs for the boot optimized RAID controller
- You cannot mix M.2 SATA SSD capacities.
- The Boot-Optimized RAID controller supports AHV Operating Systems.
- The SATA M.2 drives can boot in UEFI mode only. Legacy boot mode is not supported.
- CIMC is supported for configuring of volumes and monitoring of the controller and installed SATA M.2 drives

STEP 9 SELECT CISCO COMPUTE HYPERCONVERGED CONNECTIVITY (REQUIRED)

A. For Intersight Standalone Mode (IS Managed) - HCI Connectivity:

Golden Rule: Mixing VIC and NIC in same server/cluster is not supported.

The following connectivity options are available, if you select the Intersight Standalone Mode (IS Managed) from the **STEP 4 SELECT MANAGEMENT MODE (REQUIRED)**.

Select Connectivity

The available connectivity are listed in *Table 13*.

NOTE:

- Either Cisco VIC Connectivity (HCI-MLOM) **or** Third Party NIC Connectivity connectivity (HCI-PCIE) is mandatory for this solution.
- Use HCI-MLOM for VIC based connectivity and HCI-PCIE for NIC based connectivity.
- When HCI-MLOM is selected up to two additional VIC can be selected from the *Table 17*.
- When HCI-PCIE is selected up to two additional NIC can be selected from the table *Table 17*.

Table 13 Cisco Compute Hyperconverged Connectivity

Product ID (PID)	Description	Max cards available per node	Supported Configuration
HCI-MLOM	Cisco VIC Connectivity	1 MLOM VIC + 2 PCIe VIC	Select from MLOM VIC *Table 14* and additional VIC in the riser slot from the *Table 17*
HCI-PCIE	Third Party NIC Connectivity	3 dual port or 2 quad port in PCIe riser slot	Select NIC cards under riser from *Table 17*

The available cards for the MLOM connectivity are listed in *Table 14*.

Table 14 Available Cards for the Cisco Compute Hyperconverged MLOM Connectivity

Product ID (PID)	Description	Location	Card Size[1]
MLOM Cards			
HCI-M-V5Q50GV2	Cisco VIC 15427 4x 10/25/50G mLOM C-Series w/Secure Boot	mLOM	HHHL, SS

Notes:

1. HHHL = half-height, half-length; FHHL = full-height, half-length; SS = single-slot; DS = double-slot. SFF = small form factor.

B. For Intersight Managed Mode (IMM-Managed) - HCI Connectivity:

The following connectivity and cards options are available, if you select the Intersight Managed Mode from the **STEP 4 SELECT MANAGEMENT MODE (REQUIRED)**.

Select Connectivity

The available connectivity are listed in *Table 15*.

NOTE:

- HCI MLOM Connectivity (HCI-MLOM) is mandatory for this solution.
- Supported configuration maximum is Single MLOM + Single VIC (select VIC under the riser PCIe VIC card option from *Table 17*).

Table 15 Cisco Compute Hyperconverged Connectivity

Product ID (PID)	Description	Supported Configuration
HCI-MLOM	Cisco VIC Connectivity on mLOM	1 mLOM (Mandatory) (select from *Table 16*) + 1 PCIe VIC (optional) (select from *Table 17*)

The available cards for the Cisco Compute Hyperconverged MLOM are listed in *Table 16*

Table 16 Available Cards for the Cisco Compute Hyperconverged MLOM Connectivity

Product ID (PID)	Description	Location	Card Size[1]
MLOM Cards			
HCI-M-V5Q50GV2	Cisco VIC 15427 4x 10/25/50G mLOM C-Series w/Secure Boot	mLOM	HHHL, SS
HCI-M-V5D200GV2	Cisco VIC 15237 2x 40/100/200G mLOM C-Series w/Secure Boot	mLOM	HHHL, SS

Notes:

1. HHHL = half-height, half-length; FHHL = full-height, half-length; SS = single-slot; DS = double-slot. SFF = small form factor.

STEP 10 SELECT PCIe CARDS

For up-to-date server compatibility, please check the Hardware and Software compatibility list (HCL) at https://ucshcltool.cloudapps.cisco.com/public/.

The standard PCIe card offerings are:

- Virtual Interface Cards (VICs)
- Network Interface Cards (NICs)

NOTE:

- PCIe cards are optional if mLOM is already populated
- Supported configuration maximum is Single MLOM + Single VIC for IMM
- There is no support of NIC cards in IMM mode.

Select Option Cards

The available PCIe cards are listed in *Table 17*

Table 17 Available PCIe Option Cards

Product ID (PID)	PID Description	Location	Card Size[1]	Supported Management Mode
Virtual Interface Cards (VICs)				
HCI-P-V5Q50G	Cisco UCS VIC 15425 Quad Port 10/25/50G CNA PCIE	Riser 1A (slot 2) or Riser 3A (slot 3)	HHHL, SS	All Management modes (ISM & IMM)
HCI-P-V5D200G	Cisco VIC 15235 2x 40/100/200G PCIe C-Series w/Secure Boot	Riser 1A (slot 2) or Riser 3A (slot 3)	HHHL, SS	All Management modes (ISM & IMM)
Network Interface Cards (NICs)				
10 GbE NICs				
HCI-P-ID10GC	Cisco-Intel X710T2LG 2x10 GbE RJ45 PCIe NIC	Riser 1, 2, or 3	HHHL, SS	Intersight Standalone mode Only (ISM)
HCI-P-IQ10GC	Cisco-Intel X710T4LG 4x10 GbE RJ45 PCIe NIC	Riser 1, 2, or 3	HHHL, SS	Intersight Standalone mode Only (ISM)
25GbE NICs				
HCI-P-I8D25GF[2]	Cisco-Intel E810XXVDA2 2x25/10GBE SFP28 PCIe NIC	Riser 1A (slot 1 or 2) and Riser 2A (slot 2), Riser 3A (slot 3)	HHHL, SS	Intersight Standalone mode Only (ISM)
HCI-P-I8Q25GF[2]	Cisco-Intel E810XXVDA4L 4x25/10GBE SFP28 PCIe NIC	Riser 1C or 3C	FHHL, SS	Intersight Standalone mode Only (ISM)

Notes:

1. HHHL = half-height, half-length; FHHL = full-height, half-length; SS = single-slot; DS = double-slot. SFF = small form factor.
2. When present, the recommended Fan Speed Control policy setting is balanced.

Approved Configurations

- 1-CPU systems:
  - All risers (Risers 1, 2, and 3) are supported

SELECT OPTIONAL PCIe OPTION CARD ACCESSORIES

- At the time of first launch, the 3rd Party Ethernet adapters were tested for interoperability with an initial selection of Optical Modules and Cables. Please check the Product Briefs for this initial list of interoperable optics and cables at https://www.cisco.com/c/en/us/products/servers-unified-computing/third-party-adapters-listing.html.
- For list of supported optics and cables for VIC 15000 series , refer to the VIC 15000 series data sheet at https://www.cisco.com/c/en/us/products/collateral/interfaces-modules/unified-computing-system-adapters/ucs-vic-15000-series-ds.html
  - Cisco Transceiver Module Group (TMG) conducts tests with Cisco optics and cables and publishes the results in the TMG Compatibility Matrix. The latest compatibility with optical modules and DACs can be found at https://tmgmatrix.cisco.com/

STEP 11 SELECT GPU CARDS (OPTIONAL)

Select GPU Options

The available GPU PCIe options are listed in *Table 18*.

Table 18 Available PCIe GPU Cards[1]

Product ID (PID)	PID Description	Card Size	Maximum cards Per node	Riser Compatibility
HCI-GPU-L4	NVIDIA L4:70W, 24GB, 1-slot HHHL GPU	HHHL, single-wide	3	All Risers

Notes:

1. Refer to installation guide for the more details.



NOTE:

- All GPU cards must be procured from Cisco as there is a unique SBIOS ID required by CIMC and UCSM
- GPUs cannot be mixed.

STEP 12 SELECT POWER SUPPLY (REQUIRED)

Power supplies share a common electrical and physical design that allows for hot-plug and tool-less installation into M8 C-series servers. Each power supply is certified for high-efficiency operation and offers multiple power output options. This allows users to “right-size” based on server configuration, which improves power efficiency, lowers overall energy costs and avoids stranded capacity in the data center.

Use the power calculator at the following link to determine the needed power based on the options chosen (CPUs, drives, memory, and so on):

http://ucspowercalc.cisco.com



WARNING:

- Starting 1st January 2024, only Titanium rated PSUs are allowed to be shipped to European Union (EU), European Economic Area (EEA), United Kingdom (UK), Switzerland and other countries that adopted Lot 9 Regulation.
- DC PSUs are not impacted by Lot 9 Regulation and are EU/UK Lot 9 compliant

Table 19 Power Supply

Product ID (PID)	PID Description
PSU (Input High Line 210VAC)	
HCI-PSU1-1200W	1200W Titanium power supply for C-Series Servers
HCI-PSUV21050D	Cisco UCS 1050W -48V DC Power Supply for Rack Server
HCI-PSU1-1600W	UCS 1600W AC PSU Platinum (Not EU/UK Lot 9 Compliant)
HCI-PSU1-2300W	Cisco UCS 2300W AC Power Supply for Rack Servers Titanium
PSU (Input Low Line 110VAC)	
HCI-PSU1-1200W	1200W Titanium power supply for C-Series Servers **Titanium**
HCI-PSU1-2300W	2300W Power supply for C-series servers **Titanium**



NOTE:

- In a server with two power supplies, both power supplies must be identical.
- Refer to **Power Specifications, page 157** section for the full details on the each power supply.

STEP 13 SELECT INPUT POWER CORD(s) (REQUIRED)

Using *Table 20* and *Table 21*, select the appropriate AC power cords. You can select a minimum of no power cords and a maximum of two. If you select the option R2XX-DMYMPWRCORD, no power cord is shipped with the server.

NOTE: *Table 20* lists the power cords for servers that use power supplies less than 2300 W. *Table 21* lists the power cords for servers that use 2300 W power supplies. Note that the power cords for 2300 W power supplies use a C19 connector so they only fit the 2300 W power supply connector.

Table 20 Available Power Cords (for server PSUs less than 2300 W)

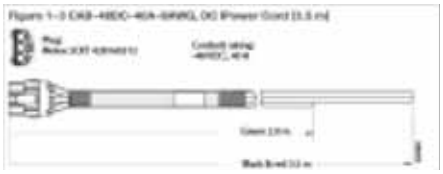
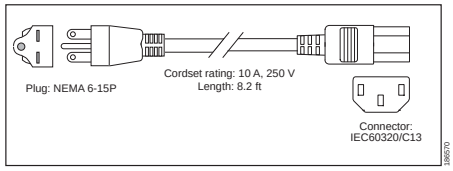
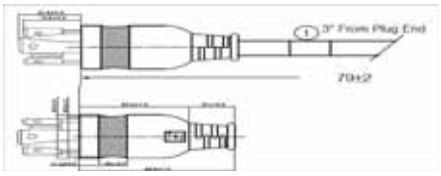
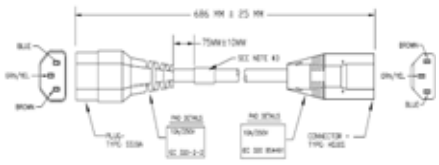
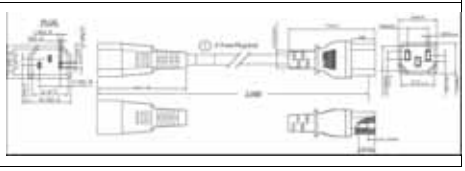
Product ID (PID)	PID Description	Images
NO-POWER-CORD	ECO friendly green option, no power cable will be shipped	
CAB-48DC-40A-8AWG	C-Series -48VDC PSU Power Cord, 3.5M, 3 Wire, 8AWG, 40A	
CAB-N5K6A-NA	Power Cord, 200/240V 6A, North America	
CAB-AC-L620-C13	AC Power Cord, NEMA L6-20 - C13, 2M/6.5ft	
CAB-C13-CBN	CABASY,WIRE,JUMPER CORD, 27" L, C13/C14, 10A/250V	
CAB-C13-C14-2M	CABASY,WIRE,JUMPER CORD, PWR, 2 Meter, C13/C14,10A/250V	

Table 20 Available Power Cords (for server PSUs less than 2300 W)

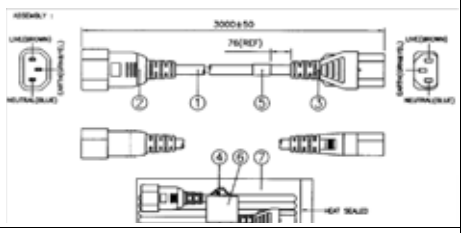
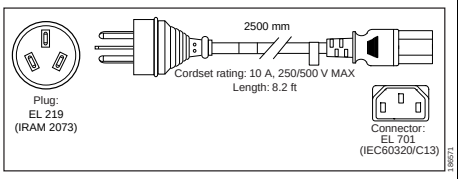
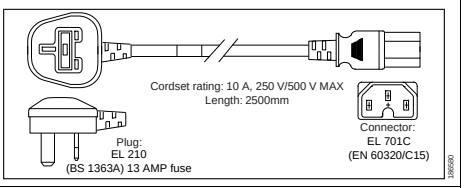

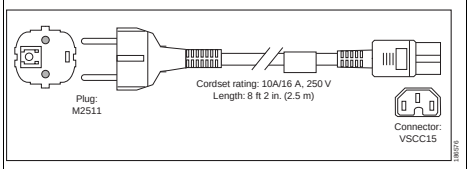
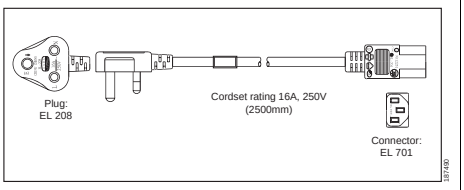
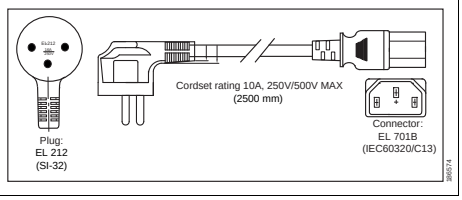
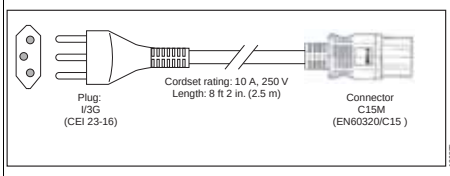
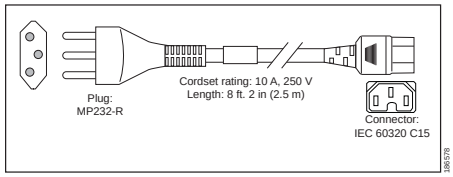
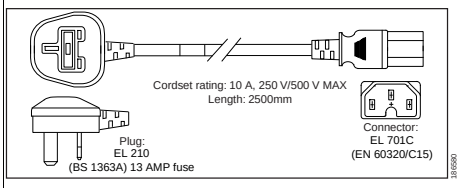
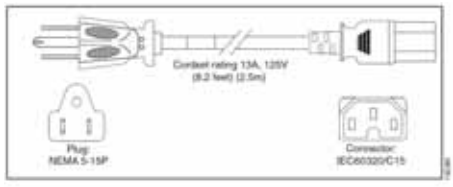
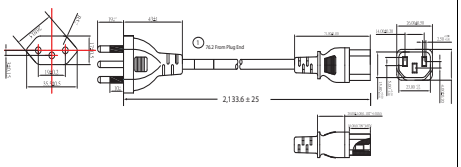
Product ID (PID)	PID Description	Images
CAB-C13-C14-AC	CORD,PWR,JMP,IEC60320/C14,IEC60320/C13, 3.0M	
CAB-250V-10A-AR	Power Cord, 250V, 10A, Argentina	
CAB-9K10A-AU	Power Cord, 250VAC 10A 3112 Plug, Australia	
CAB-250V-10A-CN	AC Power Cord - 250V, 10A - PRC	
CAB-9K10A-EU	Power Cord, 250VAC 10A CEE 7/7 Plug, EU	
CAB-250V-10A-ID	Power Cord, 250V, 10A, India	
CAB-C13-C14-3M-IN	Power Cord Jumper, C13-C14 Connectors, 3 Meter Length, India	Image not available
CAB-C13-C14-IN	Power Cord Jumper,C13-C14 Connectors,1.4 Meter Length, India	Image not available
CAB-250V-10A-IS	Power Cord, SFS, 250V, 10A, Israel	

Table 20 Available Power Cords (for server PSUs less than 2300 W)

Product ID (PID)	PID Description	Images
CAB-9K10A-IT	Power Cord, 250VAC 10A CEI 23-16/VII Plug, Italy	
CAB-9K10A-SW	Power Cord, 250VAC 10A MP232 Plug, Switzerland	
CAB-9K10A-UK	Power Cord, 250VAC 10A BS1363 Plug (13 A fuse), UK	
CAB-9K12A-NA[1]	Power Cord, 125VAC 13A NEMA 5-15 Plug, North America	
CAB-250V-10A-BR	Power Cord - 250V, 10A - Brazil	
CAB-C13-C14-2M-JP	Power Cord C13-C14, 2M/6.5ft Japan PSE mark	Image not available
CAB-9K10A-KOR[1]	Power Cord, 125VAC 13A KSC8305 Plug, Korea	Image not available
CAB-ACTW	AC Power Cord (Taiwan), C13, EL 302, 2.3M	Image not available
CAB-JPN-3PIN	Japan, 90-125VAC 12A NEMA 5-15 Plug, 2.4m	Image not available
CAB-48DC-40A-INT	C-Series -48VDC PSU PWR Cord, 3.5M, 3 Wire, 8AWG, 40A (INT)	Image not available
CAB-48DC-40A-AS	C-Series -48VDC PSU PWR Cord, 3.5M, 3Wire, 8AWG, 40A (AS/NZ)	Image not available

Notes:

1. This power cord is rated to 125V and only supported for PSU rated at 1050W or less

Table 21 Available Power Cords (for servers with 2300 W PSUs)

Product ID (PID)	PID Description	Images
CAB-C19-CBN	Cabinet Jumper Power Cord, 250 VAC 16A, C20-C19 Connectors	Not applicable
CAB-S132-C19-ISRL	S132 to IEC-C19 14ft Israeli	Image not available
CAB-IR2073-C19-AR	IRSM 2073 to IEC-C19 14ft Argen	Image not available
CAB-BS1363-C19-UK	BS-1363 to IEC-C19 14ft UK	Image not available
CAB-SABS-C19-IND	SABS 164-1 to IEC-C19 India	Image not available
CAB-C2316-C19-IT	CEI 23-16 to IEC-C19 14ft Italy	Image not available
CAB-US515P-C19-US	NEMA 5-15 to IEC-C19 13ft US	Image not available
CAB-US520-C19-US	NEMA 5-20 to IEC-C19 14ft US	Image not available
CAB-US620P-C19-US	NEMA 6-20 to IEC-C19 13ft US	Image not available
NO-POWER-CORD	ECO friendly green option, no power cable will be shipped	Image not available

STEP 14 SELECT TOOL-LESS RAIL KIT (REQUIRED) AND REVERSIBLE CABLE MANAGEMENT ARM (OPTIONAL)

- Tool-less Rail Kit:

Select a tool-less rail kit (or no rail kit) from *Table 22*.

NOTE:

- Cisco recommends a minimum quantity of 1 Rail Kit
- If you plan to rackmount your server, you must order a tool-less rail kit.

Table 22 Tool-less Rail Kit Options

Product ID (PID)	PID Description
HCI-RAIL-M7	Ball Bearing Rail Kit for M8 rack servers
HCI-RAIL-NONE	No rail kit option

- Optional Reversible Cable Management Arm:

The reversible cable management arm mounts on either the right or left slide rails at the rear of the server and is used for cable management. Select an Optional Reversible Cable Management Arm from *Table 23*.

NOTE: If you plan to rackmount your server, you must order a tool-less rail kit. The same rail kits and CMAs are used for M6 and M7 servers.

Table 23 Cable Management Arm

Product ID (PID)	PID Description
HCI-CMA-C220M7	Reversible CMA for M8 ball bearing rail kit

For more information about the tool-less rail kit and cable management arm, check the *C225 M8 Installation Guide*.

STEP 15 SELECT SECURITY DEVICES (REQUIRED)

A Trusted Platform Module (TPM) is a computer chip (microcontroller) that can securely store artifacts used to authenticate the platform (server). These artifacts can include passwords, certificates, or encryption keys. A TPM can also be used to store platform measurements that help ensure that the platform remains trustworthy. Authentication (ensuring that the platform can prove that it is what it claims to be) and attestation (a process helping to prove that a platform is trustworthy and has not been breached) are necessary steps to ensure safer computing in all environments.

A chassis intrusion switch gives a notification of any unauthorized mechanical access into the server.

The security device ordering information is listed in *Table 24*.



NOTE:

- The TPM module used in this system conforms to TPM 2.0, as defined by the Trusted Computing Group (TCG). It is also SPI-based.
- TPM installation is supported after-factory. However, a TPM installs with a one-way screw and cannot be replaced, upgraded, or moved to another server. If a server with a TPM is returned, the replacement server must be ordered with a new TPM.

Table 24 Security Devices

Product ID (PID)	PID Description
HCI-TPM-002D	TPM 2.0 FIPS 140-2 MSW2022 compliant AMD M8 servers
HCI-TPM-OPT-OUT	OPT OUT, TPM 2.0, TCG, FIPS140-2, CC EAL4+ Certified[1]
HCI-INT-SW02	M8 Chassis Intrusion Switch

Notes:

1. Please note that Microsoft certification requires a TPM 2.0 for bare-metal or guest VM deployments. Opt-out of the TPM 2.0 voids the Microsoft certification

STEP 16 SELECT LOCKING SECURITY BEZEL (OPTIONAL)

An optional locking bezel can be mounted to the front of the chassis to prevent unauthorized access to the drives.

Select the locking bezel from *Table 25*.

Table 25 Locking Bezel Option

Product ID (PID)	Description
UCSC-BZL-C220-D	C220 M8 Security Bezel

STEP 17 SELECT MANAGEMENT CONFIGURATION (OPTIONAL)

By default, the server NIC mode is configured to be Shared LOM Extended. This NIC mode allows any LOM port or adapter card port to be used to access the Cisco Integrated Management Controller (CIMC). The Cisco VIC card must be installed in a slot with NCSI support.



NOTE:

- There are no LOM ports on the 220 and 240 M8 servers. Servers ordered without a VIC or OCP card will ship in Dedicated network mode, unless otherwise specified by a configurable SW PID **(UCSC-CCARD-01)**
- For full details on all the NIC mode settings, see

https://www.cisco.com/c/en/us/td/docs/unified_computing/ucs/c/hw/C220M8/install/b-c220-m8-installation-guide.html

Table 26 Management Configuration Ordering Information

Product ID (PID)	PID Description
UCSC-DLOM-01-D	Dedicated Mode BIOS setting for C-Series Servers ■ To change the default NIC mode to Dedicated NIC mode, select this card. ■ In Dedicated NIC mode, the CIMC can be accessed only through the dedicated management port.
UCSC-CCARD-01-D	Cisco Card Mode BIOS setting for C-Series Servers ■ To change the default NIC mode to Cisco Card Mode, select this card. ■ If Cisco card selected, a VIC or MLOM must also be included in the configuration. if OCP card is included in the configuration, a VIC card must be selected. ■ In this mode, you can assign an IP address to the CIMC using DHCP and from there you can fully automate your deployment.

STEP 18 SELECT HYPERVISOR

Cisco Hypervisor options are listed in *Table 27*.

Table 27 Hypervisor

Product ID (PID)	PID Description
HCI-AOSAHV-73-SWK9	Cisco Compute Hyperconverged Acropolis Operating System (AOS) Acropolis Hypervisor (AHV) 7.3 Software
HCI-AOSAHV-75-SWK9	Cisco Compute Hyperconverged Acropolis Operating System (AOS) Acropolis Hypervisor (AHV) 7.5 Software
HCI-AOSAHV-NO-OS	HCI AOS AHV No OS Factory Install-Special Approval Required



NOTE:

- This solution supports AHV hypervisor option.
- For ISM and IMM deployments bare metal imaging can be performed through Prism Central.

CONFIGURING THE CISCO COMPUTE-ONLY (CO) NODE SERVER

Cisco Compute-Only (CO) nodes serve two purposes: expanding hyperconverged node or connecting to external storage like Everpure Flash Array

A) Expanding Cisco Compute Hyperconverged node cluster with Compute-Only (CO) node:

Cisco's Compute-Only (CO) node solution enables you to expand the compute resources of Cisco Hyperconverged cluster running Nutanix by adding UCS certified servers without additional storage. These storage-less, Cisco certified Compute-Only (CO) servers integrate seamlessly into your existing or new hyperconverged Nutanix cluster, allowing organizations to efficiently support CPU-intensive applications by scaling processing resources independently of storage infrastructure.

Key benefits:

- Cost-effective scaling for compute-heavy workloads
- Flexibility in cluster design

Table 28 Minimum Cluster Requirements For Compute-Only (CO) Nodes

Cluster Attributes	Hyperconverged node with Compute-Only (CO) node
Number of nodes	Minimum 3 HCI nodes and minimum 2 CO nodes
Nodes Ratio	Nutanix recommends the following nodes ratio: ■ 1 CO : 2 HCI (Default) ■ 1 CO : 1 HCI (This is supported only when the total number of VMs is less than or equal to 128 times the number of HCI nodes) For more information about the minimum cluster requirements, please refer to the following Nutanix Documentation
Hypervisor specification	■ Hyperconverged Node: AHV only ■ Compute-Only (CO) Node: AHV only
Licensing: Expanding Cisco HCI cluster with Compute-Only (CO) nodes	■ NCI licenses on a per-core basis ■ For more information about NCI licenses, see NCI section in Nutanix Cloud Platform Software Options
Nutanix Cloud Platform Software	Same as Cisco Compute Hyperconverged with Nutanix.

Delivering performance, versatility and density without compromise, the Cisco Compute-Only (CO) Node addresses the broadest set of workloads.

B) Cisco Compute-Only (CO) node connected to Everpure Flash Array (Flashstack with Nutanix)

Everpure® FlashArray//X™ and FlashArray//XL™ delivers mission-critical performance with the efficiency and resiliency that's missing from legacy arrays. FlashArray //X and FlashArray//XL™ packs more IOPS, ultra consistent latency, and greater scale into a smaller footprint. Non-disruptive upgrades, always-on availability, and built-in data protection ensure workloads are always running while cutting risk. FlashArray//XL is designed to provide the highest performance density with a level of operational and management simplicity. FlashArray//C™ delivers a balanced all-flash storage solution optimized for file services and general-purpose workloads. With predictable performance, streamlined operations, and

built-in cyber resiliency, it keeps applications consistently secure and positions organizations to outperform capacity-optimized, all-flash, and hybrid storage alternatives.

Nutanix Cloud Platform (NCP) consolidates computing, storage, and networking into a unified pool. It uses AOS for storage, AHV for virtualization, and Prism Central for centralized management across environments.

The Cisco Compute-Only (CO) node with Nutanix Cloud Platform (NCP) and Everpure FlashArray solution delivers a disaggregated infrastructure architecture that enables independent scaling of compute and storage resources. This solution combines industry-standard Cisco Compute-Only (CO) node servers running Nutanix AHV and AOS connected to external Everpure. The FlashStack solution with Nutanix integration provides organizations with the agility to adapt infrastructure resources dynamically while maintaining enterprise-level reliability and performance.

Key Benefits:

- Independent Scalability: Scale compute and storage resources separately based on workload demands
- Enterprise-Grade Protection: Built-in data protection and disaster recovery capabilities
- Hybrid Cloud Ready: Seamlessly extend operations across on-premises and cloud environments

Investment protection – enables using Nutanix Cloud Platform with existing storage.

Table 29 Minimum Cluster Requirements For Compute-Only (CO) Nodes

Attributes	Cisco Compute-Only (CO) node connected to Everpure FlashArray
Cisco Compute-Only (CO) nodes.	Nutanix Foundation allocates the following minimum resources to the CVM: (Dependent on AOS version) ■ CVM logical cores: 12 ■ CPU physical cores per Socket: 12 **NOTE:** For AOS releases earlier than version 7.6: CVM logical cores: 16, CPU physical cores per socket: 16 ■ vRAM (in GiB): 32 For additional information, please refer to the following Nutanix documentations: Configuration Maximums and Minimums for NCP with Everpure FlashArray Requirements for NCI Compute Cluster Setup (Please leverage Nutanix Sizer for all customer workload sizing.) ■ M.2 boot drives with M.2 RAID controller (A minimum 480GB is recommended) ■ Storage protocol: NVMe over Fabric (NVMeoF) over TCP ■ 25Gb Ethernet network connection recommended between Cisco Nutanix Compute cluster and Everpure FlashArray (10Gb will be supported) ■ Minimum 3 CO nodes
Hypervisor	AHV only
Management	■ Intersight Management Mode (IMM) ■ Intersight Standalone Mode (ISM)

Table 29 Minimum Cluster Requirements For Compute-Only (CO) Nodes

Attributes	Cisco Compute-Only (CO) node connected to Everpure FlashArray
Everpure	FlashArray //X, FlashArray //XL, and FlashArray //C
Nutanix Cloud Platform Software	Supported Nutanix Software: ■ Nutanix Cloud Infrastructure (NCI) ■ Nutanix Cloud Manager (NCM) ■ Nutanix Cloud Platform (NCP) ■ Nutanix Kubernetes Platform (NKP)
Licensing:	■ Nutanix Cloud Infrastructure (NCI) licenses on a per-core basis. ■ 1,000 cores for Canada, Zone 2 USA: USA Enterprise (East, West, North), USA Federal and USA Healthcare ■ 300 cores for the rest of the world. Japan, APAC ex Japan, EMEA, LATAM, Zone 1 USA: US Commercial, US SLED, US Channel LedFor more information about NCI licenses, see NCI section in Nutanix Cloud Platform Software Options



WARNING: Cisco Compute-Only (CO) nodes connected to Everpure Flash Array do not support Virtual Desktop Infrastructure (VDI) solution

Cisco Compute-Only 225c M8 NVMe Nutanix Node features a 1U form factor with a single-socket design, harnessing the power of 5th Gen. AMD EPYC™ processors, and refer to the **BASE SERVER STANDARD CAPABILITIES and FEATURES, page 14**.

Follow these steps to configure the server:

- **STEP 1 VERIFY SERVER SKU, page 48**
- **STEP 2 AI INTENT (OPTIONAL), page 49**
- **STEP 3 USE CASE INTENT (REQUIRED), page 50**
- **STEP 4 SELECT MANAGEMENT MODE (REQUIRED), page 51**
- **STEP 5 SELECT RISERS, page 53**
- **STEP 6 SELECT CPU(s), page 54**
- **STEP 7 SELECT MEMORY (REQUIRED), page 56**
- **STEP 8 SELECT M.2 DRIVES (REQUIRED), page 58**
- **STEP 9 SELECT CISCO COMPUTE CONNECTIVITY (REQUIRED), page 60**
- **STEP 10 SELECT PCIe CARDS, page 62**
- **STEP 11 SELECT GPU CARDS (OPTIONAL), page 63**
- **STEP 12 SELECT POWER SUPPLY (REQUIRED), page 64**
- **STEP 13 SELECT INPUT POWER CORD(s) (REQUIRED), page 65**
- **STEP 14 SELECT TOOL-LESS RAIL KIT (REQUIRED) AND REVERSIBLE CABLE MANAGEMENT ARM (OPTIONAL), page 69**
- **STEP 13 SELECT INPUT POWER CORD(s) (REQUIRED), page 65**

- **STEP 14 SELECT TOOL-LESS RAIL KIT (REQUIRED) AND REVERSIBLE CABLE MANAGEMENT ARM (OPTIONAL), page 69**
- **STEP 15 SELECT SECURITY DEVICES (REQUIRED), page 70**
- **STEP 16 SELECT LOCKING SECURITY BEZEL (OPTIONAL), page 71**
- **STEP 17 SELECT MANAGEMENT CONFIGURATION (OPTIONAL), page 72**
- *SELECT NUTANIX SOFTWARE AND NUTANIX PROFESSIONAL SERVICES, page 73*
- *SELECT CISCO INTERSIGHT, page 148*

STEP 1 VERIFY SERVER SKU

Top level ordering product ID (PID) is shown in *Table 30*

Table 30 Top level ordering PID (major line bundle)

Product ID (PID)	Description
HCI-M8-NTNX-MLB	Cisco Compute Hyperconverged and Compute-Only M8 with Nutanix MLB

Select server product ID (PID) from *Table 31*.



CAUTION: This products may not be purchased outside of the approved bundles. (must be ordered under the MLB)

Table 31 PID of The Base Server

Product ID (PID)	Description
HCONX225C-M8SN	Cisco Compute Only 225cM8 NVMe Nutanix Node

The Cisco HCONX225C M8 Compute-Only (CO) node server:

- Includes a 10 small form factor drive backplane.
- Does not include power supply, CPU, memory, M.2 drives, SD cards, riser 1, riser 2, riser 3, tool-less rail kit, or PCIe cards.
- Use the steps on the following pages to configure the server with the components that you want to include.

STEP 2 AI INTENT (OPTIONAL)

Select AI Intent

- The available AI Intent options are listed in *Table 32*.

Table 32 AI Intent

Product ID (PID)	Description
COMPUTE-AI	Compute Artificial Intelligence Use Case
COMPUTE-OTHER	Compute Other Use Case

STEP 3 USE CASE INTENT (REQUIRED)

Select Use Case Intent

- The available use case intent are listed in *Table 33*.

Table 33 Use Case Intent

Product ID (PID)	Description
NTNX-HCI	Nutanix HCI Use Case/ Nutanix HCI + CO Use Case
NTNX-Everpure	Use case of Compute Node with Everpure Storage (FlashStack)

STEP 4 SELECT MANAGEMENT MODE (REQUIRED)

The available management modes are listed in *Table 34*.

Table 34 Management Modes

Product ID (PID)	Description
HCI-IS-MANAGED	Deployment mode for Standalone Server Managed by Intersight (ISM)
HCI-IMM-MANAGED	Deployment mode for Server and FI Managed by Intersight (IMM)



NOTE:

- HCO deployment with standalone servers that are intersight managed (HCI-IS-MANAGED):
  - This deployment option allows server nodes to be directly connected to existing Top of Rack (ToR) switches without the need for a pair of UCS Fabric Interconnects. The installation for this type of deployment must need foundation central and Intersight.
  - If this deployment mode is selected, then either HCI-MLOM or HCI-PCIE connectivity mode must be selected from **STEP 9 SELECT CISCO COMPUTE CONNECTIVITY (REQUIRED), page 60** and additional cards should be selected from **STEP 10 SELECT PCIe CARDS, page 62**
- HCO deployment with servers and FI both managed by Intersight (HCI-IMM-MANAGED)
  - This deployment option connects the server to Cisco Fabric Interconnects operating in Intersight managed mode (IMM). The installation for this type of deployment is performed using foundation central and Intersight
  - UCS 4th/5th/6th generation fabric interconnects (6454, 64108, 6536, 6664) are supported with this solution.
  - HCIX modular server nodes can be mixed with HCI nodes when operating in this mode. They must all be connected to the same pair of FI.
  - If this deployment mode is selected, then HCI-MLOM from HCI connectivity mode must be selected from **STEP 9 SELECT CISCO COMPUTE CONNECTIVITY (REQUIRED), page 60** and additional cards should be selected from **STEP 10 SELECT PCIe CARDS, page 62**

Cluster Scale and Limits

Table 35 Hyperconverged (HCI) Node With Compute-only (CO) Node Cluster Scale And Limits

Scale	Limit	
	Intersight Managed (IMM)	Intersight Standalone (ISM)
Min. Cluster Size	1	1
Max. Cluster Size	32	32
Initial cluster deployment /Node preparation for expansion	16	16
Cluster expansion	8 at a time	8 at a time
Number of parallel deployments in FC	32	32

Table 36 Cisco Compute-Only (CO) Node Connected To Everpure Flasharray Cluster Scale And Limits

Cisco Compute-Only (CO) node connected to Everpure FlashArray	Limit	
	Intersight Managed (IMM)	Intersight Standalone (ISM)
Min. Cluster Size	3 Compute-Only nodes	3 Compute-Only nodes
Max. Cluster Size	32	32
Initial cluster deployment /Node preparation for expansion	16	16
Cluster expansion	8 at a time	8 at a time
Number of parallel deployments in FC	32	32

STEP 5 SELECT RISERS

The riser PIDs are listed in *Table 37*.



CAUTION:

- Full-height risers cannot be mixed with half-height risers.
- Gen4 and Gen5 risers cannot be mixed.

Table 37 PIDs of the Risers and Riser Blanks

Product ID (PID)	Description
Riser 1 Option	
HCI-RIS1A-225M8	UCS C-Series M8 1U Riser 1A PCIe **Gen4** x16 HH ■ Half-height riser 1 ■ One x16 PCIe Gen4 riser, standard PCIe, supports Cisco VIC, half-height, 3/4 length
HCI-RIS1B-225M8	UCS C-Series M8 1U Riser 1B PCIe **Gen5** x16 HH ■ Half-height riser 1 ■ One x16 PCIe Gen5 riser, standard PCIe, supports Cisco VIC, half-height, 3/4 length
HCI-RIS1C-225M8	UCS C-Series M8 1U Riser 1C PCIe **Gen5** x16 FH ■ Full-height riser 1 ■ One x16 PCIe Gen5 riser, standard PCIe, supports Cisco VIC, full-height, 3/4 length
Riser 2 Option	
HCI-RIS2A-225M8	UCS C-Series M8 1U Riser 2A PCIe **Gen4** x16 HH ■ Half-height riser 2 ■ One x16 PCIe Gen4 riser, standard PCIe, half-height, 3/4 length
HCI-RIS2B-225M8	UCS C-Series M8 1U Riser 2B PCIe **Gen5** x16 HH ■ Half-height riser 2 ■ One x16 PCIe Gen5 riser, standard PCIe, half-height, 3/4 length
Riser 3 Option	
HCI-RIS3A-225M8	UCS C-Series M8 1U Riser 3A PCIe **Gen4** x16 HH ■ Half-height riser 3 ■ One x16 PCIe Gen4 riser, standard PCIe, supports Cisco VIC, half-height, 3/4 length
HCI-RIS3C-225M8	UCS C-Series M8 1U Riser 3C PCIe **Gen5** x16 FH ■ Full-height riser 3 ■ One x16 PCIe Gen5 riser, standard PCIe, supports Cisco VIC, full-height, 3/4 length
Accessories/spare included along with selected risers: ■ UCSC-FBRS2-C225M8 for riser 2 and UCSC-FBRS-C220-D riser filler blank for riser 3 is auto included, if riser 2 or riser 3 are not selected. UCSC-FBRSF-225M8 is auto included if only one full height riser is selected	

STEP 6 SELECT CPU(s)

- Single socket configuration
- CPU-to-CPU communication using Infinity Fabric Interconnect
- Cache size of up to 512 MB
- Up to 160 cores
- Power: Up to 400Watts

Select CPUs

CAUTION: For systems configured with processors operating above 28º C [82.4º F], a fan fault or executing workloads with extensive use of heavy instructions sets may assert thermal and/or performance faults with an associated event recorded in the System Event Log (SEL).

Table 38 Available 5th Gen EPYC 9005 Series Processors

Product ID (PID)	Maximum Socket	Core	CPU Base Frequency	CPU Boost Frequency	Default TDP	Cache Size	Highest DDR5 DIMM Clock
	(S)	(C)	(GHz)	(GHz)	(W)	(MB)	(MT/s)[1]
HCI-CPU-A9845	1S	160	2.10	3.70	390	320	6000
HCI-CPU-A9825	1S	144	2.20	3.70	390	384	6000
HCI-CPU-A9745	1S	128	2.40	3.70	400	256	6000
HCI-CPU-A9655[2]	1S	96	2.60	4.50	400	384	6000
HCI-CPU-A9645	1S	96	2.30	3.70	320	256	6000
HCI-CPU-A9565[2]	1S	72	3.15	4.30	400	384	6000
HCI-CPU-A9555[2]	1S	64	3.20	4.40	360	256	6000
HCI-CPU-A9535	1S	64	2.40	4.30	300	256	6000
HCI-CPU-A9455	1S	48	3.15	4.40	300	256	6000
HCI-CPU-A9365	1S	36	3.40	4.30	300	192	6000
HCI-CPU-A9355	1S	32	3.55	4.40	280	256	6000
HCI-CPU-A9335	1S	32	3.00	4.40	210	128	6000
HCI-CPU-A9255	1S	24	3.20	4.30	200	128	6000
HCI-CPU-A9135	1S	16	3.65	4.30	200	64	6000
HCI-CPU-A9115	1S	16	2.60	4.10	125	64	6000
HCI-CPU-A9575F	1S	64	3.30	5.00	400	256	6000
HCI-CPU-A9475F	1S	48	3.65	4.80	400	256	6000
HCI-CPU-A9375F	1S	32	3.80	4.80	320	256	6000
HCI-CPU-A9275F	1S	24	4.10	4.80	320	256	6000
HCI-CPU-A9175F	1S	16	4.20	5.00	320	512	6000

Table 38 Available 5th Gen EPYC 9005 Series Processors

Product ID (PID)	Maximum Socket	Core	CPU Base Frequency	CPU Boost Frequency	Default TDP	Cache Size	Highest DDR5 DIMM Clock
	(S)	(C)	(GHz)	(GHz)	(W)	(MB)	(MT/s)[1]
HCI-CPU-A9655P	1S	96	2.60	4.50	400	384	6000
HCI-CPU-A9555P	1S	64	3.20	4.40	360	256	6000
HCI-CPU-A9455P	1S	48	3.15	4.40	300	256	6000
HCI-CPU-A9355P	1S	32	3.55	4.40	280	256	6000

Notes:

1. If higher or lower speed DIMMs are selected than what is shown in *Table 40 on page 57* for a given CPU speed, the DIMMs will be clocked at the lowest common denominator of CPU clock and DIMM clock.
2. SKU available in Q2 2025


STEP 7 SELECT MEMORY (REQUIRED)

The *Table 39* below describes the main memory DIMM features supported on server.

Table 39 Server Main Memory Features

Memory DIMM server technologies	Description
DDR5 memory clock speed	Up to 6000 MT/s 1DPC
Operational voltage	1.1 Volts
DRAM fab density	16Gb, 24Gb, and 32Gb
DRAM DIMM type	RDIMM (Registered DDR5 DIMM)
Memory DIMM organization	Twelve memory DIMM channels per CPU; 1 DIMM per channel only
Maximum number of DRAM DIMM per server	Up to 12 (1-Socket)
DRAM DIMM Densities and Ranks	16GB 1Rx8, 32GB 1Rx4, 64GB 2Rx4, 96GB 2Rx4, 128GB 2Rx4, 256GB 4Rx4
Maximum system capacity (DRAM DIMMs only)	3TB (12x256GB)

Figure 6 12-Channel Memory Organization

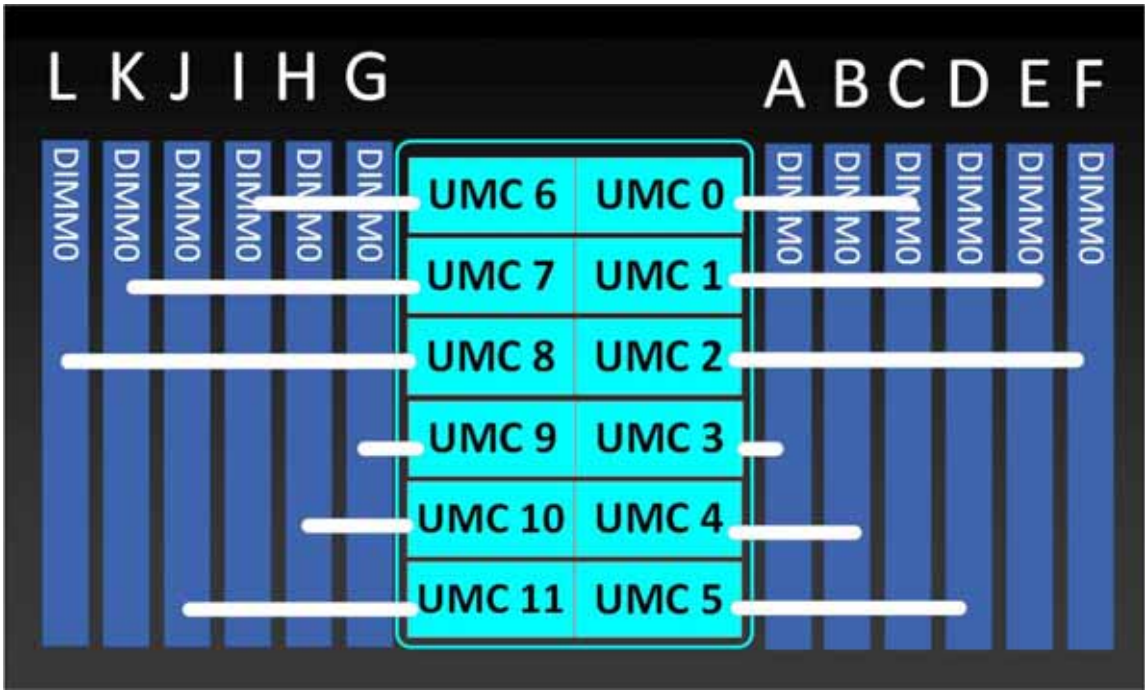

Select DIMMs

The supported memory DIMMs are listed in *Table 40*.

NOTE: All memory DIMMs must be Cisco DDR5-6400 memory PIDs, although the memory will operate at the maximum speed of the 5th Gen. AMD EPYC™ CPUs memory controller, up to 6000 MT/s.

Table 40 Available DDR5 DIMMs

Product ID (PID)	PID Description	Ranks/DIMM
DDR5-6400 MT/s PIDs list[1]		
HCI-MRX16G1RE5	16GB DDR5-6400 RDIMM 1Rx4 (16Gb)	1
HCI-MRX32G1RE5	32GB DDR5-6400 RDIMM 1Rx4 (16Gb)	1
HCI-MRX32G2RE5	32GB DDR5-6400 RDIMM 2Rx8 (16Gb)	2
HCI-MRX64G2RE5	64GB DDR5-6400 RDIMM 2Rx4 (16Gb)	2
HCI-MRX96G2RF5	96GB DDR5-6400 RDIMM 2Rx4 (24Gb)	2
HCI-MR128G2RG5	128GB DDR5-6400 RDIMM 2Rx4 (32Gb)	2
HCI-MR256G4RG5	256GB DDR5-6400 RDIMM 4Rx4 (32Gb)	4
DIMM Blank[2]		
UCS-DDR5-BLK	UCS DDR5 DIMM Blanks	

Notes:

1. If higher or lower speed DIMMs are selected than for a given CPU speed, the DIMMs will be clocked at the lowest common denominator of CPU clock and DIMM clock. check the *Table 9* column **"Highest DDR5 DIMM Clock Support"**
2. Any empty DIMM slot must be populated with a DIMM blank to maintain proper cooling airflow.

Memory configurations and mixing rules

- For full details on supported memory configurations see the **M8 Memory Guide.**

STEP 8 SELECT M.2 DRIVES (REQUIRED)

Select Drives

The available M.2 drives are listed *Table 41*

Table 41 Available Drives

Product ID (PID)	PID Description	Drive Type	Capacity
Boot Drive			
HCI-M2-480G	480GB M.2 SATA SSD	SATA	480GB
HCI-M2480OA1V	480GB M.2 Boot Solidigm S4520 SATA 1X SSD	SATA	480GB
HCI-M2-960G	960GB M.2 SATA Micron G2 SSD	SATA	960GB
M.2 Raid controller (Internal)			
HCI-M2-HWRAID2	Cisco Boot optimized M.2 Raid controller for SATA drives		

Approved Configurations:

- Two boot drives with M.2 Raid controller

NOTE:

- Dual M.2 SATA SSD with the HW RAID controller is the only supported boot configuration for this solution.
- It is recommended that M.2 SATA SSDs be used as boot-only devices.
- Order two identical M.2 SATA SSDs for the boot optimized RAID controller
- You cannot mix M.2 SATA SSD capacities.
- The Boot-Optimized RAID controller supports AHV Operating Systems.
- The SATA M.2 drives can boot in UEFI mode only. Legacy boot mode is not supported.
- CIMC is supported for configuring of volumes and monitoring of the controller and installed SATA M.2 drives

Approved Configurations

- Three to ten capacity drives
- Two boot drives with M.2 Raid controller



NOTE:

- Dual M.2 SATA SSD with the HW RAID controller is the only supported boot configuration for this solution.
- It is recommended that M.2 SATA SSDs be used as boot-only devices.
- Order two identical M.2 SATA SSDs for the boot optimized RAID controller
- You cannot mix M.2 SATA SSD capacities.
- The Boot-Optimized RAID controller supports AHV Operating Systems.
- The SATA M.2 drives can boot in UEFI mode only. Legacy boot mode is not supported.
- CIMC is supported for configuring of volumes and monitoring of the controller and installed SATA M.2 drives

STEP 9 SELECT CISCO COMPUTE CONNECTIVITY (REQUIRED)

A. For Intersight Standalone Mode (ISM) - HCO Connectivity:



Golden Rule: Mixing VIC and NIC in same server/cluster is not supported.

The following connectivity options are available, if you select the Intersight Standalone Mode (IS Managed) from the **STEP 4 SELECT MANAGEMENT MODE (REQUIRED)**.

Select Connectivity

The available connectivity are listed in *Table 42*.



NOTE:

- Either Cisco VIC Connectivity (HCI-MLOM) **or** Third Party NIC Connectivity connectivity (HCI-PCIE) is mandatory for this solution.
- Use HCI-MLOM for VIC based connectivity and HCI-PCIE for NIC based connectivity.
- When HCI-MLOM is selected up to two additional VIC can be selected from the *Table 43*.
- When HCI-PCIE is selected up to two additional NIC can be selected from the table *Table 46*.

Table 42 HCO Connectivity

Product ID (PID)	Description	Max cards available per node	Supported Configuration
HCI-MLOM	Cisco VIC Connectivity	1 MLOM VIC + 2 PCIe VIC	Select from MLOM VIC *Table 43* and additional VIC in the riser slot from the *Table 46*
HCI-PCIE	Third Party NIC Connectivity	3 dual port or 2 quad port in PCIe riser slot	Select NIC cards under riser from *Table 46*

The available cards for the MLOM connectivity are listed in *Table 43*

Table 43 Available Cards for HCO MLOM Connectivity

Product ID (PID)	Description	Location	Card Size[1]
MLOM Cards			
HCI-M-V5Q50GV2	Cisco VIC 15427 4x 10/25/50G mLOM C-Series w/Secure Boot	mLOM	HHHL, SS

Notes:

1. HHHL = half-height, half-length; FHHL = full-height, half-length; SS = single-slot; DS = double-slot. SFF = small form factor.

B. For Intersight Managed Mode (IMM) - HCO Connectivity:

The following connectivity and cards options are available, if you select the Intersight Managed Mode from the **STEP 4 SELECT MANAGEMENT MODE (REQUIRED)**.

Select Connectivity

The available connectivity are listed in *Table 44*.

NOTE:

- HCI MLOM Connectivity (HCI-MLOM) is mandatory for this solution.
- Supported configuration maximum is Single MLOM + Single VIC (select VIC under the riser PCIe VIC card option from *Table 46*).

Table 44 HCO Connectivity

Product ID (PID)	Description	Supported Configuration
HCI-MLOM	Cisco VIC Connectivity on mLOM	1 mLOM (Mandatory) (select from *Table 45*) + 1 PCIe VIC (optional) (select from *Table 46*)

The available cards for the Cisco Compute MLOM are listed in *Table 45*

Table 45 Available Cards for the HCO MLOM Connectivity

Product ID (PID)	Description	Location	Card Size[1]
MLOM Cards			
HCI-M-V5Q50GV2	Cisco VIC 15427 4x 10/25/50G mLOM C-Series w/Secure Boot	mLOM	HHHL, SS
HCI-M-V5D200GV2	Cisco VIC 15237 2x 40/100/200G mLOM C-Series w/Secure Boot	mLOM	HHHL, SS

Notes:

1. HHHL = half-height, half-length; FHHL = full-height, half-length; SS = single-slot; DS = double-slot. SFF = small form factor.

STEP 10 SELECT PCIe CARDS

For up-to-date server compatibility, please check the Hardware and Software compatibility list (HCL) at https://ucshcltool.cloudapps.cisco.com/public/.

Select Option Cards

The available PCIe cards are listed in *Table 46*.

Table 46 Available PCIe Option Cards

Product ID (PID)	PID Description	Location	Card Size[1]	Supported Management Mode
Virtual Interface Cards (VICs)				
HCI-P-V5Q50G	Cisco UCS VIC 15425 Quad Port 10/25/50G CNA PCIE	Riser 1A (slot 2) or Riser 3A (slot 3)	HHHL, SS	All Management modes (ISM & IMM)
HCI-P-V5D200G	Cisco VIC 15235 2x 40/100/200G PCIe C-Series w/Secure Boot	Riser 1A (slot 2) or Riser 3A (slot 3)	HHHL, SS	All Management modes (ISM & IMM)
Network Interface Cards (NICs)				
10 GbE NICs				
UCSC-P-ID10GC	Cisco-Intel X710T2LG 2x10 GbE RJ45 PCIe NIC	Riser 1, 2, or 3	HHHL, SS	Intersight Standalone mode Only (ISM)
UCSC-P-IQ10GC	Cisco-Intel X710T4LG 4x10 GbE RJ45 PCIe NIC	Riser 1, 2, or 3	HHHL, SS	Intersight Standalone mode Only (ISM)
25GbE NICs				
HCI-P-I8D25GF[2]	Cisco-Intel E810XXVDA2 2x25/10GBE SFP28 PCIe NIC	Riser 1A (slot 1 or 2) and Riser 2A (slot 2), Riser 3A (slot 3)	HHHL, SS	Intersight Standalone mode Only (ISM)
HCI-P-I8Q25GF[2]	Cisco-Intel E810XXVDA4L 4x25/10GBE SFP28 PCIe NIC	Riser 1C or 3C	FHHL, SS	Intersight Standalone mode Only (ISM)

Notes:

1. HHHL = half-height, half-length; FHHL = full-height, half-length; SS = single-slot; DS = double-slot. SFF = small form factor.
2. When present, the recommended Fan Speed Control policy setting is balanced.

Approved Configurations

- 1-CPU systems:
  - All risers (Risers 1, 2, and 3) are supported

STEP 11 SELECT GPU CARDS (OPTIONAL)

Select GPU Options

The available GPU PCIe options are listed in *Table 47*.

Table 47 Available PCIe GPU Cards[1]

Product ID (PID)	PID Description	Card Size	Maximum cards Per node	Riser Compatibility
HCI-GPU-L4	NVIDIA L4:70W, 24GB, 1-slot HHHL GPU	HHHL, single-wide	3	All Risers

Notes:

1. Refer to installation guide for the more details.



NOTE:

- All GPU cards must be procured from Cisco as there is a unique SBIOS ID required by CIMC and UCSM
- GPUs cannot be mixed.

STEP 12 SELECT POWER SUPPLY (REQUIRED)

Power supplies share a common electrical and physical design that allows for hot-plug and tool-less installation into M8 C-series servers. Each power supply is certified for high-efficiency operation and offers multiple power output options. This allows users to “right-size” based on server configuration, which improves power efficiency, lowers overall energy costs and avoids stranded capacity in the data center.

Use the power calculator at the following link to determine the needed power based on the options chosen (CPUs, drives, memory, and so on):

http://ucspowercalc.cisco.com



WARNING:

- Starting 1st January 2024, only Titanium rated PSUs are allowed to be shipped to European Union (EU), European Economic Area (EEA), United Kingdom (UK), Switzerland and other countries that adopted Lot 9 Regulation.
- DC PSUs are not impacted by Lot 9 Regulation and are EU/UK Lot 9 compliant

Table 48 Power Supply

Product ID (PID)	PID Description
PSU (Input High Line 210VAC)	
HCI-PSU1-1200W	1200W Titanium power supply for C-Series Servers
HCI-PSUV21050D	Cisco UCS 1050W -48V DC Power Supply for Rack Server
HCI-PSU1-1600W	UCS 1600W AC PSU Platinum (Not EU/UK Lot 9 Compliant)
HCI-PSU1-2300W	Cisco UCS 2300W AC Power Supply for Rack Servers Titanium
PSU (Input Low Line 110VAC)	
HCI-PSU1-1200W	1200W Titanium power supply for C-Series Servers **Titanium**
HCI-PSU1-2300W	2300W Power supply for C-series servers **Titanium**



NOTE:

- In a server with two power supplies, both power supplies must be identical.
- Refer to **Power Specifications, page 157** section for the full details on the each power supply.

STEP 13 SELECT INPUT POWER CORD(s) (REQUIRED)

Using *Table 49* and *Table 50*, select the appropriate AC power cords. You can select a minimum of no power cords and a maximum of two. If you select the option R2XX-DMYMPWRCORD, no power cord is shipped with the server.

NOTE: *Table 49* lists the power cords for servers that use power supplies less than 2300 W. *Table 50* lists the power cords for servers that use 2300 W power supplies. Note that the power cords for 2300 W power supplies use a C19 connector so they only fit the 2300 W power supply connector.

Table 49 Available Power Cords (for server PSUs less than 2300 W)

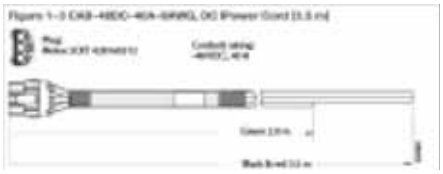
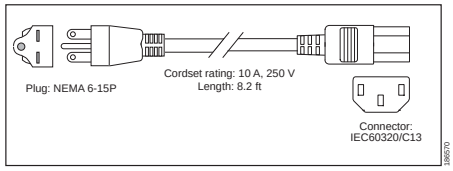
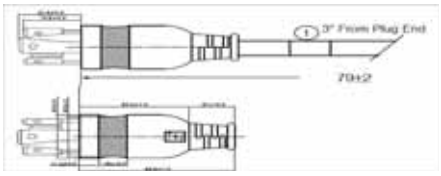
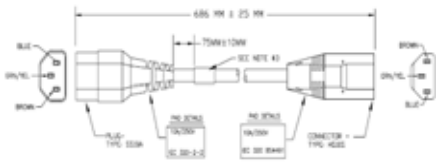
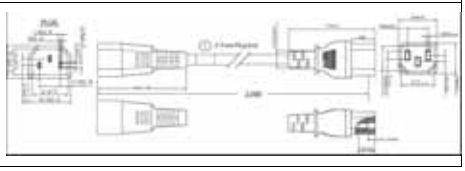
Product ID (PID)	PID Description	Images
NO-POWER-CORD	ECO friendly green option, no power cable will be shipped	
CAB-48DC-40A-8AWG	C-Series -48VDC PSU Power Cord, 3.5M, 3 Wire, 8AWG, 40A	
CAB-N5K6A-NA	Power Cord, 200/240V 6A, North America	
CAB-AC-L620-C13	AC Power Cord, NEMA L6-20 - C13, 2M/6.5ft	
CAB-C13-CBN	CABASY,WIRE,JUMPER CORD, 27" L, C13/C14, 10A/250V	
CAB-C13-C14-2M	CABASY,WIRE,JUMPER CORD, PWR, 2 Meter, C13/C14,10A/250V	

Table 49 Available Power Cords (for server PSUs less than 2300 W)

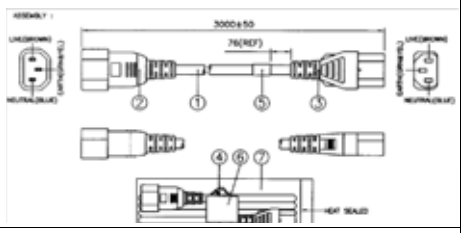
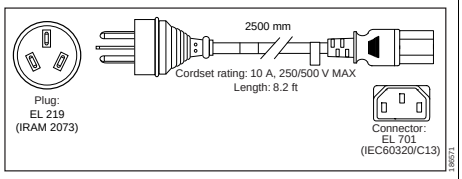
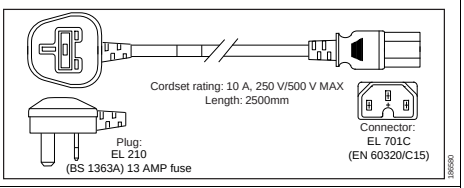

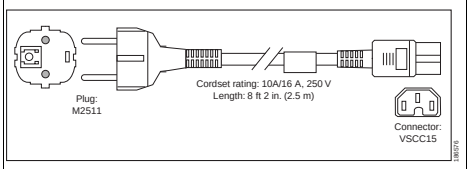
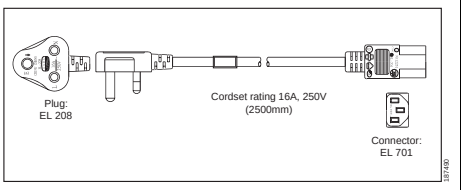
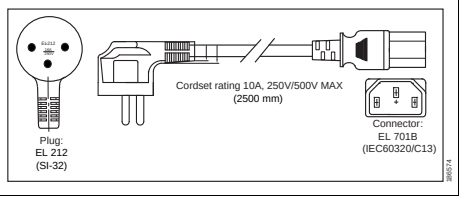
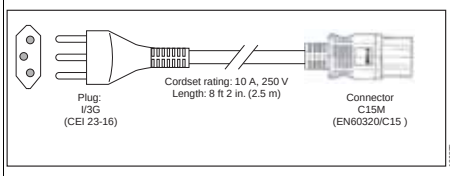
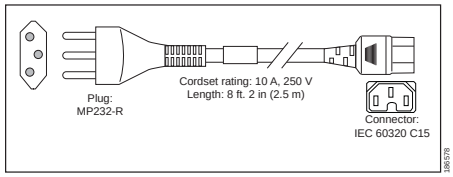
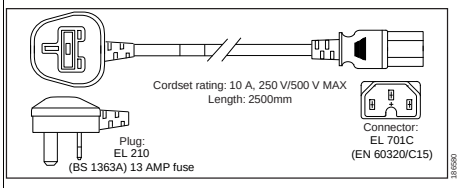
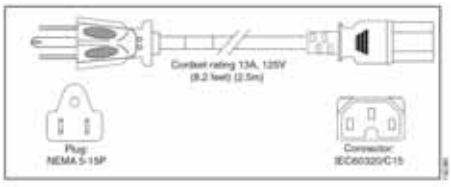
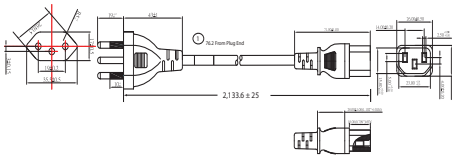
Product ID (PID)	PID Description	Images
CAB-C13-C14-AC	CORD,PWR,JMP,IEC60320/C14,IEC60320/C13, 3.0M	
CAB-250V-10A-AR	Power Cord, 250V, 10A, Argentina	
CAB-9K10A-AU	Power Cord, 250VAC 10A 3112 Plug, Australia	
CAB-250V-10A-CN	AC Power Cord - 250V, 10A - PRC	
CAB-9K10A-EU	Power Cord, 250VAC 10A CEE 7/7 Plug, EU	
CAB-250V-10A-ID	Power Cord, 250V, 10A, India	
CAB-C13-C14-3M-IN	Power Cord Jumper, C13-C14 Connectors, 3 Meter Length, India	Image not available
CAB-C13-C14-IN	Power Cord Jumper,C13-C14 Connectors,1.4 Meter Length, India	Image not available
CAB-250V-10A-IS	Power Cord, SFS, 250V, 10A, Israel	

Table 49 Available Power Cords (for server PSUs less than 2300 W)

Product ID (PID)	PID Description	Images
CAB-9K10A-IT	Power Cord, 250VAC 10A CEI 23-16/VII Plug, Italy	
CAB-9K10A-SW	Power Cord, 250VAC 10A MP232 Plug, Switzerland	
CAB-9K10A-UK	Power Cord, 250VAC 10A BS1363 Plug (13 A fuse), UK	
CAB-9K12A-NA[1]	Power Cord, 125VAC 13A NEMA 5-15 Plug, North America	
CAB-250V-10A-BR	Power Cord - 250V, 10A - Brazil	
CAB-C13-C14-2M-JP	Power Cord C13-C14, 2M/6.5ft Japan PSE mark	Image not available
CAB-9K10A-KOR[1]	Power Cord, 125VAC 13A KSC8305 Plug, Korea	Image not available
CAB-ACTW	AC Power Cord (Taiwan), C13, EL 302, 2.3M	Image not available
CAB-JPN-3PIN	Japan, 90-125VAC 12A NEMA 5-15 Plug, 2.4m	Image not available
CAB-48DC-40A-INT	C-Series -48VDC PSU PWR Cord, 3.5M, 3 Wire, 8AWG, 40A (INT)	Image not available
CAB-48DC-40A-AS	C-Series -48VDC PSU PWR Cord, 3.5M, 3Wire, 8AWG, 40A (AS/NZ)	Image not available

Notes:

1. This power cord is rated to 125V and only supported for PSU rated at 1050W or less

Table 50 Available Power Cords (for servers with 2300 W PSUs)

Product ID (PID)	PID Description	Images
CAB-C19-CBN	Cabinet Jumper Power Cord, 250 VAC 16A, C20-C19 Connectors	Not applicable
CAB-S132-C19-ISRL	S132 to IEC-C19 14ft Israeli	Image not available
CAB-IR2073-C19-AR	IRSM 2073 to IEC-C19 14ft Argen	Image not available
CAB-BS1363-C19-UK	BS-1363 to IEC-C19 14ft UK	Image not available
CAB-SABS-C19-IND	SABS 164-1 to IEC-C19 India	Image not available
CAB-C2316-C19-IT	CEI 23-16 to IEC-C19 14ft Italy	Image not available
CAB-US515P-C19-US	NEMA 5-15 to IEC-C19 13ft US	Image not available
CAB-US520-C19-US	NEMA 5-20 to IEC-C19 14ft US	Image not available
CAB-US620P-C19-US	NEMA 6-20 to IEC-C19 13ft US	Image not available
NO-POWER-CORD	ECO friendly green option, no power cable will be shipped	Image not available

STEP 14 SELECT TOOL-LESS RAIL KIT (REQUIRED) AND REVERSIBLE CABLE MANAGEMENT ARM (OPTIONAL)

- Tool-less Rail Kit:

Select a tool-less rail kit (or no rail kit) from *Table 51*.

NOTE:

- Cisco recommends a minimum quantity of 1 Rail Kit
- If you plan to rackmount your server, you must order a tool-less rail kit.

Table 51 Tool-less Rail Kit Options

Product ID (PID)	PID Description
HCI-RAIL-M7	Ball Bearing Rail Kit for M8 rack servers
HCI-RAIL-NONE	No rail kit option

- Optional Reversible Cable Management Arm:

The reversible cable management arm mounts on either the right or left slide rails at the rear of the server and is used for cable management. Select an Optional Reversible Cable Management Arm from *Table 52*.

NOTE: If you plan to rackmount your server, you must order a tool-less rail kit. The same rail kits and CMAs are used for M6 and M7 servers.

Table 52 Cable Management Arm

Product ID (PID)	PID Description
HCI-CMA-C220M7	Reversible CMA for M8 ball bearing rail kit

For more information about the tool-less rail kit and cable management arm, check the *C225 M8 Installation Guide*.

STEP 15 SELECT SECURITY DEVICES (REQUIRED)

A Trusted Platform Module (TPM) is a computer chip (microcontroller) that can securely store artifacts used to authenticate the platform (server). These artifacts can include passwords, certificates, or encryption keys. A TPM can also be used to store platform measurements that help ensure that the platform remains trustworthy. Authentication (ensuring that the platform can prove that it is what it claims to be) and attestation (a process helping to prove that a platform is trustworthy and has not been breached) are necessary steps to ensure safer computing in all environments.

A chassis intrusion switch gives a notification of any unauthorized mechanical access into the server.

The security device ordering information is listed in *Table 53*.



NOTE:

- The TPM module used in this system conforms to TPM 2.0, as defined by the Trusted Computing Group (TCG). It is also SPI-based.
- TPM installation is supported after-factory. However, a TPM installs with a one-way screw and cannot be replaced, upgraded, or moved to another server. If a server with a TPM is returned, the replacement server must be ordered with a new TPM.

Table 53 Security Devices

Product ID (PID)	PID Description
HCI-TPM-002D	TPM 2.0 FIPS 140-2 MSW2022 compliant AMD M8 servers
HCI-TPM-OPT-OUT	OPT OUT, TPM 2.0, TCG, FIPS140-2, CC EAL4+ Certified[1]
HCI-INT-SW02	M8 Chassis Intrusion Switch

Notes:

1. Please note that Microsoft certification requires a TPM 2.0 for bare-metal or guest VM deployments. Opt-out of the TPM 2.0 voids the Microsoft certification

STEP 16 SELECT LOCKING SECURITY BEZEL (OPTIONAL)

An optional locking bezel can be mounted to the front of the chassis to prevent unauthorized access to the drives.

Select the locking bezel from *Table 54*.

Table 54 Locking Bezel Option

Product ID (PID)	Description
UCSC-BZL-C220-D	C220 M8 Security Bezel

STEP 17 SELECT MANAGEMENT CONFIGURATION (OPTIONAL)

By default, the server NIC mode is configured to be Shared LOM Extended. This NIC mode allows any LOM port or adapter card port to be used to access the Cisco Integrated Management Controller (CIMC). The Cisco VIC card must be installed in a slot with NCSI support.



NOTE:

- There are no LOM ports on the 220 and 240 M8 servers. Servers ordered without a VIC or OCP card will ship in Dedicated network mode, unless otherwise specified by a configurable SW PID **(UCSC-CCARD-01)**
- For full details on all the NIC mode settings, see

https://www.cisco.com/c/en/us/td/docs/unified_computing/ucs/c/hw/C220M8/install/b-c220-m8-installation-guide.html

Table 55 Management Configuration Ordering Information

Product ID (PID)	PID Description
UCSC-DLOM-01-D	Dedicated Mode BIOS setting for C-Series Servers ■ To change the default NIC mode to Dedicated NIC mode, select this card. ■ In Dedicated NIC mode, the CIMC can be accessed only through the dedicated management port.
UCSC-CCARD-01-D	Cisco Card Mode BIOS setting for C-Series Servers ■ To change the default NIC mode to Cisco Card Mode, select this card. ■ If Cisco card selected, a VIC or MLOM must also be included in the configuration. if OCP card is included in the configuration, a VIC card must be selected. ■ In this mode, you can assign an IP address to the CIMC using DHCP and from there you can fully automate your deployment.

SELECT NUTANIX SOFTWARE AND NUTANIX PROFESSIONAL SERVICES

- **Top Level Nutanix Software And Professional Services PIDs, page 75**
  - *Table 56, Top Level Nutanix Software And Professional Services PIDs*
  - *Table 57, Nutanix NCI Software License Use case*
- **Nutanix Software And Professional Services PID Decoder, page 77**
  - *Table 58.0, Nutanix Software PID Decoder (WW-XX-YY-ZZ)*
  - *Table 58.1, Nutanix Professional Services PID Decoder (WW-XX-YY-ZZ)*
- **Nutanix Software PIDs and Description, page 78**
  - *Table 61.0, Nutanix Cloud Infrastructure (NCI)*
  - *Table 61.1, Nutanix Cloud Infrastructure - Compute Only (NCI-C)*
  - *Table 61.2, Nutanix Cloud Infrastructure Data (NCI-D)*
  - *Table 61.3, Nutanix Cloud Infrastructure Edge (NCI-E)*
  - *Table 61.4, End User Computing (EUC)*
  - *Table 61.5, Nutanix Cloud Manager (NCM)*
  - *Table 61.6, Nutanix Cloud Manager Edge (NME)*
  - *Table 61.7, Nutanix Cloud Manager EUC (NCM-U)*
  - *Table 61.8, Nutanix Cloud Platform (NCP) / Nutanix Cloud Platform - Compute Only (NCP-C)*
  - *Table 61.9, Nutanix Database Services (NDB)*
  - *Table 61.10, Nutanix Unified Storage™ (NUS)*
  - *Table 61.11, Nutanix Data Lens (NDL)*
  - *Table 61.12, Nutanix Kubernetes Platform (NKP)*
  - *Table 61.13, Nutanix Enterprise AI (NAI)*
- **Nutanix software limited orderability, page 120**
  - *Table 62.0, End User Computing Hyperspace (EUCH)*
- **Professional Services PIDs and Description, page 122**
  - *Table 63.0, NCI Design Workshop*
  - *Table 63.1, NCI Cluster Deployment or Expansion*
  - *Table 63.2, Virtual Machine Migration Workshop*
  - *Table 63.3, Virtual Machine Migration*
  - *Table 63.4, NCM Self-Service Design Workshop*
  - *Table 63.5, NCM Intelligent Operations Design Workshop*
  - *Table 63.6, NCM Intelligent Operations Deployment*
  - *Table 63.7, FastTrack for NCM Self-Service*
  - *Table 63.8, FastTrack for NCM Cost Governance*
  - *Table 63.9, Nutanix AI GPT Bundles Services*
  - *Table 63.10, Nutanix AI Planning Workshop*
  - *Table 63.11, Nutanix AI Design Workshop*
  - *Table 63.12, Nutanix AI Strategy and Optimization Workshop*
  - *Table 63.13, Nutanix AI Deployment*
  - *Table 63.14, NKP Design Workshop*
  - *Table 63.15, NKP Deployment*
  - *Table 63.16, Nutanix Flexible Credits*
- **Nutanix Support:, page 139**
- **Software With Professional Services PID Mapping, page 140**
  - *Table 65.0, Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping*
  - *Table 65.1, Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping*
  - *Table 66,Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping*

- *Table 67, Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services*

Top Level Nutanix Software And Professional Services PIDs

Table 56 Top Level Nutanix Software And Professional Services PIDs

ATO Product ID (PID)	Description
NTX-SW	Nutanix Software 3Y and above  **NOTE:** Please refer to the complete list of **Nutanix Software PIDs and Description, page 78**
NTX-SW-LO	Nutanix Limited Orderable Software Offer  **NOTE:** Please refer to the complete list of **Nutanix software limited orderability, page 120**
NTX-SW-1Y	Nutanix Software 1Y  **NOTE:** Please refer to the complete list of **Nutanix Software PIDs and Description, page 78**
NTX-NCI-USE-CASE[1]	Nutanix NCI Software License Use case  **NOTE:** Please refer to the complete list of **Nutanix Software PIDs and Description, page 78**
NTX-SW-PS	Nutanix Professional Service  **NOTE:** Please refer to the complete list of **Professional Services PIDs and Description, page 122**

Notes:

1. A selection of NTX-NCI-USE-CASE from Nutanix Software Category is required when Nutanix Cloud Infrastructure Software License (NCI / NCI-D / NCI-E) is selected. There are a few conditions under which NT-PUBLIC-CLOUD can be used. refer to the **KB article** for more details. Please choose one of them from the *Table 57*, if you select the **NTX-NCI-USE-CASE.**

Table 57 Nutanix NCI Software License Use case

Product ID (PID)	Description
NT-ON-PREM-UCS	Use Case to License Nutanix SW on Certified Cisco UCS HW
NT-PUBLIC-CLOUD	Use Case to License Nutanix SW (NC2) Running in Public Cloud (AWS/Azure)Hide
NT-OTHER	Use Case for all other Nutanix SW that is not covered above

NOTE:

(1) 1 Year Subscription term:

- For Nutanix Cloud Infrastructure (NCI), Nutanix Cloud Infrastructure - Compute Only (NCI-C), Nutanix Cloud Infrastructure - Data (NCI-D) and Nutanix Cloud Manager (NCM) softwares, it requires mandatory attach of Nutanix Professional Services.

(2) 3 Year Subscription term:

- For Nutanix Cloud Infrastructure (NCI), Nutanix Cloud Infrastructure - Compute Only (NCI-C), Nutanix Cloud Infrastructure - Data (NCI-D) and Nutanix Cloud Manager (NCM), only Starter (STR) softwares, it is recommended to attach Nutanix Professional Services during ordering.
- For Nutanix Cloud Manager (NCM) software, only Professional (PRO) and Ultimate (ULT) softwares requires mandatory Nutanix Professional Services.

(3) Nutanix NCI Software License Use case:

- Ratio of cores between cloud and on-prem must be 70/30 or greater, meaning >=30% of cores must be licensed for on-prem usage. Cloud only deals, public cloud marketplace deals, and hybrid cloud deals with other vendor hardware are not allowed.
- Must include mention of hybrid cloud in your Nutanix deal registration.
- Must select the appropriate public cloud use-case SKU when building a CCW configuration.

(4) Any future expansion opportunity does not require mandatory Nutanix Professional Services attach.

(5) Cisco and Nutanix products are each subject to their own terms and conditions, including support timelines and milestones. This includes the Nutanix Cloud Platform software and qualified Cisco UCS hardware platforms sold together as part of the Cisco Compute Hyperconverged with Nutanix solution. Carefully review Nutanix's EoL portal for support timelines by hardware platform. Cisco's UCS hardware support milestones may not align with Nutanix's support milestones. Therefore, it is important to plan your hardware and software refresh cycles based on the earlier of the two dates (hardware support from Cisco and software support from Nutanix). It is your responsibility to check the Nutanix software term length desired against the support time frames for the quoted UCS hardware platform.

Nutanix licenses are transferable to newer generation Cisco UCS platforms subject to Nutanix's end user license agreement. Refer to Nutanix's Support FAQs for details and definitions of Nutanix's End of Life and End of Support Life milestones. Refer to Cisco's EoL policy for details and definitions of Cisco's End of Life and Last Date of Support milestones.

Nutanix Software And Professional Services PID Decoder

Table 58.0 Nutanix Software PID Decoder (WW-XX-YY-ZZ)

Identifier#1 (WW)	Identifier#2 (XX)	Identifier#3 (YY)	Identifier#4 (ZZ)
Nutanix Product Family:	Nutanix Software Type/Category:	License Tiers:	Support Tier:
NT	**NCI:** Nutanix Cloud Infrastructure **NCI-C:** Nutanix Cloud Infrastructure-Compute Only **NCI-D:** Nutanix Cloud Infrastructure Data **NCI-E:** Nutanix Cloud Infrastructure Edge **EUC:** End User Computing **NCM:** Nutanix Cloud Manager **NME:** Nutanix Cloud Manager Edge **NCM-U:** Nutanix Cloud Manager End User Computing **NCP:** Nutanix Cloud Platform **NCP-C:** Nutanix Cloud Platform-Compute Only **NDB:** Nutanix Database Services **NUS:** Nutanix Unified Storage™ **NDL:** Nutanix Data Lens **NKP:** Nutanix Kubernetes Platform **NAI:** Nutanix Enterprise AI **EUCH:** END User Computing Hyperspace	**STR:** Starter **PRO:** Professional **ULT:** Ultimate	**PR:** Production **MC:** Mission Critical **AP:** (ASP Production) **AM:** (ASP Mission Critical) **FP:** US Federal Production **FM:** US Federal Mission Critical
NOTE: Note for example “NT-NCI-STR-PR” PID can be decoded as, NT=Nutanix, NCI=Nutanix Cloud Infrastructure, STR=Starter, PR=Production			

Table 58.1 Nutanix Professional Services PID Decoder (WW-XX-YY-ZZ)

Identifier#1 (WW)	Identifier#2 (XX)	Identifier#3 (YY)	Identifier#4 (ZZ)
Nutanix Product Family:	Nutanix Professional Services Offering:	Nutanix Product Tier:	Nutanix Professional Services Option:
NT	**Design** W-DS: NCI Design Workshop W-SSD: NCM Self-Service Design Workshop W-OD: NCM Intelligent Operations Design Workshop W-KD: NKP Design Workshop P-AI - NAI Planning Workshop W-AID - NAI Design Workshop W-AIO - NAI Strategy and Optimization Workshop **Deploy** S-DP: NCI Cluster Deployment or Expansion S-OP: NCM Intelligent Operations Deployment F-SS: FastTrack for NCM Self-Service F-CG: FastTrack for NCM Cost Governance S-KD: NKP Deployment S-AID - NAI Deployment **Migrate** W-MG: Virtual Machine Migration Workshop S-MG-VM: Virtual Machine Migration **Custom** FLEX-CST-CR: Flexible Credits	**STR:** Starter **PRO:** Professional **ULT:** Ultimate	**Design** SD: Standard Documentation **Deploy** AV-PB: Pro AHV Nodes Base AV-PV: Pro AHV Nodes Variable EX-PB: Pro ESX Nodes Base EX-PV: Pro ESX Nodes Variable AV-SB: Starter AHV Nodes Base AV-SV: Starter AHV Nodes Variable EX-SB: Starter ESX Nodes Base EX-SV: Starter ESX Nodes Variable AVB: Starter AHV Nodes Base AVV: Starter AHV Nodes Variable EXB: Starter ESX Nodes Base EXV: Starter ESX Nodes Variable AV-UB: Ultimate AHV Nodes Base AV-UV: Ultimate AHV Nodes Variable EX-UB: Ultimate ESX Nodes Base EX-UV: Ultimate ESX Nodes Variable
NOTE: Note for example “NT-W-DS-STR-SD” PID can be decoded as, NT=Nutanix, W-DS= Design Workshop, STR=Starter, SD= Standard Documentation			

Nutanix Software PIDs and Description

Table 59 Software Options and Metric

Software Option	Software Description	Metric
Nutanix Cloud Infrastructure (NCI)	NCI is a complete software stack to unify your hybrid cloud infrastructure including compute, storage and network, hypervisors, and containers, in public or enterprise clouds	Per Core
Nutanix Cloud Infrastructure - Compute Only (NCI-C)	NCI-C is an enterprise virtualization platform that integrates with qualified storage partners to support demanding mission-critical applications.	Per Core
Nutanix Cloud Infrastructure Data (NCI-D)	Delivers rich data and storage services but does not include Nutanix compute and networking capabilities. No support for AHV	Per Core
Nutanix Cloud Infrastructure Edge (NCI-Edge)	Nutanix Cloud Infrastructure – Edge (NCI-Edge) provides a distributed infrastructure platform for small edge deployments. NCI-Edge provides the same capabilities as NCI, combining compute, storage, and networking resources from a cluster of servers into a single logical pool with integrated resiliency, security, performance, and simplified administration.	Per VM
Nutanix Cloud Manager (NCM)	NCM offers intelligent operations, self service and orchestration, visibility and governance of spend, security and teams	Per Core
Nutanix Cloud Manager Edge (NCM-E)	Provides NCM capabilities for Edge deployments	Per VM
Nutanix Cloud Manager EUC (NCM-U)	Provides NCM capabilities in VDI use cases	Per User
Nutanix Cloud Platform (NCP)	Bundle for NCI and NCM	Per Core
Nutanix Cloud Platform - Compute Only (NCP-C)	Bundle for NCI-C and NCM	Per Core
Nutanix Database Services	Nutanix Database Service is a Database-as-a-Service (DBaaS) platform that enables teams to provision, operate, and scale databases across on-premises and hybrid cloud environments with minimal operational overhead.	Per Core
Nutanix Unified Storage™ (NUS)	Nutanix Unified Storage™ (NUS) is a software-defined data services platform that consolidates the management and protection of siloed block, file, and object storage into a single, unified platform.	Per TIB
Nutanix Data Lens (NDL)	Nutanix Data Lens is a SaaS-based cyberstorage solution offering ransomware resilience and global data visibility for unstructured data on Nutanix Unified Storage (NUS).	Per TIB
End User Computing (EUC)	on-prem VDI and Desktop as a Service (DaaS) use cases	Per User
Nutanix Kubernetes Platform (NKP)	Nutanix Kubernetes Platform (NKP) combines the Nutanix Kubernetes Engine (NKE) features with their acquisition of the D2iQ product family to bring a consolidated runtime, orchestration, and management environment to our cloud native customers.	Per Core/Per VM[1]
Nutanix Enterprise AI (NAI)	Nutanix Enterprise AI is a comprehensive software platform designed to simplify and secure the deployment, management, and scaling of generative AI (GenAI) applications.	Per Core/vCPU and GB[2]

Notes:

1. For NKP FS STR/PRO/ULT, the metric is calculated per core, whereas for NKP PRO/ULT, the calculated is measured per VM.
2. For NAI both per core/vCPU and GPU memory (GB) licenses are required.

Table 60 Nutanix Software License Tiers

NCI Starter	NCI Professional	NCI Ultimate
Core set of software functionality **Ideal for:** Small-scale deployments with a limited set of workloads (on-prem only)	Rich data services, resilience and management features **Ideal for:** Running multiple applications or large-scale single workload deployments (on-prem or in public clouds)	Full suite of Nutanix software capabilities to tackle complex infrastructure challenges **Ideal for:** Multi-site deployments and advanced security requirements (on-prem or in public clouds)



NOTE:

- Prism Central will be required for all licensing actions.
- Licenses are portable across Cisco hardware platforms in HCL.

(1) Nutanix Cloud Infrastructure (NCI):

Nutanix Cloud Infrastructure (NCI) converges the entire datacenter stack, including compute, storage, storage networking, and virtualization and is at the core of creating a hyperconverged infrastructure environment. Complex and expensive legacy infrastructure is replaced by NCI, running on industry-standard servers loaded with the latest hardware technologies. This allows enterprises to deploy what you need for the short term, and scale on-demand as infrastructure needs increase over time. Each server, often referred to as a node in the context of HCI, is an x86 platform with direct-attached storage drives. NCI software runs on each node, distributing all operating functions across the cluster for superior performance and resilience, and enabling seamless scalability.



NOTE:

- For more information about Nutanix Cloud Infrastructure (NCI), please visit **https://www.nutanix.com/products/nutanix-cloud-infrastructure**
- For more information about Nutanix Cloud Platform software options, please visit **https://www.nutanix.com/products/cloud-platform/software-options**
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines **(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4)** requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: **https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html**
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. for the complete list visit **https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html**
- The quantity of NCI license must match with total number for processor cores in hardware platforms.

Table 61.0 Nutanix Cloud Infrastructure (NCI)

Product ID (PID)	PID Description
STR - STARTER	
NT-NCI-STR-PR	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License & Production Software Support Service for 1 CPU Core
NT-NCI-STR-MC	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCI-STR-AP	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-STR-AM	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)

Table 61.0 Nutanix Cloud Infrastructure (NCI)

NT-NCI-STR-FP	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCI-STR-FM	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License & Federal Mission Critical Software Support Service for 1 CPU Core
PRO - PROFESSIONAL	
NT-NCI-PRO-PR	Subscription, Nutanix Cloud Infrastructure (NCI) Pro Software License & Production Software Support Service for 1 CPU Core
NT-NCI-PRO-MC	Subscription, Nutanix Cloud Infrastructure (NCI) Pro Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCI-PRO-AP	Subscription, Nutanix Cloud Infrastructure (NCI) Professional Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-PRO-AM	Subscription, Nutanix Cloud Infrastructure (NCI) Professional Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-PRO-FP	Subscription, Nutanix Cloud Infrastructure (NCI) Pro Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCI-PRO-FM	Subscription, Nutanix Cloud Infrastructure (NCI) Pro Software License & Federal Mission Critical Software Support Service for 1 CPU Core
ULT - ULTIMATE	
NT-NCI-ULT-PR	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License & Production Software Support Service for 1 CPU Core
NT-NCI-ULT-MC	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCI-ULT-AP	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-ULT-AM	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License & Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-ULT-FP	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCI-ULT-FM	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License & Federal Mission Critical Software Support Service for 1 CPU Core
ADVANCED REPLICATION	
NT-A-NCI-ADR-PR	Subscription, Nutanix Cloud Infrastructure (NCI) Advanced Replication add-on Software License & Production Software Support Service for 1 CPU Core
NT-A-NCI-ADR-MC	Subscription, Nutanix Cloud Infrastructure (NCI) Advanced Replication add-on Software License & Mission Critical Software Support Service for 1 CPU Core

Table 61.0 Nutanix Cloud Infrastructure (NCI)

NT-A-NCI-ADR-AP	Subscription, Nutanix Cloud Infrastructure (NCI) Advanced Replication add-on Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-A-NCI-ADR-AM	Subscription, Nutanix Cloud Infrastructure (NCI) Advanced Replication add-on Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-A-NCI-ADR-FP	Subscription, Nutanix Cloud Infrastructure (NCI) Advanced Replication add-on Software License & Federal Production Software Support Service for 1 CPU Core
NT-A-NCI-ADR-FM	Subscription, Nutanix Cloud Infrastructure (NCI) Advanced Replication add-on Software License & Federal Mission Critical Software Support Service for 1 CPU Core
SECURITY	
NT-A-NCI-SEC-PR	Subscription, Nutanix Cloud Infrastructure (NCI) Security add-on Software License & Production Software Support Service for 1 CPU Core
NT-A-NCI-SEC-MC	Subscription, Nutanix Cloud Infrastructure (NCI) Security add-on Software License & Mission Critical Software Support Service for 1 CPU Core
NT-A-NCI-SEC-AP	Subscription, Nutanix Cloud Infrastructure (NCI) Security add-on Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-A-NCI-SEC-AM	Subscription, Nutanix Cloud Infrastructure (NCI) Security add-on Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-A-NCI-SEC-FP	Subscription, Nutanix Cloud Infrastructure (NCI) Security add-on Software License & Federal Production Software Support Service for 1 CPU Core
NT-A-NCI-SEC-FM	Subscription, Nutanix Cloud Infrastructure (NCI) Security add-on Software License & Federal Mission Critical Software Support Service for 1 CPU Core

*Table 65.***0**, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping**

*Table 65.***1**, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping**

(2) Nutanix Cloud Infrastructure - Compute-Only (NCI-C):

Nutanix Cloud Infrastructure - Compute-Only (NCI-C) is an enterprise virtualization platform that converges Nutanix's operational model and automation of NCI with everupure FlashArray to deliver a high-performance and secure solution for demanding data and mission-critical workload. NCI-C provides VM-centric data management delegating snapshots, clones, and related operations to storage platform for efficiency and performance. Multilayer security protects mission-critical environments with micro segmentation, least-privileged access and compliance guardrails supported by storage-level encryption within everupure. This solution is ideally suited to supporting mission-critical applications for customers from highly regulated industries, such as finance, healthcare and government.



NOTE:

- For more information about Nutanix Cloud Infrastructure - Compute-Only (NCI-C), please visit **https://www.nutanix.com/products/nutanix-cloud-infrastructure/compute**
- For more information about Nutanix Cloud Infrastructure capabilities and software options, please visit **https://www.nutanix.com/library/datasheets/nci-c**
- For more information about Nutanix Cloud Platform software options, please visit **https://www.nutanix.com/products/cloud-platform/software-options**
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines **(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4)** requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: **https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html**
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. for the complete list visit **https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html**



WARNING:

- 1,000 cores for Canada, Zone 2 USA: USA Enterprise (East, West, North), USA Federal and USA Healthcare
- 300 cores for the rest of the world. Japan, APAC ex Japan, EMEA, LATAM, Zone 1 USA: US Commercial, US SLED, US Channel Led.
- After this threshold is met, the customer is no longer subject to a minimum core requirement for subsequent orders. The quantity of NCI-C license must match the total number for processor cores in hardware platforms.

Table 61.1 Nutanix Cloud Infrastructure - Compute Only (NCI-C)

Product ID (PID)	PID Description
STR - STARTER	
NT-NCIC-STR-PR	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Starter Software License & Production Software Support Service for 1 CPU Core

Table 61.1 Nutanix Cloud Infrastructure - Compute Only (NCI-C)

NT-NCIC-STR-MC	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Starter Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCIC-STR-FP	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Starter Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCIC-STR-FM	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Starter Software License & Federal Mission Critical Software Support Service for 1 CPU Core
PRO - PROFESSIONAL	
NT-NCIC-PRO-PR	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Pro Software License & Production Software Support Service for 1 CPU Core
NT-NCIC-PRO-MC	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Pro Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCIC-PRO-FP	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Pro Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCIC-PRO-FM	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Pro Software License & Federal Mission Critical Software Support Service for 1 CPU Core
ULT - ULTIMATE	
NT-NCIC-ULT-PR	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Ultimate Software License & Production Software Support Service for 1 CPU Core
NT-NCIC-ULT-MC	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Ultimate Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCIC-ULT-FP	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Ultimate Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCIC-ULT-FM	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Ultimate Software License & Federal Mission Critical Software Support Service for 1 CPU Core
ADVANCED REPLICATION	
NT-A-NCIC-ADR-PR	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Advanced Replication Software License & Production Software Support Service for 1 CPU Core
NT-A-NCIC-ADR-MC	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Advanced Replication Software License & Mission Critical Software Support Service for 1 CPU Core
NT-A-NCIC-ADR-FP	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Advanced Replication Software License & Federal Production Software Support Service for 1 CPU Core
NT-A-NCIC-ADR-FM	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Advanced Replication Software License & Federal Mission Critical Software Support Service for 1 CPU Core
SECURITY	

Table 61.1 Nutanix Cloud Infrastructure - Compute Only (NCI-C)

NT-A-NCIC-SEC-PR	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Security Software License & Production Software Support Service for 1 CPU Core
NT-A-NCIC-SEC-MC	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Security Software License & Mission Critical Software Support Service for 1 CPU Core
NT-A-NCIC-SEC-FP	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Security Software License & Federal Production Software Support Service for 1 CPU Core
NT-A-NCIC-SEC-FM	Subscription, Nutanix Cloud Infrastructure - Compute Only (NCI-C) Security Software License & Federal Mission Critical Software Support Service for 1 CPU Core

Table 65.**0**, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping**

Table 65.**1**, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping**

(3) Nutanix Cloud Infrastructure Data (NCI-D):

Nutanix supports freedom of choice of hypervisor and container platform, by offering a version called NCI Data that delivers rich data and storage services but does not include Nutanix compute and networking capabilities. Support for Hypervisor specific features, such as GPU support on ESXi, is not impacted by NCI Data licensing tiers.

NOTE:

- For more information about Nutanix Cloud Infrastructure (NCI), please visit https://www.nutanix.com/products/nutanix-cloud-infrastructure
- For more information about Nutanix Cloud Platform software options, please visit https://www.nutanix.com/products/cloud-platform/software-options Please note, the grey rows in the software options table under NCI are not included in NCI Data.
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. for the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html
- The quantity of NCI-D license must match with total number for processor cores in hardware platforms.

Table 61.2 Nutanix Cloud Infrastructure Data (NCI-D)

Product ID (PID)	PID Description
STR - STARTER	
NT-NCI-D-STR-PR	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Starter Software License & Production Software Support Service for 1 CPU Core
NT-NCI-D-STR-MC	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Starter Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCI-D-STR-AP	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Starter Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-D-STR-AM	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Starter Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-D-STR-FP	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Starter Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCI-D-STR-FM	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Starter Software License & Federal Mission Critical Software Support Service for 1 CPU Core

Table 61.2 Nutanix Cloud Infrastructure Data (NCI-D)

PRO - PROFESSIONAL	
NT-NCI-D-PRO-PR	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Pro Software License & Production Software Support Service for 1 CPU Core
NT-NCI-D-PRO-MC	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Pro Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCI-D-PRO-AP	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Pro Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-D-PRO-AM	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Pro Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-D-PRO-FP	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Pro Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCI-D-PRO-FM	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Pro Software License & Federal Mission Critical Software Support Service for 1 CPU Core
ULT - ULTIMATE	
NT-NCI-D-ULT-PR	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Ultimate Software License & Production Software Support Service for 1 CPU Core
NT-NCI-D-ULT-MC	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Ultimate Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCI-D-ULT-AP	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Ultimate Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-D-ULT-AM	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Ultimate Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCI-D-ULT-FP	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Ultimate Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCI-D-ULT-FM	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Ultimate Software License & Federal Mission Critical Software Support Service for 1 CPU Core
ADVANCED REPLICATION	
NT-A-NCI-D-ADR-PR	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Advanced Replication add-on Software License & Production Software Support Service for 1 CPU Core
NT-A-NCI-D-ADR-MC	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Advanced Replication add-on Software License & Mission Critical Software Support Service for 1 CPU Core
NT-A-NCI-D-ADR-AP	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Advanced Replication add-on Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)

Table 61.2 Nutanix Cloud Infrastructure Data (NCI-D)

NT-A-NCI-D-ADR-AM	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Advanced Replication add-on Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-A-NCI-D-ADR-FP	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Advanced Replication add-on Software License & Federal Production Software Support Service for 1 CPU Core
NT-A-NCI-D-ADR-FM	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Advanced Replication add-on Software License & Federal Mission Critical Software Support Service for 1 CPU Core
SECURITY	
NT-A-NCI-D-SEC-PR	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Security add-on Software License & Production Software Support Service for 1 CPU Core
NT-A-NCI-D-SEC-MC	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Security add-on Software License & Mission Critical Software Support Service for 1 CPU Core
NT-A-NCI-D-SEC-AP	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Security add-on Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-A-NCI-D-SEC-AM	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Security add-on Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-A-NCI-D-SEC-FP	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Security add-on Software License & Federal Production Software Support Service for 1 CPU Core
NT-A-NCI-D-SEC-FM	Subscription, Nutanix Cloud Infrastructure Data (NCI-D) Security add-on Software License & Federal Mission Critical Software Support Service for 1 CPU Core

Table 65.0, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping**
Table 65.1, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping**

(4) Nutanix Cloud Infrastructure Edge (NCI-E):

Nutanix Cloud Infrastructure – Edge (NCI-E) provides a distributed infrastructure platform for small edge deployments. NCI-Edge provides the same capabilities as NCI, combining compute, storage, and networking resources from a cluster of servers into a single logical pool with integrated resiliency, security, performance, and simplified administration. With NCI-Edge, organizations can efficiently extend the Nutanix platform to remote office/branch office (ROBO) and other edge use cases.

- 1 TiB of NUS Pro per NCI-Edge cluster is included at no cost with NCI-Edge.
- NCI-Edge licenses must run on a dedicated licensed cluster with no core-based licensing. Mixing of NCI-Edge licenses with other types of NCI licensing within a cluster is not supported.
- NCI-Edge can be used with any cluster deployment type as long as the conditions mentioned are followed.
- Maximum nodes for the Edge cluster is 5.



NOTE:

- For more information about Nutanix Cloud Infrastructure (NCI), please visit https://www.nutanix.com/products/nutanix-cloud-infrastructure
- For more information about Nutanix NCI Edge software options, please visit https://www.nutanix.com/products/cloud-platform/software-options
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines (https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. for the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html
- NCI-Edge is limited to a maximum of 25 VMs in a cluster, with each VM being limited to a maximum of 96GB of memory.
- The quantity of NCI-Edge license must match with Total number for VMs running in the cluster.
- For the purpose of calculation, internal VMs (or Nutanix infrastructure VMs) such are Controller VM or Prism Central VM are not counted.

Table 61.3 Nutanix Cloud Infrastructure Edge (NCI-E)

Product ID (PID)	PID Description
STR - STARTER	
NT-NCI-E-STR-PR	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License for Edge sites & Production Software Support Service for 1 VM
NT-NCI-E-STR-MC	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License for Edge sites & Mission Critical Software Support Service for 1 VM
NT-NCI-E-STR-AP	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License for Edge sites & L3 Production Software Support Service for 1 VM (Authorized Support Partners provides L1, L2 support)

Table 61.3 Nutanix Cloud Infrastructure Edge (NCI-E)

NT-NCI-E-STR-AM	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License for Edge sites & L3 Mission Critical Software Support Service for 1 VM (Authorized Support Partners provides L1, L2 support)
NT-NCI-E-STR-FP	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License for Edge sites & Federal Production Software Support Service for 1 VM
NT-NCI-E-STR-FM	Subscription, Nutanix Cloud Infrastructure (NCI) Starter Software License for Edge sites & Federal Mission Critical Software Support Service for 1 VM
PRO - PROFESSIONAL	
NT-NCI-E-PRO-PR	Subscription, Nutanix Cloud Infrastructure (NCI) Pro Software License for Edge sites & Production Software Support Service for 1 VM
NT-NCI-E-PRO-MC	Subscription, Nutanix Cloud Infrastructure (NCI) Pro Software License for Edge sites & Mission Critical Software Support Service for 1 VM
NT-NCI-E-PRO-AP	Subscription, Nutanix Cloud Infrastructure (NCI) Pro Software License for Edge sites & L3 Production Software Support Service for 1 VM (Authorized Support Partners provides L1, L2 support)
NT-NCI-E-PRO-AM	Subscription, Nutanix Cloud Infrastructure (NCI) Pro Software License for Edge sites & L3 Mission Critical Software Support Service for 1 VM (Authorized Support Partners provides L1, L2 support)
NT-NCI-E-PRO-FP	Subscription, Nutanix Cloud Infrastructure (NCI) Pro Software License for Edge sites & Federal Production Software Support Service for 1 VM
NT-NCI-E-PRO-FM	Subscription, Nutanix Cloud Infrastructure (NCI) Pro Software License for Edge sites & Federal Mission Critical Software Support Service for 1 VM
ULT - ULTIMATE	
NT-NCI-E-ULT-PR	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License for Edge sites & Production Software Support Service for 1 VM
NT-NCI-E-ULT-MC	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License for Edge sites & Mission Critical Software Support Service for 1 VM
NT-NCI-E-ULT-AP	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License for Edge sites & L3 Production Software Support Service for 1 VM (Authorized Support Partners provides L1, L2 support)
NT-NCI-E-ULT-AM	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License for Edge sites & L3 Mission Critical Software Support Service for 1 VM (Authorized Support Partners provides L1, L2 support)
NT-NCI-E-ULT-FP	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License for Edge sites & Federal Production Software Support Service for 1 VM
NT-NCI-E-ULT-FM	Subscription, Nutanix Cloud Infrastructure (NCI) Ultimate Software License for Edge sites & Federal Mission Critical Software Support Service for 1 VM

Table 65.0, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping**

Table 65.1, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping**

(5) End User Computing (EUC):

Per user model offers hybrid cloud infrastructure capabilities appropriate for on-prem virtual desktop infrastructure (VDI) and Desktop as a Service (DaaS) use cases with pricing based on a Maximum Concurrent User basis (maximum number of provisioned end-user VMs). EUC per user is an alternative to the core-based NCI licensing option and is designed to provide simple, transparent licensing for all VDI users, regardless of the underlying hardware, hypervisor, or cloud.

- **Agnostic:** Works with any EUC management platform including Citrix Virtual Apps & Desktops and VMware Horizon
- **Term license:** Term license must run on a dedicated software licensed VDI cluster with no core-based licensing. Mixing of non-VDI workloads is not supported
- **Unified Storage:** Built-in and also available as a per TiB base add-on
- No additional license cost for DR site
- Portable across on-premises and public cloud, public cloud use requires Ultimate edition
- Available in Starter, Pro, and Ultimate editions
- Cloud Native and Database Service Add-ons not available with NCI EUC. Advanced Replication and Security Add-on features require NCI Ultimate edition

	EUC STARTER	EUC PROFESSIONAL	VDI ULTIMATE
NCI Feature Set	Everything in NCI Starter	Everything in NCI Professional	Everything in NCI Ultimate
Nutanix Unified Storage	1 TiB Free Capacity	50 GB Per User	100GB Per User



NOTE:

- For more information on End User Computing (EUC), please visit https://www.nutanix.com/solutions/end-user-computing
- For more information about Nutanix Cloud Platform software options, please visit https://www.nutanix.com/products/cloud-platform/software-options
- If the end user wants to run a mixed workload on same server (virtual machines that are not part of the VDI environment), NCI license is required.
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. for the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html
- For ‘PURE” EUC/VDI environment, there is no NCI license required.

Table 61.4 End User Computing (EUC)

Product ID (PID)	PID Description
STR - STARTER	
NT-EUC-STR-PR	Subscription, End User Computing (EUC) Starter Software License & Production Software Support Service for 1 User
NT-EUC-STR-MC	Subscription, End User Computing (EUC) Starter Software License & Mission Critical Software Support Service for 1 User
NT-EUC-STR-AP	Subscription, End User Computing (EUC) Starter Software License & L3 Production Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)
NT-EUC-STR-AM	Subscription, End User Computing (EUC) Starter Software License & L3 Mission Critical Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)
NT-EUC-STR-FP	Subscription, End User Computing (EUC) Starter Software License & Federal Production Software Support Service for 1 User
NT-EUC-STR-FM	Subscription, End User Computing (EUC) Starter Software License & Federal Mission Critical Software Support Service for 1 User
PRO- PROFESSIONAL	
NT-EUC-PRO-PR	Subscription, End User Computing (EUC) Pro Software License & Production Software Support Service for 1 User
NT-EUC-PRO-MC	Subscription, End User Computing (EUC) Pro Software License & Mission Critical Software Support Service for 1 User
NT-EUC-PRO-AP	Subscription, End User Computing (EUC) Pro Software License & L3 Production Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)
NT-EUC-PRO-AM	Subscription, End User Computing (EUC) Pro Software License & L3 Mission Critical Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)
NT-EUC-PRO-FP	Subscription, End User Computing (EUC) Pro Software License & Federal Production Software Support Service for 1 User
NT-EUC-PRO-FM	Subscription, End User Computing (EUC) Pro Software License & Federal Mission Critical Software Support Service for 1 User
ULT - ULTIMATE	
NT-EUC-ULT-PR	Subscription, End User Computing (EUC) Ultimate Software License & Production Software Support Service for 1 User
NT-EUC-ULT-MC	Subscription, End User Computing (EUC) Ultimate Software License & Mission Critical Software Support Service for 1 User
NT-EUC-ULT-AP	Subscription, End User Computing (EUC) Ultimate Software License & L3 Production Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)

Table 61.4 End User Computing (EUC)

NT-EUC-ULT-AM	Subscription, End User Computing (EUC) Ultimate Software License & L3 Mission Critical Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)
NT-EUC-ULT-FP	Subscription, End User Computing (EUC) Ultimate Software License & Federal Production Software Support Service for 1 User
NT-EUC-ULT-FM	Subscription, End User Computing (EUC) Ultimate Software License & Federal Mission Critical Software Support Service for 1 User

Table 65.0, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping**

Table 65.1, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping**

(6) Nutanix Cloud Manager (NCM):

Nutanix Cloud Manager (NCM) is a hybrid multi-cloud management platform for building a cloud operating model. NCM provides Intelligent Operations, Self-Service, Cost Governance, and Security natively with the Nutanix Platform or through a SaaS subscription.

- Self-service VMs and Apps are defined via simple blueprints, easily created, and managed via GUI/CLI.
- Management of IT lifecycle includes visibility, optimization, and financial control over multi-cloud deployments.
- Detect, monitor, and remediate security vulnerabilities and compliance near real-time across multiple cloud environment

NOTE:

- For more information Nutanix Cloud Manager (NCM), please visit https://www.nutanix.com/products/cloud-manager
- For more information about Nutanix Cloud Platform software options, please visit https://www.nutanix.com/products/cloud-platform/software-options
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. For the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html
- The quantity of NCM license must match with total number for processor cores in hardware platforms.

Table 61.5 Nutanix Cloud Manager (NCM)

Product ID (PID)	PID Description
STR - STARTER	
NT-NCM-STR-PR	Subscription, Nutanix Cloud Manager (NCM) Starter Software License & Production Software Support Service for 1 CPU Core
NT-NCM-STR-MC	Subscription, Nutanix Cloud Manager (NCM) Starter Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCM-STR-AP	Subscription, Nutanix Cloud Manager (NCM) Starter Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCM-STR-AM	Subscription, Nutanix Cloud Manager (NCM) Starter Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)

Table 61.5 Nutanix Cloud Manager (NCM)

NT-NCM-STR-FP	Subscription, Nutanix Cloud Manager (NCM) Starter Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCM-STR-FM	Subscription, Nutanix Cloud Manager (NCM) Starter Software License & Federal Mission Critical Software Support Service for 1 CPU Core
PRO - PROFESSIONAL	
NT-NCM-PRO-PR	Subscription, Nutanix Cloud Manager (NCM) Pro Software License & Production Software Support Service for 1 CPU Core
NT-NCM-PRO-MC	Subscription, Nutanix Cloud Manager (NCM) Pro Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCM-PRO-AP	Subscription, Nutanix Cloud Manager (NCM) Pro Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCM-PRO-AM	Subscription, Nutanix Cloud Manager (NCM) Pro Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCM-PRO-FP	Subscription, Nutanix Cloud Manager (NCM) Pro Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCM-PRO-FM	Subscription, Nutanix Cloud Manager (NCM) Pro Software License & Federal Mission Critical Software Support Service for 1 CPU Core
ULT - ULTIMATE	
NT-NCM-ULT-PR	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License & Production Software Support Service for 1 CPU Core
NT-NCM-ULT-MC	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCM-ULT-AP	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCM-ULT-AM	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCM-ULT-FP	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCM-ULT-FM	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License & Federal Mission Critical Software Support Service for 1 CPU Core
COST GOVERNANCE	
NT-NCM-CM-FP	Subscription, NCM Cost Governance as a Service for US Federal including Production Support for 1 VM
NT-NCM-CM-OV-FP	Overage, NCM Cost Governance as a Service for US Federal including Production Support for 1 VM

Table 61.5 Nutanix Cloud Manager (NCM)

NT-NCM-CM-OV-PR	Overage, NCM Cost Governance as a Service including Production Support for 1 VM
NT-NCM-CM-PR	Subscription, NCM Cost Governance as a Service including Production Support for 1 VM
SECURITY CENTRAL	
NT-NCM-SC-FP	Subscription, NCM Security Central as a Service for US Federal including Production Support for 1 VM
NT-NCM-SC-OV-FP	Overage, NCM Security Central as a Service for US Federal including Production Support for 1 VM
NT-NCM-SC-OV-PR	Overage, NCM Security Central as a Service including Production Support for 1 VM
NT-NCM-SC-PR	Subscription, NCM Security Central as a Service including Production Support for 1 VM
SELF SERVICE	
NT-NCM-SS-OV-PR	Overage, NCM Self-Service & Orchestration as a Service including Production Support for 1 VM
NT-NCM-SS-PR	Subscription, NCM Self-Service & Orchestration as a Service including Production Support for 1 VM

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(7) Nutanix Cloud Manager Edge (NME):

Nutanix Cloud Manager (NCM) is a hybrid multi-cloud management platform for building a cloud operating model. NCM provides Intelligent Operations, Self-Service, Cost Governance, and Security natively with the Nutanix Platform or through a SaaS subscription.

- Self-service VMs and Apps are defined via simple blueprints, easily created, and managed via GUI/CLI.
- Management of IT lifecycle includes visibility, optimization, and financial control over multi-cloud deployments.
- Detect, monitor, and remediate security vulnerabilities and compliance near real-time across multiple cloud environment.

NOTE:

- For more information Nutanix Cloud Manager (NCM), please visit https://www.nutanix.com/products/cloud-manager
- For more information about Nutanix Cloud Platform software options, please visit https://www.nutanix.com/products/cloud-platform/software-options
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- PC 2024.2 is the minimum requirement for these licenses to be applied. Check and confirm the release schedule of PC before ordering these licenses.
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. For the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html

Table 61.6 Nutanix Cloud Manager Edge (NME)

Product ID (PID)	PID Description
STR - STARTER	
NT-NME-STR-PR	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for Edge Sites & Production Software Support Service per VM
NT-NME-STR-MC	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for Edge Sites & Mission Critical Software Support Service per VM
NT-NME-STR-AP	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for Edge Sites & L3 Production Software Support Service per VM (Authorized Support Partners provides L1, L2 support)
NT-NME-STR-AM	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for Edge Sites & L3 Mission Critical Software Support Service per VM (Authorized Support Partners provides L1, L2 support)

Table 61.6 Nutanix Cloud Manager Edge (NME)

NT-NME-STR-FP	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for Edge Sites & FED Production Software Support Service per VM
NT-NME-STR-FM	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for Edge Sites & FED Mission Critical Software Support Service per VM
PRO- PROFESSIONAL	
NT-NME-PRO-PR	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for Edge Sites & Production Software Support Service per VM
NT-NME-PRO-MC	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for Edge Sites & Mission Critical Software Support Service per VM
NT-NME-PRO-AP	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for Edge Sites & L3 Production Software Support Service per VM (Authorized Support Partners provides L1, L2 support)
NT-NME-PRO-AM	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for Edge Sites & L3 Mission Critical Software Support Service per VM (Authorized Support Partners provides L1, L2 support)
NT-NME-PRO-FP	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for Edge Sites & FED Production Software Support Service per VM
NT-NME-PRO-FM	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for Edge Sites & FED Mission Critical Software Support Service per VM
ULT - ULTIMATE	
NT-NME-ULT-PR	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for Edge Sites & Production Software Support Service per VM
NT-NME-ULT-MC	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for Edge Sites & Mission Critical Software Support Service per VM
NT-NME-ULT-AP	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for Edge Sites & L3 Production Software Support Service per VM (Authorized Support Partners provides L1, L2 support)
NT-NME-ULT-AM	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for Edge Sites & L3 Mission Critical Software Support Service per VM (Authorized Support Partners provides L1, L2 support)
NT-NME-ULT-FP	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for Edge Sites & FED Production Software Support Service per VM
NT-NME-ULT-FM	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for Edge Sites & FED Mission Critical Software Support Service per VM

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(8) Nutanix Cloud Manager EUC (NCM-U):

Nutanix Cloud Manager (NCM) is a hybrid multi-cloud management platform for building a cloud operating model. NCM provides Intelligent Operations, Self-Service, Cost Governance, and Security natively with the Nutanix Platform or through a SaaS subscription.

- Self-service VMs and Apps are defined via simple blueprints, easily created, and managed via GUI/CLI.
- Management of IT lifecycle includes visibility, optimization, and financial control over multi-cloud deployments.
- Detect, monitor, and remediate security vulnerabilities and compliance near real-time across multiple cloud environment.



NOTE:

- For more information Nutanix Cloud Manager (NCM), please visit https://www.nutanix.com/products/cloud-manager
- For more information about Nutanix Cloud Platform software options, please visit https://www.nutanix.com/products/cloud-platform/software-options
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- PC 2024.2 is the minimum requirement for these licenses to be applied. Check and confirm the release schedule of PC before ordering these licenses.
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. For the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html

Table 61.7 Nutanix Cloud Manager EUC (NCM-U)

Product ID (PID)	PID Description
STR - STARTER	
NT-NCM-U-STR-PR	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for EUC & Production Software Support Service per User
NT-NCM-U-STR-MC	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for EUC & Mission Critical Software Support Service per User
NT-NCM-U-STR-AP	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for EUC & L3 Production Software Support Service per User (Authorized Support Partners provides L1, L2 support)
NT-NCM-U-STR-AM	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for EUC & L3 Mission Critical Software Support Service per User (Authorized Support Partners provides L1, L2 support)
NT-NCM-U-STR-FP	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for EUC & FED Production Software Support Service per User

Table 61.7 Nutanix Cloud Manager EUC (NCM-U)

NT-NCM-U-STR-FM	Subscription, Nutanix Cloud Manager (NCM) Starter Software License for EUC & FED Mission Critical Software Support Service per User
PRO - PROFESSIONAL	
NT-NCM-U-PRO-PR	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for EUC & Production Software Support Service per User
NT-NCM-U-PRO-MC	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for EUC & Mission Critical Software Support Service per User
NT-NCM-U-PRO-AP	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for EUC & L3 Production Software Support Service per User (Authorized Support Partners provides L1, L2 support)
NT-NCM-U-PRO-AM	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for EUC & L3 Mission Critical Software Support Service per User (Authorized Support Partners provides L1, L2 support)
NT-NCM-U-PRO-FP	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for EUC & FED Production Software Support Service per User
NT-NCM-U-PRO-FM	Subscription, Nutanix Cloud Manager (NCM) Professional Software License for EUC & FED Mission Critical Software Support Service per User
ULT - ULTIMATE	
NT-NCM-U-ULT-PR	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for EUC & Production Software Support Service per User
NT-NCM-U-ULT-MC	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for EUC & Mission Critical Software Support Service per User
NT-NCM-U-ULT-AP	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for EUC & L3 Production Software Support Service per User (Authorized Support Partners provides L1, L2 support)
NT-NCM-U-ULT-AM	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for EUC & L3 Mission Critical Software Support Service per User (Authorized Support Partners provides L1, L2 support)
NT-NCM-U-ULT-FP	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for EUC & FED Production Software Support Service per User
NT-NCM-U-ULT-FM	Subscription, Nutanix Cloud Manager (NCM) Ultimate Software License for EUC & FED Mission Critical Software Support Service per User

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(9) Nutanix Cloud Platform (NCP) - Compute

9.1 Nutanix Cloud Platform (NCP):

Nutanix Cloud Infrastructure (NCI) and Nutanix Cloud Manager (NCM) can be purchased together in '**better together**' Nutanix Cloud Platform (NCP) bundles:

Nutanix Cloud Platform (NCP)	Nutanix Cloud Infrastructure (NCI) Included	Nutanix Cloud Manager (NCM) Edition included
NCP Starter	NCI Professional	NCM Professional
NCP Professional	NCI Ultimate	NCM Professional
NCP Ultimate	NCI Ultimate	NCM Ultimate



NOTE:

- For more information on Nutanix Cloud Platform (NCP) bundles, please visit https://www.nutanix.com/products/cloud-platform/software-options
- For more information about Nutanix Cloud Platform software options, please visit https://www.nutanix.com/products/cloud-platform/software-options
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines (https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix. Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. For the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html
- **The total number of cores for NCI and NCM should be same as NCP**
- **The support tiers for NCI and NCM should be same as NCP**

9.2 Nutanix Cloud Platform - Compute Only (NCP-C):

Nutanix Cloud Infrastructure (NCI-C) and Nutanix Cloud Manager (NCM) can be purchased together in 'better together' Nutanix Cloud Platform (NCP-C) bundles:

Nutanix Cloud Platform - Compute Only (NCP-C)	Nutanix Cloud Infrastructure - Compute Only (NCI-C) Included	Nutanix Cloud Manager (NCM) Edition included
NCP-C Starter	NCI-C Professional	NCM Professional
NCP-C Professional	NCI-C Ultimate	NCM Professional
NCP-C Ultimate	NCI-C Ultimate	NCM Ultimate

NOTE:

- For more information about Nutanix Cloud Infrastructure- Compute (NCI-C), please visit https://www.nutanix.com/products/nutanix-cloud-infrastructure/compute
- For more information about Nutanix Cloud Infrastructure capabilities and software options, please visit https://www.nutanix.com/library/datasheets/nci-c
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines (https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix. Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- **The total number of cores for NCI-C and NCM should be same as NCP-C**
- **The support tiers for NCI-C and NCM should be same as NCP-C**

WARNING:

- 1,000 cores for Canada, Zone 2 USA: USA Enterprise (East, West, North), USA Federal and USA Healthcare
- 300 cores for the rest of the world. Japan, APAC ex Japan, EMEA, LATAM, Zone 1 USA: US Commercial, US SLED, US Channel Led.
- After this threshold is met, the customer is no longer subject to a minimum core requirement for subsequent orders, but quantity of NCP-C, NCI-C, and NCM license must match with total number for processor cores in hardware platforms.

Table 61.8 Nutanix Cloud Platform (NCP) / Nutanix Cloud Platform - Compute Only (NCP-C)

Product ID (PID)	PID Description
NCP STR - STARTER	
NT-NCP-STR-PR	Subscription, Nutanix Cloud Platform Starter Software License & Production Software Support Service for 1 CPU Core
NT-NCP-STR-MC	Subscription, Nutanix Cloud Platform Starter Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-STR-AP	Subscription, Nutanix Cloud Platform Starter Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-STR-AM	Subscription, Nutanix Cloud Platform Starter Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-STR-FP	Subscription, Nutanix Cloud Platform Starter Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCP-STR-FM	Subscription, Nutanix Cloud Platform Starter Software License & Federal Mission Critical Software Support Service for 1 CPU Core
NCP-C STR - STARTER	

Table 61.8 Nutanix Cloud Platform (NCP) / Nutanix Cloud Platform - Compute Only (NCP-C)

NT-NCP-C-STR-PR	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Starter Software License & Production Software Support Service for 1 CPU Core
NT-NCP-C-STR-MC	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Starter Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-C-STR-FP	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Starter Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCP-C-STR-FM	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Starter Software License & Federal Mission Critical Software Support Service for 1 CPU Core
NCP PRO- PROFESSIONAL	
NT-NCP-PRO-PR	Subscription, Nutanix Cloud Platform Pro Software License & Production Software Support Service for 1 CPU Core
NT-NCP-PRO-MC	Subscription, Nutanix Cloud Platform Pro Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-PRO-AP	Subscription, Nutanix Cloud Platform Pro Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-PRO-AM	Subscription, Nutanix Cloud Platform Pro Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-PRO-FP	Subscription, Nutanix Cloud Platform Pro Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCP-PRO-FM	Subscription, Nutanix Cloud Platform Pro Software License & Federal Mission Critical Software Support Service for 1 CPU Core
NCP-C PRO- PROFESSIONAL	
NT-NCP-C-PRO-PR	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Pro Software License & Production Software Support Service for 1 CPU Core
NT-NCP-C-PRO-MC	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Pro Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-C-PRO-FP	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Pro Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCP-C-PRO-FM	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Pro Software License & Federal Mission Critical Software Support Service for 1 CPU Core
NCP ULT-ULTIMATE	
NT-NCP-ULT-PR	Subscription, Nutanix Cloud Platform Ultimate Software License & Production Software Support Service for 1 CPU Core
NT-NCP-ULT-MC	Subscription, Nutanix Cloud Platform Ultimate Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-ULT-AP	Subscription, Nutanix Cloud Platform Ultimate Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)

Table 61.8 Nutanix Cloud Platform (NCP) / Nutanix Cloud Platform - Compute Only (NCP-C)

NT-NCP-ULT-AM	Subscription, Nutanix Cloud Platform Ultimate Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-ULT-FP	Subscription, Nutanix Cloud Platform Ultimate Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCP-ULT-FM	Subscription, Nutanix Cloud Platform Ultimate Software License & Federal Mission Critical Software Support Service for 1 CPU Core
NCP-C ULT-ULTIMATE	
NT-NCP-C-ULT-PR	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Ultimate Software License & Production Software Support Service for 1 CPU Core
NT-NCP-C-ULT-MC	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Ultimate Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-C-ULT-FP	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Ultimate Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCP-C-ULT-FM	Subscription, Nutanix Cloud Platform - Compute Only (NCP-C) Ultimate Software License & Federal Mission Critical Software Support Service for 1 CPU Core
NCI PROFESSIONAL	
NT-NCP-NCI-PRO-PR	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Pro Software License & Production Software Support Service for 1 CPU Core
NT-NCP-NCI-PRO-MC	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Pro Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-NCI-PRO-AP	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Pro Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-NCI-PRO-AM	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Pro Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-NCI-PRO-FP	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Pro Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCP-NCI-PRO-FM	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Pro Software License & Federal Mission Critical Software Support Service for 1 CPU Core
NCI-C PROFESSIONAL	
NT-NCP-NCIC-PO-PR	Subscription, (included in NCP-C) Nutanix Cloud Infrastructure - Compute Only (NCI-C) Pro Software License & Production Software Support Service for 1 CPU Core
NT-NCP-NCIC-PO-MC	Subscription, (included in NCP-C) Nutanix Cloud Infrastructure - Compute Only (NCI-C) Pro Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-NCIC-PO-FP	Subscription, (included in NCP-C) Nutanix Cloud Infrastructure - Compute Only (NCI-C) Pro Software License & Federal/Stateside Production Software Support Service for 1 CPU Core

Table 61.8 Nutanix Cloud Platform (NCP) / Nutanix Cloud Platform - Compute Only (NCP-C)

NT-NCP-NCIC-PO-FM	Subscription, (included in NCP-C) Nutanix Cloud Infrastructure - Compute Only (NCI-C) Pro Software License & Federal/Stateside Mission Critical Software Support Service for 1 CPU Core
NCI ULTIMATE	
NT-NCP-NCI-ULT-PR	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Ultimate Software License & Production Software Support Service for 1 CPU Core
NT-NCP-NCI-ULT-MC	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Ultimate Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-NCI-ULT-AP	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Ultimate Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-NCI-ULT-AM	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Ultimate Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-NCI-ULT-FP	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Ultimate Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCP-NCI-ULT-FM	Subscription, (included in NCP) Nutanix Cloud Infrastructure (NCI) Ultimate Software License & Federal Mission Critical Software Support Service for 1 CPU Core
NCI-C ULTIMATE	
NT-NCP-NCIC-UT-PR	Subscription, (included in NCP-C) Nutanix Cloud Infrastructure - Compute Only (NCI-C) Ultimate Software License & Production Software Support Service for 1 CPU Core
NT-NCP-NCIC-UT-MC	Subscription, (included in NCP-C) Nutanix Cloud Infrastructure - Compute Only (NCI-C) Ultimate Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-NCIC-UT-FP	Subscription, (included in NCP-C) Nutanix Cloud Infrastructure - Compute Only (NCI-C) Ultimate Software License & Federal/Stateside Production Software Support Service for 1 CPU Core
NT-NCP-NCIC-UT-FM	Subscription, (included in NCP-C) Nutanix Cloud Infrastructure - Compute Only (NCI-C) Ultimate Software License & Federal/Stateside Mission Critical Software Support Service for 1 CPU Core
NCM PROFESSIONAL	
NT-NCP-NCM-PRO-PR	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Pro Software License & Production Software Support Service for 1 CPU Core
NT-NCP-NCM-PRO-MC	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Pro Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-NCM-PRO-AP	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Pro Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)

Table 61.8 Nutanix Cloud Platform (NCP) / Nutanix Cloud Platform - Compute Only (NCP-C)

NT-NCP-NCM-PRO-AM	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Pro Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-NCM-PRO-FP	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Pro Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCP-NCM-PRO-FM	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Pro Software License & Federal Mission Critical Software Support Service for 1 CPU Core
NCM ULTIMATE	
NT-NCP-NCM-ULT-PR	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Ultimate Software License & Production Software Support Service for 1 CPU Core
NT-NCP-NCM-ULT-MC	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Ultimate Software License & Mission Critical Software Support Service for 1 CPU Core
NT-NCP-NCM-ULT-AP	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Ultimate Software License & L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-NCM-ULT-AM	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Ultimate Software License & L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NCP-NCM-ULT-FP	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Ultimate Software License & Federal Production Software Support Service for 1 CPU Core
NT-NCP-NCM-ULT-FM	Subscription, (included in NCP) Nutanix Cloud Manager (NCM) Ultimate Software License & Federal Mission Critical Software Support Service for 1 CPU Core

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(10) Nutanix Database Services (NDB):

Nutanix Database Service is a Database-as-a-Service (DBaaS) platform that enables teams to provision, operate, and scale databases across on-premises and hybrid cloud environments with minimal operational overhead. It supports popular SQL, NoSQL, and Vector databases that include Oracle, Microsoft SQL Server, MySQL, MariaDB, PostgreSQL with pgvector, EDB, and MongoDB and offers full lifecycle management—including provisioning, patching, cloning, backup & recovery, high availability, and security —through a unified console or via REST APIs.

NDB brings the simplicity of cloud database management to your datacenter. NDB is designed to give you the best of both worlds: the control and compliance of on-premises infrastructure, paired with the automation and agility of the cloud.

NDB customers have benefited from up to 10x faster read/write I/O, snapshot and restore for a 40 TB database in under eight minutes, one-click bulk patching in minutes, and realized up to 9x storage cost savings.

NOTE:

- For more information **Nutanix Database Services (NDBs)**, please visit https://www.nutanix.com/products/database-service

Table 61.9 Nutanix Database Services (NDB)

Product ID (PID)	PID Description
ULT - ULTIMATE	
NT-NDB-PR	NDB SWLIC (NCI ULT) PR SWSupp per Core Lic all cluster cores
NT-NDB-MC	NDB SWLIC (NCI ULT) MC SWSupp per Core Lic all cluster cores
NT-NDB-FM	NDB SWLIC (NCI ULT) FM SWSupp per Core Lic all cluster cores
NT-NDB-FP	NDB SWLIC (NCI ULT) FP SWSupp per Core Lic all cluster cores

(11) Nutanix Unified Storage™ (NUS):

Nutanix Unified Storage™ (NUS) is a software-defined data services platform that consolidates the management and protection of siloed block, file, and object storage into a single, unified platform. NUS harnesses the power of rich data services such as analytics, ransomware protection, lifecycle management, and data protection. These features enable organizations to seamlessly adapt to the ever-changing requirements of modern applications, allowing them to shift their management focus from data storage to data management. Leveraging the Nutanix Cloud Platform™ (NCP) software, NUS is specifically built to meet the needs of modern applications deployed across core, cloud, and edge infrastructure. With its capacity for seamless scaling, high performance, and integrated data security, NUS provides a comprehensive solution for organizations.

Includes:

- **Nutanix Files Storage:** simple and secure software-defined scale-out file storage solution to store, manage, and scale files data (NFS and SMB)
- **Nutanix Objects Storage:** distributed scale-out S3-compatible object storage for both archive and high-performance analytics
- **Nutanix Volumes Storage:** high-performance low-latency block storage
- **Nutanix Data Lens:** available as an add-on for data analytics, anomaly behavior detection and ransomware protection
- **Nutanix AOS:** scale-out storage technology that makes hyperconverged infrastructure (HCI) possible.
- **Nutanix AHV:** lightweight cloud hypervisor built into Nutanix platform and offers enterprise-grade storage capabilities and built-in Kubernetes support.
- **App VMs running on storage:** NUS dedicated clusters are entitled to 1 app/user VM per node in the cluster. NCI clusters don't have any limit on the number of app/user VMs on the cluster.

NOTE:

- For more information **Nutanix Unified Storage™ (NUS)**, please visit https://www.nutanix.com/products/cloud-platform/software-options#nus
- For more information about Nutanix Cloud Platform software options, please visit https://www.nutanix.com/products/cloud-platform/software-options
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. For the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html

---

Table 61.10 Nutanix Unified Storage™ (NUS)

Product ID (PID)	PID Description
PRO - PROFESSIONAL	
NT-NUS-PRO-PR	Nutanix Unified Storage Professional Software License & Production Software Support for 1 TiB
NT-NUS-PRO-MC	Nutanix Unified Storage Professional Software License & Mission Critical Software Support for 1 TiB
NT-NUS-PRO-AP	Nutanix Unified Storage Professional Software License & L3 Production Software Support for 1 TiB (Authorized Support Partners provides L1, L2 support)
NT-NUS-PRO-AM	Nutanix Unified Storage Professional Software License & L3 Mission Critical Software Support for 1 TiB (Authorized Support Partners provides L1, L2 support)
NT-NUS-PRO-FP	Nutanix Unified Storage Professional Software License & Federal Production Software Support for 1 TiB
NT-NUS-PRO-FM	Nutanix Unified Storage Professional Software License & Federal Mission Critical Software Support for 1 TiB
ADVANCED REPLICATION	
NT-A-NUS-ADR-PR	Nutanix Unified Storage Advanced Replication add-on Software License & Production Software Support 1 TiB
NT-A-NUS-ADR-MC	Nutanix Unified Storage Advanced Replication add-on Software License & Mission Critical Software Support 1 TiB
NT-A-NUS-ADR-AP	Nutanix Unified Storage Advanced Replication add-on Software License & L3 Production Software Support 1 TiB (Authorized Support Partners provides L1, L2 support)
NT-A-NUS-ADR-AM	Nutanix Unified Storage Advanced Replication add-on Software License & L3 Mission Critical Software Support 1 TiB (Authorized Support Partners provides L1, L2 support)
NT-A-NUS-ADR-FP	Nutanix Unified Storage Advanced Replication add-on Software License & Federal Production Software Support 1 TiB
NT-A-NUS-ADR-FM	Nutanix Unified Storage Advanced Replication add-on Software License & Federal Mission Critical Support 1 TiB
SECURITY	
NT-A-NUS-SEC-PR	Nutanix Unified Storage Security add-on Software License & Production Software Support 1 TiB
NT-A-NUS-SEC-MC	Nutanix Unified Storage Security add-on Software License & Mission Critical Software Support 1 TiB
NT-A-NUS-SEC-AP	Nutanix Unified Storage Security add-on Software License & L3 Production Software Support 1 TiB (Authorized Support Partners provides L1, L2 support)
NT-A-NUS-SEC-AM	Nutanix Unified Storage Security add-on Software License & L3 Mission Critical Software Support 1 TiB (Authorized Support Partners provides L1, L2 support)

Table 61.10 Nutanix Unified Storage™ (NUS)

NT-A-NUS-SEC-FP	Nutanix Unified Storage Security add-on Software License & Federal Production Software Support 1 TiB
NT-A-NUS-SEC-FM	Nutanix Unified Storage Security add-on Software License & Federal Mission Critical Software Support 1 TiB

Nutanix Unified Storage Allowed Capacity

Nutanix Unified Storage	Nutanix Unified Storage Support Tier	Storage Capacity Allowed (TIB)
Pro (Professional) License Tier (NT-NUS-PRO-*) Advanced Replication (NT-A-NUS-ADR-*) Security (NT-A-NUS-SEC-*)	**Production Mission Critical Federal Production Federal Mission Critical**	1-50
		75
		100
		150
		200
		250
		300
		350
		400
		450
		500
		550
		600
		700
		800
		900
		1000
		1200
		1400
		1600
		1800
		2000
		2200
		2400
		2600
		2800
		3000
		4000
		5000
		6000
		7000
		8000
		9000
		10000

(12) Nutanix Data Lens (NDL):

Nutanix Data Lens is a SaaS-based cyberstorage solution offering ransomware resilience and global data visibility for unstructured data on Nutanix Unified Storage (NUS). This cloud-based data analytics service proactively assesses and mitigates data security risks by identifying anomalous activity, auditing user behavior, and adhering to compliance requirements. while enabling efficient data lifecycle management.

Nutanix Data Lens is currently offered through a “Freemium” licensing model, consisting of two tiers:

1. “Basic Tier” comprises limited capabilities that are available perpetually free for NUS Pro customers

2. “Premium Tier” comprises extended capabilities, including Ransomware security, and is licensed on a per TiB basis for all NUS customers.

Self-service onboarding for current Nutanix Unified Storage Customers through My Nutanix Portal.

NOTE:

- For more information **Nutanix Data Lens (NDL)**, please visit https://www.nutanix.com/products/cloud-platform/software-options#nus
- For more information about Nutanix Cloud Platform software options, please visit https://www.nutanix.com/products/cloud-platform/software-options
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. For the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html

Table 61.11 Nutanix Data Lens (NDL)

Product ID (PID)	PID Description
NDL	
NT-NDL-PR	Nutanix Data Lens as a hosted service including Production Support for 1 TiB
NT-NDL-FP	Nutanix Data Lens as a hosted service incl Fed Production Support for 1 TiB

Nutanix Data Lens Allowed Capacity

Nutanix Data Lens	Nutanix Data Lens Support Tier	Storage Capacity Allowed (TIB)
NDL	Production Federal Production	1-50
		75
		100
		150
		200
		250
		300
		350
		400
		450
		500
		550
		600
		700
		800
		900
		1000
		1200
		1400
		1600
		1800
		2000
		2200
		2400
		2600
		2800
		3000

(13) Nutanix Kubernetes Platform (NKP):

Nutanix Kubernetes Platform (NKP) combines the Nutanix Kubernetes Engine (NKE) features with their acquisition of the D2iQ product family to bring a consolidated runtime, orchestration, and management environment to our cloud native customers. The SKUs have two ordering options:

1. NKP Full Stack (Starter, Pro & Ultimate) - This includes the Complete Nutanix stack, bundling NCI, NDK and NKP. This is core based licensing (for all cores in cluster) and feature/capability inclusions depend on the whether it's starter, Pro or Ultimate. This is suitable for customers who will have Nutanix clusters exclusively for container workloads.

2. NKP (Pro & Ultimate) - NKP Starter is Bundled with NCI Pro and Ultimate . This adds NKP to existing NCI deployments (for AHV, ESXi, AWS EC2 & Azure). The Kubernetes and associated NKP functionality is provided by running master and worker node VMs on NCI. This is licensed on vCPU for the workload VMs that will be deployed. This is suitable for customers who already have Nutanix NCI clusters.

NOTE:

- For more information about Nutanix Kubernetes Platform (NKP), please visit https://www.nutanix.com/products/cloud-platform/software-options#nkp
- For more information about Nutanix Cloud Platform software options, please visit https://www.nutanix.com/products/cloud-platform/software-options
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. For the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html
- **The quantity of NKP Full Stack (FS) license must match with total number for processor cores in hardware platforms.**

Table 61.12 Nutanix Kubernetes Platform (NKP)

Product ID (PID)	PID Description
FS STR - FULL STACK STARTER	
NT-NKP-FS-STR-PR	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Starter Software License and Production Software Support Service for 1 CPU Core
NT-NKP-FS-STR-MC	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Starter Software License and Mission Critical Software Support Service for 1 CPU Core
NT-NKP-FS-STR-AP	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Starter Software License and L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NKP-FS-STR-AM	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Starter Software License and L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)

Table 61.12 Nutanix Kubernetes Platform (NKP)

NT-NKP-FS-STR-FP	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Starter Software License and Federal Production Software Support Service for 1 CPU Core
NT-NKP-FS-STR-FM	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Starter Software License and Federal Mission Critical Software Support Service for 1 CPU Core
FS PRO - FULL STACK PROFESSIONAL	
NT-NKP-FS-PRO-PR	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Pro Software License and Production Software Support Service for 1 CPU Core
NT-NKP-FS-PRO-MC	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Pro Software License and Mission Critical Software Support Service for 1 CPU Core
NT-NKP-FS-PRO-AP	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Pro Software License and L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NKP-FS-PRO-AM	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Pro Software License and L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NKP-FS-PRO-FP	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Pro Software License and Federal Production Software Support Service for 1 CPU Core
NT-NKP-FS-PRO-FM	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Pro Software License and Federal Mission Critical Software Support Service for 1 CPU Core
FS ULT - FULL STACK ULTIMATE	
NT-NKP-FS-ULT-PR	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Ultimate Software License and Production Software Support Service for 1 CPU Core
NT-NKP-FS-ULT-MC	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Ultimate Software License and Mission Critical Software Support Service for 1 CPU Core
NT-NKP-FS-ULT-AP	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Ultimate Software License and L3 Production Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NKP-FS-ULT-AM	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Ultimate Software License and L3 Mission Critical Software Support Service for 1 CPU Core (Authorized Support Partners provides L1, L2 support)
NT-NKP-FS-ULT-FP	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Ultimate Software License and Federal Production Software Support Service for 1 CPU Core
NT-NKP-FS-ULT-FM	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Ultimate Software License and Federal Mission Critical Software Support Service for 1 CPU Core
PRO - PROFESSIONAL	
NT-NKP-PRO-PR	Subscription, Nutanix Kubernetes Platform (NKP) Pro Software License for NCI or non-Nutanix infrastructure and Production Software Support Service for 1 vCPU (or 1 CPU Core on bare metal)

Table 61.12 Nutanix Kubernetes Platform (NKP)

NT-NKP-PRO-MC	Subscription, Nutanix Kubernetes Platform (NKP) Pro Software License for NCI or non-Nutanix infrastructure and Mission Critical Software Support Service for 1 vCPU (or 1 CPU Core on bare metal)
NT-NKP-PRO-AP	Subscription, Nutanix Kubernetes Platform (NKP) Pro Software License for NCI or non-Nutanix infrastructure and L3 Production Software Support Service for 1 vCPU (or 1 CPU Core on bare metal) (Authorized Support Partners provides L1, L2 support)
NT-NKP-PRO-AM	Subscription, Nutanix Kubernetes Platform (NKP) Pro Software License for NCI or non-Nutanix infrastructure and L3 Mission Critical Software Support Service for 1 vCPU (or 1 CPU Core on bare metal) (Authorized Support Partners provides L1, L2 support)
NT-NKP-PRO-FP	Subscription, Nutanix Kubernetes Platform (NKP) Pro Software License for NCI or non-Nutanix infrastructure and Federal Production Software Support Service for 1 vCPU (or 1 CPU Core on bare metal)
NT-NKP-PRO-FM	Subscription, Nutanix Kubernetes Platform (NKP) Pro Software License for NCI or non-Nutanix infrastructure and Federal Mission Critical Software Support Service for 1 vCPU (or 1 CPU Core on bare metal)
ULT - ULTIMATE	
NT-NKP-ULT-PR	Subscription, Nutanix Kubernetes Platform (NKP) Ultimate Software License for NCI or non-Nutanix infrastructure and Production Software Support Service for 1 vCPU (or 1 CPU Core on bare metal)
NT-NKP-ULT-MC	Subscription, Nutanix Kubernetes Platform (NKP) Ultimate Software License for NCI or non-Nutanix infrastructure and Mission Critical Software Support Service for 1 vCPU (or 1 CPU Core on bare metal)
NT-NKP-ULT-AP	Subscription, Nutanix Kubernetes Platform (NKP) Ultimate Software License for NCI or non-Nutanix infrastructure and L3 Production Software Support Service for 1 vCPU (or 1 CPU Core on bare metal) (Authorized Support Partners provides L1, L2 support)
NT-NKP-ULT-AM	Subscription, Nutanix Kubernetes Platform (NKP) Ultimate Software License for NCI or non-Nutanix infrastructure and L3 Mission Critical Software Support Service for 1 vCPU (or 1 CPU Core on bare metal) (Authorized Support Partners provides L1, L2 support)
NT-NKP-ULT-FP	Subscription, Nutanix Kubernetes Platform (NKP) Ultimate Software License for NCI or non-Nutanix infrastructure and Federal Production Software Support Service for 1 vCPU (or 1 CPU Core on bare metal)
NT-NKP-ULT-FM	Subscription, Nutanix Kubernetes Platform (NKP) Ultimate Software License for NCI or non-Nutanix infrastructure and Federal Mission Critical Software Support Service for 1 vCPU (or 1 CPU Core on bare metal)

Table 65.0, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping**

Table 65.1, **Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping**

(14) Nutanix Enterprise AI (NAI):

The Nutanix Enterprise AI (NAI) solution offers endpoint APIs for the leading LLM providers, including NVIDIA NIM and Hugging Face, making it easy for organizations to deploy a wide range of GenAI models securely, on-premises or in the public cloud. NAI includes a simple UI, role-based access controls (RBAC), and the capability for untethered operations (dark site or air-gapped deployments) to simplify the operation, monitoring, and adaptation of AI models (LLMs) with enterprise resiliency, Day 2 operations, and compliance.

Nutanix AI Platform has 2 ordering requirements & both need to be ordered:

- CPU (measured in vCPU/Core): This quantity should correspond to the number of physical cores for bare-metal deployments or the vCPUs for virtual deployments.
- GB (memory on GPU): Note that this refers to the total GPU memory, not the physical memory of the nodes in the cluster, and it depends on the GPU selected.

NOTE:

- For more information about Nutanix Enterprise AI (NAI), please visit https://www.nutanix.com/library/datasheets/nutanix-enterprise-ai
- For more information about Nutanix Cloud Platform software options, please visit https://www.nutanix.com/products/cloud-platform/software-options
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html

Table 61.13 Nutanix Enterprise AI (NAI)

Product ID (PID)	PID Description
NAI NKP PROFESSIONAL	
NT-B-AI-G-PO-PR	Subscription, Nutanix Enterprise AI (NAI) GPT-in-a-Box Pro Software License & Production Software Support Service
NT-B-AI-G-PO-MC	Subscription, Nutanix Enterprise AI (NAI) GPT-in-a-Box Pro Software License & Mission Critical Software Support Service
NT-B-AI-G-PO-FP	Subscription, Nutanix Enterprise AI (NAI) GPT-in-a-Box Pro Software License & Federal/Stateside Production Software Support Service
NT-B-AI-G-PO-FM	Subscription, Nutanix Enterprise AI (NAI) GPT-in-a-Box Pro Software License & Federal/Stateside Mission Critical Software Support Service
NAI GPT ULTIMATE	
NT-B-AI-G-UT-PR	Subscription, Nutanix Enterprise AI (NAI) GPT-in-a-Box Ultimate Software License & Production Software Support Service

Table 61.13 Nutanix Enterprise AI (NAI)

NT-B-AI-G-UT-MC	Subscription, Nutanix Enterprise AI (NAI) GPT-in-a-Box Ultimate Software License & Mission Critical Software Support Service
NT-B-AI-G-UT-FP	Subscription, Nutanix Enterprise AI (NAI) GPT-in-a-Box Ultimate Software License & Federal/Stateside Production Software Support Service
NT-B-AI-G-UT-FM	Subscription, Nutanix Enterprise AI (NAI) GPT-in-a-Box Ultimate Software License & Federal/Stateside Mission Critical Software Support Service
NAI NKP PROFESSIONAL	
NT-B-AI-NKP-PO-PR	Subscription, Nutanix Enterprise AI (NAI) Pro and Nutanix Kubernetes Platform (NKP) Pro Software License & Production Software Support Service
NT-B-AI-NKP-PO-MC	Subscription, Nutanix Enterprise AI (NAI) Pro and Nutanix Kubernetes Platform (NKP) Pro Software License & Mission Critical Software Support Service
NT-B-AI-NKP-PO-FP	Subscription, Nutanix Enterprise AI (NAI) Pro and Nutanix Kubernetes Platform (NKP) Pro Software License & Federal/Stateside Production Software Support Service
NT-B-AI-NKP-PO-FM	Subscription, Nutanix Enterprise AI (NAI) Pro and Nutanix Kubernetes Platform (NKP) Pro Software License & Federal/Stateside Mission Critical Software Support Service
NAI NKP ULTIMATE	
NT-B-AI-NKP-UT-PR	Subscription, Nutanix Enterprise AI (NAI) Pro and Nutanix Kubernetes Platform (NKP) Ultimate Software License & Production Software Support Service
NT-B-AI-NKP-UT-MC	Subscription, Nutanix Enterprise AI (NAI) Pro and Nutanix Kubernetes Platform (NKP) Ultimate Software License & Mission Critical Software Support Service
NT-B-AI-NKP-UT-FP	Subscription, Nutanix Enterprise AI (NAI) Pro and Nutanix Kubernetes Platform (NKP) Ultimate Software License & Federal/Stateside Production Software Support Service
NT-B-AI-NKP-UT-FM	Subscription, Nutanix Enterprise AI (NAI) Pro and Nutanix Kubernetes Platform (NKP) Ultimate Software License & Federal/Stateside Mission Critical Software Support Service
NAI PROFESSIONAL GB	
NT-B-AI-PO-GB-PR	Subscription, Nutanix Enterprise AI (NAI) Pro Software License & Production Software Support Service for 1 GB of GPU RAM
NT-B-AI-PO-GB-MC	Subscription, Nutanix Enterprise AI (NAI) Pro Software License & Mission Critical Software Support Service for 1 GB of GPU RAM
NT-B-AI-PO-GB-FP	Subscription, Nutanix Enterprise AI (NAI) Pro Software License & Federal/Stateside Production Software Support Service for 1 GB of GPU RAM
NT-B-AI-PO-GB-FM	Subscription, Nutanix Enterprise AI (NAI) Pro Software License & Federal/Stateside Mission Critical Software Support Service for 1 GB of GPU RAM
NAI PROFESSIONAL vCPU	

Table 61.13 Nutanix Enterprise AI (NAI)

NT-B-AI-PO-C-PR	Subscription, Nutanix Enterprise AI (NAI) Pro Software License & Production Software Support Service for 1 vCPU
NT-B-AI-PO-C-MC	Subscription, Nutanix Enterprise AI (NAI) Pro Software License & Mission Critical Software Support Service for 1 vCPU
NT-B-AI-PO-C-FP	Subscription, Nutanix Enterprise AI (NAI) Pro Software License & Federal/Stateside Production Software Support Service for 1 vCPU
NT-B-AI-PO-C-FM	Subscription, Nutanix Enterprise AI (NAI) Pro Software License & Federal/Stateside Mission Critical Software Support Service for 1 vCPU
NKP FS PROFESSIONAL	
NT-B-NKP-FS-PO-PR	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Pro Software License and Production Software Support Service for 1 physical CPU Core
NT-B-NKP-FS-PO-MC	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Pro Software License and Mission Critical Software Support Service for 1 physical CPU Core
NT-B-NKP-FS-PO-FP	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Pro Software License and Federal/Stateside/Stateside Production Software Support Service for 1 physical CPU Core
NT-B-NKP-FS-PO-FM	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Pro Software License and Federal/Stateside/Stateside Mission Critical Software Support Service for 1 physical CPU Core
NKP FS ULTIMATE	
NT-B-NKP-FS-UT-PR	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Ultimate Software License and Production Software Support Service for 1 physical CPU Core
NT-B-NKP-FS-UT-MC	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Ultimate Software License and Mission Critical Software Support Service for 1 physical CPU Core
NT-B-NKP-FS-UT-FP	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Ultimate Software License and Federal/Stateside/Stateside Production Software Support Service for 1 physical CPU Core
NT-B-NKP-FS-UT-FM	Subscription, Nutanix Kubernetes Platform (NKP) Full Stack Ultimate Software License and Federal/Stateside/Stateside Mission Critical Software Support Service for 1 physical CPU Core
NKP PROFESSIONAL	
NT-B-NKP-PO-PR	Subscription, Nutanix Kubernetes Platform (NKP) Pro Software License & Production Software Support Service for 1 vCPU
NT-B-NKP-PO-MC	Subscription, Nutanix Kubernetes Platform (NKP) Pro Software License & Mission Critical Software Support Service for 1 vCPU
NT-B-NKP-PO-FP	Subscription, Nutanix Kubernetes Platform (NKP) Pro Software License & Federal/Stateside Production Software Support Service for 1 vCPU
NT-B-NKP-PO-FM	Subscription, Nutanix Kubernetes Platform (NKP) Pro Software License & Federal/Stateside Mission Critical Software Support Service for 1 vCPU

Table 61.13 Nutanix Enterprise AI (NAI)

NKP ULTIMATE	
NT-B-NKP-UT-PR	Subscription, Nutanix Kubernetes Platform (NKP) Ultimate Software License & Production Software Support Service for 1 vCPU
NT-B-NKP-UT-MC	Subscription, Nutanix Kubernetes Platform (NKP) Ultimate Software License & Mission Critical Software Support Service for 1 vCPU
NT-B-NKP-UT-FP	Subscription, Nutanix Kubernetes Platform (NKP) Ultimate Software License & Federal/Stateside Production Software Support Service for 1 vCPU
NT-B-NKP-UT-FM	Subscription, Nutanix Kubernetes Platform (NKP) Ultimate Software License & Federal/Stateside Mission Critical Software Support Service for 1 vCPU
NAI PROFESSIONAL GB Standalone	
NT-AI-PRO-GB-PR	Subscription, Nutanix Enterprise AI (NAI) Pro Software License and Production Software Support Service for 1 GB of GPU RAM
NT-AI-PRO-GB-MC	Subscription, Nutanix Enterprise AI (NAI) Pro Software License and Mission Critical Software Support Service for 1 GB of GPU RAM
NT-AI-PRO-GB-FP	Subscription, Nutanix Enterprise AI (NAI) Pro Software License and Federal/Stateside Production Software Support Service for 1 GB of GPU RAM
NT-AI-PRO-GB-FM	Subscription, Nutanix Enterprise AI (NAI) Pro Software License and Federal/Stateside Mission Critical Software Support Service for 1 GB of GPU RAM
NAI PROFESSIONAL vCPU Standalone	
NT-AI-PRO-C-PR	Subscription, Nutanix Enterprise AI (NAI) Pro Software License and Production Software Support Service for 1 vCPU
NT-AI-PRO-C-MC	Subscription, Nutanix Enterprise AI (NAI) Pro Software License and Mission Critical Software Support Service for 1 vCPU
NT-AI-PRO-C-FP	Subscription, Nutanix Enterprise AI (NAI) Pro Software License and Federal/Stateside Production Software Support Service for 1 vCPU
NT-AI-PRO-C-FM	Subscription, Nutanix Enterprise AI (NAI) Pro Software License and Federal/Stateside Mission Critical Software Support Service for 1 vCPU

Nutanix software limited orderability

(1) End User Computing Hyperspace (EUCH):

Epic software is suite of software that is primarily used in the Healthcare industry. The Epic software can be deployed on Nutanix HCI. Solution & details can be found here (https://portal.nutanix.com/page/documents/solutions/details?targetId=BP-2055-Epic-on-Nutanix:BP-2055-Epic-on-Nutanix)

NTX-SW-LO is an ATO that has specific SKUs for Epic customers using Hyperspace or Hyperdrive. Hyperspace EUC SKU's begin with (NT-EUC-H-) and there are a total of 18 SKUs.

Refer to the link in the notes section for the process details

These SKUs can only be bought by customers who satisfy the following 2 conditions:

- End-user is Epic software customer (Epic headquarters is in Verona, WI)
- End-user must include the client presentation of Epic Hyperspace or Hyperdrive (component of the Epic suite of software). SKUs are for this component.



NOTE:

- KB article on process for EUC SKUs: https://computekb.cisco.com/article/process-flow-when-ordering-hyperspace-euc-skus.html
- Please note that the Federal Support program is reserved for US Federal accounts. US Federal accounts must select Federal Support Tier for the order to be fulfilled. If a non-Federal account selects a Federal Support program, Nutanix may not fulfill the order. Additionally, Nutanix's Mixed Support Level Guidelines(https://www.nutanix.com/support-services/product-support/support-policies-and-faqs?show=accordion-4) requires all software assets within a cluster to have the same support level, else software support will default to the lower option.
- Sellers in the Federal space need to ensure they have the Federal Support SKU's on the quote and order. All orders without the Federal Support SKU's will be rejected by Nutanix.Refer this Knowledge base article for more info: https://computekb.cisco.com/article/nutanix-support-for-federal-customers.html
- Authorized Partners of Nutanix can offer Level 1 & Level 2 support for Nutanix Software. for the complete list visit https://computekb.cisco.com/article/rules-for-ordering-nutanix-partner-support-skus.html

Table 62 End User Computing Hyperspace (EUCH)

Product ID (PID)	PID Description
STR - STARTER	
NT-EUC-H-STR-PR	Subscription, End User Computing (EUC) Starter Software License for Epic Hyperspace & Production Software Support Service for 1 User
NT-EUC-H-STR-MC	Subscription, End User Computing (EUC) Starter Software License for Epic Hyperspace & Mission Critical Software Support Service for 1 User
NT-EUC-H-STR-AP	Subscription, End User Computing (EUC) Starter Software License for Epic Hyperspace & L3 Production Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)

Table 62 End User Computing Hyperspace (EUCH)

NT-EUC-H-STR-AM	Subscription, End User Computing (EUC) Starter Software License for Epic Hyperspace & L3 Mission Critical Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)
NT-EUC-H-STR-FP	Subscription, End User Computing (EUC) Starter Software License for Epic Hyperspace & Federal Production Software Support Service for 1 User
NT-EUC-H-STR-FM	Subscription, End User Computing (EUC) Starter Software License for Epic Hyperspace & Federal Mission Critical Software Support Service for 1 User
PRO- PROFESSIONAL	
NT-EUC-H-PRO-PR	Subscription, End User Computing (EUC) Professional Software License for Epic Hyperspace & Production Software Support Service for 1 User
NT-EUC-H-PRO-MC	Subscription, End User Computing (EUC) Professional Software License for Epic Hyperspace & Mission Critical Software Support Service for 1 User
NT-EUC-H-PRO-AP	Subscription, End User Computing (EUC) Professional Software License for Epic Hyperspace & L3 Production Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)
NT-EUC-H-PRO-AM	Subscription, End User Computing (EUC) Professional Software License for Epic Hyperspace & L3 Mission Critical Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)
NT-EUC-H-PRO-FP	Subscription, End User Computing (EUC) Professional Software License for Epic Hyperspace & Federal Production Software Support Service for 1 User
NT-EUC-H-PRO-FM	Subscription, End User Computing (EUC) Professional Software License for Epic Hyperspace & Federal Mission Critical Software Support Service for 1 User
ULT - ULTIMATE	
NT-EUC-H-ULT-PR	Subscription, End User Computing (EUC) Ultimate Software License for Epic Hyperspace & Production Software Support Service for 1 User
NT-EUC-H-ULT-MC	Subscription, End User Computing (EUC) Ultimate Software License for Epic Hyperspace & Mission Critical Software Support Service for 1 User
NT-EUC-H-ULT-AP	Subscription, End User Computing (EUC) Ultimate Software License for Epic Hyperspace & L3 Production Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)
NT-EUC-H-ULT-AM	Subscription, End User Computing (EUC) Ultimate Software License for Epic Hyperspace & L3 Mission Critical Software Support Service for 1 User (Authorized Support Partners provides L1, L2 support)
NT-EUC-H-ULT-FP	Subscription, End User Computing (EUC) Ultimate Software License for Epic Hyperspace & Federal Production Software Support Service for 1 User
NT-EUC-H-ULT-FM	Subscription, End User Computing (EUC) Ultimate Software License for Epic Hyperspace & Federal Mission Critical Software Support Service for 1 User

Professional Services PIDs and Description

(1) NCI Design Workshop:

The Nutanix Cloud Infrastructure (NCI) Design Workshop offers IT teams in-depth and practical guidance to create a comprehensive design for on-premises NCI clusters. It covers various aspects such as scalability, functionality, integration, and operational needs. This workshop is beneficial during the Design stage of a Hybrid Multicloud journey, especially for complex solutions that involve third-party applications and automation.

NOTE:

- For more information on NCI Design workshop, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/sd-nci-design-workshop.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.0 NCI Design Workshop

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NCI Starter	NT-W-DS-STR	NCI Design Workshop - Starter - Workshop Only	Starter	Workshop Only
NCI Starter	NT-W-DS-STR-SD	NCI Design Workshop - Starter - Standard Doc	Starter	Standard Documentation
NCI Pro	NT-W-DS-PRO	NCI Design Workshop - Pro - Workshop Only	Pro	Workshop Only
NCI Pro	NT-W-DS-PRO-SD	NCI Design Workshop - Pro - Enhanced Doc	Pro	Enhanced Documentation
NCI Ultimate	NT-W-DS-ULT-SD	NCI Design Workshop - Ultimate - Standard Doc	Ultimate	Standard Documentation

Table 65.**0, Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping**

Table 65.**1, Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping**

(2) NCI Cluster Deployment or Expansion:

The Nutanix Cloud Infrastructure (NCI) Cluster Deployment or Expansion accelerates the deployment of hybrid cloud infrastructure to support any application and workload. Highly skilled consultants can deploy on-premises NCI clusters or dedicated Nutanix Unified Storage (NUS) clusters. The clusters can be deployed to various supported hardware platforms, regardless of whether it's Nutanix, our OEM partners, or other platform providers. This offer is ideal for the Deploy stage of the Hybrid Multicloud journey.

NOTE:

- For more information on NCI Cluster deployment and expansion workshop, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/sd-nci-cluster-deployment-or-expansion.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.1 NCI Cluster Deployment or Expansion

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NCI Starter	NT-S-DP-STR-AVB	NCI Cluster Deployment or Expansion - Starter - AHV - Base	Starter	AHV Nodes
NCI Starter	NT-S-DP-STR-AVV	NCI Cluster Deployment or Expansion - Starter - AHV - Var	Starter	AHV Nodes
NCI Starter	NT-S-DP-STR-EXB	NCI Cluster Deployment or Expansion - Starter - ESX - Base	Starter	ESX Nodes
NCI Starter	NT-S-DP-STR-EXV	NCI Cluster Deployment or Expansion - Starter - ESX - Var	Starter	ESX Nodes
NCI Pro	NT-S-DP-PRO-AV-SB	NCI Cluster Deployment or Expansion - Starter - AHV - Base	Starter	AHV Nodes
NCI Pro	NT-S-DP-PRO-AV-SV	NCI Cluster Deployment or Expansion - Starter - AHV - Var	Starter	AHV Nodes
NCI Pro	NT-S-DP-PRO-EX-SV	NCI Cluster Deployment or Expansion - Starter - ESX - Var	Starter	ESX Nodes
NCI Pro	NT-S-DP-PRO-EX-SB	NCI Cluster Deployment or Expansion - Starter - ESX - Base	Starter	ESX Nodes
NCI Pro	NT-S-DP-PRO-AV-PB	NCI Cluster Deployment or Expansion - Pro - AHV - Base	Pro	AHV Nodes
NCI Pro	NT-S-DP-PRO-AV-PV	NCI Cluster Deployment or Expansion - Pro - AHV - Var	Pro	AHV Nodes
NCI Pro	NT-S-DP-PRO-EX-PB	NCI Cluster Deployment or Expansion - Pro - ESX - Base	Pro	ESX Nodes
NCI Pro	NT-S-DP-PRO-EX-PV	NCI Cluster Deployment or Expansion - Pro - ESX - Var	Pro	ESX Nodes

Table 63.1 NCI Cluster Deployment or Expansion

NCI Ultimate	NT-S-DP-ULT-AV-SB	NCI Cluster Deployment or Expansion - Starter - AHV - Base	Starter	AHV Nodes
NCI Ultimate	NT-S-DP-ULT-AV-SV	NCI Cluster Deployment or Expansion - Starter - AHV - Var	Starter	AHV Nodes
NCI Ultimate	NT-S-DP-ULT-EX-SB	NCI Cluster Deployment or Expansion - Starter - ESX - Base	Starter	ESX Nodes
NCI Ultimate	NT-S-DP-ULT-EX-SV	NCI Cluster Deployment or Expansion - Starter - ESX - Var	Starter	ESX Nodes
NCI Ultimate	NT-S-DP-ULT-AV-PB	NCI Cluster Deployment or Expansion - Pro - AHV - Base	Pro	AHV Nodes
NCI Ultimate	NT-S-DP-ULT-AV-PV	NCI Cluster Deployment or Expansion - Pro - AHV - Var	Pro	AHV Nodes
NCI Ultimate	NT-S-DP-ULT-EX-PB	NCI Cluster Deployment or Expansion - Pro - ESX - Base	Pro	ESX Nodes
NCI Ultimate	NT-S-DP-ULT-EX-PV	NCI Cluster Deployment or Expansion - Pro - ESX - Var	Pro	ESX Nodes
NCI Ultimate	NT-S-DP-ULT-AV-UB	NCI Cluster Deployment or Expansion- Ultimate - AHV - Base	Ultimate	AHV Nodes
NCI Ultimate	NT-S-DP-ULT-AV-UV	NCI Cluster Deployment or Expansion- Ultimate - AHV - Var	Ultimate	AHV Nodes
NCI Ultimate	NT-S-DP-ULT-EX-UB	NCI Cluster Deployment or Expansion- Ultimate - ESX - Base	Ultimate	ESX Nodes
NCI Ultimate	NT-S-DP-ULT-EX-UV	NCI Cluster Deployment or Expansion- Ultimate - ESX - Var	Ultimate	ESX Nodes

Table 65.**0, Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping**

Table 65.**1, Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping**

(3) Virtual Machine Migration Workshop:

The Virtual Machine Migration Workshop offers IT teams in-depth and practical guidance to create a comprehensive virtual machine migration plan for migrating virtual machines to Nutanix Cloud Infrastructure (NCI). This offer is ideal for the Migrate state of a Hybrid Multicloud journey.



NOTE:

- For more information on Virtual Machine Migration Workshop, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/sd-virtual-machine-migration-workshop.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.2 Virtual Machine Migration Workshop

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NCI Starter	NT-W-MG-STR-SD	Virtual Machine Migration Workshop - Standard Doc	None	Standard Documentation
NCI Pro	NT-W-MG-PRO-SD	Virtual Machine Migration Workshop - Standard Doc	None	Standard Documentation
NCI Ultimate	NT-W-MG-ULT-SD	Virtual Machine Migration Workshop - Standard Doc	None	Standard Documentation

Table 65.**0, Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping**

Table 65.**1, Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping**

(4) Virtual Machine Migration:

Virtual machine (VM) Migration offers IT teams strong domain expertise to migrate virtual machines to Nutanix Cloud Infrastructure (NCI) per the customer-provided migration plan. This offer is ideal for the Migrate stage of a Hybrid Multicloud journey

NOTE:

- For more information on Virtual Machine Migration, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/sd-virtual-machine-migration.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.3 Virtual Machine Migration

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NCI Starter	NT-S-MG-VM-STR-AVB	Virtual Machine Migration - From AHV - Base	None	From AHV
NCI Starter	NT-S-MG-VM-STR-AVV	Virtual Machine Migration - From AHV - Var	None	From AHV
NCI Starter	NT-S-MG-VM-STR-EXB	Virtual Machine Migration - From ESX - Base	None	From ESX
NCI Starter	NT-S-MG-VM-STR-EXV	Virtual Machine Migration - From ESX - Var	None	From ESX
NCI Pro	NT-S-MG-VM-PRO-AVB	Virtual Machine Migration - From AHV - Base	None	From AHV
NCI Pro	NT-S-MG-VM-PRO-AVV	Virtual Machine Migration - From AHV - Var	None	From AHV
NCI Pro	NT-S-MG-VM-PRO-EXB	Virtual Machine Migration - From ESX - Base	None	From ESX
NCI Pro	NT-S-MG-VM-PRO-EXV	Virtual Machine Migration - From ESX - Var	None	From ESX
NCI Ultimate	NT-S-MG-VM-ULT-AVB	Virtual Machine Migration - From AHV - Base	None	From AHV
NCI Ultimate	NT-S-MG-VM-ULT-AVV	Virtual Machine Migration - From AHV - Var	None	From AHV
NCI Ultimate	NT-S-MG-VM-ULT-EXB	Virtual Machine Migration - From ESX - Base	None	From ESX
NCI Ultimate	NT-S-MG-VM-ULT-EXV	Virtual Machine Migration - From ESX - Var	None	From ESX

Table 65.0, Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping
Table 65.1, Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping

(5) NCM Self-Service Design Workshop:

The Nutanix Cloud Management (NCM) Self-Service Design Workshop offers automation teams in-depth and practical guidance to create a comprehensive design for application-centric infrastructure automation and lifecycle management (LCM) platforms to streamline and accelerate application development. This workshop is beneficial during the Design stage of a Hybrid Multicloud journey.

NOTE:

- For more information on Nutanix Cloud Management (NCM) Self-Service Design Workshop, please visit- https://www.nutanix.com/content/dam/nutanix/resources/datasheets/professional-services-service-descriptions.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.4 NCM Self-Service Design Workshop

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NCM Pro	NT-W-SSD-PRO-SD-S	NCM Self-Service Design Workshop - Starter - Standard Doc	Starter	Standard Documentation
NCM Pro	NT-W-SSD-PRO-SD-P	NCM Self-Service Design Workshop - Pro - Standard Doc	Pro	Standard Documentation
NCM Ultimate	NT-W-SSD-ULT-SD-S	NCM Self-Service Design Workshop - Starter - Standard Doc	Starter	Standard Documentation
NCM Ultimate	NT-W-SSD-ULT-SD-P	NCM Self-Service Design Workshop - Pro - Standard Doc	Pro	Standard Documentation

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(6) NCM Intelligent Operations Design:

The Nutanix Cloud Management (NCM) Intelligent Operations Design Workshop offers IT teams in-depth and practical guidance to create a comprehensive design for Nutanix X-Play automation and playbooks to automate common tasks.

NOTE:

- For more information on NCM Intelligent Operations Design Workshop, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/sd-ncm-intelligent-operations-design.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.5 NCM Intelligent Operations Design Workshop

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NCM Starter	NT-W-OD-STR-SD	NCM Intelligent Operations Design Workshop - Standard Doc	None	Standard Documentation
NCM Pro	NT-W-OD-PRO-SD	NCM Intelligent Operations Design Workshop - Standard Doc	None	Standard Documentation
NCM Ultimate	NT-W-OD-ULT-SD	NCM Intelligent Operations Design Workshop - Standard Doc	None	Standard Documentation

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(7) NCM Intelligent Operations Deployment:

The Nutanix Cloud Management (NCM) Intelligent Operations Deployment accelerates the deployment of Nutanix X-Play automation and playbooks to automate common tasks with in-depth expertise from highly skilled consultants.

NOTE:

- For more information on NCM Intelligent Operations Deployment Workshop, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/sd-ncm-intelligent-operations-deployment.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.6 NCM Intelligent Operations Deployment

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NCM Starter	NT-S-OP-STR	NCM Intelligent Operations Deployment	None	None
NCM Pro	NT-S-OP-PRO	NCM Intelligent Operations Deployment	None	None
NCM Ultimate	NT-S-OP-ULT	NCM Intelligent Operations Deployment	None	None

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(8) FastTrack for NCM Self-Service:

FastTrack for Nutanix Cloud Manager (NCM) Self-Service accelerates the deployment and configuration of NCM Self-Service, which streamlines how teams manage, deploy, and scale applications across hybrid clouds with self-service, automation, and centralized role-based governance, with expertise from highly skilled automation consultants.



NOTE:

- For more information on Fast Track for NCM Self-Service, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/sd-ncm-intelligent-operations-deployment.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.7 FastTrack for NCM Self-Service

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NCM Pro	NT-F-PRO-SS	FastTrack for NCM Self-Service	None	None
NCM Ultimate	NT-F-ULT-SS	FastTrack for NCM Self-Service	None	None

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(9) FastTrack for NCM Cost Governance:

The FastTrack for Nutanix Cloud Management (NCM) Cost Governance accelerates the onboarding of deep visibility and rich analytics detailing cloud consumption patterns along with one-click cost optimization across cloud environments with expertise from highly skilled consultants. IT teams can choose to onboard on-premises Nutanix Cloud Infrastructure (NCI) clusters or a public cloud platform.

NOTE:

- For more information on Fast Track for NCM Cost Governance, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/sd-ncm-intelligent-operations-deployment.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.8 FastTrack for NCM Cost Governance

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NCM Pro	NT-F-PRO-CG	FastTrack for NCM Cost Governance	None	None
NCM Ultimate	NT-F-ULT-CG	FastTrack for NCM Cost Governance	None	None

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(10) Nutanix AI GPT Bundles Services:

The Nutanix Enterprise AI (NAI) generative pretrained transformer (GPT) Bundle offers a streamlined, fullstack solution for orchestrating AI/ML workloads with Nutanix Enterprise AI GPT-in-a-Box. Purpose-built for

AI/ML teams, this offering simplifies the deployment and management of large language models (LLMs) in a secure, scalable environment.

NAI GPT-in-a-Box integrates the following core components:

- Nutanix Enterprise AI (NAI) – Optimized for AI/ML model orchestration and performance
- Nutanix Cloud Infrastructure (NCI) – Delivers a resilient, high-performance foundation
- Nutanix Unified Storage (NUS) – Supports high-throughput, scalable data storage
- Nutanix Kubernetes Platform (NKP) – Enables containerized deployment and lifecycle management of LLMs

Covering the key stages of the AI journey—Plan, Design, Deploy, and Optimize—the NAI GPT Bundle empowers teams to reduce complexity, accelerate time-to-value, and confidently build a future-ready AI infrastructure.

NOTE:

- For more information on Nutanix AI GPT Bundles Services, please visit - https://www.nutanix.com/content/dam/nutanix/en/resources/service-descriptions/sd-nai-gpt-deployment.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.9 Nutanix AI GPT Bundles Services

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NAI GPT PRO	NT-B-AIGPT-PRO-SDB	NAI GPT Pro Bundle - Std Docs - Base (QTY = Use Case)	None	None
NAI GPT PRO	NT-B-AIGPT-PRO-SDV	NAI GPT Pro Bundle - Std Docs - Variable (QTY= Node)	None	None
NAI GPT ULT	NT-B-AIGPT-ULT-SDB	NAI GPT Ult Bundle - Std Docs - Base (QTY = Use Case)	None	None
NAI GPT ULT	NT-B-AIGPT-ULT-SDV	NAI GPT Ult Bundle - Std Docs - Variable (QTY = Node)	None	None

(11) Nutanix AI Planning Workshop:

The Nutanix Artificial Intelligence / Machine Learning (AI/ML) Planning provides IT teams with comprehensive, hands-on guidance for planning and implementing infrastructure for AI/ML workloads using the Generative Pre-trained Transformer (GPT) model on Nutanix Cloud Infrastructure (NCI) clusters and various cloud providers. This engagement is beneficial during the Planning stage of the AI/ML solution journey.



NOTE:

- For more information on Nutanix AI Planning Workshop, please visit - https://www.nutanix.com/content/dam/nutanix/en/resources/service-descriptions/sd-ai-ml-planning.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.10 Nutanix AI Planning Workshop

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
	NT-P-AI	AI/ML Planning Workshop (Qty=Use Case)	None	None

(12) Nutanix AI Design Workshop:

The Artificial Intelligence/Machine Learning (AI/ML) Design provides a focused design service to ensure readiness for deploying AI workloads based on a Generative Pre-trained Transformer (GPT). Designed as a strategic step in your AI/ML journey, this engagement helps organizations plan and validate architecture for inference use cases, ensuring interoperability, security, and scalability for future growth.

This engagement focuses on:

- Capturing solution requirements, constraints, assumptions, and key decisions
- Designing AI workload architecture on NCI, including GPU sizing and configuration
- Validating integration with identity services (AD/LDAP), DNS, and data governance policies
- Planning for security measures such as encryption, SSL certificates, and syslog
- Aligning design with Nutanix recommended practices for performance and operational readiness

This service is especially valuable for organizations deploying AI/ML workloads on Cisco UCS platforms, ensuring optimized design for inference use cases and future scalability.

NOTE:

- For more information on Nutanix AI Design Workshop, please visit - https://www.nutanix.com/content/dam/nutanix/en/resources/service-descriptions/sd-ai-ml-design.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.11 Nutanix AI Design Workshop

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
	NT-W-AID	AI/ML Design Workshop (Qty=Use Case)	None	None

(13) Nutanix AI Strategy and Optimization Workshop:

The artificial intelligence/ machine learning (AI/ML) Strategy and Optimization Series is designed to help organizations harness the full potential of their AI initiatives. Delivered as a monthly engagement, this service ensures that businesses remain at the forefront of AI/ML innovation by aligning their AI/ML solutions running on Nutanix with evolving market demands and technological advancements. With expert guidance from seasoned Nutanix consultants, organizations gain the insights needed to optimize performance, uncover new opportunities, and scale their AI/ML initiatives strategically. This design session is beneficial during the Optimize stage of the AI/ML solution journey..

NOTE:

- For more information on Nutanix AI Strategy and Optimization Workshop, please visit - https://www.nutanix.com/content/dam/nutanix/en/resources/service-descriptions/sd-ai-ml-strategy-and-optimization-series.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.12 Nutanix AI Strategy and Optimization Workshop

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
	NT-W-AIO	AL/ML Strategy and Optimization Workshop (Qty=Series)	None	None

(14) Nutanix AI Deployment:

The Nutanix Enterprise Artificial Intelligence (NAI) Deployment service accelerates the deployment of a comprehensive inference endpoint management product designed to streamline and optimize your AI model orchestration experience. NAI allows you to select, deploy, and manage large language models (LLMs) on a Kubernetes cluster. This offer is ideal for the Deploy stage of the Nutanix Enterprise AI solution journey.



NOTE:

- For more information on Nutanix AI Deployment, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/sd-ncm-intelligent-operations-deployment.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.13 Nutanix AI Deployment

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
	NT-S-AID	NAI Deployment (Qty=Cluster)	None	None

(15) NKP Design Workshop:

The NKP (Nutanix Kubernetes Platform) Design Workshop is a professional services offering that provides IT teams with in-depth and practical guidance to create a comprehensive design for on-premises Nutanix Cloud Infrastructure (NCI) clusters. This workshop covers various aspects such as scalability, functionality, integration, and operational needs. It is particularly beneficial during the Design stage of a Hybrid Multicloud journey, especially for complex solutions involving third-party applications and automation.

NOTE:

- For more information on NKP Design Workshop, please visit - https://www.nutanix.com/viewer/content/dam/nutanix/en/resources/service-descriptions/sd-nkp-design-workshop.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.14 NKP Design Workshop

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NKP Starter	NT-W-KD-STR-SD	NKP Design Workshop - Essential - Std Doc (Qty=Provider)	None	Standard Documentation
NKP Pro	NT-W-KD-PRO-SD	NKP Design Workshop - Advantage - Std Doc (Qty=Provider)	None	Standard Documentation
NKP Ultimate	NT-W-KD-ULT-SD	NKP Design Workshop - Enterprise - Std Doc (Qty=Pair of Sites)	None	Standard Documentation

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(16) NKP Deployment:

The Nutanix Kubernetes Platform (NKP) Deployment on Cisco Compute Hyperconverged infrastructure involves several key steps and components to automate and simplify Kubernetes cluster management.

NOTE:

- For more information on NCM Intelligent NKP Deployment, please visit - https://www.nutanix.com/viewer/content/dam/nutanix/en/resources/service-descriptions/sd-nkp-deployment.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.15 NKP Deployment

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
NKP Starter	NT-S-KD-STR	NKP Deployment - Ess ential (Qty=Cluster)	None	None
NKP Pro	NT-S-KD-PRO	NKP Deployment - Advantage (Qty=Provider)	None	None
NKP Ultimate	NT-S-KD-ULT	NKP Deployment - Enterprise (Qty=Provider)	None	None

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

(17) Nutanix Services Flexible Credits:

Nutanix Flex Credits provide a credits program for purchasing Nutanix Professional Services. This program provides the flexibility to utilize your budget cycles to pre-buy credits for future use of Nutanix Professional Services and training via redemption of credits. Within the terms of validity of your Flex Credits, use the credits for the portfolio of Nutanix Professional Services including Consulting, Resident, Technical Account Manager, and Education.

NOTE:

- For more information on Nutanix Services Flexible Credits, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/sd-ncm-intelligent-operations-deployment.pdf
- For more information on Cisco version of Nutanix Professional services, please visit - https://www.nutanix.com/content/dam/nutanix/resources/service-descriptions/professional-services-service-descriptions-cisco.pdf

Table 63.16 Nutanix Flexible Credits

Nutanix Software Product/Edition	Cisco Product PID	Cisco PID Description PS Offer Name - PS Offer Edition - PS Offer Option - Base/Variable	Nutanix PS Edition	Nutanix PS Option
All	NT-FLEX-CST-CR	Nutanix Services Flexible Credits (1 QTY = 100 Credits)	None	None

Table 66, **Nutanix Software NCM STR 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional Services PID Mapping**

Table 67, **Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) 1 YEAR AND 3 YEAR & ABOVE SUBSCRIPTION with Professional services**

Nutanix Support:

Table 64 Nutanix Support

Product ID (PID)	PID Description
Nutanix Support	
SVS-NT-SUP	Entitlement ONLY for Nutanix Cloud Infrastructure SW

Software With Professional Services PID Mapping

NOTE: Recommended to select the matching/higher level of service options for the subscribed software. For example: If ULT (Ultimate) software is selected, recommended to choose the ULT services from the below columns. However, it is allowed to select the lower version of the services.

Table 65.0 Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping

Software PIDs	Mandatory Professional Services PIDs	
	NCI Design Workshop (select one service)	NCI Cluster Deployment or Expansion (select a Pair of service)
STR: **NCI** NT-NCI-STR-PR NT-NCI-STR-MC NT-NCI-STR-AP NT-NCI-STR-AM NT-NCI-STR-FP NT-NCI-STR-FM **NCI -C** NT-NCIC-STR-PR NT-NCIC-STR-MC NT-NCIC-STR-FP NT-NCIC-STR-FM **NCI-D** NT-NCI-D-STR-PR NT-NCI-D-STR-MC NT-NCI-D-STR-AP NT-NCI-D-STR-AM NT-NCI-D-STR-FP NT-NCI-D-STR-FM	**STR:** NT-W-DS-STR NT-W-DS-STR-SD **PRO:** NT-W-DS-PRO NT-W-DS-PRO-SD **ULT:** NT-W-DS-ULT-SD	**STR:** NT-S-DP-STR-AVB **and** NT-S-DP-STR-AVV **or** NT-S-DP-STR-EXB **and** N T-S-DP-STR-EXV **PRO:** NT-S-DP-PRO-AV-SB **and** NT-S-DP-PRO-AV-SV **or** NT-S-DP-PRO-EX-SB **and** NT-S-DP-PRO-EX-SV **or** NT-S-DP-PRO-AV-PB and NT-S-DP-PRO-AV-PV **or** NT-S-DP-PRO-EX-PB and NT-S-DP-PRO-EX-PV **ULT:** NT-S-DP-ULT-AV-SB **and** NT-S-DP-ULT-AV-SV **or** NT-S-DP-ULT-EX-SB **and** NT-S-DP-ULT-EX-SV **or** NT-S-DP-ULT-AV-PB **and** NT-S-DP-ULT-AV-PV **or** NT-S-DP-ULT-EX-PB **and** NT-S-DP-ULT-EX-PV **or** NT-S-DP-ULT-AV-UB **and** NT-S-DP-ULT-AV-UV **or** NT-S-DP-ULT-EX-UB **and** NT-S-DP-ULT-EX-UV

Table 65.0 Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping

PRO: **NCI** NT-NCI-PRO-PR NT-NCI-PRO-MC NT-NCI-PRO-AP NT-NCI-PRO-AM NT-NCI-PRO-FP NT-NCI-PRO-FM **NCI -C** NT-NCIC-PRO-PR NT-NCIC-PRO-MC NT-NCIC-PRO-FP NT-NCIC-PRO-FM **NCI-D** NT-NCI-D-PRO-PR NT-NCI-D-PRO-MC NT-NCI-D-PRO-AP NT-NCI-D-PRO-AM NT-NCI-D-PRO-FP NT-NCI-D-PRO-FM **NCP (NCI-PRO)** NT-NCP-NCI-PRO-PR NT-NCP-NCI-PRO-MC NT-NCP-NCI-PRO-AP NT-NCP-NCI-PRO-AM NT-NCP-NCI-PRO-FP NT-NCP-NCI-PRO-FM **NCP - C (NCIC-PRO)** NT-NCP-NCIC-PO-PR NT-NCP-NCIC-PO-MC NT-NCP-NCIC-PO-FP NT-NCP-NCIC-PO-FM		

Table 65.0 Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 1 YEAR SUBSCRIPTION with professional services PID Mapping

ULT: **NCI** NT-NCI-ULT-PR NT-NCI-ULT-MC NT-NCI-ULT-AP NT-NCI-ULT-AM NT-NCI-ULT-FP NT-NCI-ULT-FM **NCI -C** NT-NCIC-ULT-PR NT-NCIC-ULT-MC NT-NCIC-ULT-FP NT-NCIC-ULT-FM **NCI-D** NT-NCI-D-ULT-PR NT-NCI-D-ULT-MC NT-NCI-D-ULT-AP NT-NCI-D-ULT-AM NT-NCI-D-ULT-FP NT-NCI-D-ULT-FM **NCP (NCI-ULT)** NT-NCP-NCI-ULT-PR NT-NCP-NCI-ULT-MC NT-NCP-NCI-ULT-AP NT-NCP-NCI-ULT-AM NT-NCP-NCI-ULT-FP NT-NCP-NCI-ULT-FM **NCP - C (NCIC-ULT)** NT-NCP-NCIC-UT-PR NT-NCP-NCIC-UT-MC NT-NCP-NCIC-UT-FP NT-NCP-NCIC-UT-FM		

NOTE: Recommended to select the matching/higher level of service options for the subscribed software. For example: If ULT (Ultimate) software is selected, recommended to choose the ULT services from the below columns. However, it is allowed to select the lower version of the services.

Table 65.1 Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping

Software PIDs	Mandatory Professional Services PIDs	
	NCI Design Workshop (select one service)	NCI Cluster Deployment or Expansion (select a Pair of service)
STR: **NCI** NT-NCI-STR-PR NT-NCI-STR-MC NT-NCI-STR-AP NT-NCI-STR-AM NT-NCI-STR-FP NT-NCI-STR-FM **NCI -C** NT-NCIC-STR-PR NT-NCIC-STR-MC NT-NCIC-STR-FP NT-NCIC-STR-FM **NCI-D** NT-NCI-D-STR-PR NT-NCI-D-STR-MC NT-NCI-D-STR-AP NT-NCI-D-STR-AM NT-NCI-D-STR-FP NT-NCI-D-STR-FM	**STR:** NT-W-DS-STR NT-W-DS-STR-SD **PRO:** NT-W-DS-PRO NT-W-DS-PRO-SD **ULT:** NT-W-DS-ULT-SD	**STR:** NT-S-DP-STR-AVB **and** NT-S-DP-STR-AVV **or** NT-S-DP-STR-EXB **and** N T-S-DP-STR-EXV **PRO:** NT-S-DP-PRO-AV-SB **and** NT-S-DP-PRO-AV-SV **or** NT-S-DP-PRO-EX-SB **and** NT-S-DP-PRO-EX-SV **or** NT-S-DP-PRO-AV-PB and NT-S-DP-PRO-AV-PV **or** NT-S-DP-PRO-EX-PB and NT-S-DP-PRO-EX-PV **ULT:** NT-S-DP-ULT-AV-SB **and** NT-S-DP-ULT-AV-SV **or** NT-S-DP-ULT-EX-SB **and** NT-S-DP-ULT-EX-SV **or** NT-S-DP-ULT-AV-PB **and** NT-S-DP-ULT-AV-PV **or** NT-S-DP-ULT-EX-PB **and** NT-S-DP-ULT-EX-PV **or** NT-S-DP-ULT-AV-UB **and** NT-S-DP-ULT-AV-UV **or** NT-S-DP-ULT-EX-UB **and** NT-S-DP-ULT-EX-UV

Table 65.1 Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping

PRO: **NCI** NT-NCI-PRO-PR NT-NCI-PRO-MC NT-NCI-PRO-AP NT-NCI-PRO-AM NT-NCI-PRO-FP NT-NCI-PRO-FM **NCI -C** NT-NCIC-PRO-PR NT-NCIC-PRO-MC NT-NCIC-PRO-FP NT-NCIC-PRO-FM **NCI-D** NT-NCI-D-PRO-PR NT-NCI-D-PRO-MC NT-NCI-D-PRO-AP NT-NCI-D-PRO-AM NT-NCI-D-PRO-FP NT-NCI-D-PRO-FM **NCP (NCI-PRO)** NT-NCP-NCI-PRO-PR NT-NCP-NCI-PRO-MC NT-NCP-NCI-PRO-AP NT-NCP-NCI-PRO-AM NT-NCP-NCI-PRO-FP NT-NCP-NCI-PRO-FM **NCP - C (NCIC-PRO)** NT-NCP-NCIC-PO-PR NT-NCP-NCIC-PO-MC NT-NCP-NCIC-PO-FP NT-NCP-NCIC-PO-FM		

Table 65.1 Nutanix Software NCI, NCI-C, NCI-D, NCP (NCI-PRO), NCP (NCI-ULT), NCP-C (NCIC-PRO), NCP-C (NCIC-ULT) 3 YEAR SUBSCRIPTION with professional services PID Mapping

ULT: **NCI** NT-NCI-ULT-PR NT-NCI-ULT-MC NT-NCI-ULT-AP NT-NCI-ULT-AM NT-NCI-ULT-FP NT-NCI-ULT-FM **NCI -C** NT-NCIC-ULT-PR NT-NCIC-ULT-MC NT-NCIC-ULT-FP NT-NCIC-ULT-FM **NCI-D** NT-NCI-D-ULT-PR NT-NCI-D-ULT-MC NT-NCI-D-ULT-AP NT-NCI-D-ULT-AM NT-NCI-D-ULT-FP NT-NCI-D-ULT-FM **NCP (NCI-ULT)** NT-NCP-NCI-ULT-PR NT-NCP-NCI-ULT-MC NT-NCP-NCI-ULT-AP NT-NCP-NCI-ULT-AM NT-NCP-NCI-ULT-FP NT-NCP-NCI-ULT-FM **NCP - C (NCIC-ULT)** NT-NCP-NCIC-UT-PR NT-NCP-NCIC-UT-MC NT-NCP-NCIC-UT-FP NT-NCP-NCIC-UT-FM		

NOTE: Recommended to select the matching/higher level of service options for the subscribed software. For example: If ULT (Ultimate) software is selected, recommended to choose the ULT services from the below columns. However, it is allowed to select the lower version of the services.

Table 66 Nutanix Software NCM STR [redacted] with Professional Services PID Mapping

Software PIDs	Recommended Professional Services PIDs	
	NCM Intelligent Operations Design (select one service)	NCM Intelligent Operations Deployment (select one service)
STR: NCM NT-NCM-STR-PR NT-NCM-STR-MC NT-NCM-STR-AP NT-NCM-STR-AM NT-NCM-STR-FP NT-NCM-STR-FM	STR: NT-W-OD-STR-SD PRO: NT-W-OD-PRO-SD ULT: NT-W-OD-ULT-SD	STR: NT-S-OP-STR PRO: NT-S-OP-PRO ULT: NT-S-OP-ULT

NOTE: Recommended to select the matching/higher level of service options for the subscribed software. For example: If ULT (Ultimate) software is selected, recommended to choose the ULT services from the below columns. However, it is allowed to select the lower version of the services.

Table 67 Nutanix Software NCM PRO, NCM ULT, NCP (NCM-PRO), NCP (NCM-ULT) with Professional services

Software PIDs	Mandatory Professional Services PIDs	
	NCM Intelligent Operations Design (select one service)	NCM Intelligent Operations Deployment (select one service)
PRO: **NCM** NT-NCM-PRO-PR NT-NCM-PRO-MC NT-NCM-PRO-AP NT-NCM-PRO-AM NT-NCM-PRO-FP NT-NCM-PRO-FM **NCP (NCM-PRO)** NT-NCP-NCM-PRO-PR NT-NCP-NCM-PRO-MC NT-NCP-NCM-PRO-AP NT-NCP-NCM-PRO-AM NT-NCP-NCM-PRO-FP NT-NCP-NCM-PRO-FM **ULT:** **NCM** NT-NCM-ULT-PR NT-NCM-ULT-MC NT-NCM-ULT-AP NT-NCM-ULT-AM NT-NCM-ULT-FP NT-NCM-ULT-FM **NCP (NCM-ULT)** NT-NCP-NCM-ULT-PR NT-NCP-NCM-ULT-MC NT-NCP-NCM-ULT-AP NT-NCP-NCM-ULT-AM NT-NCP-NCM-ULT-FP NT-NCP-NCM-ULT-FM	**STR:** NT-W-OD-STR-SD **PRO:** NT-W-OD-PRO-SD **ULT:** NT-W-OD-ULT-SD	**STR:** NT-S-OP-STR **PRO:** NT-S-OP-PRO **ULT:** NT-S-OP-ULT

SELECT CISCO INTERSIGHT

Cisco Intersight™ is a Software-as-a-Service (SaaS) hybrid cloud operations platform which delivers intelligent automation, observability, and optimization to customers for traditional and cloud-native applications and infrastructure.

Product ID (PID)	
DC-MGT-SAAS	Cisco Intersight SaaS

Select Cisco Intersight subscription option as desired from *Table 68*

Table 68 Cisco Intersight

Product ID (PID)	PID Description
Cisco Intersight 2.0 Infrastructure Services	
DC-MGT-IS-SAAS-ES[1]	Infrastructure Services SaaS/CVA - Essentials
DC-MGT-IS-SAAS-AD[1]	Infrastructure Services SaaS/CVA - Advantage
DC-MGT-IS-PVAPP-ES[1]	Infrastructure Services PVA - Essentials
DC-MGT-IS-PVAPP-AD[1]	Infrastructure Services PVA - Advantage
Add-Ons	
DC-MGT-IS-UCSD	UCS Director - 1 Server License (includes Network, Storage)
Cisco Intersight Workload Optimizer (IWO) - SaaS	
VM Instance	
DC-MGT-WO-SAAS-ES[1]	Cisco Intersight Workload Optimizer SaaS - Essentials
DC-MGT-WO-SAAS-AD[1]	Cisco Intersight Workload Optimizer SaaS - Advantage
DC-MGT-WO-SAAS-PR[1]	Cisco Intersight Workload Optimizer SaaS - Premier
VDI Instance	
DC-MGT-WOD-SAAS-ES[1]	Cisco Intersight Workload Optimizer SaaS VDI - Essentials
DC-MGT-WOD-SAAS-AD[1]	Cisco Intersight Workload Optimizer SaaS VDI - Advantage
DC-MGT-WOD-SAAS-PR[1]	Cisco Intersight Workload Optimizer SaaS VDI - Premier

Notes:

1. Smart account (SA) required

Select Cisco Intersight support option as desired from *Table 69*

Table 69 Cisco Intersight Support

Product ID (PID)	PID Description
Cisco Intersight Support	
SVS-SSTCS-DCMGMT[1]	Solution Support for DC Mgmnt
SVS-L1DCS-INTER[1]	CXL1 for INTERSIGHT
SVS-L2DCS-INTER[1]	CXL2 for INTERSIGHT
SVS-DCM-SUPT-BAS	Basic Support for DCM

Notes:

1. Smart account (SA) required



NOTE: An Intersight license is required for every server.

SELECT GUEST VM OPERATING SYSTEM LICENSES

Select VM Operating System Licenses desired from **Table 70**



NOTE: Microsoft operating system: Optional Microsoft guest OS license that may be purchased for Virtual Machines that run on top of AHV hypervisor.

Table 70 Guest VM Operating System Licenses


Product ID (PID)	PID Description
Microsoft Options	
MSWS-25-ST16C	Windows Server 2025 Standard, 16 Cores
MSWS-25-ST16C-NS	Windows Server 2025 Standard, 16 Cores - No Cisco SVC
MSWS-25-ST24C	Windows Server 2025 Standard, 24 Cores
MSWS-25-ST24C-NS	Windows Server 2025 Standard, 24 Cores - No SVC
MSWS-25-DC16C	Windows Server 2025 Datacenter, 16 Cores
MSWS-25-DC16C-NS	Windows Server 2025 Datacenter, 16 Cores - No SVC
MSWS-25-DC24C	Windows Server 2025 Datacenter, 24 Cores
MSWS-25-DC24C-NS	Windows Server 2025 Datacenter, 24 Cores - No SVC

SUPPLEMENTAL MATERIAL

Chassis


Figure 7 and *Figure 8* shows the Internal views of the server chassis with the top cover removed.

Figure 7 Server With Top Cover Off (full-height, full-width PCIe cards)

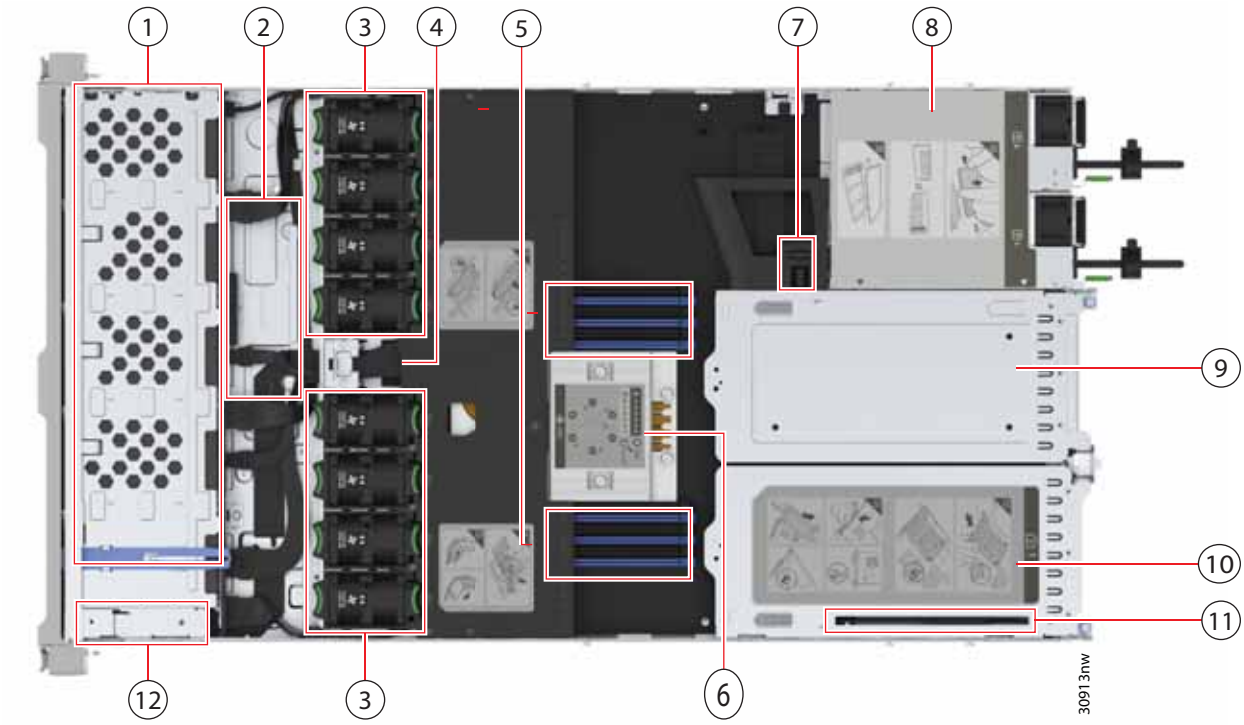

1	Front-loading drive bays	2	M8 modular RAID card (or SATA Interposer)
3	Cooling fan modules (eight) Each fan is hot-swappable	4	Supercap module mounting bracket
5	DIMM sockets on motherboard, 12 total.	6	Motherboard CPU socket
7	M.2 module connector, supporting a boot-optimized RAID controller with connectors for up to two SATA M.2 SSDs.	8	Two power supplies
9	PCIe riser 3 Accepts 1 full height, full width PCIe riser card	10	PCIe riser 1 Accepts 1 full height, full width PCIe riser card
11	Modular LOM (mLOM) card bay on chassis floor(x16 PCIe lane) Connector shown, but the card bay sits below PCIe riser 1.	12	Front Panel Controller board

Figure 8 Server With Top Cover Off (full-height, half-width PCIe cards)

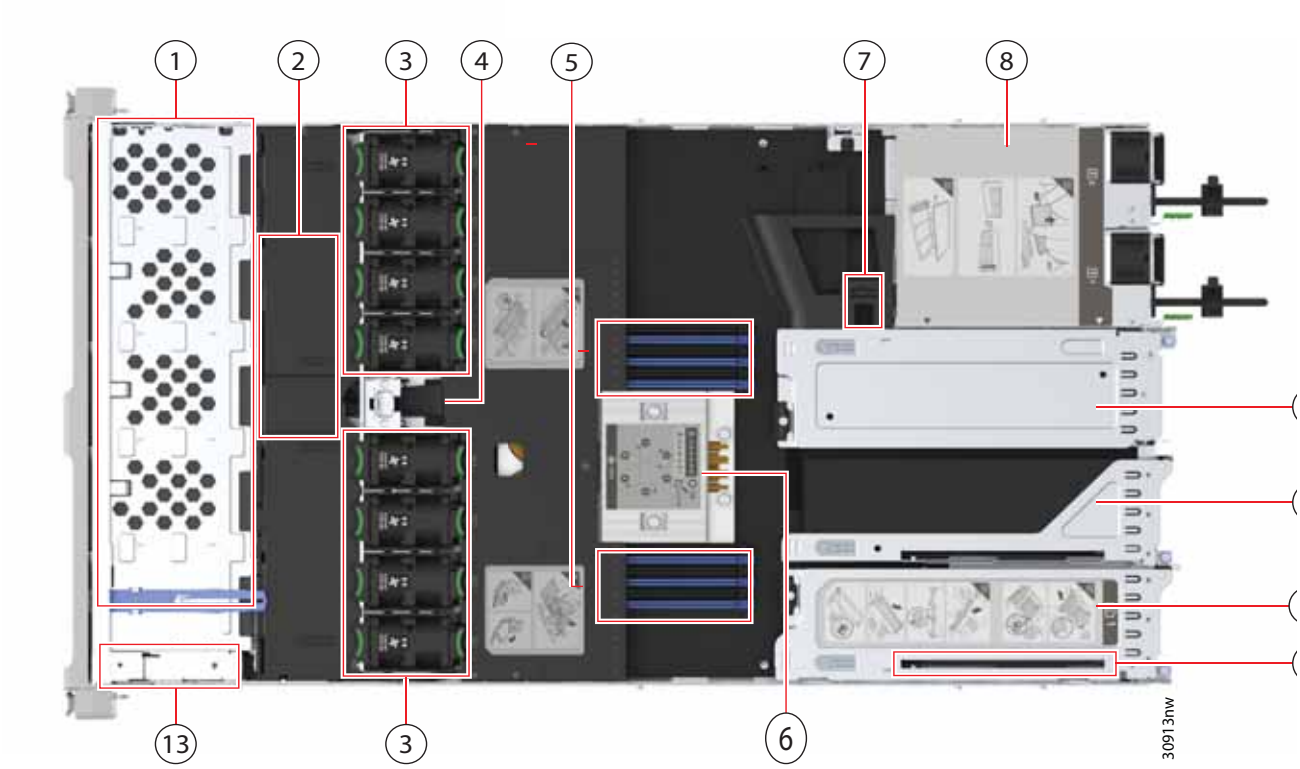


1	Front-loading drive bays	2	M8 modular RAID card (or SATA Interposer)
3	Cooling fan modules (eight) Each fan is hot-swappable	4	Supercap module mounting bracket
5	DIMM sockets on motherboard, 12 total.	6	Motherboard CPU socket
7	M.2 module connector, supporting a boot-optimized RAID controller with connectors for up to two SATA M.2 SSDs.	8	Two power supplies
9	PCIe riser 3 Accepts 1 half height, half width PCIe riser card	10	PCIe riser 2 Accepts 1 half height, half width PCIe riser card
11	PCIe riser 1 Accepts 1 half height, half width PCIe riser card	12	Modular LOM (mLOM)/OCP 3.0 card bay on chassis floor (x16 PCIe lane) Connector shown, but the card bay sits below PCIe riser slot 1.
13	Front Panel Controller board	-	-

Serial Port Details

The pinout details of the rear RJ-45 serial port connector are shown in *Figure 9*.

Figure 9 Serial Port (Female RJ-45 Connector) Pinout

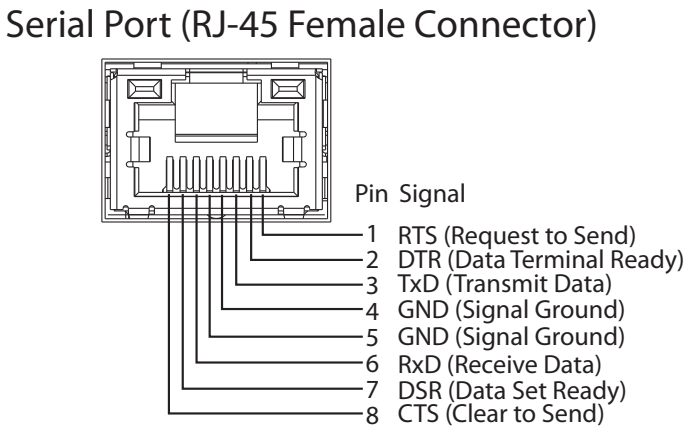

KVM Cable


The KVM cable provides a connection into the server, providing a DB9 serial connector, a VGA connector for a monitor, and dual USB ports for a keyboard and mouse. With this cable, you can create a direct connection to the operating system and the BIOS running on the server.

The KVM cable ordering information is listed in *Table 71*.

Table 71 KVM Cable

Product ID (PID)	PID Description
N20-BKVM	KVM cable for UCS Server console port

Figure 10 KVM Cable

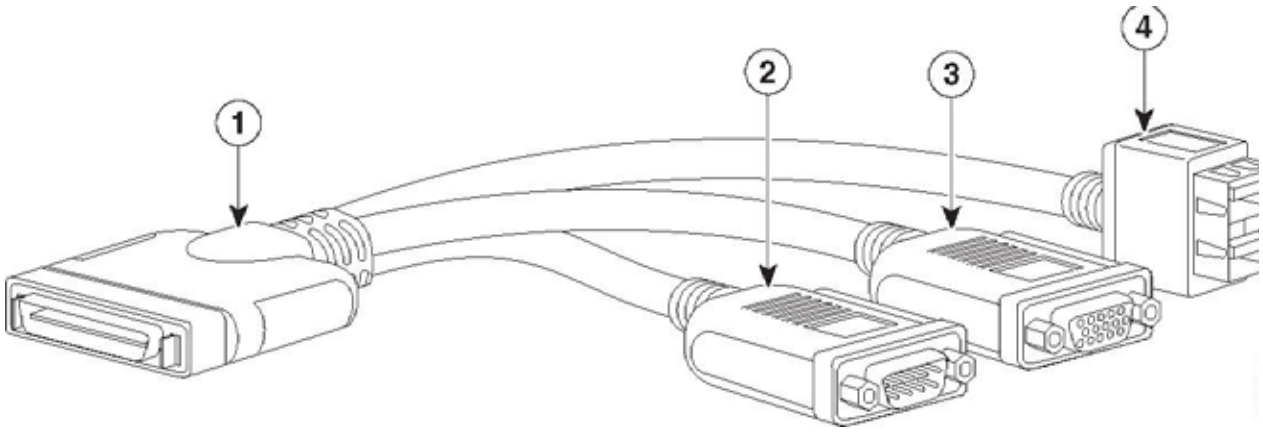

1	Connector (to server front panel)	**3**	VGA connector (for a monitor)
2	DB-9 serial connector	**4**	Two-port USB connector (for a mouse and keyboard)

UPGRADING or REPLACING CPUs and Memory

- Refer to Installation Guide to upgrading or replacing the CPUs
- Refer to Installation Guide to upgrading or replacing the Memory

TECHNICAL SPECIFICATIONS

Dimensions and Weight

Table 72 Server Dimensions and Weight

Parameter	Value
Height	1.70 in. (4.3 cm)
Width (including slam latches)	16.9 in.(42.9 cm)
Depth	30 in. (76.2 cm)
Weight	
Weight with following options and no rail kit: 1*HDD, 1*CPU(with Heat Sink), 1*DIMM, 1*1600W PSU, mLOM card, 3HH rear wall, 3HH riser cage1, 3HH riser cage2, 3HH riser cage3, Raid tray, BBU module (with holder)	15.05 kgs = 33.18 lbs (3HH SKU)
Weight with following options and no rail kit: 1*HDD, 1*CPU(with Heat Sink), 1*DIMM, 1*1600W PSU, mLOM card, 2FH rear wall, 2FH riser cage1, 2FH riser cage2, Raid tray, BBU module (with holder)	15.1 kgs = 33.29 lbs (2FH SKU)
Weight with following options and including rail kit: 1*HDD, 1*CPU(with Heat Sink), 1*DIMM, 1*1600W PSU, mLOM card, 3HH rear wall, 3HH riser cage1, 3HH riser cage2, 3HH riser cage3, Raid tray, BBU module (with holder)	18.8 kgs = 41.45 lbs (3HH SKU)
Weight with following options and including rail kit: 1*HDD, 1*CPU(with Heat Sink), 1*DIMM, 1*1600W PSU, mLOM card, 2FH rear wall, 2FH riser cage1, 2FH riser cage2, Raid tray, BBU module (with holder),	18.85 kgs = 41.56 lbs (2FH SKU)

DISCONTINUED EOL PRODUCTS

Below is the list of parts were previously available for this product and are no longer sold. Please refer to the EOL Bulletin Links via table below to determine if still supported.

Table 73 EOS

Product ID	Description	EOL/EOS link
HCI-NVMEG4-M1920	1.9TB 2.5in U.3 15mm P7450 Hg Perf Med End NVMe	https://www.cisco.com/c/en/us/products/collateral/servers-unified-computing/ucs-c-series-rack-servers/select-ucs-hci-accessories-eol15841.html
HCI-NVMEG4-M3840	3.8TB 2.5in U.3 15mm P7450 Hg Perf Med End NVMe	https://www.cisco.com/c/en/us/products/collateral/servers-unified-computing/ucs-c-series-rack-servers/select-ucs-hci-accessories-eol15841.html
HCI-NVMEG4-M7680	7.6TB 2.5in U.3 15mm P7450 Hg Perf Med End NVMe	https://www.cisco.com/c/en/us/products/collateral/servers-unified-computing/ucs-c-series-rack-servers/select-ucs-accessories-eol15875.html
HCI-MRX48G1RF5	48GB DDR5-6400 RDIMM 1Rx4 (24Gb)	https://www.cisco.com/c/en/us/products/collateral/servers-unified-computing/ucs-c-series-rack-servers/select-ucs-ucsx-hci-accessories-eol15910.html

Power Specifications

The server is available with the following types of power supplies:

- 1050 W V2 (DC) power supply (see *Table 74*)
- 1200 W (AC) power supply (see *Table 75*)
- 1600 W (AC) power supply (see *Table 76*)
- 2300 W (AC) power supply (see *Table 77*)

Table 74 Power Specifications (1050 W V2 DC power supply)

Parameter	Specification
Input Connector	Molex 42820
Input Voltage Range (V rms)	-48
Maximum Allowable Input Voltage Range (V rms)	-40 to -72
Frequency Range (Hz)	NA
Maximum Allowable Frequency Range (Hz)	NA
Maximum Rated Output (W)	1050
Maximum Rated Standby Output (W)	36
Nominal Input Voltage (V rms)	-48
Nominal Input Current (A rms)	24
Maximum Input at Nominal Input Voltage (W)	1154
Maximum Input at Nominal Input Voltage (VA)	1154
Minimum Rated Efficiency (%)[1]	91
Minimum Rated Power Factor[1]	NA
Maximum Inrush Current (A peak)	15
Maximum Inrush Current (ms)	0.2
Minimum Ride-Through Time (ms)[2]	5

Notes:

1. This is the minimum rating required to achieve 80 PLUS Platinum certification, see test reports published at http://www.80plus.org/ for certified values
2. Time output voltage remains within regulation limits at 100% load, during input voltage dropout

Table 75 1200 W (AC) Power Supply Specifications

Parameter	Specification			
Input Connector	IEC320 C14			
Input Voltage Range (Vrms)	100 to 240			
Maximum Allowable Input Voltage Range (Vrms)	90 to 264			
Frequency Range (Hz)	50 to 60			
Maximum Allowable Frequency Range (Hz)	47 to 63			
Maximum Rated Output (W)[1]	1100		1200	
Maximum Rated Standby Output (W)	48			
Nominal Input Voltage (Vrms)	100	120	208	230
Nominal Input Current (Arms)	12.97	10.62	6.47	5.84
Maximum Input at Nominal Input Voltage (W)	1300	1264	1343	1340
Maximum Input at Nominal Input Voltage (VA)	1300	1266	1345	1342
Minimum Rated Efficiency (%)[2]	90	90	91	91
Minimum Rated Power Factor[2]	0.97	0.97	0.97	0.97
Maximum Inrush Current (A peak)	20			
Maximum Inrush Current (ms)	0.2			
Minimum Ride-Through Time (ms)[3]	12			

Notes:

1. Maximum rated output is limited to 1100W when operating at low-line input voltage (100-127V)
2. This is the minimum rating required to achieve 80 PLUS Titanium certification, see test reports published at http://www.80plus.org/ for certified values
3. Time output voltage remains within regulation limits at 100% load, during input voltage dropout

Table 76 1600 W (AC) Power Supply Specifications

Parameter	Specification			
Input Connector	IEC320 C14			
Input Voltage Range (V rms)	200 to 240			
Maximum Allowable Input Voltage Range (V rms)	180 to 264			
Frequency Range (Hz)	50 to 60			
Maximum Allowable Frequency Range (Hz)	47 to 63			
Maximum Rated Output (W)	1600			
Maximum Rated Standby Output (W)	36			
Nominal Input Voltage (V rms)	100	120	208	230
Nominal Input Current (A rms)	NA	NA	8.8	7.9
Maximum Input at Nominal Input Voltage (W)	NA	NA	1778	1758
Maximum Input at Nominal Input Voltage (VA)	NA	NA	1833	1813
Minimum Rated Efficiency (%)[1]	NA	NA	90	91
Minimum Rated Power Factor[2]	NA	NA	0.97	0.97
Maximum Inrush Current (A peak)	30			
Maximum Inrush Current (ms)	0.2			
Minimum Ride-Through Time (ms)[2]	12			

Notes:

1. This is the minimum rating required to achieve 80 PLUS Platinum certification, see test reports published at http://www.80plus.org/ for certified values
2. Time output voltage remains within regulation limits at 100% load, during input voltage dropout

Table 77 Server 2300 W (AC) Power Supply Specifications

Parameter	Specification			
Input Connector	IEC320 C20			
Input Voltage Range (Vrms)	100 to 240			
Maximum Allowable Input Voltage Range (Vrms)	90 to 264			
Frequency Range (Hz)	50 to 60			
Maximum Allowable Frequency Range (Hz)	47 to 63			
Maximum Rated Output (W)[1]	2300			
Maximum Rated Standby Output (W)	36			
Nominal Input Voltage (Vrms)	100	120	208	230
Nominal Input Current (Arms)	13	11	12	10.8
Maximum Input at Nominal Input Voltage (W)	1338	1330	2490	2480
Maximum Input at Nominal Input Voltage (VA)	1351	1343	2515	2505
Minimum Rated Efficiency (%)[2]	92	92	93	93
Minimum Rated Power Factor[2]	0.99	0.99	0.97	0.97
Maximum Inrush Current (A peak)	30			
Maximum Inrush Current (ms)	0.2			
Minimum Ride-Through Time (ms)[3]	12			

Notes:

1. Maximum rated output is limited to 1200W when operating at low-line input voltage (100-127V)
2. This is the minimum rating required to achieve 80 PLUS Titanium certification, see test reports published at http://www.80plus.org/ for certified values
3. Time output voltage remains within regulation limits at 100% load, during input voltage dropout



NOTE: For configuration-specific power specifications, use the Cisco UCS Power Calculator at this URL: **http://ucspowercalc.cisco.com**

Environmental Specifications

The environmental specifications for Server are listed in *Table 78*.

Table 78 Server Environmental Specifications

Parameter	Minimum
Operating Temperature	5˚C to 35˚C (supports ASHRAE Class A4 and/or Class A3 and/or Class A2). ASHRAE Class A3 will be generic test profile unless otherwise specified by product engineering. System shall continue to operate with a single fan failure (one failed impeller in dual impeller housings) across the ASHRAE recommended operating range of 18 ˚C to 27 ˚C. While undesired, increased power consumption and/or acoustic noise is permitted during a fan fail event.
Non-Operating Temperature	Dry bulb temperature of -40˚C to 65˚C (-40˚F to 149˚F)
Operating Relative Humidity	8% to 90% relative humidity, non-condensing, with maximum wet bulb 28˚C (82.4˚F) within operational temperature range of 5˚C to 50˚C (41˚F to 122˚F)
Non-Operating Relative Humidity	5% to 93% relative humidity, non-condensing, with a maximum wet bulb temperature of 28˚C across the 20˚C to 40˚C dry bulb range.
Maximum Operating Duration	Unlimited
Operating Altitude	A maximum elevation of 3050 meters (10,006 ft)
Non-Operating Altitude	An elevation of 0 to 12,000 meters (39,370 ft)
Sound Power level, Measure A-weighted per ISO7779 LWAd (Bels) Operation at 23˚C (73˚F)	2RU: 5.8B Racked product: 6.8B
Sound Pressure level, Measure A-weighted per ISO7779 LpAm (dBA) Operation at 23˚C (73˚F)	2RU: 43dB Racked product: 55dB

Compliance Requirements

The regulatory compliance requirements for C-Series servers are listed in *Table 79*

Table 79 Regulatory Compliance Requirements

Parameter	Description
Regulatory Compliance	Products should comply with CE Markings per directives 2014/30/EU and 2014/35/EU
Safety	UL 60950-1/62368-1 CAN/CSA-C22.2 No. 60950-1/62368-1 IEC/EN 60950-1/62368-1 AS/NZS 62368.1 GB 4943.1-2022 CNS 15598-1:2020
EMC - Emissions	47CFR Part 15 (CFR 47) Class A AS/NZS CISPR32 Class A CISPR32 Class A EN55032 Class A ICES003 Class A VCCI-CISPR32 Class A EN61000-3-2 EN61000-3-3 KS C 9832 Class A EN 300386 Class A
EMC - Immunity	EN55035 EN55024 CISPR24/35 EN300386 KS C 9835 IEC/EN61000-6-1

CISCO.

Americas Headquarters
Cisco Systems, Inc.
San Jose, CA

Asia Pacific Headquarters
Cisco Systems (USA) Pte. Ltd.
Singapore

Europe Headquarters
Cisco Systems International BV Amsterdam,
The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at **www.cisco.com/go/offices.**

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a