

Installation, Maintenance, and Upgrade

- Replace the SSD, on page 1
- Install the FIPS opacity shield in a two-post rack, on page 2

Replace the SSD

The Firepower 1100 ships with an SSD installed. You can replace this SSD should it fail. Before replacing the SSD, you must power off the chassis by pressing the power switch on the rear panel.

Caution You will lose your configuration after you replace the existing SSD with a new SSD.


Follow these steps to replace an SSD in the chassis:

Procedure

Step 1 Loosen the thumb screws on both sides of the SSD bay and pull the existing SSD out of the bay.

Step 2 Insert the new SSD into the bay and push it in until it is seated.

Figure 1: Remove and install an SSD

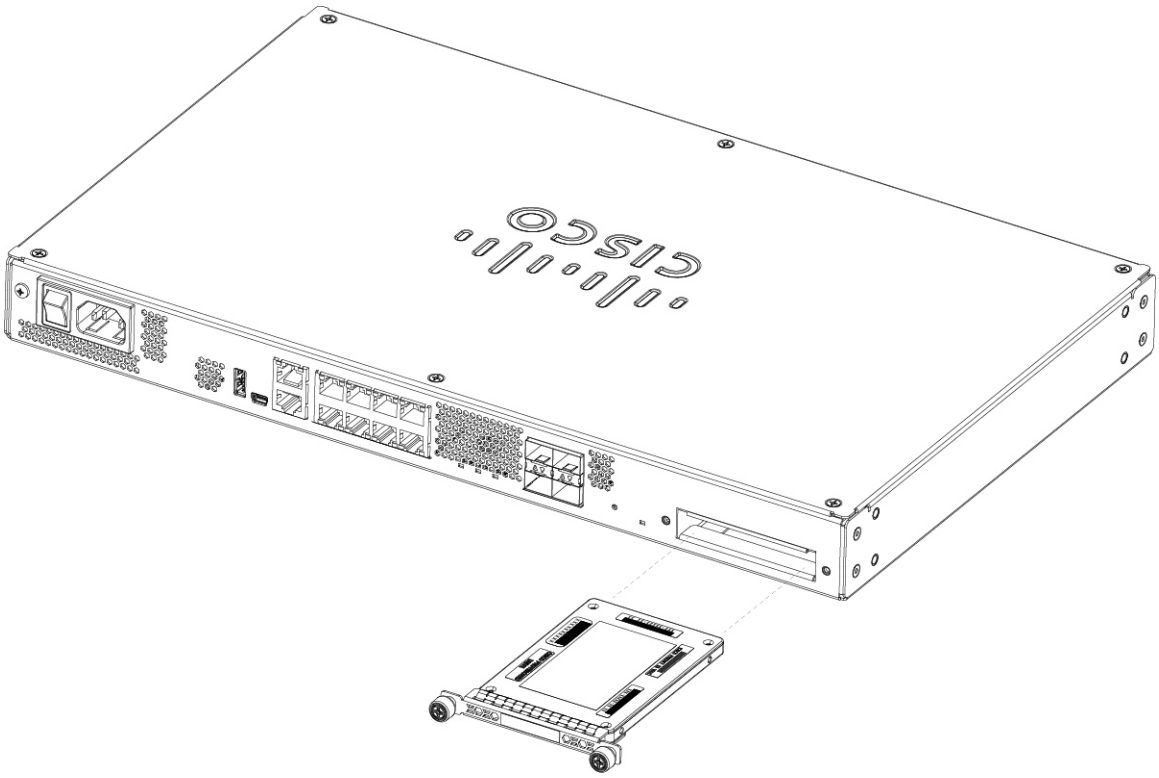

Step 3 Tighten the thumb screws on both sides of the SSD bay.

Step 4 Check the SSD LED to make sure the SSD is seated properly and functioning.

Related Topics

Rear panel LEDs

Install the FIPS opacity shield in a two-post rack

Note Because the FIPS opacity shield covers the serial number on the chassis, the CO should copy the serial number and store it in a secure place. The serial number is needed when you call Cisco TAC.

Before you begin

Caution This procedure should be performed only by the Crypto Officer (CO).

You need the following items to install the FIPS opacity shield:

- #1 Phillips screwdriver
- The following items from the FIPS kit:
  - One FIPS opacity shield
  - Two cable management brackets
  - Eight Phillips 8-32 x 0.375-inch screws used to attach the FIPS opacity shield to the cable management brackets
  - Ten Tamper Evidence Labels (TEL)




Note The TELs are made of a special thin gauge vinyl with self-adhesive backing. Once the CO attaches them on the chassis, any attempt to open the chassis damages the TELs or the chassis cover. Because the TELs have nonrepeated serial numbers, the CO can inspect them for damage and compare them against the applied serial numbers to verify whether the chassis has been tampered with. TELs with curled corners, rips, and slices indicate tampering. The word “FIPS” or “OPEN” may appear if the label has been peeled back.

Procedure

Step 1 Copy the serial number and store in a secure place.

Step 2 If you haven't already done so, attach both rackmount brackets to the sides of the chassis using the four M4 x 8-mm Phillips screws that shipped with your chassis.


Figure 2: Attach brackets to chassis

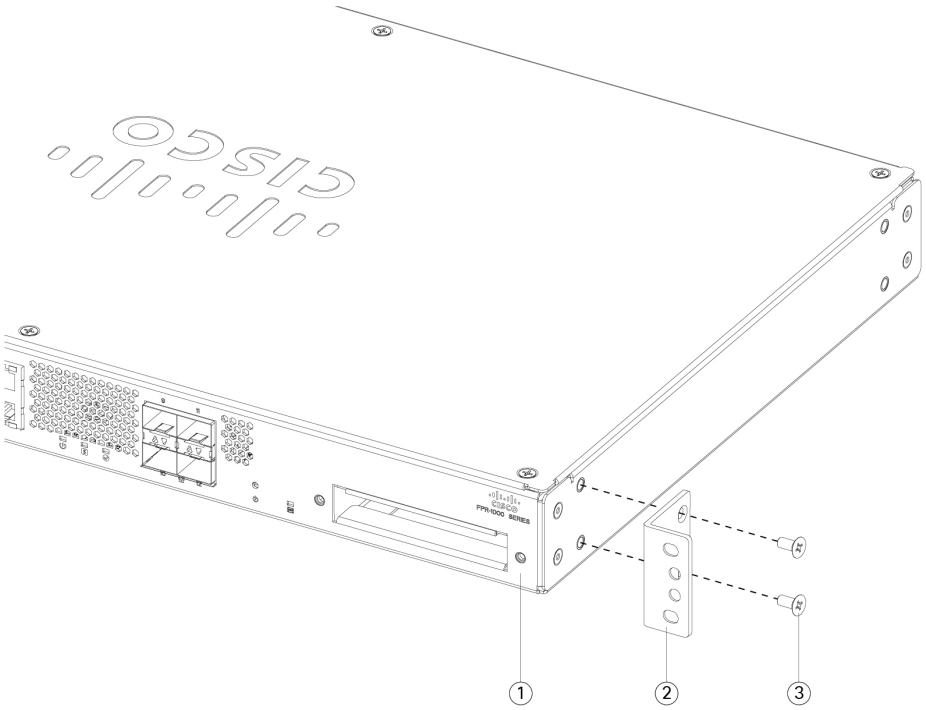

1	Chassis back panel	**2**	Rackmount bracket
3	M4 x 8-mm Phillips screws (two per side)		—

Step 3 Install the cable management brackets.

Figure 3: Install the cable management screws into the Rackmount bracket

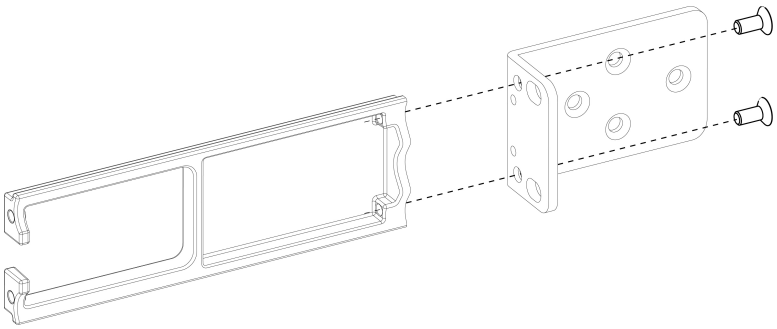

Step 4 Connect the cables to the ports. Make sure that the cables have enough slack to route them through the cable mounting brackets.


Note
If you are installing the FIPS opacity shield after the initial product installation, the cables are connected. If the attached cables do not have enough slack to route them through the cable mounting brackets (as shown in the figure below), you will have to turn the power off on the appliance, remove the cables, route the cables through the cable mounting brackets, reattach the cables, and continue with Step 5 below.

Note
When you toggle the power switch from ON to OFF, it takes several seconds for the system to power down. Do not remove the power cable until the power LED is off. After removing power from the chassis either by moving the power switch to OFF or unplugging the power cord, wait at least 10 seconds before turning power back ON.

Step 5 Route the cables through the openings in the cable management brackets as shown in the figure below.

Step 6 Attach the FIPS opacity shield to the cable management brackets using four of the 8-32 x 0.375-inch Phillips screws provided in the FIPS kit as shown in the figure below.

Figure 4: Install the FIPS cover

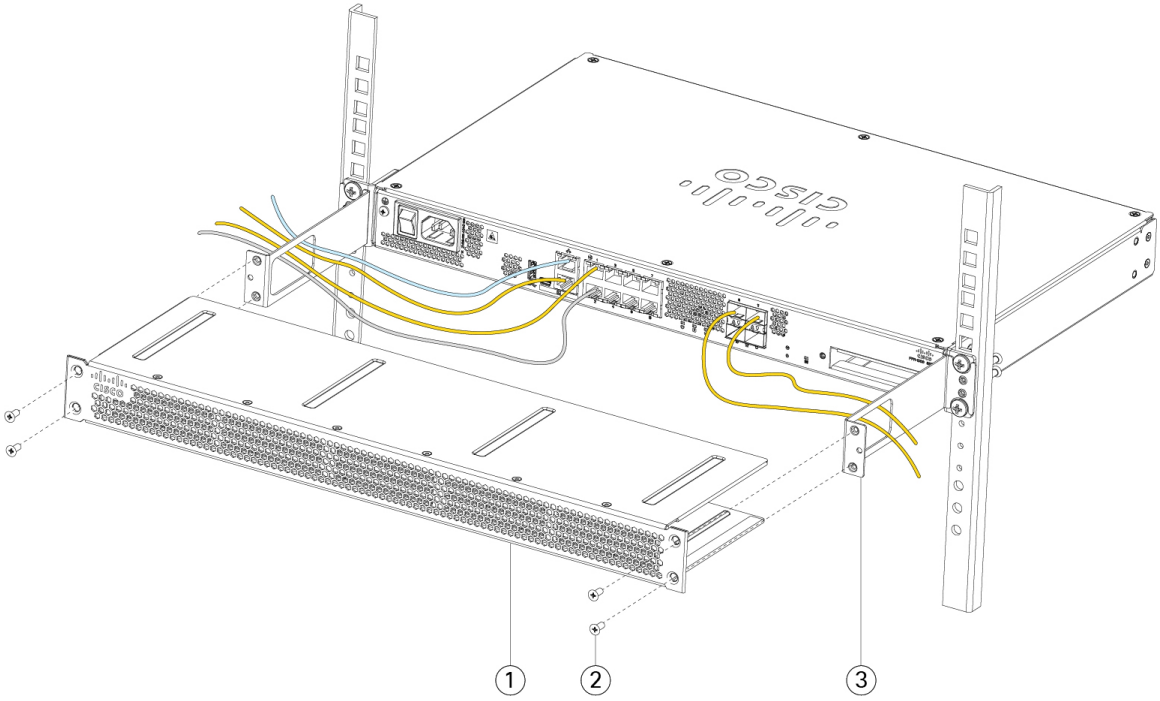


1	FIPS opacity shield	**2**	8-32 x 0.375-inch Phillips screws (two per side)
3	Cable management bracket		—

Step 7 Before you attach the TELs, clean the chassis and FIPS cover of any grease, dirt, or oil with alcohol-based cleaning pads .

Step 8 Attach seven of the TELs. See the figure below for the correct placement. Allow the TELs to cure for a minimum of 12 hours.

Caution
Any deviation in the placement of the TELs means the chassis is not in FIPS mode.

Figure 5: TELs placement on the chassis

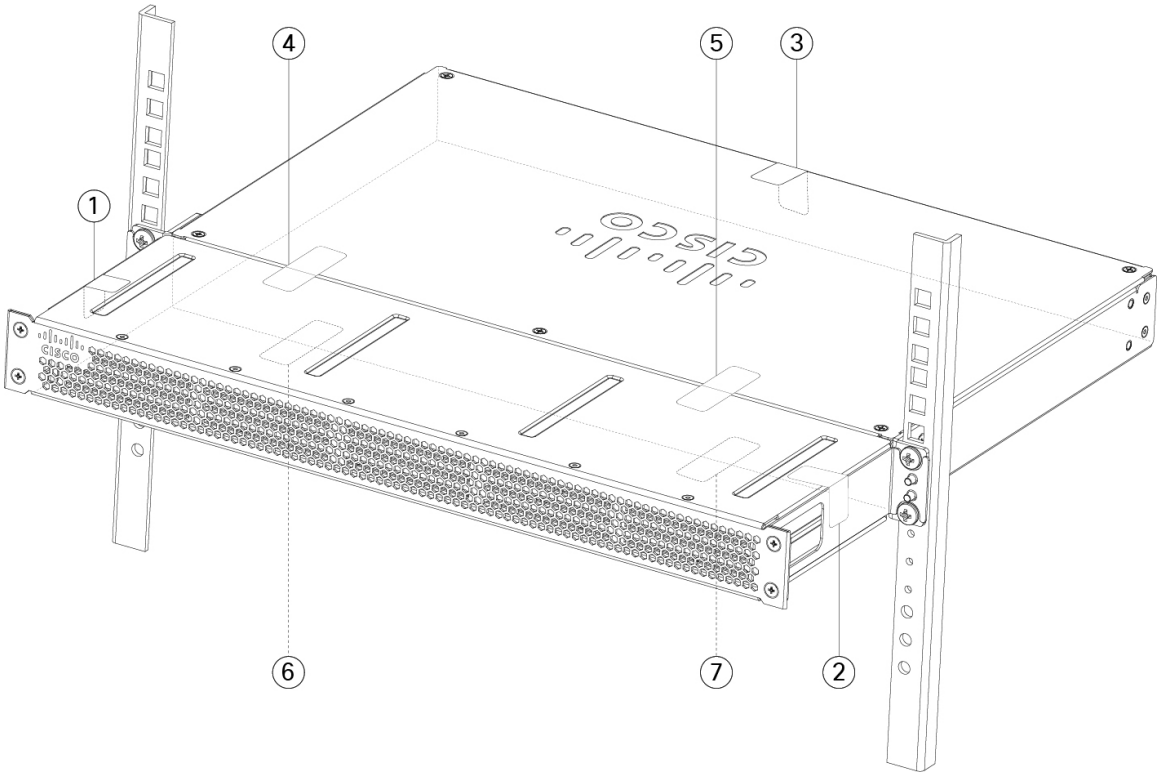

1	TEL 1 on the left side and top of chassis	**2**	TEL 2 on the right side and top of chassis
3	TEL 3 on the top and back of chassis	**4**	TEL 4 across the FIPS shield and the chassis (towards the left of the chassis)
5	TEL 5 across the FIPS shield and the chassis (towards the right of the chassis)	**6**	TEL 6 on the bottom of the chassis towards the left side of the chassis
7	TEL 7 on the bottom of the chassis towards the right side of the chassis		—

Step 9 Attach the power cable to the chassis and connect it to an electrical outlet.

Step 10 Press the power switch on the rear panel.

Step 11 Check the power LED on the front panel. Solid green indicates that the chassis is powered on.

Step 12 Place the chassis in FIPS mode.

See the following procedures for how to place the chassis in FIPS mode:

- ASA in Platform Mode
- ASA in Appliance mode
- FTD managed by FMC

What to do next

See the Cisco Firepower 1100 Getting Started Guide for further configuration information.

Related Topics

Serial Number Location
Rear panel LEDs